 


Induction Cooker User's Manual

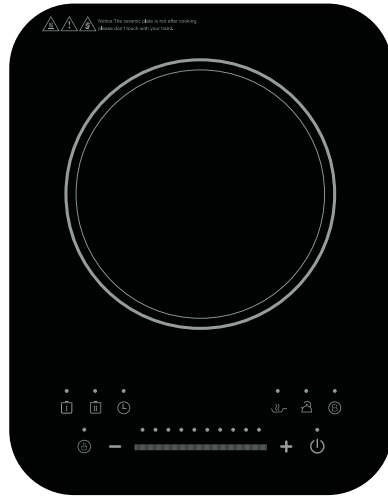

Model: MC-RTW1505D
MC-RTW1505M
MIND179ST-B

Thank you for purchasing this induction cooker. Please thoroughly read through this instruction manual before use and store it carefully for future use.

The pictures are only for reference, please keep the real product as a standard.

TABLE OF CONTENTS

1) INFORMATION FOR THE USER	1
a) Safety recommendations	1
b) Technical data	5
c) Protecting the environment	5
2) APPLIANCE PRESENTATION	6
a) Induction cooker description	6
b) Before the first use	7
c) Suitable and unsuitable pots and containers	7
d) Safety pack	7
3) USING YOUR APPLIANCE	8
a) Use of the control panel	8
b) Starting your appliance	8
c) Power function	8
d) Using the different functions	9
e) Switch off the appliance	10
4) CLEANING AND MAINTENANCE	10
a) Cleaning the induction cooker	10
b) Troubleshooting	10
5) WARRANTY	11
a) Warranty	11
b) Special declaration	11

SPECIAL DECLARATION

1) **INFORMATION FOR THE USER**

a) Safety recommendations

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces.
3. To protect against electrical shock do not immerse cord, plugs, or in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in anymanner Return appliance to the nearest authorized service facility for examination, repair , or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacture may cause injuries.
8. Do not use outdoors .household use only.
9. Do not let cord hang over edge of table or counter or touch surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wal outlet. To disconnect, turn any control to "of", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. This appliance has a polarized plug (one blade is wider than the other).As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.Do not attempt to defeat this safety

feature.

15. Do not open lid when in use.
16. Do Not Cook on Broken Cook-Top – If cook-top should break, cleaning solutions and spillovers may penetrate the broken cook-top and create a risk of electric shock.
17. Clean Cook-Top with Caution – If a wet sponge or cloth is used to wipe spills on a hot cooking area, be careful to avoid steam burn, some cleaners can produce noxious fumes if applied to a hot surface.
18. Do not place metallic objects such as knives, forks, spoons and lids on the Table Stove since they can get hot. Simple measures that can be taken by the user to correct interference.
19. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radiocommunications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Carefully clean the cooking surface - if you wipe with a wet sponge or cloth should be careful vapor heat cooking area


- burns, and some cleaning materials may produce toxic gases.
20. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
 21. This equipment has been tested and found to comply with two Part 18 of the FCC Rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
 22. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help

b) Technical data


Model	Applied voltage/Frequency	Rated power	Netweight	Dimensions
MC-RTW1505D	120V~ 50/60Hz	1500W	3.2Kg	H64.5xL296xP380mm
MC-RTW1505M	120V~ 50/60Hz	1500W	3.2Kg	H64.5xL296xP380mm
MIND179ST-B	120V~ 50/60Hz	1500W	3.2Kg	H64.5xL296xP380mm

2) APPLIANCE PRESENTATION

 a) Induction cooker description

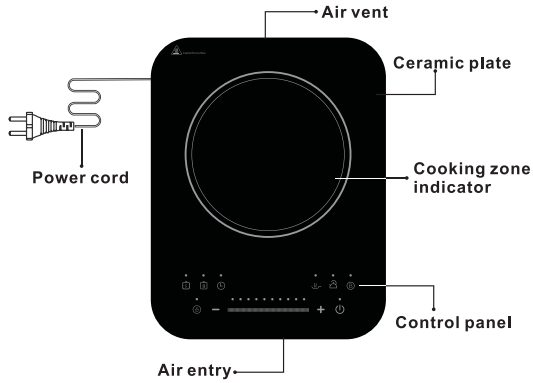

Control panel :

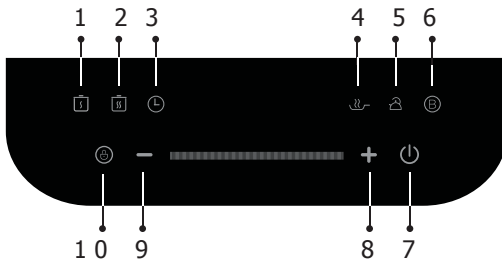 

1. Keep warm mode
2. Simmer mode
3. Timer
4. Fry mode
5. Boil mode

6. Boost mode
7. On/Standby
8. Power regulating control +
9. Power regulating control -
10. Child lock

b) Before the first use

- When unpacking your unit, make sure that you carefully remove all of the packaging materials.
- Before using the appliance for the first time, be sure that it is placed horizontally at least 10 cm away from all sides of the wall, curtains, etc.
- Use an individual socket with more than 12.5A capacity. Never use a universal socket or share a socket with other appliances. If the use of a multiple socket is indispensable assure that those elements respect the limit power. The appliance must be placed on a flat, firm and dry surface. Never move the appliance when it is in process.
- When using the appliance you can hear a noise due to high frequency electromagnetic wave. This is normal and non dangerous.

c) Suitable and unsuitable pots and containers

It's necessary to use suitable pots and containers. Pan test with a magnet: if the magnet "sticks" to the base of the pan, then it is suitable for use with induction cooking. You can also refer to the following description:



Iron oil frying pan



Stainless steel pot



Iron pan



Iron kettle



Enamel stainless steel kettle



Enamel cooking utensil



Iron plate

Requirement for pot materials: containing magnetic induction materials. All the test and authentication of this product is based on the 430 cookware (bottom diameter 180+/-10mm). The other cookware can not guarantee the best results and performance.

Shape requirement: you can use pots with a diameter (on the higher part) from **14.5 to 18 cm**

d) Safety pack

- **Over-temperature protection** . If the temperature inside the induction cooker body is too high, the appliance will stop heating.
- **Over current or voltage abnormality protection**. When voltage is abnormal or current changes abruptly, the induction cooker will stop. Once the issues are solved, the induction cooker will work again normally.
- **Container detection system**. If a pot is moved during process, the unit will stop heating immediately. The appliance will emit a sound and after 10 seconds it will automatically return to standby mode.
- **Automatic shutdown protection** . When the time selected is reached, the induction cooker will shut off automatically until the user triggers the timer again.

- **Control Lock (10).** This pad allows locking all the control panel to simplify the cleaning but also to preserve and safe children from all risks.

3) USING YOUR APPLIANCE

a) Use of the control panel

- The sensitive pads work with a sense of touch. It is not necessary to put pressure on.
- Use the base of your finger and not the tip as indicated on the images below



- Slide your finger on the slider to increase or decrease the power.
- You will hear a beep each time an action will be registered.
- The control panel must be clean, dry and not be covered by an object or a cloth; even a thin layer of water can create dysfunction.

b) Starting your appliance

After the power supply is connected, the buzzer sounds and the screen show "L" blinking, indicating that the hotplate is in a state of standby. So that the appliance is ready to be programmed, press on On/standby **(7)**. After pressing this button, the induction cooker enters standby mode. You can now use it.

Never put an empty container on the ceramic plate before switching on the appliance.

Note:

Under the standby mode, if no function button is pressed for about 10 seconds, the induction cooker will switch off automatically.

Under the working mode, if there is no proper pot on the ceramic plate, the induction cooker will switch off automatically after 60 seconds.

c) Power function

In order to select the power intensity you can:

- Either press the + **(8)** or – **(9)** buttons
- Or select it thanks to the slider, by swiping your finger from left to right on the button.

To guide you, lights appear above each temperature level.

d) Using the different functions

• **Timer**

To use the timer, press the timer button **(3)**. The digital screen will indicate « 0 : 00 ». Press on the +/- pads to adjust the cooking time. Each pressure increases or decreases the time of 1 minute. If you maintain the button longer, the time will increase or decrease by increments of 10 minutes. The timer can be set from 1 minute to 180 minutes. Once the time is set, the digital screen will flicker during 5 seconds before heating. To cancel the timer function, press again on the timer button**(3)**. Only Warm and Simmer button can use timer button.

• **Keep warm mode**

When the appliance is in operation, press on the Keep warm button **(1)** if you want to keep warm your preparation. The appliance will set automatically on the lowest power and will stop after 120 minutes. To set again the power, press directly on the +/- buttons.

• **Simmer mode**

To use this mode, press on the Simmer button **(2)**. A lamp lights up. The simmer cooker entering the simmer state, the default power level shall be level 2. Under this mode, the power cannot be adjusted. When press "+" or "-" or slider again, the induction cooker entering the power state.

• **Fry mode**

To use this mode, press on the Fry button **(4)**. A lamp lights up. The default power level shall be level 10. When press "+" or "-" or slider again, the induction cooker entering the power state.

• **Boil mode**

Boil mode is for boiling water. To use it, press on the Boil button **(5)**. A lamp lights up. The default power level shall be level 10. In this mode, the default working time is 30 minutes.

Note: It is recommended to put water that occupies 30% to 80% of the pot capacity when boiling water.

• **Boost mode**

The boost button **(6)** allows obtaining directly the highest power level. By pressing again the boost button **(6)** the appliance will go back to the power of origin.

• **Child lock mode**

To lock the control pads during cooking, press on Child lock button **(10)**.The indicator «Loc » will appear on the screen. In this case, only the On/Standby button **(7)** can be used to

switch off the appliance. To unlock the control panel, press again on "lock" button during 3 seconds.

e) Switch off the appliance

After use, the electric hob is hot, the buzzer rings and the indicator « H » flashes on the screen. To switch off the appliance, press on the On/Standby button **(7)**, then unplug the socket.

Please, refer below table for wattage:

Level	1	2	3	4	5	6	7	8	9	10
Wattage(W)	120	300	400	600	800	900	1000	1100	1300	1500

4) CLEANING AND MAINTENANCE

a) Cleaning the induction cooker

Switch off and unplug the appliance. Let it cool down before cleaning.

Regarding the glass-ceramic and the control panel:

Light dirt: clean with a soft wet cloth.

Oily dirt: clean with a soft wet cloth dipped with little toothpaste or neutral detergent until the removal of residuals.



Note: during the cleaning, never clean the surface of the induction cooker with a rigid brush.

Regarding the air entry and the air vent

After a long time of use, some dust or other dirt may be accumulated at the air entry or air vent. Use a flexible brush or a detergent to clean it. The body of the appliance can be cleaned with caution with a dry cloth.



Note: never immerse the induction cooker in the water and do not maintain it with a steam cleaner.

b) Troubleshooting

Here are the recommended inspections of common failures:

Problems		Points to check
After the plug in the socket, the indicator (1) and the screen do not light up.		- Make sure that the plug is inserted tightly. - Make sure that the switch, socket, fuse and power line are in good condition.
The button (1) lights up but heating does not start.		- Make sure that the containers are suitable for induction cooker. - Sent it to service facility to repair
Heating stops suddenly during operation.		- Let the appliance cool down - Let air entry and air vent free - Set again the timing - Refer to failure codes
Failure codes	E3, E6	After a moment, temperature inside the cooker returns to normal. The unit can restore its work once the « on/off » button is pressed.
	E7, E8	After adjusting the voltage, the unit restores its work.
	E1, E2, E4, E5, EB	Send it to service facility to repair.

WARRANTY

If problems occur with the product, please contact our specific repair and maintenance site or service center.

- One year warranty for the induction cooker.
- The starting warranty date refers to the invoice opening date of the product.
- Any problem caused by the following items is not included in the warranty:
 1. Damage caused by incorrect use, storing or maintenance by the customer.
 2. Disassembling or repairing the appliance by a repair agent that is not appointed by our company, resulting in damage to the appliance.
 3. The model number on the invoice is different from the one of the product to be repaired, or the model number on the invoice is modified.
 4. No valid invoice.
 5. Damage due to force majeure.
 6. Putting the induction cooker to commercial use.
 7. We are not responsible for accidents arising due to the use of our accessories not designed for utilisation with this product.
 8. Using the product in a non-household environment is not covered by the warranty scope.
 9. Man-made issue or problems caused by incorrect use are not covered by the warranty scope.
- For those products beyond the warranty, the customer service center of the company will still serve you warmly.

SPECIAL DECLARATION

If there is technical amendment for the product, it will be edited into the updated version of the instruction manual. Please be aware that we will not inform customers of this separately. If the appearance or color of the product is modified, please refer to the real appliance as a standard..