

INSTALLATION

2-3-4 OPERATING THE WIRELESS SPEAKER


2-3-4-1 CONNECTING THE SPEAKERS



DRAWING 29

2-3-4-2 OPERATING THE SPEAKERS

- Make sure the AC voltage selector (115V or 230V) is selected for your local voltage (Factory preset is on 230V).
- Connect the power cord into a wall outlet.
- Turn on the power switch on the rear panel of the speaker.
- Make sure the wireless channel of the speaker that is selected is the same as the wireless channel of the transmitter that is selected in the projector. (Please check the OSD, it will be described in the section of "3-2-2-4 Audio")
- Adjust the volume with volume knob on the rear panel of the speaker.

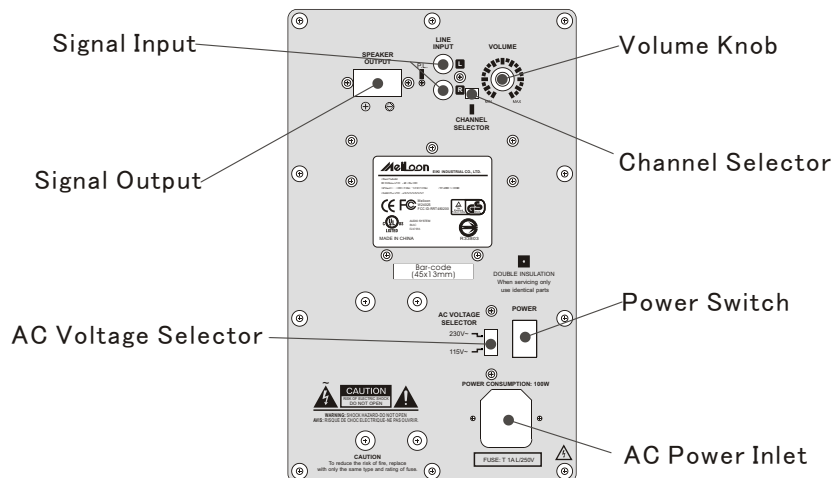

DRAWING 30

3 Control Panel and Remote Control


3-1 CONTROL PANEL AND REMOTE CONTROL

You can control the projector's functions through the Control Panel and Remote Control.

3-1-1 USING THE CONTROL PANEL

1. **MENU**: Press once to display the OSD. Press again to exit the OSD.
2. **UP/SOURCE**: This button is dual function.
UP: Cursor function or make an adjustment based on your selection of a function.
SOURCE: Selects "Composite Video", "S-Video", "Component-I Video (YCbCr)", "Analog YPbPr", "DVD Player", "Media player", "Computer", "TV" sources.
3. **DOWN/SYNC**: This button is dual function.
DOWN: Cursor function or make an adjustment based on your selection of a function.
SYNC: Optimizes the signal from PC
4. **LEFT**: Cursor function or make an adjustment based on your selection of a function.
5. **RIGHT**: Cursor function or make an adjustment based on your selection of a function.
6. **ENTER**: Confirms your selection item.
7. **EJECT/ROTATE**: This button is dual function.
EJECT: Eject a DVD
ROTATE: Rotates the photo 90 degrees clockwise on screen, but this function can't be accessed when Slideshow is playing.
8. **II/PAUSE**: This button is dual function.
II: Pauses when playing the DVD disc.
PAUSE: Pauses when playing photos.
9. **PLAY/SLIDE**: This button is dual function.
PLAY: Plays a DVD.
SLIDE: Displays the photos on your memory card as a slide show, with (MP3) music if available on your memory card.
10. **ECO**: Using the projector in this mode will save lamp life and reduce fan noise. You can use this mode for watching video in a room with reduced ambient lighting.

DRAWING 31

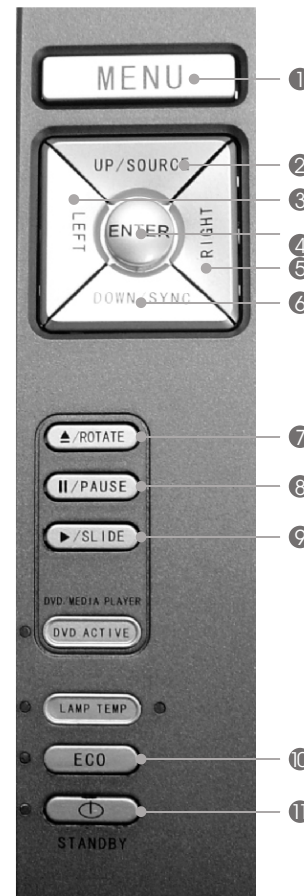

USER CONTROLS

3-1-2 USING THE REMOTE CONTROL



DRAWING 32

LED indicator



Section A

Section B

Section C

Section D

Section E

DRAWING 33

There are five sections on the Remote Control as described below.

LED indicator: The LED will light when the Remote Control is functioning. If not, please check your batteries.

◆ Section A: BLUE characters, for PROJECTOR use

1. POWER: Powers On/Off the projector
2. ZOOM-: Reduces the image size (For projector use)
3. ZOOM+: Increases the image size (For projector use)
4. MUTE: Mutes the audio output. Press once for Mute on ,press again for mute off.
5. SLEEP: Turns off the projector after a period. (So the time you need---Off, 15min, 30min, 45min, 60min)
6. FREEZE: Freezes the image.
7. SYNC: Optimizes the signal from PC
8. SOURCE: Selects "Composite Video", "S-Video", "Component-I Video (YCbCr)", "Analog YPbPr", "DVD Player", "Media player", "Computer", "TV" sources.
9. KEystone: Adjusts image distortion caused by tilting the projector (+/- 12 degree)
10. ASPECT: Selects the aspect ratio.(4:3,16:9,1:1)
11. IMAGE MODE: Three modes can be selected. (Theater/Computer, Standard, User)
12. MENU: Displays the MENU of your playing device. Press once to display, twice to disappear.

◆ Section B: RED characters, for MEDIA PLAYER use

13. PLAY and PAUSE:
PLAY: Plays program
PAUSE: Pauses the program.
When playing slideshow with music, press once to pause the slideshow, press again to pause the MP3 music.
14. MUSIC SLIDE: Plays slideshow with music
15. PHOTO: Plays the photos
16. PREV/RW
PREV: Selects the previous photo
RW: Rewinds the program
17. STOP: Stops the program
18. SETUP: Enters the OSD of the Media player. (If you are playing a program, please stop it first).
19. ROTATE: Rotates the photo (This function can't be executed when playing a slideshow)
20. NEXT and FW:
NEXT: Selects the previous photo
FW: Forward the program
21. INFORMATION : Shows the information (resolution) of the displaying photo.
22. SELECT: a. Selects the card you want when different cards are inserted simultaneously.
b. Return to start-up screen.

USER CONTROLS

◆ Section C: BLACK Characters, for ANY SOURCE use

These are "Common Keys". They can be used with any source.

23. VOL -: Decreases the volume of either the internal speaker or the external speaker.
24. VOL +: Increases the volume of either the internal speaker or the external speaker.
25. UP: Moves up when selecting item.
26. LEFT: Moves left when selecting item.
27. RIGHT: Moves right when selecting item.
28. DOWN: Moves down when selecting item.
29. ENTER: Confirms your selection.

◆ Section D: GREEN characters, for DVD PLAYER use

30. PLAY: Plays the program.
31. STOP: Stops the program.
32. FF: Fast-forwards the program.
33. FR: Fast-rewinds the program.
34. SF: Slow-forwards the program.
35. SR: Slow-rewinds the program.
36. NEXT: Selects the next song or chapter.
37. PREV: Selects the previous song or chapter.
38. YCbCr: This key can't be used on this model.
39. YPbPr: This key can't be used on this model.
40. PAUSE/STEP:
PAUSE: Pauses the program.
STEP: Plays the disc step by step.
41. VCD AUDIO: Selects a VCD language. (if the VCD is recorded in two languages) This function can't work while playing a DVD.
42. EJECT: Ejects the disc from the DVD player.
43. SUBTITLE: Selects the language of the subtitle.
44. LANGUAGE: Selects the language of the dub. (If the disc is recorded with multi-language)
45. MENU: Enters the menu of the DVD disc.
46. SETUP: Stops the program, press this button to enter the OSD of the DVD player, and then set the function you need.

◆ Section E: BROWN characters, for TV TUNER use


47. SAP: Second audio program.
48. AV/TV: Changes the mode between AV and TV
49. CH JUMP: Channel jump.
50. CH +: Next channel
51. CH -: Previous channel
52. Fine tune: Fine tune the TV signal
53. 0-9 KEYS: Selects the TV channel.

3-2 ON-SCREEN DISPLAY MENUS

3-2-1 HOW TO OPERATE

1. To Open the ON-Screen Display (OSD) menu, press the "Menu" button on the Remote Control or Control Panel .
2. When the OSD is displayed, use "Cursor" buttons on the Control Panel or on the Remote Control to choose the item you need.
3. Press the "Menu" button again to exit.

3-2-2 PROJECTOR'S OSD

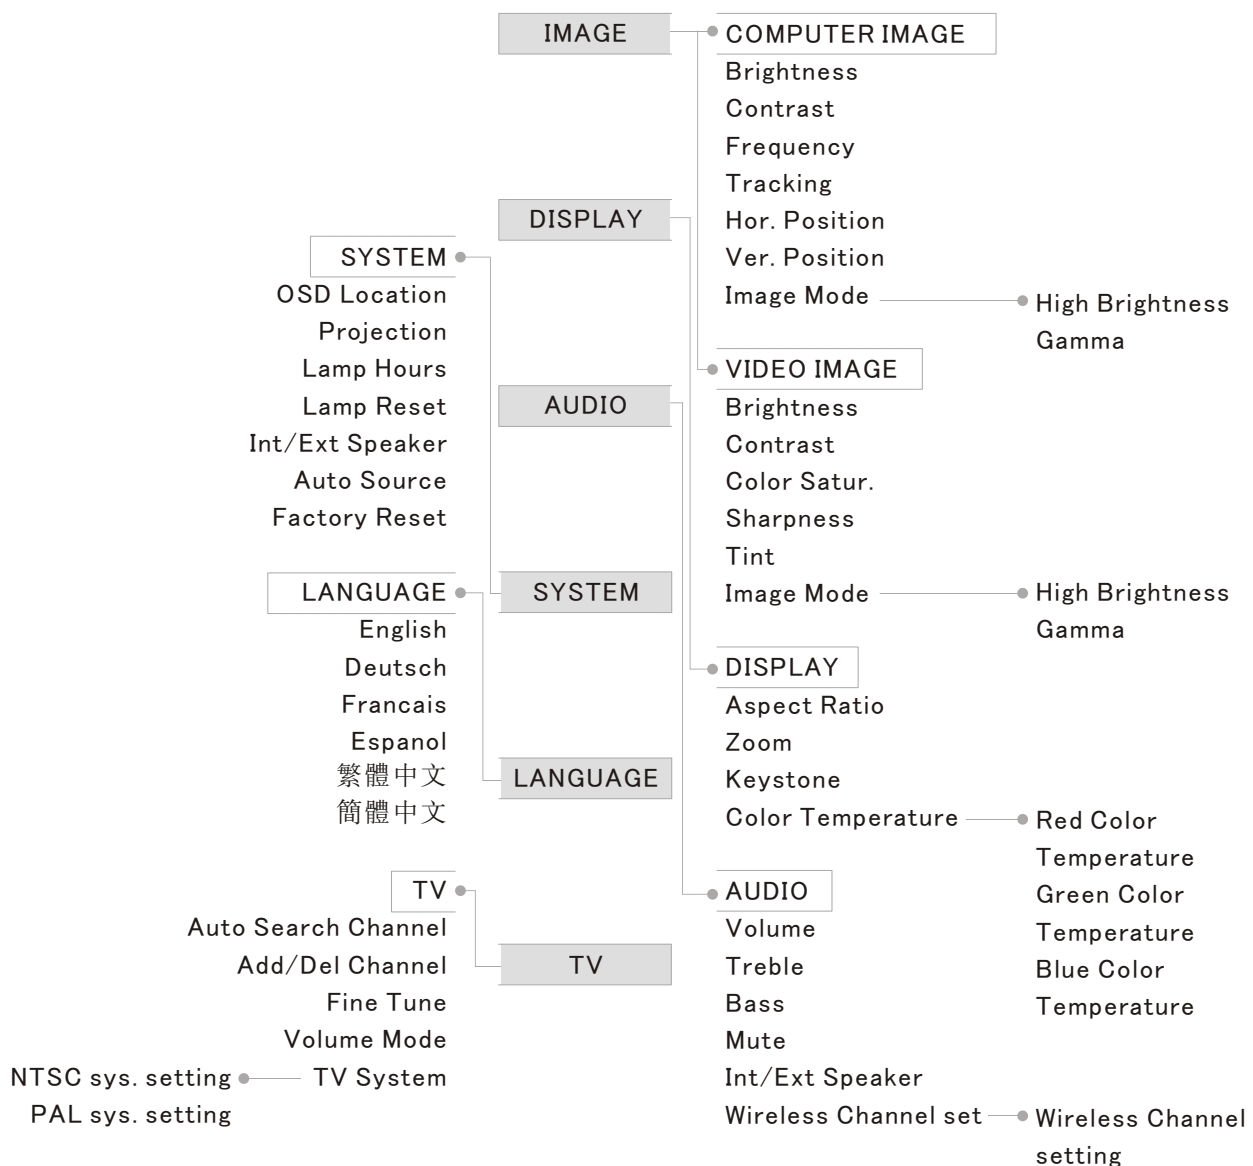

USER CONTROLS

3-2-2-1 MAIN MENU

Press the "Enter" button to enter the submenu, press it again to return to the main menu.

Main Menu includes:

Image

Display

Audio

System

Language

TV



DRAWING 34

3-2-2-2 IMAGE

◆ Computer Image

Brightness: Adjusts the brightness of the image.

Contrast: Adjusts the contrast of the image

Frequency: Adjusts the frequency to match the frequency of your computer's graphic card.

Tracking: Synchronizes the signal timing with your computer's graphic card.

Hor. Position: Moves the image's horizontal position.

Ver. Position: Moves the image's vertical position.

Image Mode: Choose a mode

Computer: This mode is good for computer signals.

Standard: This mode is good for movie pictures.

User: This mode allows you to adjust High Brightness and/or Gamma. Press the "Right" button to enter the submenu.

High Brightness: Sets the white peaking level of the DMD chip. If you prefer a stronger image, press the "Right" button to increase the value. If you want a more natural image, press the "Left" button to decrease the value.

Gamma: Adjusts the Gamma (mid-tone brightness) curve.



DRAWING 35



DRAWING 36

◆ Video Image

Brightness: Adjusts the brightness of the image.

Contrast: Adjusts the contrast of the image

Color Satur. : Adjusts color saturation of the image.

Sharpness: Adjusts the sharpness of the image.

Tint: Adjusts the color balance of red and green .

Image Mode: See "Image Mode" in the "Computer Image" section.



DRAWING 37

3-2-2-3 DISPLAY

Aspect Ratio: Selects your desired aspect ratio.

Zoom: Increases or reduces the size of the image.

Keystone: Adjusts image distortion caused by tilting the projection.

Color Temperature: Adjusts the color temperature of the image. A higher color temperature looks colder. A lower color temperature looks warmer. When the color temperature is set to User mode, press "Down" button to select Red, Green, or Blue adjustment.

Red, Green, Blue: Increases or decreases the value to find the desired color temperature.



DRAWING 38

USER CONTROLS

3-2-2-4 AUDIO

Volume: Adjusts the volume of the internal or wireless speaker.

Treble: Adjusts the treble audio of the internal or wireless speaker

Bass: Adjusts the Bass audio of the internal or wireless speaker.

Mute: Mutes the internal or wireless speaker.

Int/Ext Speaker: Selects the internal or wireless speaker. If you select wireless speaker, press the "Down" button to get the wireless channel selection. Set the wireless speaker channel to match the wireless speaker channel set on the projector. Press the "Enter" button to return to the main menu.

Wireless CH.: Sets the wireless channel.



DRAWING 39



DRAWING 40

3-2-2-5 SYSTEM

OSD Location: Chooses the OSD location on the display screen.

Projection: Selects the projector's orientation.

Front: The factory default setting. For "tabletop" projection.

Front Ceiling: Inverts the image. For "ceiling mounted" projection.

Rear: Reverses the image. For "tabletop" rear projection

Rear Ceiling: Reverses and inverts the image. For "ceiling mounted" rear projection.

Lamp Hours: Displays the cumulative lamp operation time.

Lamp Reset: Resets the lamp operation time after changing lamps..

Auto Source: Detects the input source automatically.

Factory Reset: Resets all items in all menus to their default settings.



DRAWING 41

3-2-2-6 LANGUAGE

Selects the Language you need.



DRAWING 42

3-2-2-7 TV

Auto Search: Searches channels automatically.

Add Channel: Adds the channel you need.

Del Channel: Deletes the channel you don't need.

Fine Tune: Mutes the internal speaker of projector or wireless speaker.

Volume Mode:

Mono: Outputs the mono sound.

Stereo: Outputs the stereo sound.

Sub-Language: Changes the main language to the sub-language.

TV System: Selects the NTSC or PAL system.

NTSC: Selects Country.

PAL: Selects region and volume system



DRAWING 43



DRAWING 44




DRAWING 45

USER CONTROLS

3-2-3 MEDIA PLAYER'S OSD


Press the "Setup"(red) button on the Remote Control to enter the Media Player's OSD.

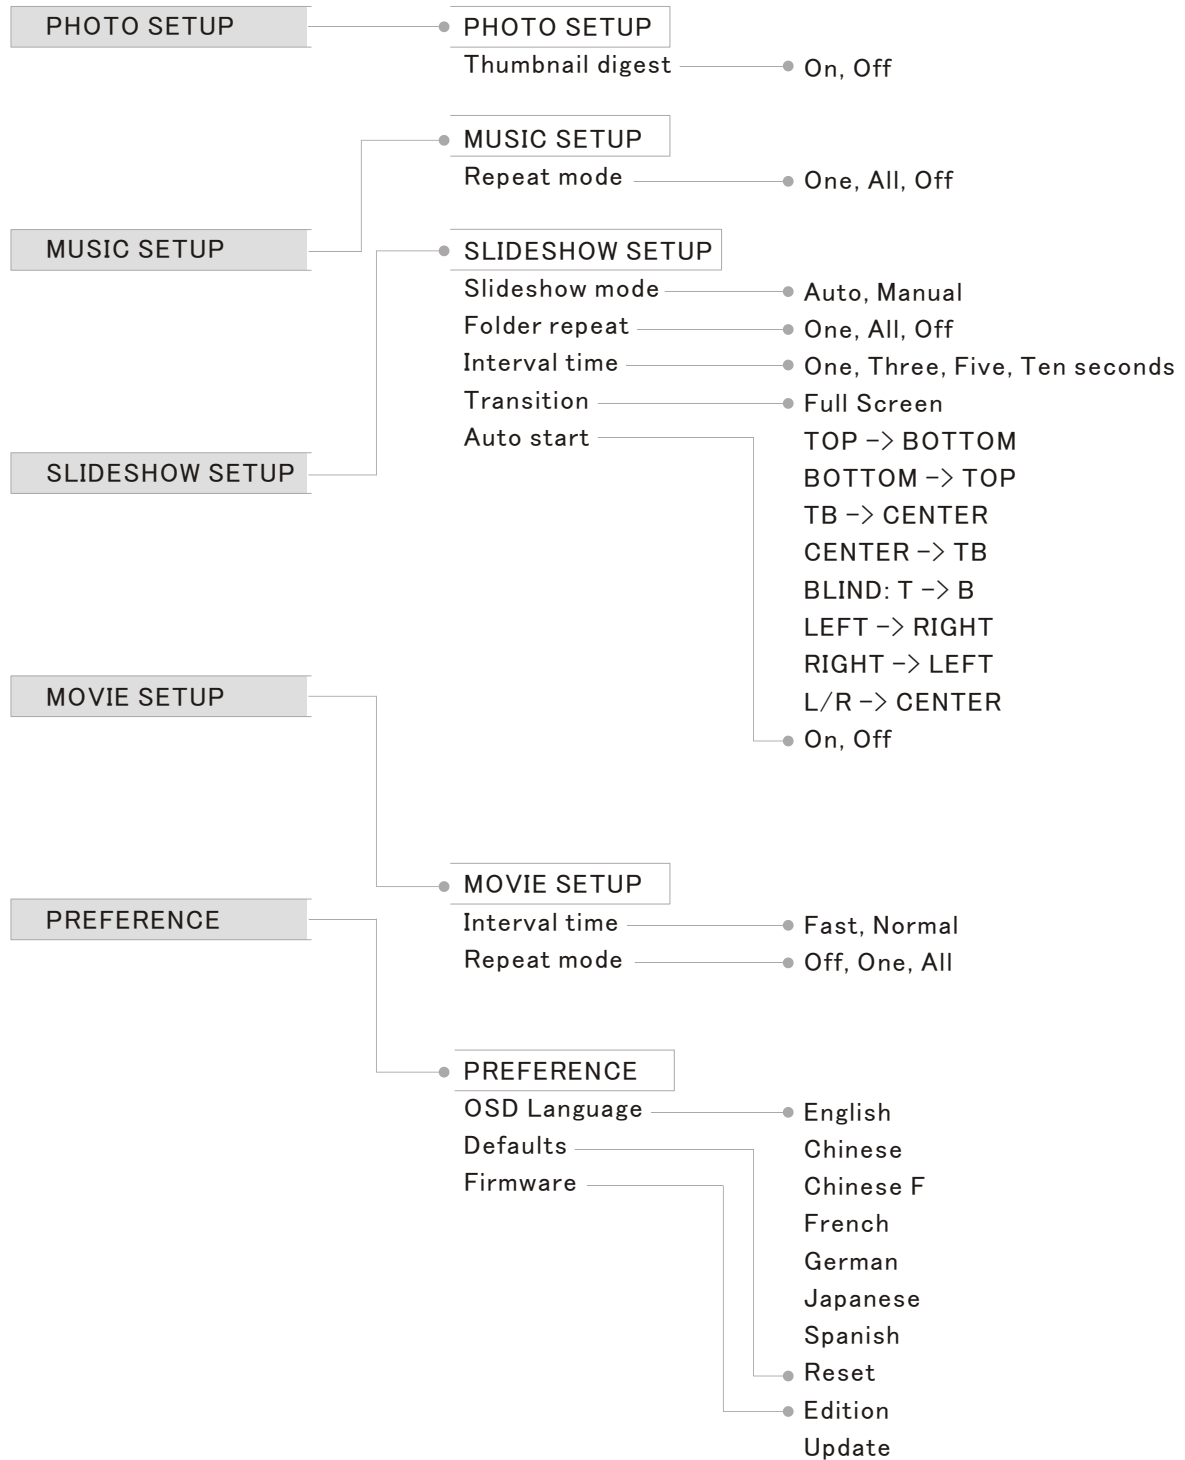

3-2-3-1 MAIN MENU

The Menu can only be accessed from the Remote Control.

1. Press "Setup" button to show the main menu on screen
2. Press "Up" / "Down" button to select the item.
3. Press "Enter" button to enter the sub-menu.
4. Press "Right" button to set the function.
5. Press "Enter" button to confirm the setting
6. Press "Left" button to return the function item.
7. Select "EXIT SETUP" to exit the setup main.

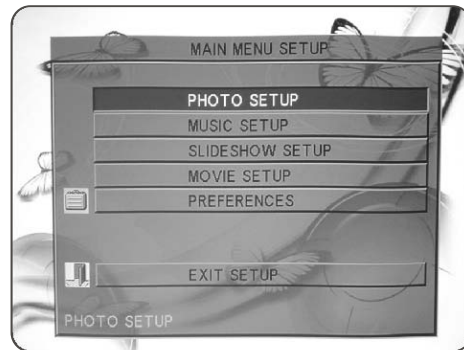

DRAWING 46

Main Menu includes:

PHOTO SETUP

MUSIC SETUP

SLIDESHOW SETUP

MOVIE SETUP


PREFERENCES

3-2-3-2 PHOTO SETUP


Digital cameras automatically store a thumbnail of each picture taken. These thumbnails load faster and allow you to browse photos more easily.

The Media Player can detect and display these thumbnails. The PHOTO SETUP function lets you turn the THUMBNAIL DIGEST on or off. If you select on, you can view your photos more quickly.

Submenu

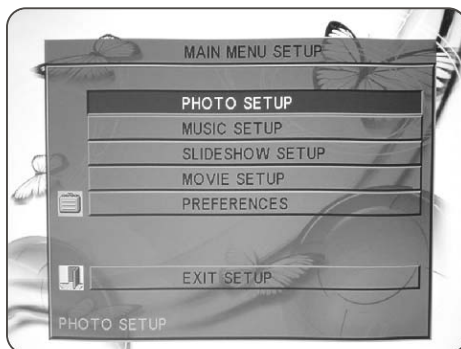


DRAWING 47

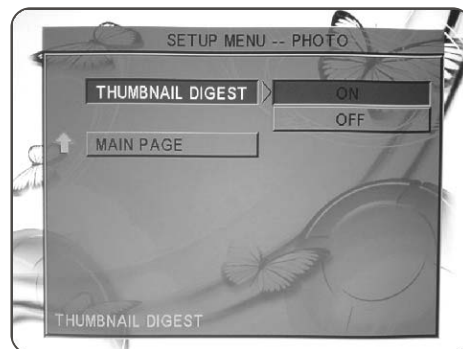

DRAWING 48


USER CONTROLS

3-2-3-3 MUSIC SETUP

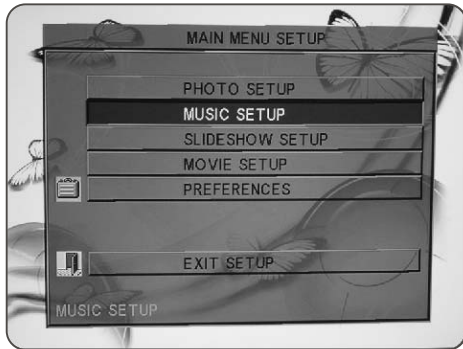

DRAWING 49

Submenu

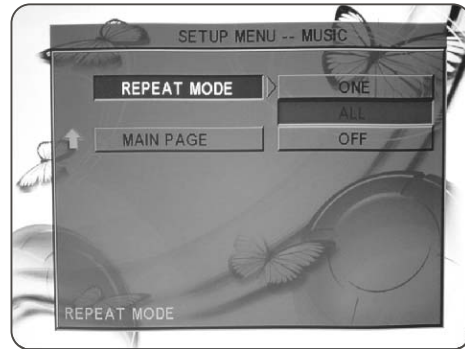

DRAWING 50

◆ Repeat Mode

ONE—Repeats the selected song.

ALL—Repeats all the songs in the memory card.

OFF—Does not repeat any songs.

3-2-3-4 SLIDESHOW SETUP

◆ **DISPLAY MODE** — Set to cause the slideshow to start automatically.

◆ **REPEAT MODE** —Set to cause all photos in a folder to display consecutively and continuously (in a loop).

◆ **INTERVAL TIME** —Set the show time of each photo. (One, Three, Five, or Ten sec).

◆ **TRANSITION** — Set the transition mode between slides.

FULL SCREEN —Image appears full screen

TOP -> BOTTOM —Image rolls in from top to bottom

BOTTOM -> TOP —Image rolls in from bottom to top

TB -> CENTER —Image rolls in from top and bottom to center

CENTER -> TB —Image rolls from center to top and bottom

BLIND: T -> B—Image rolls in blinds from top to bottom

LEFT -> RIGHT—Image rolls in from left to right


RIGHT -> LEFT—Image rolls in from right to left

L/R -> CENTER—Image rolls in from left and right to center



DRAWING 51

Submenu

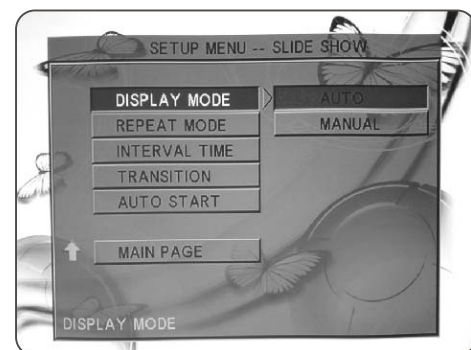

DRAWING 52

- ◆ **AUTO START** —When turned on, any media in the memory card plays automatically when the card is inserted.

3-2-3-5 MOVIE SETUP

- ◆ **INTERVAL TIME**

FAST: A short preview of movie plays in Thumbnail view.


NORMAL: The whole movie plays in Thumbnail view.

- ◆ **REPEAT MODE**


OFF: REPEAT MODE is turned off.

ONE: Plays the selected movie continuously (loop).

ALL: Plays all movies on the memory card continuously(loop).

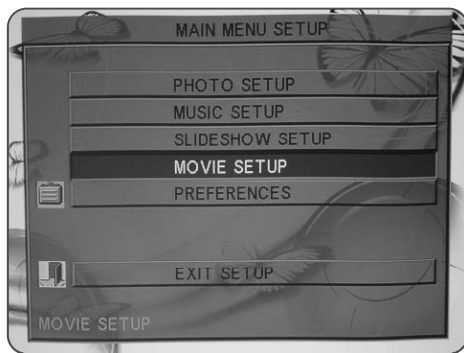


DRAWING 53

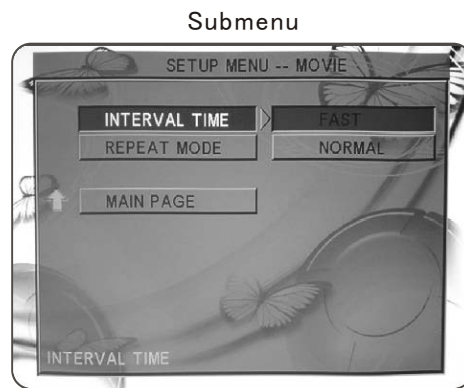


DRAWING 54

3-2-3-6 PREFERENCE

- ◆ **OSD LANG**: Selects the OSD language.
- ◆ **DEFAULTS**: Returns to the default value.
- ◆ **FIRMWARE**: Updates the firmware. (For service person use only)

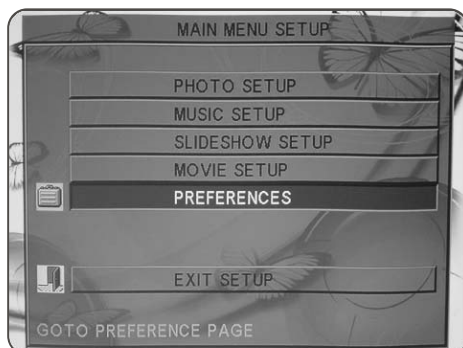

DRAWING 55

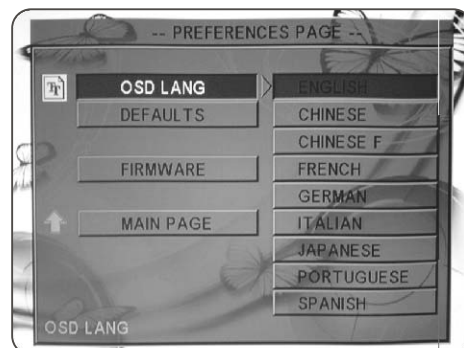


DRAWING 56

USER CONTROLS

3-2-4 DVD PLAYER'S OSD

Press the "Setup" (green) button on the Remote Control to enter the DVD player's OSD.

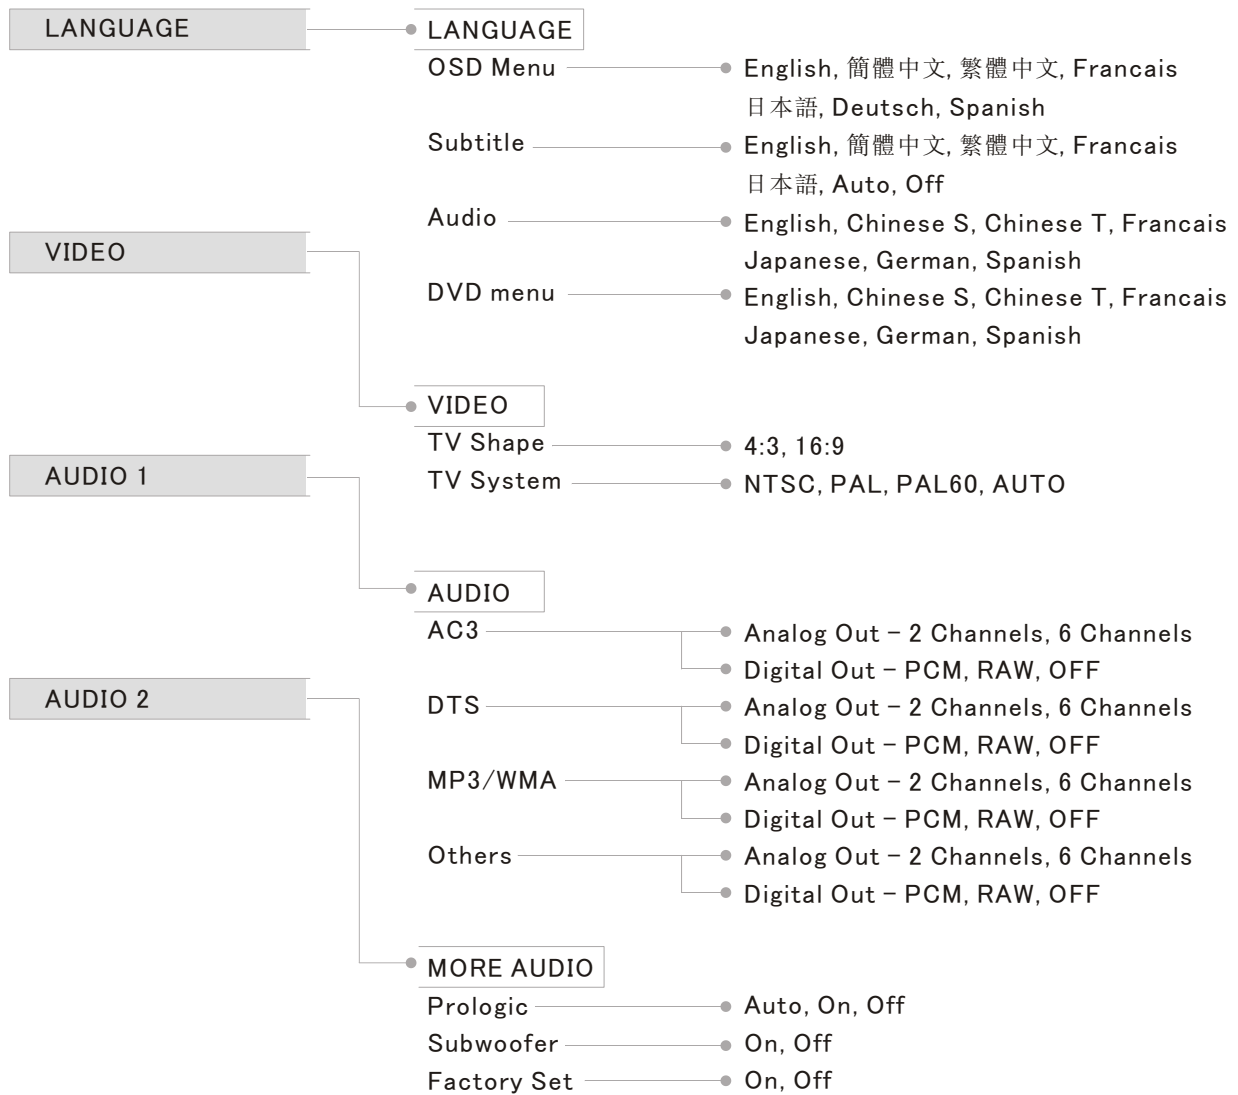

3-2-4-1 MAIN MENU

The Menu can only be accessed from the Remote Control.

1. Press "Setup" button to show the main menu on screen
2. Press "Right" or "Left" button to select the item you want.
3. Press "Enter" button to enter the sub-menu.
4. Press "Up" button to return the main menu
5. Press "Setup" button to exit the menu



DRAWING 57

3-2-4-2 LANGUAGE

OSD Menu

Selects the Language of OSD Menu.
(English, 簡體中文, 繁體中文, Francais, 日本語, Deutsch, Spanish)

Subtitle

Selects the Language of subtitle.
(English, 簡體中文, 繁體中文, Francais, 日本語, Auto, Off)

Audio

Selects the Language of dub.
(English, 簡體中文, 繁體中文, Francais, 日本語, Deutsch, Spanish)

DVD Menu

Selects the Language of DVD Menu.
(English, 簡體中文, 繁體中文, Francais, 日本語, Deutsch, Spanish)



DRAWING 58

USER CONTROLS

3-2-4-3 VIDEO

TV Shape


There are two aspect ratios to choose from:

4:3: The image will be displayed in 4:3 aspect.

16:9: The image will be displayed in 16:9 wide screen.

TV System

Selects system you need.

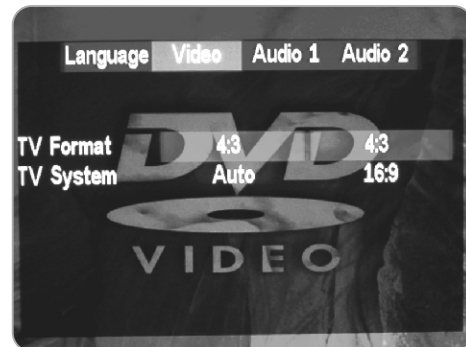

DRAWING 59

3-2-4-4 AUDIO 1

AC3, DTS, MP3/WMA, Others:


Analog Out: Selects the channels you need (2 or 6 channels)

Digital Out: PCM, RAW, OFF

RAW: Digital output

PCM: Analog output

Please set 2 channels and PCM when playing wireless stereo speaker.

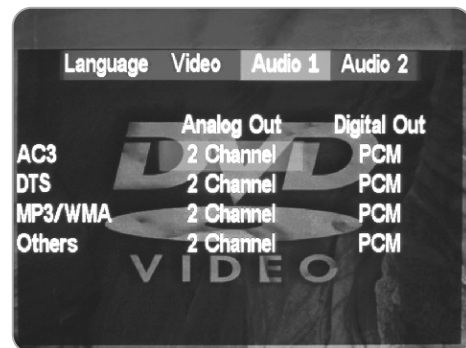

DRAWING 60

3-2-4-5 AUDIO 2

Prologic:

Auto: Default setting. The DVD player will automatically change the output from 2 channels to 6 channels.

On: Sets the function always on.

Off: Sets the function off.

Subwoofer:

On: Sets the subwoofer on.

Off: Sets the subwoofer off.

Factory Set:

On: Restores the default setting.

Off: Keeps the user's setting.



DRAWING 61

4 APPENDICES

4-1 TROUBLESHOOTING

1. No Images appears
 - ◆ Check the power cable connection at the power inlet of the projector and at the wall outlet.
 - ◆ Confirm that the main power switch at the rear of the projector is in the on position.
 - ◆ Check the Standby/on button indicator. (Section 3-1)
 - ◆ Confirm that the lens cap has been removed.
 - ◆ Make sure the source device is properly connected to the projector, and is outputting a signal.
 - ◆ Press "Source" button on either the projector or the Remote Control to ensure that correct source is selected.
2. Image is blurred
 - ◆ Ensure the distance between the projector and the screen is within the focus range of the lens. (Section 2-2)
 - ◆ Adjust the focus ring.
3. Image is too dark
 - ◆ Adjust the contrast or brightness in the image menu of projector properly.
 - ◆ Adjust the brightness in the setup menu of DVD player.
 - ◆ Has the lamp reached the end of its life? If so replace the lamp.
4. Computer Image is unstable or the projector isn't projecting the whole image.
 - ◆ Press "SYNC" button either on the projector or the Remote Control to synchronize the computer output signal.
 - ◆ Use "Image" menu to adjust the tracking or frequency.
 - ◆ Verify that the computer's output resolution to the projector is less than or equal to 1024 x 768.
5. Image is stretched when displaying 16:9 DVD.
 - ◆ Adjust the "Aspect Ratio" in the OSD of projector.
 - ◆ Adjust the "TV Shape" in the OSD of DVD player.

6. No sound
 - ◆ Make sure the Mute option in Audio menu is off.
 - ◆ Make sure the Audio menu in DVD player's OSD is set properly.
 - ◆ Make sure the Internal/External speaker option in audio menu is set as required.
 - ◆ Make sure the channel of wireless transmitter selected in projector is the same as the channel of wireless receiver selected in the wireless speaker.
7. Wireless speaker noisy
 - ◆ Change the channels on the projector and wireless speaker simultaneously. There are 8 channels selectable.(refer to the Section 3-2-2-4)
8. Remote control does not work
 - ◆ Install new batteries.
 - ◆ Make sure there are no obstacles between you and the projector's receivers.
 - ◆ Make sure you are attempting to operate it within its usable range.
9. Can't read the memory card
 - ◆ Make sure the Media Player's LED indicator (beside the card slot) is lighting..
 - ◆ Check the compatibility of memory card (refer to section 2-3-2)
 - ◆ Re-insert the memory card.
10. Can't play DVD
 - ◆ Make sure the DVD player's LED indicator (on the control panel of the projector) is lighting
 - ◆ Confirm that the disc is an original edition.
 - ◆ Eject the disc and play again.
11. The disc can't play or is automatically ejected after loading
 - ◆ Make sure the disc is free from dirt and dust and is not damaged.
 - ◆ Make sure the disc is loaded with the label side face-up and aligned properly in the disc tray guide.
 - ◆ Make sure the disc format is compatible with the DVD player of the projector. Please refer to the specification.
12. The color of Image is not correct
 - ◆ Please reset all settings.

APPENDICES


4-2 MAINTENANCE

4-2-1 REPLACING THE LAMP


When the lamp's total working time accumulates to over 1850 hours, the on-screen display (OSD) will deliver a message recommending that you replace the lamp. Please contact a service center to replace the lamp as soon as possible, or refer to the following instructions to replace it yourself.

TO REPLACE THE LAMP


1. Turn off the projector by pressing the "Power" button
2. Allow the projector to cool down for at least one hour.
3. Switch off the power and disconnect the power cord.
4. Loosen the screw on the lamp cover and remove the lamp cover. (Drawing 62)
5. Loosen two screws on the lamp module (Drawing 63) remove the lamp module by pulling on the handle (Drawing 64)
6. Insert a new lamp module (Drawing 65) into the socket: make sure it is in position.
7. Reverse steps 4 and 5
8. Ensure that the lamp cover is securely attached and flush with the bottom of the unit.
The unit will not operate with the cover incorrectly installed.
9. Reset the lamp timer

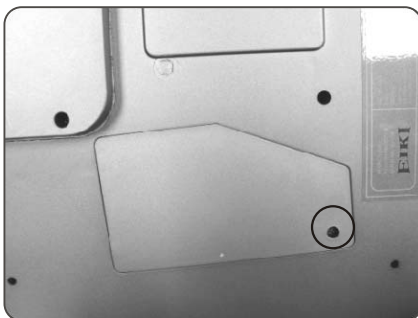


DRAWING 62

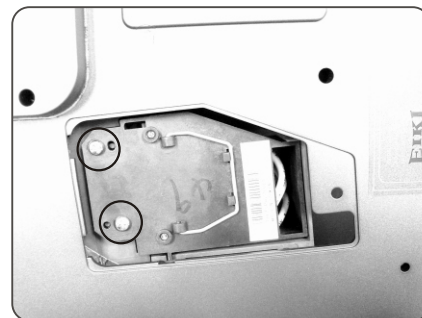

DRAWING 63

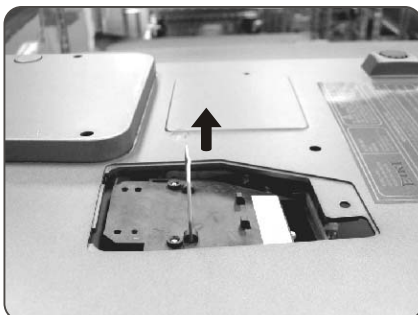

DRAWING 64

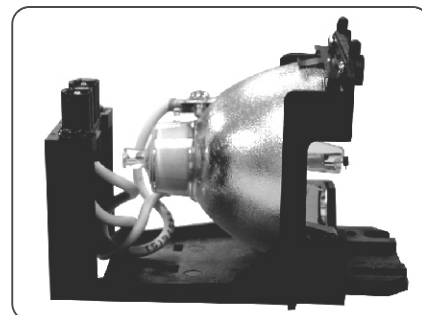

DRAWING 65

To reset the lamp timer

1. Press the Menu button on control panel or remote controller.
2. Go into the system menu and move the cursor to the lamp reset item.
3. Select "Yes" to execute the lamp reset and the lamp hours will reset to 0 hour.



DRAWING 66

Important

* Do not touch the lamp immediately after it has been used: it will be extremely hot.

Allow the fan to finish its cooling process, then turn the projector off, and disconnect the power cord. Then allow at least one hour for the lamp to cool down before handling.

* Do not remove any screws other than the lamp cover screw and the lamp housing screws. Removing other screws could result in electric shock.

* Although the mercury content of the lamp is minuscule, spent lamps should be treated as hazardous waste. Consult federal, state/provincial or local regulations for proper disposal.

⚠ CAUTION

Continuing to use the lamp after the replace the lamp message has been displayed on the screen may result in the lamp exploding. If this occurs, pieces of glass may scatter inside the projector, and out into the room. If this occurs, do not touch them, as the pieces of glass may cause injury. The bulb contains a small amount of mercury: ventilate the area well. Contact your dealer for servicing: do not attempt to service the projector yourself.

APPENDICES

4-2-2 CLEANING THE PROJECTOR

Cleaning the cabinet

Wipe lightly with a soft, dry cloth. If the cabinet is very dirty, clean it with a soft, dampened cloth using mild commercial cleaner and finish with a dry cloth. Do not use liquid or aerosol cleaners.

Cleaning the lens

Clean the lens carefully by using a blower or lens paper to prevent creating any scratches on lens.



4-3 SPECIFICATION

Color system	NTSC/PAL/SECAM/NTSC4.43
Computer compatibility	SXGA (Compression) /XGA/SVGA/VGA/Mac
Screen size (diagonal)	Adjustable from 35" to 300"
Throw distance	1.5m — 10m
Brightness	1800 ANSI lumens
Contrast ratio	2000 : 1
DMD panel	Single 0.7" DDR XGA DMD
Color wheel	4 segmentations
Number of pixels	786,432 (1024 x 768)
Horizontal resolution	480 TV Lines (S-Video)
Projection lens	F2.8~ 3.1, f = 25.8 ~ 30 mm, Zoom ratio: 1.2:1
Lens shift (U/D ratio)	10 : 0
Projection lamp	250 W, Lamp life: 2000 hours (Normal mode) / 3500 hours (Eco mode)
Digital Zoom	Max. X32 for XGA mode
Digital Keystone	+/- 12 degrees (Vertical)
Picture Reverse Scan	Left/Right and Top/Bottom
Front Elevation / Maximum tilt angle	Up to 15 degrees / 45 degrees up and down
Scanning frequency	Automatic frequency control H sync. 15kHz~82kHz, V sync. 50Hz~85Hz
Operating temperature	5°C to +35°C
Fan noise	32dBA
Computer Input	Dsub 15 x1
Computer Output	Dsub 15 x1
Video	Component (HDTV, EDTV) input: RCA Jack x3, RCA x1 (Composite), Mini DIN 4-pin x1, RCA x2 (R, L-mono)
Audio Out	3.5mm mini Jack x 1: Audio Out 3.5mm mini Jack x 3: Audio 5.1 channel output
Built-in Speaker	2W x 1
Wireless Speaker	Stereo 25W x 2 Dimension (WxDxH): 170x180x270 mm(6.7" x 7.1" x 10.6") Weight: 8.35 Kg
Power Supply	100 – 240V, 50 – 60Hz
Power consumption	330W
Dimensions (WxDxH)	374 x 290 x 92mm (14.7" x 11.4" x 3.6")
Net weight	4.5 kg (10 lb)
Regulations	1. EMC – FCC Class B, CE Class B, CCC 2. Safety – cUL, TUV, CB
Standard Accessories	Power cord VGA Cable Audio Cable Mac Adapter Remote Control Soft Carry Bag for projector 25W x 2 Wireless speakers
Optional Accessories	TV tuner Deluxe speaker Satellite speaker Soft Carry Case for Wireless Speakers

MeiLoon

ALL-IN-ONE PROJECTOR
MODEL DHT100/200



OWNER'S MANUAL

MeiLoon Industrial Co., Ltd.

