



## **9" Portable Swivel TV/DVD Player Combo**

User's Guide for Model PTDE954 v3228-01

For the most up-to-date version of this User's Guide, go to [www.gpx.com](http://www.gpx.com)

# Safety Instructions & Warnings



**WARNING:** To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.



This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.



**WARNING :** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

**This product meets and complies with all Federal product guidelines.**

## Important Safety Instructions

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

## FCC Warnings

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
- This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter

---

## Additional Warnings and Precautions

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **WARNING:** Shock hazard - Do Not Open.
- Caution and marking information is located at the rear or bottom of the apparatus.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.
- Objects filled with liquids, such as vases, shall not be placed on the apparatus.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Do not mix old and new batteries.
- Completely replace all old batteries with new ones.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
- Batteries should be recycled or disposed of as per state and local guidelines.

# Table of Contents

---

<b>Setup</b> .....	<b>5</b>
Includes	
Power	
Remote	
<b>Orientation</b> .....	<b>6</b>
Controls & Inputs	
Remote Functions	
<b>TV Setup</b> .....	<b>9</b>
TV Antenna Installation	
Auto Scanning for Channels	
Initial System Setup for TV (ATSC)	
Program Menu	
Picture Menu	
Channel Search Menu	
Time Menu	
Option Menu	
System Menu	
<b>DVD &amp; CD</b> .....	<b>12</b>
Playing a DVD or CD	
Programming a DVD or CD	
DVD Setup Menu	
Player Setup	
System Menu	
Audio Menu	
Language Menu	
Video Menu	
<b>Connecting to Other Devices</b> .....	<b>14</b>
Connecting the AV Output	
Connecting the AV Input	
Bluetooth Out (Transmitter) Operation	
<b>USB Drive &amp; SD Card</b> .....	<b>15</b>
Using a USB Drive or an SD Card]	
Music Playback Options	
Video Playback Options	
Photo Browsing Options	
<b>Customer Support</b> .....	<b>16</b>
Contact Information	
Warranty	
International Support	

# Setup

---

## Includes

 
- Remote control with 2 AAA batteries
- 3.5mm A/V cable
- AC/DC power adapter
- 12V DC car power adapter
- 1 set of earbuds
- 1 set of headphones
- Carrying case
- User's Guide
- Telescopic antenna
- Amplified antenna

## Power


To power the unit, plug the included **AC/DC power adapter** into the DVD player and a standard wall outlet. For use in a car, plug the **12V DC car power adapter** (included) into the DVD player and a standard 12V Power outlet in the car.

The **Power Indicator** will turn red when the DVD player is ON. The **Charge Indicator** will turn red whenever the battery is charging. The **Charge Indicator** will turn green when the battery is done charging. Total charge time is approximately 5 hours.

### Standard Outlet Power

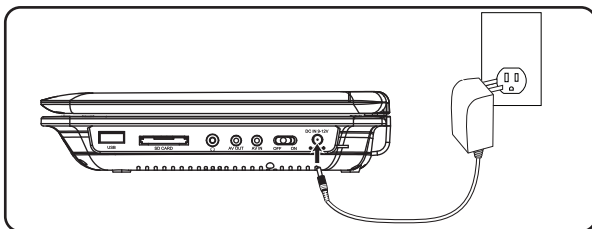


### Car Adapter Power

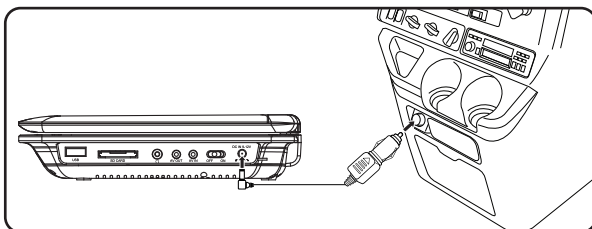 


## Remote

 Requires 2 AAA-size batteries (included).

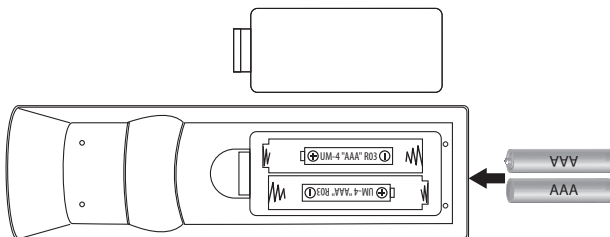


# Orientation
 
## Controls & Inputs

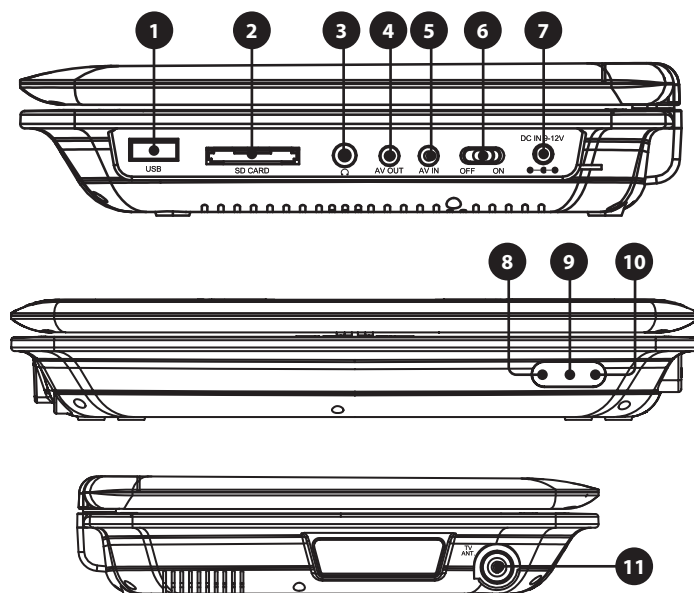

 1. **USB Media Port**
2. **SD/MMC Memory Card Port**
3. **Stereo Headphone Jack**
4. **Audio/Video Output**
5. **Audio/Video Input**
6. **Power Switch**
7. **DC Power Input**
8. **Battery Charge Indicator:** Turns red when the battery is charging. Turns green when the battery is fully charged.
9. **Remote Receiver**
10. **Power Indicator:** Turns red when the unit is powered ON. Flashes green when the player is in Bluetooth pairing mode.
11. **TV Antenna Input**

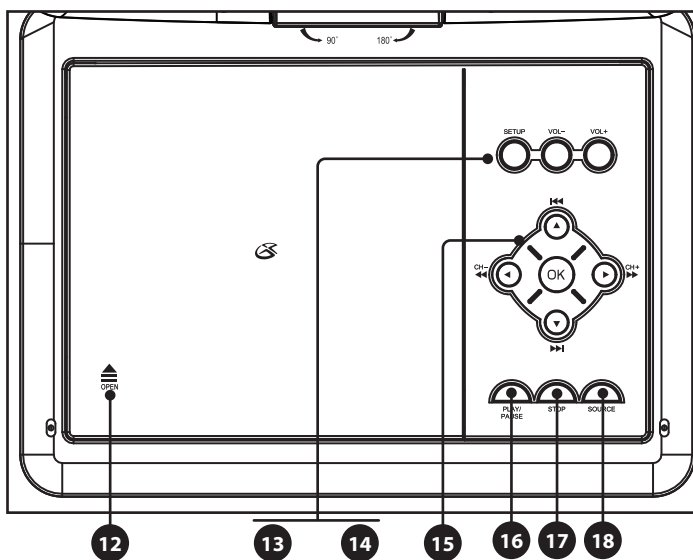

12. **Disc Door/Open:** Press open the disc door.
13. **Setup:** Press to view DVD player setup menu and settings.
14. **Volume:** Press to adjust the volume of the speaker.
15. **Arrows/OK:** Use to navigate and make selections in menu and settings screens.  
**Prev/Next:** Press to skip chapters or tracks.  
**Fwd/Rev:** Press to search through chapters or tracks.  
**CH-/CH+:** Press to change the TV channel.
16. **Play/Pause:** Press to play or pause a loaded DVD.
17. **Stop:** Press to stop DVD playback.
18. **Source:** Press to select input source.

# Orientation

## Remote Functions

### Standby

Press to power ON/OFF.

### Search

Press to search for TV stations.

### TFT On/Off

Press to turn the screen ON/OFF.

### Mute

Press to mute audio.

### Source

Press to select the media source.

### Audio

Press to adjust the current audio settings for the loaded DVD.

### EPG

Press to edit Electronic Programming Guide (EPG).

### Zoom

Press to zoom in or out on a loaded DVD.

### Volume +/-

Press to adjust the volume level.

### Menu

Press to access DVD menu.

### Exit

Press to exit the settings menu.

### Arrows/OK

Press to make selections in the on screen or disc menus.

### Info/Angle

Press to display TV information. On supported DVDs, press to view alternate angles.

### Set Up

 
Press to access the setup menu.

### Number Keypad

Use to enter info to play a specific chapter or track.

### Title

Press to access the title menu of a loaded DVD.

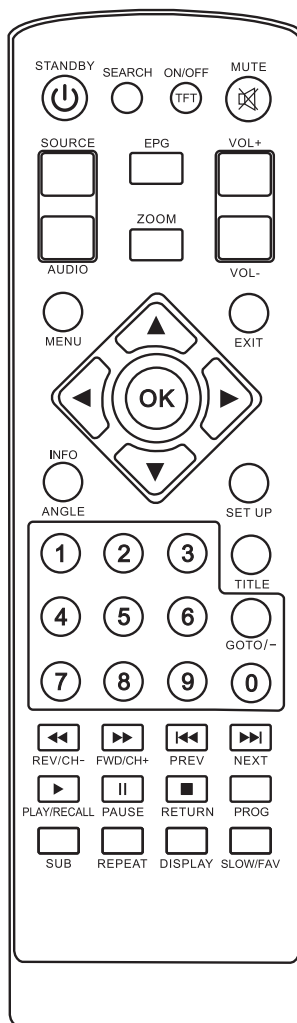

### GOTO/-

Press to access a specific chapter or title.

### Rewind/CH -

Press to rewind search through a loaded DVD.

Press to change channels in TV mode

### Fast Forward/CH +

Press to fast forward search through media on a loaded DVD. Press to change channels in TV mode

### Prev

Press to return to the previous chapter or track on a loaded DVD.

### Next

Press to skip to the next chapter or track on a loaded DVD.

### Play

Press to play media on a loaded DVD.

### Pause

Press to pause media on a loaded DVD.

### Stop

Press to stop playback on a loaded DVD.

### Program

Press to program a loaded disc to play chapters or tracks in a specified order.

### Sub

Toggle subtitle ON or OFF.

### Repeat

Press to repeat the current Chapter, Title, All, Off" in DVD disc.

Press to repeat the current track once, Repeat All or Off in CD disc.

### Display

Press to read information on playback status.

### Slow/FAV

Press to select a slow motion playback speed (1/2,1/3,1/4,1/5,1/6,1/7).

 


# TV Setup


## TV Antenna Installation

This player can receive ATSC TV signals after installing the TV antenna. The player includes two TV antennas.

1. Connect the **Telescopic antenna** directly to the TV Antenna Input on the player.

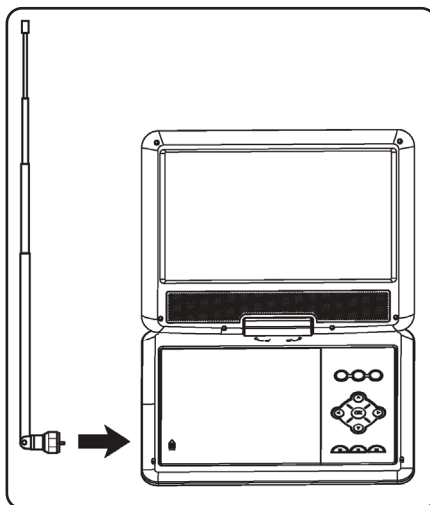

 2. Connect one end of the **Amplified antenna** cable to the TV Antenna Input on the player and the other end to the USB port.

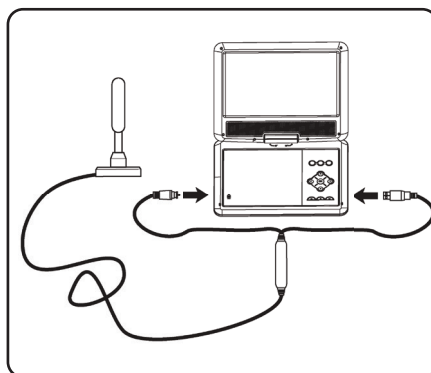

## Auto Scanning for Channels

The Auto Channel Scan must be run before any channels can be viewed on the television. Initial channel scanning process may take up to 15 min.

1. Press the **Source** button to switch to TV mode.
2. Press the **Search** button to begin scanning for available channels.
3. Playback will begin on the first discovered channel after the scan completes.
4. Use the **Rew/CH-** and **FWD/CH+** buttons to change channels while watching TV.

NOTE: After the initial scan, the player will remember the discovered TV channels.

# TV Setup

---

## Initial System Setup for TV (ATSC)

When you press the **Menu** button on the remote while in TV mode, the following setting menu will appear on the screen. Press the **Arrow** buttons to navigate between the menu pages and press the **OK** button select and confirm your choices. Press the **Exit** button to save any setting changes and return to the previous menu screen or to exit the settings menu.

**Note:** This player has an Electronic Programming Guide (EPG) that can show TV programming up to 7 days in advance. However, certain TV stations may only allow the EPG to show 1 day of programming.

## Program Menu

Some menus may require a password. The default password for the player is "000000."

### 1. Program Edit

Use the **Arrow** buttons and the Number Keypad (#1-4) to edit TV stations.

### 2. EPG

- Use the **Right Arrow** button to enter the Program Guide list.
- In the Program Guide list, use the **Up or Down Arrow** buttons to select a program.
- Press the **OK** button to open the schedule list.
- In the schedule list, press the "1" key on the **Number Keypad** to add the program to the schedule list. Press the "2" key to edit the program on the schedule list. Press the "3" key to delete the program from the schedule list.

### 3. Sort

Use the **Arrow** buttons to sort by LCN, ONID, Service Name, or Service ID.

## Picture Menu

### 1. Aspect Ratio

Use the **Arrow** buttons to select 16:9 Pan & Scan, 4:3 Letter Box, or 4:3 Pan & Scan, 4:3 Full, 16:9 Widescreen, Auto, as the aspect ratio.

### 2. Resolution

Use the **Arrow** buttons to select 1080i, 1080p (60Hz), 480i, 480p, or 720p and the display resolution.

## Channel Search Menu

### 1. Auto Search

Press the **Right Arrow** button to start Auto Search

### 2. Manual Search

Press the **Right Arrow** button to start Manual Search

### 3. Country

Use the **Arrow** buttons to select different country from USA or Mexico,

### 4. Signal Type

Use the **Arrow** buttons to set signal type Air or Cable

### 5. Modulation

Use the **Arrow** buttons to set modulation CH\_OFF, CH3\_ON or CH4\_ON

# TV Setup

---

## Time Menu

### 1. Time Offset

Use the **Arrow** buttons to select Auto or Manual.

### 2. Country Region

Use the **Arrow** buttons to select USA or Mexico as your region

### 3. Time Zone

Use the **Arrow** buttons to select your current time zone when Time Offset is set to Manual.

## Option Menu

### 1. OSD Language

Use the **Arrow** buttons to select English, French, or Spanish as the On Screen Display language

### 2. Close Caption

Use the **Arrow** buttons to select CC Display, CC Position, Font Size, Font Color, BG Color or CC Transparency

### 3. Audio Language

Use the **Arrow** buttons to select English, French, or Spanish as the audio language.

## System Menu

Some menus may require a password. The default password for the player is "000000."

### 1. Parental Guidance

- **System Lock**

Use the **Arrow** buttons to select On/Off. The following settings can be changed when system lock is on.

- **Rating Region**

Use the **Arrow** buttons to select US or Canada

- **MPAA**

Use the **Arrow** buttons to select from MPAA settings (OFF, G, PG, PG-13, R, NC-17 or X)

- **TV**

Press the **Right Arrow** button to enter Parental Guidance map. Use the **Arrow** buttons to lock items in the map.

### 2. Set Password

Press the **Right Arrow** button to enter the Set Password menu, Input Old Password, Input New Password, and Confirm Password.

### 3. Restore Factory Default

Press the **Right Arrow** button to enter. Enter the password. Press the OK button to confirm and reset to factory setting. Press exit to quit.

### 4. Information

Press the **Right Arrow** button to show the unit Model, SW Version, and HW Version information

### 5. Software Update

For service center use only.

# DVD & CD

## Playing a DVD or CD

1. Press the **OPEN** button on the interior of the player to open the disc door.
2. Place a disc on the center spindle with the label side facing up.
3. Close the lid. You will hear a click after you have shut the lid securely.
4. Slide the **Power On/Off** switch on the right side of the unit to the on position to power on the unit. Playback will start automatically.

**Note:** When you press the **Stop** button then press the **Play** button, the player will resume playback from the last stopped position. There is a loading delay during this process while the player recalls memory of the last stopped position.

 
## Movie Playback Options

Onscreen status bars appear after you press the **Display**, **Subtitle**, **Angle**, **Zoom**, **Audio**, or **Repeat** buttons while playing DVDs. To exit the status bars, press the same button again or leave the screen idle for about 5 seconds.

1. The Display status bar shows the source, current scene/chapter number, the total number of scenes/chapters, and the playback timestamp.
2. The Subtitle status bar shows the current subtitle language.
3. The Angle status bar shows the current viewing angle (not available on all discs).
4. The Zoom status bar shows the current zoom level.
5. The Audio status bar shows the current audio language and stereo mode.
6. The Repeat status bar shows playback repeat options.

## Programming a DVD or CD

1. While the loaded disc is playing, press the **Prog** button on the remote. The menu below should appear on the screen for DVD programming.
2. Use the **Number Keypad** and **Arrow** buttons to enter in DVD titles and chapters or CD tracks in the order you want them to play.
  - Repeat step until the desired DVD titles and chapters or CD tracks are programmed.
  - For DVDs, titles and chapters must be entered at the same time.
3. Press the **Play** button to confirm your choices and begin playing the programmed disc.
4. Press the **Stop** button to stop Program playback. Press the **Play** button to resume Program playback.
5. Press the **Stop** button twice to exit the Program feature and resume normal playback.

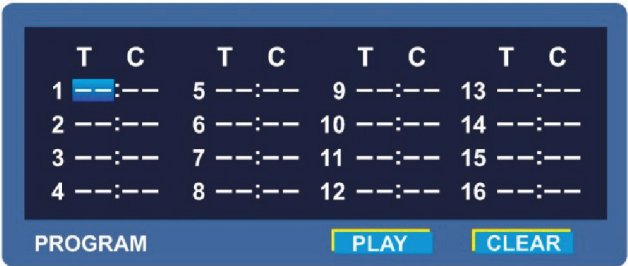

# DVD & CD

---

## DVD Setup Menu

In DVD mode, press the **DVD Setup** button to access the DVD setup menu. Press the DVD Setup button to exit the DVD setup menu.

## Player Setup

When you press the **Setup** button on the remote, the following setting menus will appear on the screen. Press the **Arrow** buttons to navigate between the menu pages and press the **OK** button select and confirm your choices. Press the **Exit** button to save any setting changes and return to the previous menu screen or to exit the settings menu.

## System Menu

- 1. BT OUT**  
Turn Bluetooth capability ON/OFF.
- 2. Power Resume**  
Turn the last-position memory feature ON/OFF.
- 3. TV Type**  
Select 16:9, 4:3PS, or 4:3LB using the **Arrow** buttons on the remote.
- 4. Default**  
Reset the player and restore all of the default settings using the **Arrow** and **OK** buttons on the remote.

## Audio Menu

- 1. Key**  
Adjust the Audio output tone between flat (b) and sharp (#) using the **Arrow** buttons on the remote.
- 2. Dual Mono**  
Select Stereo, Mono L, Mono R, or Mix Mono using the **Arrow** buttons on the remote.

## Language Menu

- 1. OSD Language**  
Select English, French, or Spanish for the On Screen Display using the **Arrow** buttons on the remote.
- 2. Audio Language**  
Select English, French, or Spanish for the Audio Language using the **Arrow** buttons on the remote.
- 3. Subtitle Language**  
Select English, French, or Spanish for the Subtitle Language using the **Arrow** buttons on the remote.
- 4. Menu Language**  
Select English, French, or Spanish for the Menu Language using the **Arrow** buttons on the remote.

## Video Menu

 
- 1. Brightness**  
Set the brightness level between 0 and 12 using the **Arrow** buttons on the remote.
- 2. Contrast**  
Set the contrast level between 0 and 12 using the **Arrow** buttons on the remote.
- 3. Hue**  
Set the hue level between -6 and 6 using the **Arrow** buttons on the remote.
- 4. Saturation**  
Set the saturation level between 0 and 12 using the **Arrow** buttons on the remote.
- 5. Sharpness**  
Set the sharpness level between 0 and 8 using the **Arrow** buttons on the remote.

# Connecting to other Devices

## Connecting the AV Output

Requires a **3.5mm to 3x RCA audio/video cable** (included).


1. Connect the **3.5mm to 3x RCA audio/video cable** to the **AV Output** on the unit and the RCA stereo audio inputs and composite video input on a TV.
2. Audio and video played on the DVD player will display on the connected TV.

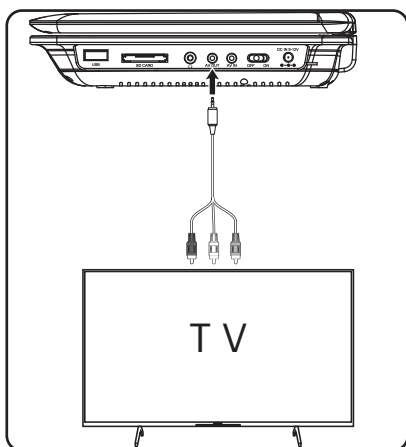

## Connecting the AV Input

Requires a **3.5mm to 3x RCA audio/video cable** (included).

 1. Connect the **3.5mm to 3x RCA audio/video cable** to the **AV Input** on the unit and the composite video/audio outputs on a media player.
2. Press the **Source** button on the remote or on the player to enter the AV mode.
3. Use the controls on the connected media player to select and play media displayed on the DVD player.

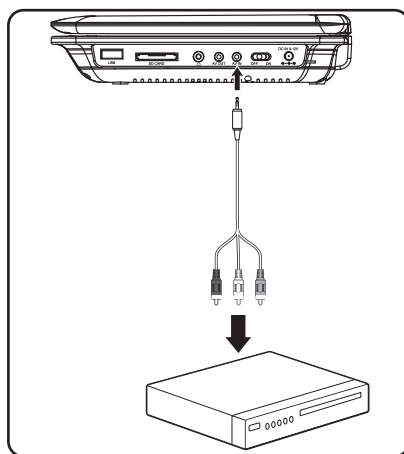

## Bluetooth Out (Transmitter) Operation

1. Press the **Setup** button to enter the System menu. Use the **Arrow** buttons to select BT OUT and change the setting to On. The power indicator will flash green. Then, press the **Setup** button or **Exit** button to exit the menu.
2. Enable Bluetooth on your device. To eliminate confusion, disable Bluetooth on all devices to which you do not wish to connect.
3. The player will auto scan and pair with your Bluetooth device. The **Power Indicator** will display a solid green light when connected. Audio from the player will now be heard through the player's speakers.
4. To pair with another Bluetooth enabled device, disable Bluetooth on the connected Bluetooth device or turn the device off. Enter the System menu and change the BT OUT setting to off, then on again. Then, repeat steps 2 and 3.
5. Change the BT OUT setting back to off to exit Bluetooth Transmitter mode. The **Power Indicator** will display a red light and audio will be heard through the player's speakers again.

 
**Note:** This player has a Bluetooth Transmitter, meaning it can only connect to Bluetooth Receivers, such as speakers and headphones. If you experience issues pairing, check the manual for your Bluetooth device.

# USB Drive & SD Card

## Using a USB drive or a SD card

Supports Memory cards, SD cards, and USB flash drives. Supported file types include Mpeg4, mp3, Jpeg, and AVI file formats. Supports video files up to 720x576 pixels.

1. Insert a USB drive into the **USB port** or insert a SD card into the **card slot**.
2. To select USB or Card as the source, press the **Source** button on the remote, or press the **Source** button on the front of the player.
3. Press the **Arrow** buttons on the remote to select Audio, JPEG, or Video mode.
4. Press the **Arrow** buttons on the remote to select the desired folder or file. Then, press the **OK** button to begin playing content from the connected storage device.
5. Press the **Stop** button twice to return to the previous folder screen.

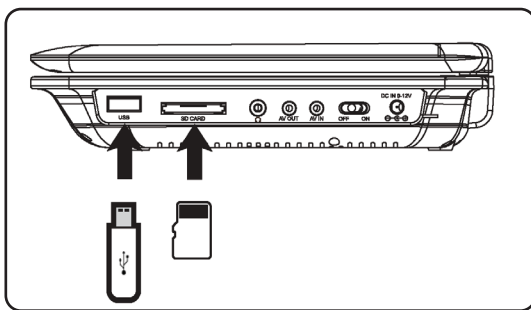

## Music Playback Options

Onscreen status bars appear on the top of the screen after you press the **Display** or **Repeat** buttons while playing music files. The Display status bar shows the source, current track number, the total number of tracks, and the playback timestamp. The Repeat status bar shows playback repeat options. To exit the status bars, press the same button again.

## Video Playback Options

Onscreen status bars appear on the top of the screen after you press the **Display** or **Repeat** buttons while playing video files. The Display status bar shows the source, current scene/chapter number, the total number of scenes/chapters, and the playback timestamp. The Repeat status bar shows playback repeat options. To exit the status bars, press the same button again.

## Photo Browsing Options

Onscreen status bars appear after you press the **Display** or **Repeat** buttons while viewing photos. The Display status bar shows the source, current file number, and the total number of files. The Repeat status bar shows playback repeat options. To exit the status bars, press the same button again.

Notes:

- Press the **Prev** button to view the previous photo in a sequence. Press the **Next** button to view the next photo in a sequence.
- While browsing, you can press the **Arrow** buttons to rotate the image.

# Customer Support

---

## Contact Information

**Website:** [www.gpx.com](http://www.gpx.com)

**Email Support:** [prodinfo@dpiinc.com](mailto:prodinfo@dpiinc.com)

**Email Parts:** [partsinfo@dpiinc.com](mailto:partsinfo@dpiinc.com)

**Phone Support:** 1-888-999-4215

## Warranty

For Warranty Information and the most up-to-date version of this User's Guide, go to: [www.gpx.com](http://www.gpx.com)

## International Support

To download this User's Guide in English, Spanish, and French, or to get answers to frequently asked questions, visit the support section at: [www.gpx.com](http://www.gpx.com)

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: [www.gpx.com](http://www.gpx.com)

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: [www.gpx.com](http://www.gpx.com)



***Protect for Today  
Sustain for Tomorrow***

Copyright © 2024 Digital Products International (DPI, Inc.). All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

---