

# SYLVANIA

MODEL NO. SKCR2826BT

## UNDER CABINET UNIVESAL BLUETOOTH MUSIC SYSTEM

### INSTRUCTION MANUAL



PLEASE READ BEFORE USING THIS UNIT

Sylvania Inc. used under license SYLVANIA is a registered trademark of OSRAM .

# Warnings and Precautions

---

**TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.**



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player’s lid is open and the system’s interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

**CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.**

To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

# Important Safety Instructions

- Read Instructions** - All the safety and operating instruction should be read before the product is operated.
- Retain Instructions** - The safety and operating instruction should be retained for future reference.
- Heed Warnings** - All warning on the product and in the operating instructions should be adhered to.
- Follow instructions** - All operating and use instructions should be followed.
- Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.
- Attachments** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- Water and Moisture** - Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement, or near a swimming pool, and the like. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- Accessories** - Do not place this product on an unstable cart, stand tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
- A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

See figure:



 
- Ventilation** - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction have been adhered to.
- Power Sources** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
- Grounding or Polarization** - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety

feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

**Alternate Warnings** - This product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

- Power-Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and point where they exit from the product.
- Protective Attachment Plug** - The product is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.
- Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

See figure:

 
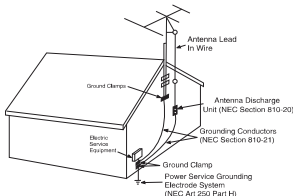 


 
- Lightning** - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
- Power Lines** - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- Overloading** - Do not overload wall outlets, extension cords, or integral convenience





receptacles as this can result in a risk of fire or electric shock.

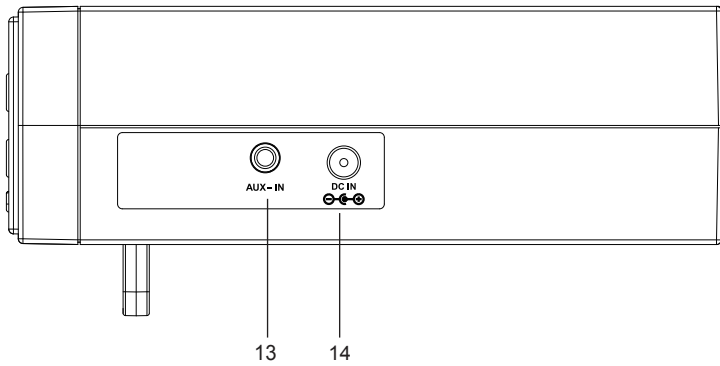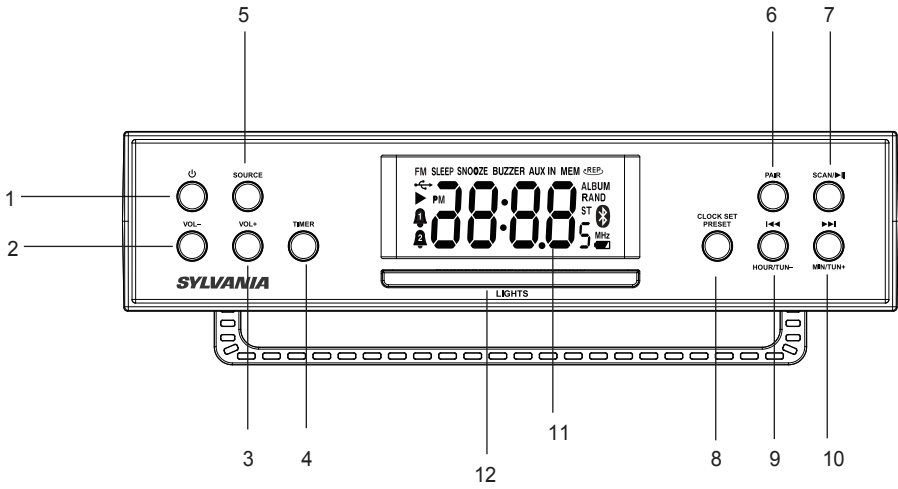- Object and Liquid Entry** - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- Servicing** - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- Damage Requiring Service** - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - When the power-supply cord or plug is damaged,
  - If liquid has been spilled, or objects have fallen into the product,
  - If the product has been exposed to rain or water,
  - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
  - If the product has been dropped or damaged in any way, and
  - When the product exhibits a distinct change in performance - this indicates a need for service.
- Replacement Parts** - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- Safety Check** - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- Wall or Ceiling Mounting** - The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
- Heat** - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. Battery shall not be exposed to excessive heat such as sunshine, fire, or the like.
- Main plug** is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- Excessive sound pressure from earphones and headphones can cause hearing loss.
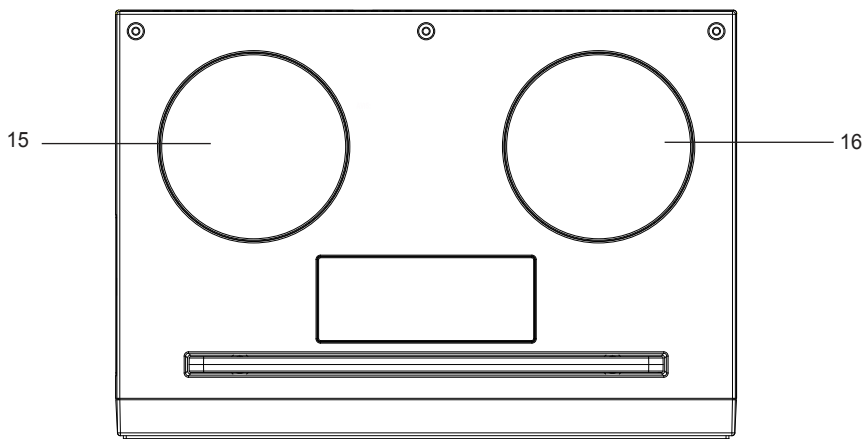
# LOCATION OF CONTROLS



 


1.  POWER button
2. VOLUME - button
3. VOLUME + button
4. TIMER button
5. SOURCE button
6. PAIR button
7.  PLAY/PAUSE/SCAN button
8. CLOCK SET PREST button
9.  HOUR / TUNE- Backward - button
10.  MIN / TUNE + Forward + button
11. LCD DISPLAY
12. LIGHTS button ( Press to turn the under cabinet light on.)
13. AUX IN Jack
14. DC IN Jack
15. SPEARKER (L)
16. SPEARKER (R)

 
## POWER SOURCE

### AC POWER

This product operates on 120V~ 60Hz power supply. To power the unit, plug the built-in AC Power cord into a standard wall outlet.

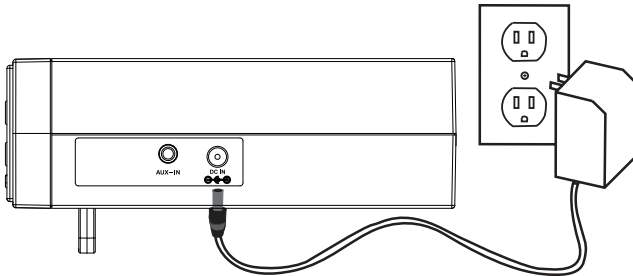

### BATTERY BACKUP

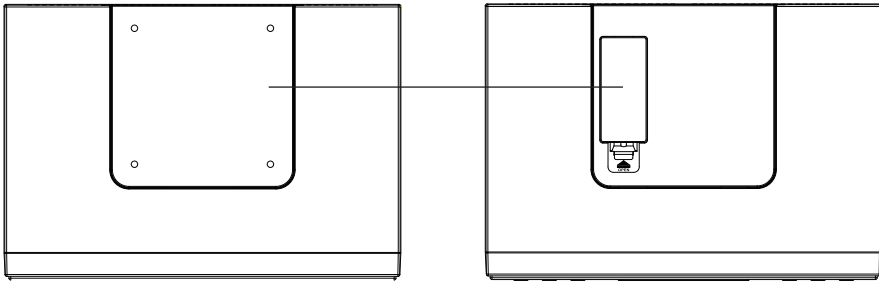

Requires 2, AAA-size, batteries (not included). The battery backup is intended for short power outages only. The unit's primary functions cannot run on the battery backup alone.

This unit is equipped with a battery back-up system, requiring two DC 1.5V UM-4 type batteries (not included). Insert the battery in the **BATTERY COMPARTMENT** making certain that the positive and negative (+ and -) sides are properly aligned. If power failure occurs, the clock automatically switches to the battery power supply, the clock continue running internally and the radio presets are preserved. When power returns, the unit switches back to AC adaptor again.

### BATTERY CARE

- Use only the size and type of batteries specified.
- If the unit is not to be used for an extended period of time, remove the battery.
- Old or leaking batteries can cause damage to the unit and may void the warranty.
- Do not try to recharge batteries not intended to be recharged; they can overheat and rupture (Follow battery manufacturer's directions).
- Do not dispose of batteries in fire, batteries may leak or explode.

## SETTING THE CLOCK

1. With the power off, press the **CLOCK SET/PRESET** button. The hour on the display will begin blinking.
2. Press the **hour/TUN - ◀◀ MIN/TUN + ▶▶** button to adjust the hour.
3. Press the **CLOCK SET/PRESET** button again to adjust the minutes. The minutes on the display will begin blinking.
4. Press the **hour/TUN - ◀◀ MIN/TUN + ▶▶** button to adjust the minutes.
5. Press the **CLOCK SET/PRESET** button again to finish setting the time.

## SETTING TIMER



1. Press the **TIMER** button. the TIMER icon with time “10” will displayed
2. Press the **TIMER** buttons again to adjust the timer the timer time will count down 10 minute. Repeat to press this button to adjust the timer in decrements of 10 minute.
3. Press the **hour/TUN - ▶▶** or **MIN/TUN + ◀◀** buttons to adjust the timer in increments/decrements of 1 min.
4. After the set time has expired, the under cabinet music system will sound an alarm.
5. Press the **TIMER** button again to finish setting and will show the current time


## BLUETOOTH OPERATION

### ABOUT PAIRING

Pairing is the term used when two Bluetooth devices are connected wirelessly for the first time. This allows the devices to see each other and sets up a one to one communication channel between both devices.

#### **To begin pairing with a Bluetooth device**


1. Press the **⏻** button to turn on the unit.
2. Press the **SOURCE** button to select Bluetooth function and the icon  will displayed and flash on LCD, you will hear the melody and start pairing process to connect to your Bluetooth device.
3. Turn on Bluetooth function of your device and enable the search or scan function to find **SKCR2826BT** (see your device’s instructions to add or setup a Bluetooth device).
4. Select **SKCR2826BT** from the device list when it appears on you device screen. If required, enter the pass code “0000” to pair (link) **SKCR2826BT** with your device.
5. Once paired with a device, the icon  will light steadily and your will hear the sound “DOM” to confirm that pairing is tone beep sound confirms that pairing is completed.

6. If you want **SKCR2826BT** change to pair with another Bluetooth device. Press and hold the **PAIR** button for about 4~5 seconds. The icon  will flash, the melody will be heard to confirm the unit will go into Pairing/Discoverable mode again. Repeat steps 3 and 4.

### **To connect previously paired Bluetooth device**

**SKCR2826BT** can store one previously paired device for quick pairing during power on. When the unit is powered on and the previously paired device is found within the operating range, the unit will pair the device automatically.

### **NOTE:**


- Due to different operating system of Bluetooth devices, the time taken by pairing process might be different. If the pairing cannot be successful in the first time, please try to restart the pairing process by pressing and holding the **PAIR** button again until the icon  flash.
- The pairing time might be longer for the first time pairing or pairing a new Bluetooth device.
- Make sure you have the latest firmware for your Bluetooth devices.
- Make sure your device is working properly. Check your device's manual for details on Bluetooth pairing and linking.
- Refer to manual of your cell phones, tablet PC, computer or other Bluetooth enabled device for Bluetooth operation since it may vary from model to model.

### **PLAYING FROM A BLUETOOTH DEVICE**

You can play music from your Bluetooth device wirelessly to **SKCR2810BT** after pairing.

1. Selecting your favorite song, press the **PLAY** button on your Bluetooth device or the **PAIR** button on **SKCR2826BT** to play or pause the Bluetooth device playback.
2. Adjust both the **VOLUME +/-** buttons of your **SKCR2826BT** and your Bluetooth device until you reach a comfortable listening level.

### **Notes:**

1. Your Bluetooth enabled device will not play the music through the speaker, even if connected (linked), if the device does not support A2DP profile.
2. Remember to turn off the **SKCR2826BT** when you have finished listening, set the  button to the **STANDBY** mode.
3. Don't forget to switch off the power of your external audio device as well



## LISTENING TO THE RADIO

An FM antenna is built into the unit. To improve FM radio reception, adjust the position of the unit.

1. Press the **⏻** button to turn the unit ON.
2. Press the **SOURCE** button to select FM band, the FM frequency will show on LCD display.
3. Press the **SCAN ►||** button to tune the radio manually.
4. Use the **HOUR/TUN - ◀◀** or **MIN/TUN + ▶▶** button to select the desired radio station. If you press and hold the **HOUR/TUN - ◀◀** or **MIN/TUN + ▶▶** button for 2 seconds, then release, the unit will automatically scan to the next broadcasting station.
5. The broadcasting radio frequency will be displayed for about 10 seconds before reverting to the clock time.
6. Press the **⏻** button to turn the radio OFF.

## TO SET/RECALL RADIO STATION PRESETS

1. Press the **⏻** button to turn the unit ON.
2. Press the **SOURCE** button to select FM band, the FM frequency will show on the LCD display.
3. Use the **HOUR/TUN - ◀◀** or **MIN/TUN + ▶▶** button to select the desired radio station.
4. Press the **CLOCK SET PREST** button to enable the program function and the preset channel number “P01” indicator will show on the LCD display and flashing.
5. Press the **HOUR/TUN - ◀◀** or **MIN/TUN + ▶▶** button to enter the desired channel number of program.
6. Press the **CLOCK SET PREST** button to confirm memory.
7. Repeat above steps #3 thru #6 to preset up to 30 stations for FM band.
8. To retrieve one of the preset stations already programmed, press **►|| / PLAY/PAUSE/SCAN** button until you reach the desired preset number/radio station.

## USING THE AUDIO INPUT

This unit provides an auxiliary audio signal input jack for connecting external audio devices like MP3 players, CD players and listen to them through the speakers of this unit.

1. Use an audio cable (not included) with one 3.5 mm stereo plug on each end of the cable.
2. Plug one end into the **AUX IN Jack** on the main unit and the other end of the cable into the Line-out Jack or Headphone Jack of your external audio device.
3. Turn on the unit and external audio device.
4. To select auxiliary audio input, tap the **SOURCE** button to select **AUX IN** mode. “**AUX IN**” icon appears on display.
5. The volume level can now be controlled through the main unit. Operate all other functions on the auxiliary device as usual.


**NOTE:**

If you connect this unit to the Line-Out Jack of your external device then you only need to adjust the volume control of this unit. If you connected the Headphone Jack of your external device then you may need to adjust both the volume control of your external device and the volume control of this unit to find the most desirable volume setting.

**CARE AND MAINTENANCE**

1. Clean the unit with a soft, damp (never wet) cloth. Solvent or detergent should never be used.
2. Avoid operating your unit under direct sunlight or in hot, humid or dusty places to reduce the risk of fire or electric shock.
3. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
4. For better Clock Display clarity, avoid operating the unit under direct sunlight or in strong room illumination.
5. Unplug the unit from the electrical power outlet immediately in case of malfunction.

**SPECIFICATIONS**

Power Adaptor: AC input 100-240V~ 50/60Hz  
DC Output 5V  1000mA

Battery Back-up: 2 x DC 1.5V “AAA” Size batteries (not included)

Bluetooth: Bluetooth Specification version 4.2  
Support profile A2DP

Frequency Range: FM 87.5 – 108 MHz

Audio Power output: 1 W (RMS) x2

# LIMITED PRODUCT WARRANTY

This quality product is warranted to be free from manufacturer's defects in material and workman-ship, provided that the unit is used under the normal operating conditions intended by the manufacturer.

Should you have any problem with this product, please and it is highly recommended to visit our website at [www.curtisint.com](http://www.curtisint.com) before you take any other steps as we have additional copies of instruction manuals, operating manuals and trouble shooting tips on our website which gives you the answer on most of the questions you could have in operating the unit.

## TERMS OF WARRANTY

C.I. Service Dept. warrants this product to be free from defects in materials and workmanship for 90 days on parts and 90 days on labor. If you originally purchased your product more than 90 days ago, a repair fee may apply.

Nothing within this warranty shall imply that C.I. will be responsible or liable for any damage to any items placed in this product, whether due to any defect of the product, or its use, whether proper or improper.

## EXCLUSIONS

Save as herein provided, C.I. Service Dept. (Canada) or C.I. Service Dept. (USA), there are no other warranties, conditions, representations or guarantees, express or implied, made or intended by C.I. or its authorized distributors and all other warranties, conditions, representations or guarantees, including any warranties, conditions, representations or guarantees under any Sale of Goods Act or like legislation or statute is hereby expressly excluded. Save as herein provided, C.I. Service Dept. (Canada) or C.I. Service Dept. (USA), shall not be responsible for any damages to persons or property, including the unit itself, howsoever caused or any consequential damages arising from the malfunction of the unit and by the purchase of the unit, the purchaser does hereby agree to indemnify and save harmless C.I. from any claim for damages to persons or property caused by the unit.

## TO OBTAIN REPAIRS UNDER THE TERMS OF THIS WARRANTY

1. The original purchaser must present a copy of the original bill of sale and the service warranty card.
2. Any alterations, abuse, misuse, battery corrosion or accidental damage voids the warranty.
3. The warranty does not cover cabinets and accessories.
4. No warranty or insurance contained or set out shall apply when damage or repair is caused by power failure; damage in transit or when moving the unit; improper power supply; use for commercial or industrial purposes; service calls resulting in customer education, etc.
5. The defective product should be mailed to:

**Canada**  
**C.I. Service Dept.**  
**315 Attwell Drive**  
**Toronto, ON**  
**M9W 5C1**

**U.S.A**  
**Curtis International Ltd**  
**c/o Liquidity Services/Liquidation.com**  
**1399 Perry Road**  
**Plainfield, IN**  
**46168**

**For service assistance and product information, please call: 1-800-968-9853.**

If mailing the product, the freight must be prepaid and a money order for \$7.00 should be included to cover the cost of insurance and the return of the product.

6. C.I. reserves the right to repair or replace the parts which have become defective.

.....