

AR4000CD User Manual

ART+SOUND


Bluetooth
BLUETOOTH PORTABLE CD RADIO BOOMBOX
AR4000CD

User Manual



Bluetooth

In the Box

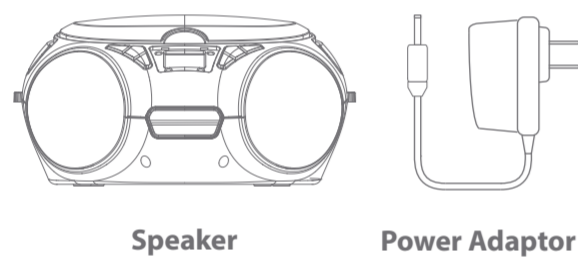

Speaker

Power Adaptor


 
Pairing the Speaker

1. Plug the speaker in and turn the speaker ON moving the [MAIN] switch to the BT position, a tone will be heard and the Bluetooth LED indicator will flash BLUE.
2. Set your Bluetooth-enabled device to search for Bluetooth devices. When your Bluetooth-enabled device finds the speaker, select "AR4000CD" from the list of found devices.
3. After a successful pairing, a tone will be heard indicating that Bluetooth is connected and the LED indicator will turn solid BLUE.

i If a previously paired device is in range when the speaker are turned on, the speaker will connect to it automatically.

On an iOS or Android Device

- Go to **SETTINGS > BLUETOOTH** (Make sure Bluetooth is turned ON)

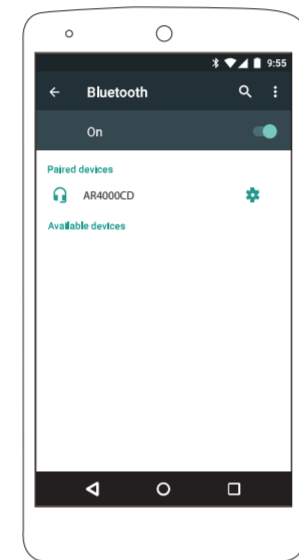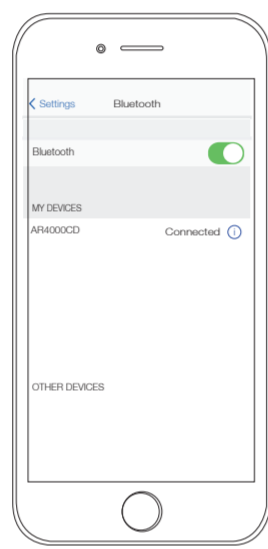

i The images above are typical of many Bluetooth-enabled devices in the market today, and are used to assist in the explanation of the pairing process. Your Bluetooth-enabled device's interface and interaction with the speaker may slightly differ from the illustrations above.

Using the Speaker

Powering ON/OFF

Make sure the speaker is plugged in or there are batteries installed to the speaker.

- To turn the speaker ON, move the [MAIN] switch to the BT/FM/CD position.
- To turn the speaker OFF, move the [MAIN] switch to the OFF position.
- Move the [LIGHT] switch to ON to enable to speaker lights.

Switching Play Modes

- Move the [MAIN] switch to the BT position for **Bluetooth mode**, FM for **FM radio mode**, or CD for **CD mode**.

Adjusting Volume

- In all play modes, move the volume knob on the side of the speaker to adjust volume.

Playing Music in Bluetooth Mode

To enjoy music wirelessly on your speaker, make sure you are paired to a Bluetooth-enabled device. Once paired, you can control media playback and volume adjustment with the controls on your paired device.

- To quickly pair/unpair Bluetooth, long press the [PAIR/STOP] button while in Bluetooth mode.
- To play/pause music playback, press the [▶||] button on the speaker or remote control.

Skipping Tracks


- To skip to the next track, press the [▶] button on the speaker.
- To skip to the previous track, press the [◀] button on the speaker.

Using the FM Radio

If reception is weak, position the speaker near an open window. Move the [MAIN] switch to the FM position to turn the speaker ON/enable the FM radio.

- Move the [TUNE] knob to search for radio stations.

Location of Controls

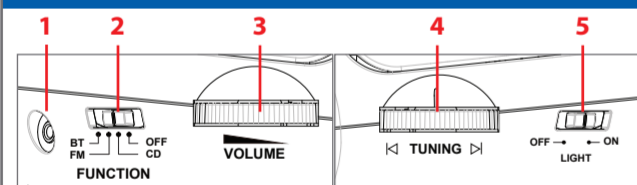

(Left side)


1. 3.5mm Auxiliary Jack
2. [MAIN] Switch: Enable Bluetooth/FM Radio/CD mode
3. [VOL] Knob: Adjust volume

(Right Side)

4. [TUNE] Knob: Tune to stations in FM radio mode
5. [LIGHT] Switch: Enable/disable speaker lights

(Control Panel)

6. [PROG] Button:
7. [PAIR/STOP] Button:
 - BT mode - Long press, unpair Bluetooth device
 - CD mode - Quick press, stop CD playback
8. [◀] Button: Skip to previous track
9. Power LED Indicator
10. Bluetooth LED Indicator
11. Program LED Indicator
12. Repeat LED Indicator
13. Playback LED Indicator

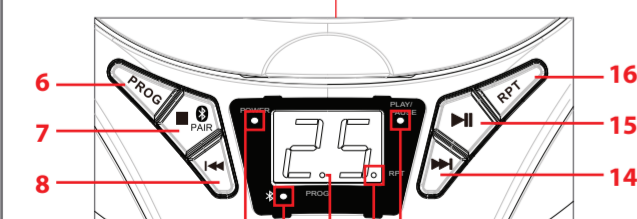


(Back of Speaker)

17. DC Power Jack

(Bottom of the Speaker)

18. Battery Compartment

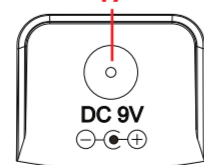

Powering the Speaker

Make sure the speaker's [MAIN] switch is in the OFF position before continuing.


Using the Power Adaptor

To power the speaker, plug the power adaptor into the power jack on the back of the speaker and plug the adaptor into a wall socket.



Using Batteries

Remove the battery compartment cover and install 6 C-type batteries (not included) into the speaker as indicated by the "+" and "-" polarity. Once installed, return the compartment cover over the compartment.

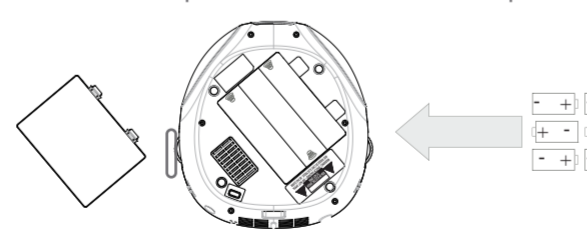

NOTE: If the volume decreases or the sound from the speaker is distorted, it is time to replace the batteries.

Using the Speaker (cont'd)

Using the CD Player

Open the CD door and insert a CD onto the disc drive and close the door. Move the [MAIN] switch to CD.

Playing/Pausing/Stopping Music

- To play/pause CD playback, press the [▶||] button. While the CD is playing, the playback LED indicator will be **solid RED**. When playback is paused, the LED indicator will **flash RED**.
- Press the [PAIR/STOP] button to stop CD playback.

Skipping and Repeating Tracks

- Quick press the [◀] and [▶] buttons to skip to previous or next tracks on the CD.
- Long press the [◀] and [▶] buttons to search backward or forward a few seconds in CD playback.
- Press the [RPT] button once to repeat the track that is currently playing. The repeat LED indicator will **flash RED**.
- Press the [RPT] button a SECOND TIME to repeat the entire CD. The repeat LED indicator will be **solid RED**.

Program Tracks

Programming tracks allows you to create your own order for tracks on a CD to play. To program a list, the CD cannot be playing (press the [PAIR/STOP] button to stop).

Creating a Program List

1. Press the [PROG] button. "01" will be seen on the speaker's display and the program LED indicator will flash.
2. Press the [◀] or [▶] buttons to select the track to be programmed.
3. Press the [PROG] button again to store the selection. Once stored, the speaker's display will show "02."

NOTE: You may store up to 20 tracks in a program list.

After entering a 20th track, the speaker's display will show the programmed tracks in their correct sequence. At the end of the review, "01" on the speaker's display and the program LED indicator will both flash.

Playing the Program List

- Press the [▶||] button to play/pause the program list. The program LED indicator will turn solid RED while playing.
- Press the [PAIR/STOP] button to stop playback.
- Press the [RPT] button once to repeat the track that is currently playing on the program list. Press the [RPT] button a SECOND TIME to repeat the entire program list.
- To cancel and delete the programmed list, press the [PAIR/STOP] button TWICE or stop playback and open the CD door.

Editing the Program List

The program list may be reviewed or edited, first press the [PAIR/STOP] button.

1. Press the [PROG] button. The speaker's display will show "01" and the program LED indicator will both flash.
2. Move through the list of programmed tracks by pressing the [PROG] button, then use the [◀] or [▶] buttons to select a new track and confirm with the [PROG] button.

NOTE: Press the [PAIR/STOP] button to cancel editing.

Using the Auxiliary Input

To use the speaker's auxiliary input, insert a 3.5mm auxiliary cable to the AUX-IN port on the side of the speaker. Move the [MAIN] switch to the **CD position** and connect the other end of the 3.5mm cable to the headphone jack on your media playing device.

The speaker will automatically switch to auxiliary mode once the device is plugged in. Use the controls on the connected device to control playback and volume adjustment.

Safety Warnings

Symbol Definitions

DANGER - Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury. This symbol appears only in the most extreme situations.

WARNING - Indicates a potentially hazardous situation which could result in death or serious injury.

CAUTION - Indicates a potentially hazardous situation, which, if not a voided, may result in minor / moderate injury or product / property damage. It also warns against unsafe practices.

<p>The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of unshielded 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	<p>The examination point with an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	---	---

CAUTION CLASS 1 LASER PRODUCT
Operating the unit in a way other than specified herein, or making adjustments to the unit may result in hazardous radiation exposure.

LASER SAFETY
This unit employs a laser. Only qualified service personnel should attempt repair.

WARNING: RISK OF INVISIBLE LASER RADIATION WHEN CD LID IS OPEN OR INTERLOCKS FAIL. AVOID DIRECT EXPOSURE TO THE BEAM.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Legal Information

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Limited Warranty

90 Days Limited Warranty

In the unlikely event that this product is defective, or does not perform properly, you may within ninety (90) days from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- Call the Customer Support number located below, or go to our website portal to receive an SRO number.
- Provide proof of the date of purchase within the package (dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

Customer Service Dept. 36
c/o Southern Telecom
400 Kennedy Drive
Sayreville NJ 08872

Should you have any questions or problems concerning this product, please contact our customer service department at:

Customer Support:
Phone: 1-877-768-8481
Monday-Friday 8AM-10PM(EST)

www.southern telecom.com
Click on "Product Support"

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranty:

THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY AIT, INC.'S AGENTS, OR EMPLOYEES SHALL CREATE A GUARANTEE OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. AIT, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations on exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc.