

Wireless Boombox

User's Guide for Model BCB117 v1823-01



FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ADDITIONAL WARNINGS

- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains socket outlet completely, the mains plug should be disconnected from the mains socket outlet completely.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
- Batteries should be recycled or disposed of as per state and local guidelines.
- WARNING: This product may contain chemicals known to the State of California to cause birth defects, or other reproductive harm (California Prop 65). Wash hands after handling.
- This product meets and complies with all Federal regulations.
- Keep 30 cm minimum distances around the apparatus for sufficient ventilation
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtain, etc;
- No naked flame sources, such as lighted candles, should be placed on the apparatus;
- Attention should be drawn to the environmental aspects of battery disposal;
- Using the product at the moderate climates
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Important Safety Instructions

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth. Cleaning—Unplug this product from the wall outlet before cleaning.
- Do not use liquid cleaners or aerosol cleaners.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- This apparatus shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.
- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus completely, the main plug should be disconnected from the main socket outlet completely.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- The rating label is located at the bottom of the apparatus.
- The Caution Marking is located at the bottom of the apparatus.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.



WARNING: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



 
The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.



CAUTION:
TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF AC PLUG TO WIDE SLOT. FULLY INSERT.

 
Features & Controls

Features

- Built-in stereo speakers
- Supports Bluetooth
- Wireless range: 60 ft.
- CD player: supports CD, CD-R/RW
- Programmable tracks
- AM/FM radio with built-in antennas
- Aux In (3.5mm audio input)
- Analog volume control
- Red LED display
- AC Power: requires AC Power Cable (included)
- DC Battery Power: requires 6 C batteries (not included)


Includes

- AC Power Cable
- User's Guide

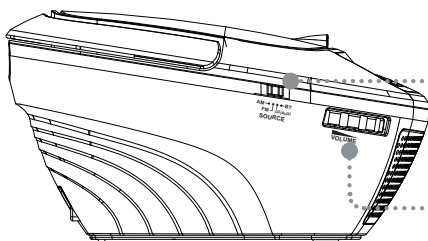

Source
AM/FM/CD (Aux)/
Bluetooth

 
Volume Dial

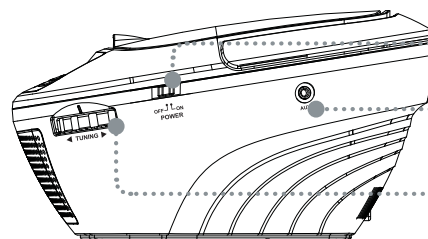

Power ON/OFF

Aux In

 Tuning Dial

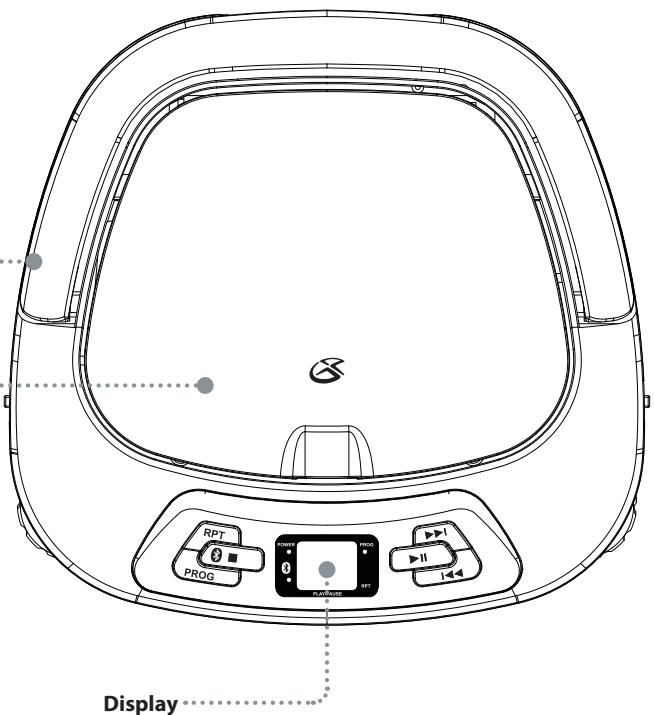

Carry Handle

CD Door

Display

Controls

RPT (Repeat)

Press to repeat a single track or the entire album.

Pair Bluetooth/Stop

PROG (Program)
Press to program tracks to play in a specific order.

Play/Pause

 
Skip Fwd/Rev.
Press to skip between tracks on a CD.
Press and hold to search through a single track.



Power


AC Power Cord

For power, plug the power cord into the power port on the rear of the boombox and a standard power outlet.

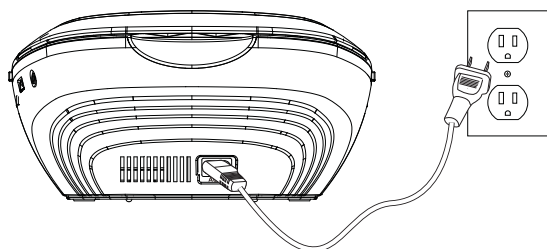

Battery Power

 For battery power, this unit requires 6 C sized batteries (not included).

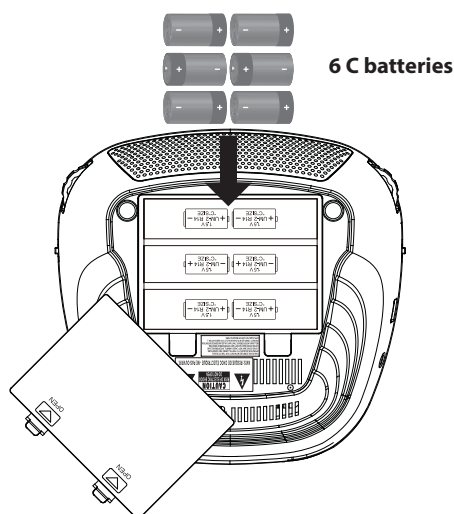

Bluetooth Wireless

Pairing to a Bluetooth Device and Playing Audio

1. Adjust the boombox's **Source** to **BT (Bluetooth) mode**. A blue light will flash on the display next to the **BT** symbol. If the boombox does not automatically begin to pair, press the **BT** button. *When pairing, remain within 3 feet of the unit.*
2. Using the controls on your Bluetooth device, select **BCB117** from your Bluetooth settings to pair. When successfully paired, the blue light on the display will turn solid and an audible chime will sound from the unit. *If your device requests a password, enter the default password **0000**. You can refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.*
3. Audio played through the connected Bluetooth device should now be heard through the speakers. Use the controls on the connected Bluetooth device to select and begin playing audio. Play, pause or skip audio using the controls on the device or the boombox.

After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device. If your device should become unpaired or if any pairing issues should occur, un-pair the unit on your Bluetooth device and follow these steps again.

Playing Audio

Loading and Playing a CD

1. Open the CD door and place a CD in the boombox, label side facing up.
2. Close the CD door.
3. Adjust the boombox's **Source** to **CD mode**.
4. Press the **Play/Pause** button to begin playing the loaded disc.

Programming a CD

1. Press the **Stop** button to stop a loaded CD.
2. Press the **PROG** button. "01" will blink on the display.
3. Press the **Skip Fwd/Rev** buttons to select a track.
4. Press the **PROG** button to add the selected track to the program. Repeat this process to program up to 20 tracks to play in a specified order.
5. Press the **Stop** button to cancel a program.

Playing the AM/FM Radio

This unit is equipped with internal AM/FM radio antennas. To improve radio reception, adjust the position of the unit.

1. Adjust the boombox's **Source** to **AM or FM mode**.
2. Adjust the **Tuning Dial** to the desired frequency band.
3. Turn the **Volume** dial to turn on the radio and adjust to the desired volume.
4. Adjust the **Tuning** dial to tune the radio.

Aux In

Requires a 3.5mm audio cable (not included).

1. Connect a 3.5mm audio cable to the **Aux In on the unit** and an **audio output** on an MP3 player or other audio source.
2. Adjust the boombox's **Source** to **CD (Aux) mode**.
3. Use the controls on the connected MP3 player or other audio source to begin playing audio through the boombox.

International Support

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: www.gpx.com

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: www.gpx.com

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: www.gpx.com

For Warranty Information and the most up-to-date version of this User's Guide, go to www.gpx.com

Customer Service: 1-888-999-4215 | **Email Support:** prodinfo@dpiinc.com | **Email Parts:** partsinfo@dpiinc.com

Copyright © 2016 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.



**Protect for Today
Sustain for Tomorrow**