

# PROSCAN



## BLUETOOTH MULTIMEDIA SOUNDBAR / SPEAKER

MODEL NO.: PSP1740  
INSTRUCTION MANUAL


Please read these instructions thoroughly  
before use and retain for future reference

PROSCAN, and the PROSCAN logo are trademarks used under license  
by CURTIS INTERNATIONAL LTD. – www.proscan-brand.com.

### Introduction

Thank you for choosing PROSCAN PSP1740 Bluetooth Speaker as your source for entertainment! You can use this item with iPads, iPhones, iPods and many types of smartphone to stream music. In order to get the best results when using the device, please read this manual first before using.

### Description

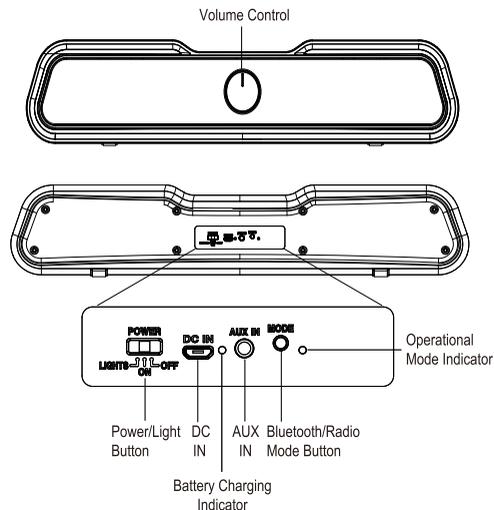

### Package Contents

1. Bluetooth Speaker
2. User Manual
3. Micro USB Cable

1

### Specifications

<b>Bluetooth specification</b>	Bluetooth 5.0 (A2DP, HFP, AVRCP)
<b>Bluetooth Range</b>	33ft (10m)
<b>Charging input voltage</b>	DC 5V = 500mA
<b>Built-In Battery</b>	1200mAh rechargeable lithium battery

Battery life & charging time may vary based on usage & types of devices used.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

For service assistance and product information,  
please call: 1-800-968-9853.  
Curtis International Ltd.  
7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3  
www.curtsint.com

5

### Features

- Bluetooth enables simple wireless pairing with your bluetooth-enabled devices
- Bluetooth v5.0
- 16 RGB LED light effects
- FM Radio
- Micro-USB port for battery recharge
- 3.5mm standard auxiliary input provides a simple wired connection to wide variety of devices.
- Built-in rechargeable battery

### Safety Instructions

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- DO not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint, etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This product is not a toy.

### INSTRUCTIONS FOR USE

#### Charging the Speaker

The speaker has built-in rechargeable battery. When the battery is drained out, speaker would turn OFF automatically. please recharge the battery every time it drains out.

Attach the Micro USB cable to the unit and plug into any USB charger. If the unit is completely discharged, it will take approximately 5 hours to fully charge at 5V/500mA.

The Red LED will illuminate during charging, when it has completed, the Red LED will turn off. There will be a beep when the battery is low and needs to be recharged.

Please charge it completely before the first-time use.

2

## LIMITED PRODUCT WARRANTY

To make a warranty claim, please email [support2@curtiscs.com](mailto:support2@curtiscs.com) or call 1-800-968-9853.

#### 90 day Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does **not** cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V-60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

ATTACH YOUR PROOF OF PURCHASE HERE, PROOF OF PURCHASE IS REQUIRED TO OBTAIN WARRANTY SERVICE.  
Please have the following information available when you contact the Support Team:

- Name, address and telephone number.
- Model number and serial number.
- A clear, detailed description of the problem.
- Proof of purchase including dealer or retailer name, address and date of purchase.

### Operation

- Switch the Power Button to ON position to power on the speaker. A voice message "Power On" will be announced and ready to pair. Further switch to LIGHTS position to turn on the color changing LED light effects.
- If an Aux (3.5 mm) cable is connected to the unit, the Blue LED will turn off, and the Green LED will stay illuminated, notifying you, the unit is in Aux-In mode.
- Switch the Power Button to OFF position to power off the speaker.

### Bluetooth Mode

#### Pairing

The unit will go into "Pairing Mode" when the power is on. The blue light is flashing on the operational mode indicator and ready for pairing. Go into your Bluetooth device settings menu and look for "Pro PSP1740" for pairing.

After the unit has paired and blue light become solid, it will re-connect automatically when the unit is powered on and the device is in range.

**Note:** Bluetooth Timeout: 10 minutes. You can press and hold MODE button to unpair your current device and search for new devices in Bluetooth mode.

#### Begin Streaming Music

Use the controls on the connected Bluetooth device to select and begin playing audio. Turn the volume control of the unit to control music volume up or down.

### FM Radio Mode

When the unit is ON, press the MODE button will turn on FM Radio mode. The operational mode indicator changes to blue & green light.

Long press the mode button will auto search to next station. Press twice to scan all stations and save it.

Press the MODE button again to switch the speaker back to Bluetooth mode.

### Aux-In Mode

Plug in the 3.5mm cable (not include) into the unit. The other end is connected to your device. The speaker will automatically switch to Aux Mode. The green LED will be flashing when in "Aux" mode.

Please note music and volume can be controlled by your device.

3

### LED Status

Blue LED flashing & Blue LED solid	Bluetooth Mode
Blue & Green LED	FM mode
Green LED flashing	Aux Mode
Red LED	Charging
Red LED off	Full charged
Red LED flashing	Low battery

### Troubleshooting

Unit doesn't connect to device	Speaker needs to be connected/repaired to device
A tone is heard every few seconds	Speaker needs to be charged
Unit will no power on	Speaker needs to be charged
Unit doesn't control track(s)/volume	Speaker needs to be in Bluetooth mode for full control
Unit distorts at high volume	The devices' volume needs to be lowered

### Care and Maintenance

Read the following recommendations before using the Bluetooth Speaker. Following these you will be able to enjoy the product for many years.

- Do not expose the Bluetooth Speakers to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Do not use abrasive cleaning solvents to clean the device.
- Do not expose the device to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Do not dispose of the device in a fire as it will result in an explosion.
- Do not expose the device to contact with sharp objects as this will cause scratches and damage.
- Do not let the device fall on the floor. The internal circuit might get damaged.
- DO not attempt to disassemble the device as it may get damaged if you are not professional.

4

### FCC Caution.

#### § 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### § 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### § 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help.

#### \* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.