

sumers are switched off before locking the vehicle.

## Convenient closing

Press the area, arrow 2, with your finger and hold.

In addition to locking, the convertible top, the side windows, and the rear window close as well.

Press the area, arrow 2, and hold until the convertible top is fully closed.



Monitor the closing process

Monitor the closing process to ensure that no one becomes trapped. ◀

Releasing the area, arrow 2, stops the motion.

After a short period, the convertible top and the convertible top well storage cover are lowered slowly. The convertible top and the convertible top well storage cover are not locked. Press the area, arrow 2, again until the convertible top operation is completed.

## Unlocking the trunk lid separately

Press on the top half of the BMW emblem on the trunk lid.

This corresponds to pressing the  button.



Do not place the remote control in the cargo area

Take the remote control with you and do not leave it in the cargo area; otherwise, the remote control may be locked inside the vehicle when the trunk lid is closed. ◀

## Malfunction

Comfort Access may not function properly if it experiences interference from external sources such as mobile phones, metal objects, overhead power lines, transmission towers, etc.

If this occurs, open or close the vehicle using the buttons on the remote control or use a key in the door lock.

To subsequently start the engine, hold the remote control against the marked area on the steering column, refer to page 33.

## Alarm system\*

### The concept

The vehicle alarm system responds to:

- ▷ Opening of a door, the hood or the trunk lid.
- ▷ Movements in the vehicle: interior motion sensor, refer to page 43.
- ▷ Changes in the vehicle tilt, e.g., during attempts to steal a wheel or when towing the car.
- ▷ Interruptions in battery voltage.

The alarm system briefly indicates tampering:

- ▷ By sounding an acoustic alarm.
- ▷ By switching on the hazard warning system.
- ▷ By flashing the high beams.

### Arming and disarming the alarm system

#### General information

When you lock or unlock the vehicle, either with the remote control or at the door lock\*, the alarm system is armed or disarmed at the same time.

#### Door lock and armed alarm system

Unlocking via the door lock will trigger the alarm on some country-specific versions.

#### Trunk lid and armed alarm system

The trunk lid can be opened using the remote control, even if the alarm system is armed.



Press the button on the remote control for approx. 1 second and release.

After the trunk lid is closed, it is locked and monitored again by the alarm system. The hazard warning system flashes once.

In some vehicle equipment variants, the trunk lid can only be opened using the remote control if the vehicle was unlocked first.

#### Panic mode\*




Press the button on the remote control for at least 3 seconds.

### Switching off the alarm

- Unlock the vehicle using the remote control.
- With Comfort Access: If you are carrying the remote control with you, pull on the door handle.

### Indicator lamp on the interior rearview mirror

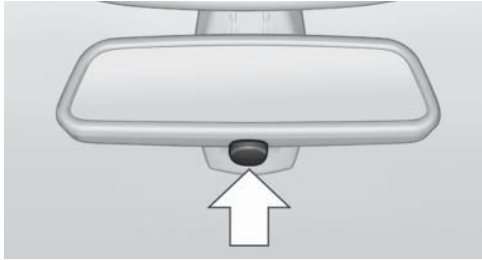

- The indicator lamp flashes briefly every 2 seconds:  
The system is armed.
- The indicator lamp flashes after locking:  
The doors, hood or trunk lid is not closed properly, but the rest of the vehicle is secured.  
After 10 seconds, the indicator lamp flashes continuously. The interior motion sensor is not active.
- The indicator lamp goes out after unlocking:  
The vehicle has not been tampered with.
- The indicator lamp flashes after unlocking until the engine is started, but no longer than approx. 5 minutes:  
An alarm has been triggered.

### Tilt alarm sensor

The tilt of the vehicle is monitored.

The alarm system responds in situations such as attempts to steal a wheel or tow the car.

### Interior motion sensor

The interior is monitored to the height of the seat cushions. The alarm system is armed together with the interior motion sensor even when the

convertible top is open. Falling objects such as leaves can trigger the alarm unintentionally.

### Avoiding unintentional alarms

The tilt alarm sensor and interior motion sensor can be switched off together, such as in the following situations:

- In automatic car washes
- In duplex garages.
- During transport on car-carrying trains, at sea or on a trailer.
- When animals are to remain in the vehicle.

### Switching off the tilt alarm sensor and interior motion sensor



Press the button on the remote control twice in succession.

The indicator lamp lights up for approx. 2 seconds and then flashes continuously.

The tilt alarm sensor and interior motion sensor are switched off until the vehicle is locked again.

### For US owners only

The interior motion sensor comply with Part 15 of the FCC/Federal Communication Commission regulations. Operation is governed by the following:

FCC ID: P3O001692. Compliance statement:

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- this device may not cause harmful interference, and
- this device must accept any interference received, including interference that may cause undesired operation. Any unauthorized modifications or changes to these devices could void the user's authority to operate this equipment.

### Power windows

#### General information



Take the remote control with you

Take the remote control with you when leaving the vehicle so that children, for example, cannot operate the power windows and injure themselves.



Closing the windows when driving

To close the side windows when driving, first close the rear windows or all four windows at the same time; otherwise, the windows may not close tightly at high speeds.