## Instruction Manual

MGA ENTERTAINMENT (HK) LTD. FCC ID: LU9-242567

## How to Operate your Listening Device

- 1) The Transmitter and the Receiver are on the same frequency. When both units are ON, the Receiver can pick up the voice from the Transmitter.
- 2) Open battery compartment of the Transmitter and insert in 5 pcs GP-13A button cell battery, close battery compartment.
- 3) Open battery compartments of the Receiver and Snap in one 9-Volt battery, close battery compartment.
- 4) Turn the ON/OFF band switch of the Transmitter to the "ON" position.
- 5) Select "LO" or "HI" volume of the Receiver by using the selection switch.
- 6) Your Listening Device is now in function. In the event of interference caused by other radio signals in the vanity, move to be different location.


## Caution

- Your transceiver set has been fully adjusted prior to shipment from the factory. Be sure not to touch the internal 1) components other than replacing batteries.
- 2) When the sound becomes weak, it is time to change the batteries.
- 3) After use, always turn the "ON/OFF" switch to "OFF" position.
- 4) Keep your set in a dry and clean place.

## Warning

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment

SPECIFICATIONS AND COLORS OF CONTENTS MAY VARY FROM PHOTO. SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

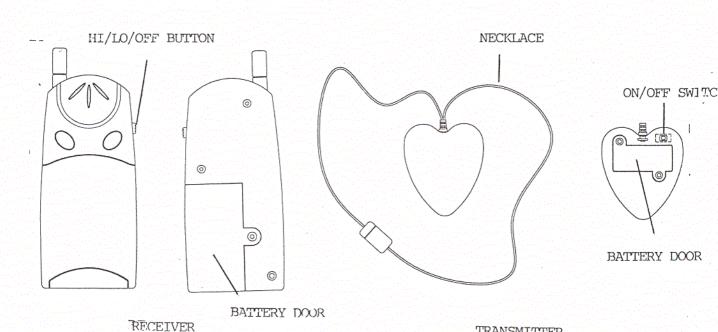

TRANSMITTER