

FCC ID: LU9242611

VR-3D SNOWBOARDING

INTRODUCTION

Snowboarding game player is require to do different tricks in a certain of time. Player should be able to select between the 3 modes. By using the left and right button to choose between the Freestyle, Competition and Pro-Style modes. Player can also achieve trophy depending on their score points, highest score will remain in the game until the new highest score has submit.

INSTALLTION OF BATTERY (HEADSET UNIT)

- Switch off the power.
- Unscrew the battery cover.
- Insert 5x AAA 1.5V Alkaline batteries in proper direction as indicated in the battery compartment. (not included)
- Screw and replace the cover.
- Switch on the power

INSTALLTION OF BATTERY (SNOWBOARD)

- Switch off the power.
- Unscrew the battery cover.
- Insert 3 x AAA 1.5V Alkaline batteries in proper direction as indicated in the battery compartment. (not included)
- Screw and replace the cover.
- Switch on the power

CAUTION : Battery should be replaced by adult.
Not suitable for children under 36 months. May contain small parts.

CLEANING YOUR LENS

- Take care not to scrape the lens with hand objects as the surface scratches easily.
- Use a blower brush remove dust from the lens, wipe lightly with a soft, dry cloth.
- Do not use volatile substances such as thinners, benzine or insecticide, as these may react with the lens and cause deformation or remove the coating.

BATTERY PRECAUTIONS

- Do not use rechargeable batteries.
- Do not attempt to recharge the batteries.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not short circuit battery contacts.
- When not in use, remove batteries to prevent possible leakage.
- Exhausted batteries are to be removed from the game unit.

SET UP THE SNOWBOARD

- Switch on the snowboard power.
- Set up the snowboard on the floor.

- There are 8 different tricks by lift up the board and twist left & right. You must have a speed of 6 in order to execute a trick

<u>Trick</u>	<u>Left Side of Pipe</u>	<u>Right Side of Pipe</u>
1	Lift up + Left/Right	Lift up + Right/Left
2	Lift up + Right/Right/Left	Lift up + Right/Right
3	Lift up + Left/Right/Left/Left	Lift up + Left/Right/Left/Right
4	Lift up + Left/Right/Left/Right/Right	Lift up + Right/Left/Right/Right/Left

FREESTYLE MODE

In freestyle mode you have 90 seconds in the half pipe and there are no obstacles.

COMPETITION MODE

There are 3 levels and you must complete all three level to win.

- You must achieve 1500 points in 120 seconds to continue.
- You must achieve 3000 points in 105 seconds to continue.
- You must achieve 5000 points in 90 seconds to win and you will see a blinking trophy icon.

PRO-STYLE MODE

You must compete through 5 levels in order to win.

- In level 1 you face no obstacles but must receive 1500 points in 120 seconds to continue.
- On level 2 you must avoid a few obstacles and must achieve 2000 points in 105 seconds to continue.
- On level 3 you face more obstacles and achieve 2500 points in 105 seconds to continue.
- On level 4 you must avoid still more obstacles and score 3000 points in 90 seconds to continue.
- On level 5 you must avoid several obstacles and score 5000 points in 90 seconds to win. You will see a blinking trophy icon.

TOP SCORE

Whenever you get the highest score for a mode you get to enter your initials. Tilt the board left and right change the letters. Pulling the board up enter the letter. After you select a mode the high score for that mode is displayed.

RESET

Press the Reset key if the game does not work properly. This will reset the game and the highest score record will also be reset.

CAUTION

- This product contains glass lens which may cause injuries if broken. Please keep this instruction manual since it contains important information.
- Play in an open area in case you are out of balance.

IMPORTANT

- THE USER SHALL NOT CHANGE OR MODIFY THE EQUIPMENT, OTHERWISE IT COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.
- OPERATING PERFORMANCE MAY BE AFFECTED BY SURROUNDING STRUCTURES AND EQUIPMENT.

- Put your front foot inside the strap.
- Put your rear foot on the paddle.

SET UP THE HEADSET UNIT

- Switch on the headset unit power.
- Put the headset unit on your head.

FUNCTION OF SNOWBOARD BUTTON

Power On/Off = S1

FUNCTION OF HEADSET BUTTON

Power On/Off = S2

Display On/Off/Pause = S3

Reset = S4

Sound Volume = S5

SOUND EFFECT

You may choose the volume of the game by tuning the knob at any time in any mode.

PAUSE

Press On/Off button can stop the game temporary during in game playing and pulls up the front of the board in order to continue.

THE PLAYING SCREEN DESCRIPTIONS

"" The picture of the LCD display ""

TO START THE GAME

- Before turning the display on, you may power on the snowboard unit and head set.
- Press On/Off button to turn on the display.
- Tilt the board unit left or right to switch between Freestyle, Competition and Pro Style modes.
- Select the mode by lifting up the front of the board. You can see the snowboarder blinking along with the start icon.
- Lift the front of the board to start the game.

TO PLAY

- Build up speed by staying the center of the half pipe.
- Tilt the board left in order to turn left and avoid the obstacles.
- Tilt the board right in order to turn right and avoid the obstacles.
- Lift up the front of the board in order to jump obstacles or to perform stunts.