



**INTERACTIVE
ACTION FIGURE WALKIE TALKIES**

FCC ID: LU9243359

BATTERY INSTALLATION

- Open the battery door located in the back of the unit.
- Install one 9-volt alkaline battery into each unit. be sure to follow the battery indications as shown on the inside of the battery compartment.
- Replace the battery door.
- If sound becomes distorted or weak, replace the battery.
- Remove batteries to prevent leakage if units are not in use for long periods of time.

CAUTION

- Battery should be replaced by adult.
- Not suitable for children under 36 months.

SAFETY BATTERY USAGE

- Non-rechargeable battery is not to be recharged.
- Do not use rechargeable battery.
- Battery is to be inserted with the correct polarity.
- The supply terminals are not to be short circuited.
- Exhausted battery is to be removed from the unit.
- When not in use, remove battery to prevent possible leakage.

PLEASE KEEP THIS INSTRUCTION MANUAL SINCE IT CONTAINS IMPORTANT INFORMATION.

© 2000 BIRD STUDIO/SHUEISHA, TOEI ANIMATION.

Licensed by FUNimation® Productions, Inc. All Rights Reserved. Dragon Ball Z and logos, character names and distinctive likenesses thereof are trademarks of TOEI ANIMATION.

OPERATION

Let us experience two functions in this unit: walkie talkies and interactive talking between two Action Figures.

Interactive Talking

- Switch the **IR/OFF/WT** button to **IR** position.
- Put two figures face to face and they are not more than 2 meters away.
- Press the button located at the belt to activate the interactive talking function of the Action Figure. Do not forget to activate both figures in order to let them talk each other!

Walkie Talkies

- Turn the **IR/OFF/WT** switch to **WT** position. Your transceiver is now ready to operate.
- Press the **PUSH TO TALK** button for transmitting.
- When transmitting, speak clearly in a normal voice, holding the set about 3" from your mouth.
- Release the **PUSH TO TALK** button to receive message from the other party.
- Best transmission and reception are obtained when the antenna is held in a vertical position.

PRECAUTIONS:

- Your transceiver set has been fully adjusted prior to shipment from the factory. Be sure not to touch the internal components other than replacing the battery.
- When the sound becomes weak, it is time to change the battery.
- After use, always turn **IR/OFF/WT** switch to the **OFF** position.
- Keep your set in a dry and clean place.
- Remove the batteries when walkie talkies are not in use.
- All walkie talkies are subject to electronic interference. If you experience problems with this unit, stay away from it or turn off: cordless phones, baby monitors, intercoms or any other "broadcast" devices.

OPERATION PERFORMANCE MAY BE AFFECTED BY SURROUNDING STRUCTURES AND EQUIPMENT.

THE USER SHALL NOT CHANGE OR MODIFY THE EQUIPMENT, OTHERWISE IT COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

PLEASE RETAIN THIS INSTRUCTION MANUAL WHICH CONTAINS IMPORTANT INFORMATION

LIMITED 90 DAY WARRANTY

MGA Entertainment warrants to the original purchaser that the product will be free from defects in material or workmanship for a period of 90 days from the date of original purchase.

This warranty does not cover damages resulting from misuse, improper or abnormal usage, negligence, leaking batteries, improper service or other causes not arising from defects in material or workmanship. During this 90 day warranty period, the product will be either repaired or replaced (at MGA's option) at no charge to the purchaser, when returned to either the retailer with its original sales receipt (containing date of purchase) or to MGA.

The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product. All products returned to MGA must be shipped prepaid and insured for loss or damage to:

MGA Entertainment
Repair Department
16730 Schoenborn Street
North Hills, CA 91343-6122

Any returned product should be carefully packed in packing material sufficient to avoid damage during shipment. Please include a written description of the defect, a copy of the original sales receipt (containing date of purchase) and your printed name, address and telephone number.

Some states do not allow limitations on how long an implied warranty last or the exclusion of incidental or consequential damages, so the above limitations may not apply to you.

This warranty gives you specific rights and you may also have other rights which vary from state to state.

This warranty is only valid within the United States and Canada.



MGA Entertainment
All Rights Reserved.
16730 Schoenborn Street
North Hills, CA 91343 USA
www.mgae.com
(800)-222-4685
CA (818) 894-2525

MADE IN CHINA