

FCC ID: LU9247821



***** Operating Instruction *****

To Play with Scooter Samantha Doll

1. Slide the On/Off switch on the Scooter to ON.
2. Slide the On/Off switch on the Remote controller to ON.
3. To begin move your scooter forward, push and hold the shoe in forward position.
4. During the Scooter in forward racing or turning in left/right, Scooter Samantha's right foot actually pedals off the side of her board as she rides her scooter.
5. To begin move your scooter backward, pull and hold the shoe in backward position.
6. Scooter Samantha's arms turn the handle of her scooter right and left, depending on what direction of child direct her scooter via the remote control.
7. Scooter Samantha is a fully-articulated doll that can be removed from her scooter for extended play.

Operation Tips:

1. If it is responding slowly or malfunctioning, replace the "AA" alkaline battery on bottom of Scooter.
2. Optimum operating range is up to 30 feet indoor. However, this may vary depending on environment conditions.

Safe Battery Usage:

1. Use "AA" alkaline battery for best performance and longer life.
2. Non-rechargeable batteries are not to be charged.
3. Only batteries of the same or equivalent type as recommended are to be used.
4. Batteries are to be inserted with the correct polarities.
5. Rechargeable batteries are to be removed from the toy before being charged.
6. Exhausted batteries are to be removed from the toy.
7. Different types of batteries or new and used batteries are not to be mixed.

8. The supply terminals are not to be short-circuited.
9. Rechargeable batteries are not to be charged under adult supervision.
10. Do not dispose of batteries in fire, batteries may explode or leak.
11. Batteries should be replaced by an adult.

To replace batteries:

To replace batteries in Scooter.

1. The compartment is located on the bottom of Scooter. Turn the switch in the battery compartment to the "OFF" position. Loosen screw on battery compartment door with a screw driver and remove door.
2. Replace with 6 "AA" size batteries. After replacement, replace the battery compartment door and tighten screw. Turn the battery compartment switch to the "ON" position.

To replace batteries in remote controller.

1. The battery compartment is located on the bottom of the controller. Loosen screw on battery compartment door with a screw and remove door.
2. Replace with a 9V size battery. Replace battery compartment door and tighten screw.


FCC Marking:

FCC ID: LU9247821

Made in China

This device complies with part 15 of the FCC Rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference. and (2) this device must accept any interference received, including interference that may cause undesired operation.

Per sketch, showing the position of FCC marking on the control unit.

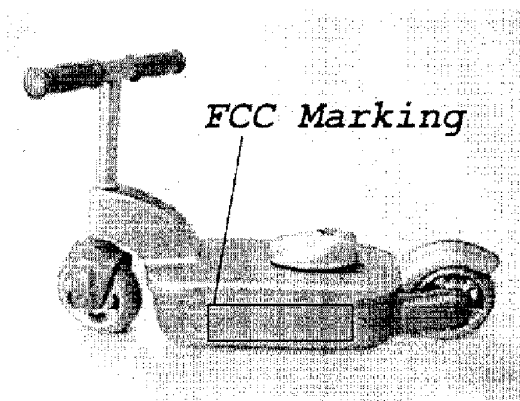

FCC Statement:

This device complies with part of 15 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interference.

LIMITED 90 DAY WARRANTY

MGA Entertainment warrants to the original consumer purchaser this product that the product will be free from defects in material or workmanship for a period of 90 days from the date of original purchase.

This warranty does not cover damages resulting from misuse, improper or abnormal usage, negligence, leaking batteries, improper service or other causes not arising from defects in material or workmanship.

During this 90 day warranty period, the product will be either repaired or replaced (at MGA's option) at no charge to the purchaser, when returned to either the retailer with its original sales receipt (containing date of purchase) or to MGA.

The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.

All product returned to MGA must be shipped prepaid and insured for loss or damage to:

MGA Entertainment
Repair Department
16730 Schoenborn Street
North Hills, CA 91343-6122

Any returned product should be carefully packed in packing material sufficient to avoid damage during shipment. Please include a written description of the defect, a copy of the original sales receipt (containing date of purchase) and your printed name, address and telephone number.

Some states do not allow limitations on how long an implied warranty last or the exclusion of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific rights and you may also have other rights which vary from state to state.

This warranty is only valid within the United States and Canada.

Contact us

Phone: 800-222-4685

In California: 818-894-2525

www.mgae.com

CAUTION:

- Doll head depicted on package for photography purposes only. Head does not move.
- Batteries should be replaced by an adult.
- Not suitable for children under 3 years.

Please keep this manual.

It contains important information.

™, ® & ©2000 MGA Entertainment

All Rights Reserved.
16730 Schoenborn St.
North Hills, CA 91343
U.S.A.

Made and printed in China
Patent Pending

Remark: Modifications not authorized by the manufacturer may void users authority to operate this device.