

SPIDER-MAN™ WALKIE TALKIES

QUICK START

- Open the battery doors located in the back of both units.
- Install 4 1.5-volt AAA alkaline battery into each unit. Be sure to follow the battery indications as shown on the inside of the battery compartments.
- Replace the battery doors.
- Turn both **ON/OFF** switches to the **ON** position. Your walkie talkies are now ready to operate.

CAUTION

- Batteries should be replaced by an adult.
- Not suitable for children under 36 months.
- If sound becomes distorted or weak, replace the battery.
- Remove batteries to prevent leakage if units are not in use for long periods of time.

SAFETY BATTERY USAGE

- Non-rechargeable batteries are not to be recharged.
- Do not use rechargeable batteries.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short circuited.
- Exhausted batteries are to be removed from the units.
- Only batteries of same or equivalent type is recommended.
- Do not mix different types of batteries; old and new batteries are not to be mixed.
- Do not dispose of batteries in fire; batteries may explode or leak.

PLAYING WITH YOUR WALKIE TALKIES

- Turn both **ON/OFF** switches to the **ON** position. Your walkie talkies are now ready to operate.
- Press the **PUSH TO TALK** button for transmitting (sending) your voice to the other unit.
- When transmitting, speak clearly in a normal voice, holding the set about 3" from your mouth.
- Release the **PUSH TO TALK** button to receive voice messages from the other unit.
- Lift the antennas ('Figures' right arms) in a upright position for best reception.

PRECAUTIONS:

- Your walkie talkies have been fully adjusted prior to shipment from the factory. Be sure not to touch the internal components other than replacing the battery.
- When the sound becomes weak, it is time to change the battery.
- After use, always turn **ON/OFF** switch to the **OFF** position.
- Keep your set in a dry and clean place.
- Remove the batteries when walkie talkies are not in use.
- All walkie talkies are subject to electronic interference. If you experience problems with the units, say away from or turn off nearby electronic devices such as cordless phones, baby monitors, intercoms or any other "broadcast" devices.

OPERATION PERFORMANCE MAY BE AFFECTED BY SURROUNDING STRUCTURES AND EQUIPMENT.

THE USER SHALL NOT CHANGE OR MODIFY THE EQUIPMENT, OTHERWISE IT COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

PLEASE RETAIN THIS INSTRUCTION MANUAL WHICH CONTAINS IMPORTANT INFORMATION.

GO FOR THE ULTIMATE SPIN AT
WWW.SONY.COM/spider-man



Spider-Man, the character, © & © 2001 MARVEL characters, Inc.
Spider-Man, the movie, © 2001 Columbia Pictures, Industries, Inc.
All Rights Reserved.



TM, ® & © 2002 MGA Entertainment
All Rights Reserved.
16730 Schoenborn Street
North Hills, CA 91343 USA
www.mga.com
A Division of
MADE IN CHINA

1101-0