

SPIDER-MAN WALKIE TALKIES

QUICK START

- Open the battery doors located in the back of both units.
- Install one 9V alkaline battery into each unit. Be sure to follow the battery indications as shown on the inside of the battery compartments.
- Replace the battery doors.
- Turn both ON/OFF switches to the ON position. Your walkie talkies are now ready to operate.

CAUTION

- Non-rechargeable batteries are not to be recharged;
- Rechargeable batteries are to be removed from the toy before being charged;
- Rechargeable batteries are only to be charged under adult supervision;
- Different types of batteries or new and used batteries are not to be mixed;
- Only batteries of the same or equivalent type as recommended are to be used;
- Batteries are to be inserted with the correct polarity;
- Exhausted batteries are to be removed from the toy;
- The supply terminals are not to be short-circuited;
- Do not dispose the batteries in fire, batteries may leak or explode;
- Batteries should be replaced by adult.

TO PLAY

- Turn both ON/OFF switches to the ON position. Your walkie talkies are now ready to operate.
- Press the PUSH TO TALK button for transmitting (sending) your voice to the other unit.
- When transmitting, speak clearly in a normal voice, holding the set about 3" from your mouth.
- Release the PUSH TO TALK button to receive voice messages from the other unit.
- Lift the antennas (Figures' right arms) in a upright position for best reception.

PRECAUTIONS:

- Your walkie talkies have been fully adjusted prior to shipment from the factory. Be sure not to touch the internal components other than replacing the battery.
- When the sound becomes weak, it is time to change the battery.
- After use, always turn ON/OFF switch to the OFF position.
- Keep your set in a dry and clear place.
- Remove the batteries when walkie talkies are not in use.
- All walkie talkies are subject to electronic interference. If you experience problems with the units, stay away from or turn off nearby electronic devices such as cordless phones, baby monitors, intercoms or any other "broadcast" devices.

NOTES:

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radiofrequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT:

- MODIFICATIONS NOT AUTHORIZED BY THE MANUFACTURER MAY VOID USER'S AUTHORITY TO OPERATE THIS DEVICE.
- EMISSIONS OR INTERFERENCE OF SURROUNDING ELECTRONIC EQUIPMENT MAY AFFECT OPERATING PERFORMANCE.

PLEASE RETAIN THIS INSTRUCTION MANUAL WHICH CONTAINS IMPORTANT INFORMATION

GO FOR THE ULTIMATE SPIN AT
WWW.BONY.COM/SPIDER-MAN



Spider-Man, the character, ® & © 2002 MARVEL characters, Inc.
Spider-Man, the movie, © 2002 Columbia Pictures Industries, Inc.
All Rights Reserved.



TM & © 2002 MCA Entertainment*
All Rights Reserved
6730 Schoenborn Street
North Hills CA 91343 USA
(800) 222-4665

MADE IN CHINA



0702-0