

CAUTION:

- Do not use rechargeable batteries for the Remote Control Handset.
- Not suitable for children under 3 years.
- May contain small parts.

IMPORTANT NOTICE

Modifications not authorized by the manufacturer may void user's authority to operate this device. Emissions or interference of surrounding electronic equipment may affect operating performance.

FCC NOTICE:

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

PLEASE RETAIN THIS INSTRUCTION MANUAL WHICH CONTAINS IMPORTANT INFORMATION

The preferred method of contact for Customer Service is through our e-mail contact form at www.mgae.com



TM & © MGA Entertainment, Inc.
SHADOW SHIFTER™ and all related logos, names, characters and distinctive likenesses are the exclusive property of MGA Entertainment.
16730 Schoenborn Street
North Hills, CA 91343 USA
(800) 222-4685
Printed in China.



0504-A-0

SHADOW SHIFTER™

AGES 8+

Instruction Manual

Run silent and run fast with Shadow Shifter™ -- the dual-mode R/C watercraft! This amazingly fast and sleek ship travels across the water at an incredible speed and, with a push of a button on the remote, it transforms from hyper-speed mode to stealth mode, so no one will hear you! This transformable ship is the ultimate in water R/C, they'll never even know you're coming!

SPECIFICATIONS

Race the 27 MHz X-19 Infiltrator against the 49 MHz Sea Prowler 99 for awesome competitive racing action!

Includes:

- Shadow Shifter
- Full-Function Handset & Antenna
- Instruction Manual

Requires (included in Bonus Pack only):

- 1x 9.6V 700mAh NiCd Battery Pack
- 4-hour Charger for 9.6V 700mAh NiCd Battery Pack
- 1x 9V Battery

STEP 1: CHARGING THE BATTERY

Before you can experience all the fun and excitement of using your toy, you must charge your Battery Pack. Follow these simple instructions for your initial charge-up and all recharges thereafter.

1. Connect the Battery Charger Connector into the 9.6V NiCd Rechargeable Battery Pack.
2. Plug the Battery Charger into a standard wall 120V outlet (see Fig.1).
3. Allow the Battery Pack to charge for 4 hours.
4. Disconnect the Battery Pack from the Battery Charger and remove the Battery Charger from the wall outlet. It should feel warm.

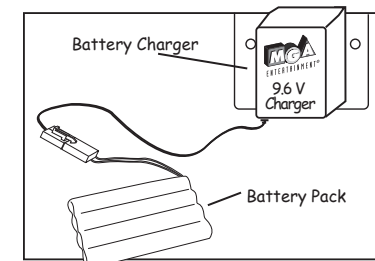


Fig.1

Note: Battery life varies depending on usage. An average charge should last approximately 20 minutes. The rechargeable battery should be charged by an adult.

Important:

- After use, the Battery Pack may be hot. Allow it to cool for at least 20 minutes before recharging.
- If the Battery Pack shows signs of leakage or erosion, do not recharge; replace it immediately.
- Do not disassemble the Battery Pack.
- If the battery pack or charging unit becomes wet, dry thoroughly before recharging.
- Do not use any other rechargeable battery except for the standard 9.6V NiCd Battery Pack that was intended solely for use with the product.
- The Battery Charger used with the toy is to be regularly examined for damage to the plug, enclosure and other parts. In the event of such damage, the toy must not be used with this battery charger until the damage has been repaired.
- The product is not intended for children under 3 years old.
- The product must only be used with the recommended battery charger.
- The battery charger is not a toy.