

Operating Instructions

**WARNING:**  
 CHOKING HAZARD: Small parts  
 Not for children under 3 years

★ INTRODUCTION ★

down to Tokyo-town and cruise the streets in style with the Bratz™ & Bratz Boyz™ for a stop night of kickin'-cool clubbin' and crazy-cool Karaoke!

★ BATTERY INSTALLATION : REMOTE CONTROL ★

Switch the power to the "OFF" position. (See Fig. 1)  
 Unscrew the battery compartment cover located on the back of the handset with a Phillips screwdriver and remove.

Insert 3 x LR44 button cells in the proper direction as indicated inside the battery compartment. (See Fig. 2)  
 Replace the battery cover & tighten the screw securely.  
 Switch the power to the "ON" position.



Fig. 1

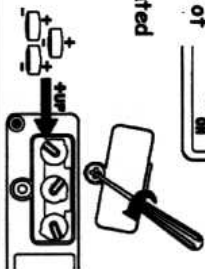


Fig. 2

★ BATTERY INSTALLATION : VEHICLE ★

Switch the power to the "OFF" position. (See Fig. 3)

Open the sun roof of the vehicle. (See Fig. 4)

Unscrew the battery door with a Phillips screwdriver through the roof and remove the battery door. (See Fig. 5)

Insert 4 x AA(1.5V) ALKALINE batteries in the proper direction as indicated inside the battery compartment. (see Fig. 6)

Replace the battery cover and tighten the screw securely.  
 Install the sun roof as shown below. (see Fig. 7)

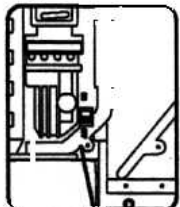


Fig. 3

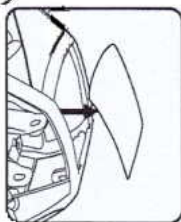


Fig. 4

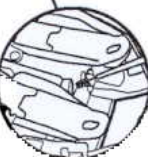
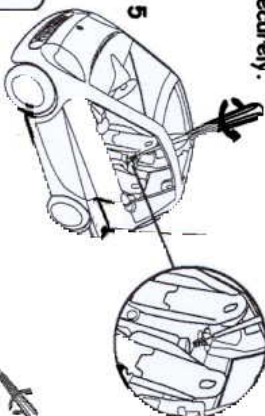


Fig. 6

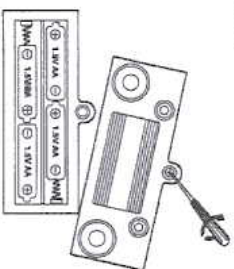


Fig. 7

★ PLAYING WITH THE VEHICLE ★

1. Switch the Remote Control Handset to the "ON" position. (See Fig. 8)
2. Switch the Tokyo Car to the "ON" position. Head lights and rear lights will light up. (See below Fig. 9)

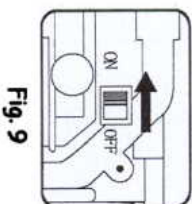


Fig. 9

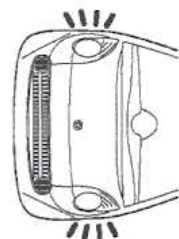


Fig. 8

3. Use the Left and Right control sticks to control the Tokyo R/C Car. (See Figs. 10, 11 & 12)
  - a. Push both sticks forwards to move the car FORWARD.
  - b. Push both sticks backwards to move the car BACKWARDS.
  - c. Push left stick forwards and right stick backwards to spin the car clockwise.
  - d. Push left stick backwards and right stick forwards to spin the car counter-clockwise.

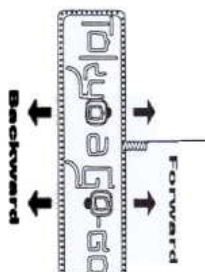


Fig. 10

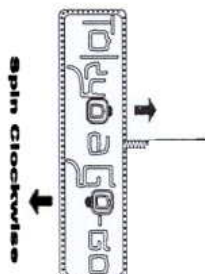


Fig. 11

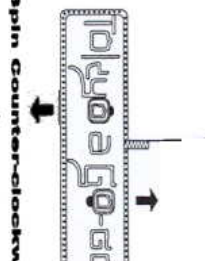


Fig. 12

4. Press the door button to open the side door. (See Fig. 13)

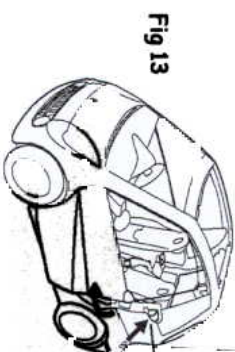


Fig. 13



5. Put 2 Tokyo Bratz girls into the car and fasten them in with their seat belts. (See Fig. 14)


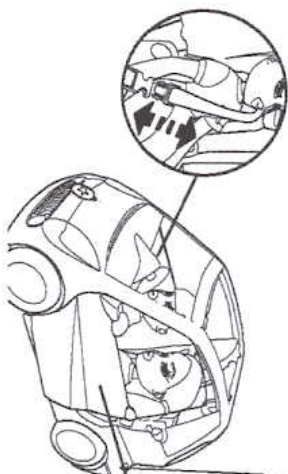


Fig. 14

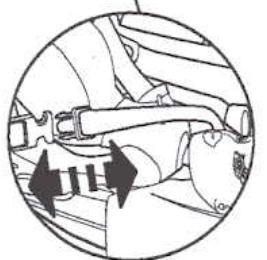

You can open the upper rear door and lower rear door. (See Figs. 15 & 16)

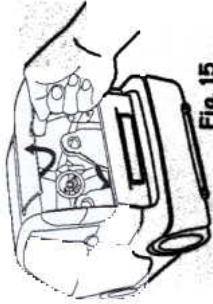


Fig. 15


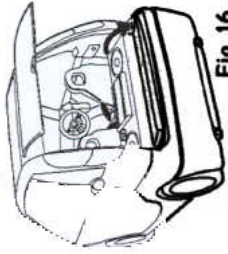


Fig. 16

## ★ TROUBLE SHOOTING ★

### THERE IS NO FUNCTION BETWEEN THE REMOTE CONTROL HANDSET AND THE CAR:

- Make sure you have turned the Remote Control ON.
- Make sure you have turned the Car ON.
- Check that the batteries are inserted properly.
- Replace the old batteries with new alkaline batteries.
- Move the remote control handset closer to your R/C Car to determine the best communication between the Remote Handset and the Car. (The operating range is approximately 6 to 8 feet.)

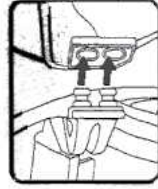

### THE DOOR IS DETACHED, PLEASE SEE THE SKETCH ON HOW TO REATTACH THE DOOR ONTO CAR

## ★ HELPFUL HINTS ★

- Do not operate during thunderstorms.
- Avoid water when racing your R/C Car. In addition, do not submerge your R/C Car or Handset in water.
- When your R/C Car starts to lose power, it may experience loss of performance ability. If this happens, replace the old batteries with new alkaline batteries in your R/C Car.
- Your R/C Car is operated by radio waves. It is possible the unit may not perform properly due to interference from nearby devices such as a cordless phone, hair dryer, radio, walkie-talkie or other radio-controlled toys.
- Avoid sand, snow and carpet when operating your R/C Car.
- Always select a safe place to play. Never drive your R/C Car on populated streets.
- Keep fingers, hair and loose clothing away from the tires, wheel hubs and motors while the R/C Car is switched on.

## ★ SAFE BATTERY PRECAUTIONS ★

- Do not dispose of the batteries in fire; batteries may leak or explode.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- The supply terminals are not to be short-circuited.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- When not in use for an extended time, remove batteries to prevent possible leakage.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- Batteries should be replaced by an adult.
- Use alkaline batteries for better performance.

## ★ IMPORTANT ★

- MODIFICATIONS NOT AUTHORIZED BY THE MANUFACTURER MAY VOID USER'S AUTHORITY TO OPERATE THIS DEVICE.
- EMISSIONS OR INTERFERENCE OF SURROUNDING ELECTRONIC EQUIPMENT MAY AFFECT OPERATING PERFORMANCE.

## ★ CAUTION ★

- Do not use rechargeable batteries for the Remote Control Handset.
- Not suitable for children under 3 years due to small parts.

## ★ NOTES ★

This device complies with Part 15 of the FCC Rule. Operation is subject to the following two conditions :

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Please keep this manual. It contains important information.

TOKYO A GO-GO™ COLLECTION



WAWO & SORCO  
RUSHI LOUNGE

RC-GRUBBIER

WAWO & SORCO

**MGA**  
ENTERTAINMENT®

TM & © 2004 MGA Entertainment, Inc.  
BRATZ™, BRATZ PETZ™, LIL BRATZ™  
and all related logos, names, characters  
and distinctive likenesses are the exclusive  
property of MGA Entertainment.  
16730 Schoenborn Street  
North Hills, CA 91343 USA  
(800) 222-4685  
www.bratzpack.com  
Made In China

0504-0

Visit Our Web Site  
www.MGA.com  
For Customer Service  
& Your nearest authorized retailer

The preferred method of contact for  
customer service is through our e-mail  
contact form at [www.mga.com](http://www.mga.com)