

**WARNING:**  
CHOKING HAZARD - Small parts  
Not for children under 3 years

## Operating Instructions

### QUICK START

#### Step 1: Battery Installation

##### Remote Control Handset

1. Switch the power to the "OFF" position. (See fig 1)
2. Unscrew the battery compartment cover located on the back of the handset with a Phillips screwdriver and remove. (See fig 1)
3. Insert a 9V ALKALINE battery in the proper direction as indicated inside the battery compartment. (See fig 2)
4. Replace the battery cover & tighten the screw securely.
5. Switch the power to the "ON" position. (See fig 1)

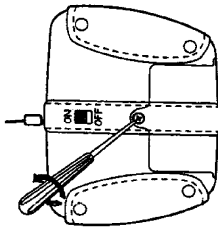 


Fig 1.

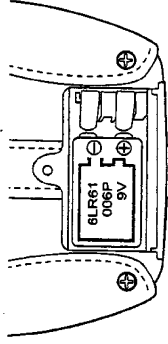 


Fig 2.

##### Vehicle (Remote Control)

1. Switch the power to the "OFF" position, which located on the bottom side of vehicle. (See fig 3)
2. Press the button to open the trunk lid of the vehicle.
3. Unscrew the battery door with a Phillips screwdriver and remove the battery door. (See fig 4)
4. Insert 6 x AA(1.5V) ALKALINE batteries in the proper direction as indicated inside the battery compartment. (see Fig 5)
5. Replace the battery cover and tighten the screw securely.
6. Close the trunk lid of vehicle.

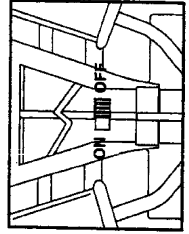 


Fig 3

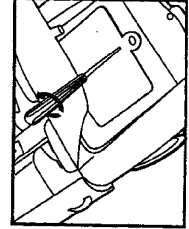 


Fig 4

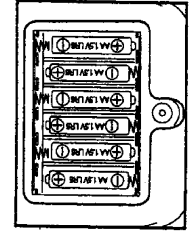 


Fig 5

8. When not in use for an extended time, remove batteries to prevent possible leakage.
9. Batteries are to be inserted with the correct polarity.
10. Exhausted batteries are to be removed from the toy.
11. Batteries should be replaced by an adult.
12. Use alkaline batteries for better performance.

### IMPORTANT

1. MODIFICATIONS NOT AUTHORIZED BY THE MANUFACTURER MAY VOID USER'S AUTHORITY TO OPERATE THIS DEVICE.
2. EMISSIONS OR INTERFERENCE OF SURROUNDING ELECTRONIC EQUIPMENT MAY AFFECT OPERATING PERFORMANCE.

### CAUTION

1. Do not use rechargeable batteries for the Remote Control Handset.
2. Not suitable for children under 3 years.
3. May contain small parts.

### NOTES

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- \* Reorient or relocate the receiving antenna.
- \* Increase the separation between the equipment and receiver.
- \* Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- \* Consult the dealer or an experienced radio/TV technician for help.

The preferred method of contact for Customer Service is through our e-mail contact form at [www.mgae.com](http://www.mgae.com)

Please keep this manual. It contains important information.



TM & MGA Entertainment, Inc.  
BRATZ®, BRATZ PETZ®, LIL BRATZ® and  
all related logos, names, characters and  
distinctive likenesses are the exclusive  
property of MGA Entertainment.  
16730 Schoenborn Street  
North Hills, CA 91343 USA  
(800) 222-4685



### Vehicle (FM Radio and Lights)

1. Press the button of FM Radio and Head/Tail Lights to turn the FM radio and Head/Tail Lights off. (See fig 6)
2. Unscrew the battery door located on the bottom of vehicle with a Phillips screwdriver and remove the battery door. (See fig 7)
3. Insert 2 x AA(1.5V) ALKALINE batteries in the proper direction as indicated inside the battery compartment. (see Fig 8)
4. Replace the battery cover and tighten the screw securely.

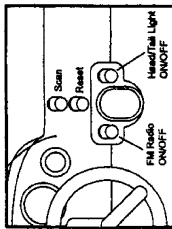 


Fig 6

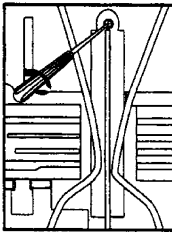 


Fig 7

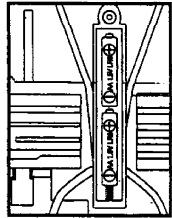 


Fig 8

### Step 1: Play the vehicle

#### To use the Radio

1. Press the Radio ON/OFF button to turn on the radio. Press again will turn it off. (see Fig 6)
2. Press the RESET button to set your radio at the lowest end of the FM frequency band (approximately 88 FM). (see Fig. 6)
3. Press the SCAN button repeatedly to scan for a radio station, from lowest frequency to highest. (see Fig. 6)

**NOTE:** You may hold the button down for faster scanning, release the button to stop at a station. When only static can be heard and you have reached the highest FM frequency band (108 FM), press the RESET button to restart at the low end of the frequency band, then press the SCAN button again to scan for a radio station.

5. Switch the Remote Control Handset to the "ON" position to activate remote control handset. When the radio was turned on, you may turn it off by pressing the Radio button on the remote handset. Press the button repeatedly to turn the radio off & on.

#### To switch on the lights

1. Press the ON/OFF button to turn the headlights and taillights on. Press again will turn them off. (see Fig. 6)

#### To play the remote control function

1. Switch the vehicle to the "ON" position, which located on the bottom side of vehicle. (see Fig. 3)
2. Switch the Remote Control Handset to the "ON" position to activate the remote control handset. (see Fig. 1)
3. Use the Left and Right control paddle to control the vehicle.
  - a. Push left paddle forwards to move the cruiser **FORWARDS**.
  - b. Push left paddle backwards to move the cruiser **BACKWARDS**.
  - c. Push right paddle to the right make the cruiser turning right.
  - d. Push right paddle to the left make the cruiser turning left.

### TROUBLE SHOOTING & TIPS

1. If the radio becomes low or fail to work, & or if the lights become weak or fails to work, replace the designated "AA" batteries with fresh alkaline batteries. (see Fig 6) Operation performance of the radio may be affected by surrounding buildings, structures or equipment. If the radio signal is not good, try to move the direction of the cruiser to receive a better signal.
2. Operation performance of the radio may be affected when the cruiser is moving. Leave it stay static & try to move the direction of the cruiser to receive a better signal.
3. If you do not plan on playing with your cruiser for long periods of time, be sure to turn off the remote handset & cruiser.

### IF THERE IS NO FUNCTION BETWEEN THE REMOTE CONTROL HANDSET AND THE RACER

1. Make sure you have turned the Remote Control ON.
2. Make sure you have turned the vehicle ON.
3. Check that the batteries are inserted properly.
4. Replace the old batteries with new alkaline batteries.
5. Move the remote control handset closer to your R/C car to determine the best communication between the Remote Handset and the R/C Cruiser. (The operating range is approximately 6 to 8 feet.)

### HELPFUL HINTS

1. Do not operate during thunderstorms.
2. Avoid water when racing your R/C Cruiser. In addition, do not submerge your R/C Car or Handset in water.
3. When your R/C Cruiser starts to lose power, it may experience loss of performance ability. If this happen, replace the old batteries with new alkaline batteries in your R/C Cruiser.
4. Your R/C Cruiser is operated by radio waves. It is possible the unit may not perform properly due to interference from nearby devices such as a cordless phone, hair dryer, radio, walkie-talkie or other radio-controlled toys.
5. Play indoor for best performance. Avoid sand, snow and carpet when operating your R/C Cruiser.
6. Always select a safe place to play. Never drive your R/C Cruiser on populated streets.
7. Keep fingers, hair and loose clothing away from the tires, wheel hubs and motors while the R/C car is switched on.

### SAFE BATTERY PRECAUTIONS

1. Do not dispose of the batteries in fire; batteries may leak or explode.
2. Different types of batteries or new and used batteries are not to be mixed.
3. Only batteries of the same or equivalent type as recommended are to be used.
4. The supply terminals are not to be short-circuited.
5. Non-rechargeable batteries are not to be recharged.
6. Rechargeable batteries are to be removed from the toy before being charged.
7. Rechargeable batteries are only to be charged under adult supervision.