

Item no: 354291

ADULT BATTERY INSTALLATION REQUIRED

INTRODUCTION

Every day's an adventure for the kids with a passion for fun! And with you at the controls, this Snowmobile is an adventure for you too!

CONTENTS

- 1 Dana™ Doll with Outfit
- 1 Snowmobile
- 1 Hairbrush
- 1 Remote Control
- Helmet

QUICK START

STEP 1: BATTERY INSTALLATION

Radio Control Handset

- Switch the ON/OFF switch to "OFF".
- Using a Phillips screwdriver (not included) remove the screw and battery compartment cover from the bottom of the Handset. (Fig. 1)
- Install one (1) 9V alkaline battery (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment. (Fig. 1)
- Replace the battery cover & tighten the screw.

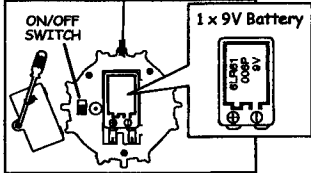


Fig. 1

Snowmobile

- Using a Phillips screwdriver (not included) remove the screw and battery compartment cover from the bottom of the Snowmobile. (Fig. 2)
- Insert three (3) AAA (1.5V) Alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment. (Fig. 2)
- Replace the battery cover & tighten the screw.

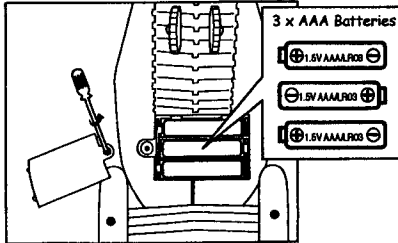


Fig. 2

STEP 2: GIVE DANA™ A RIDE

To get ready to roll:

- Place the helmet on Dana's head and secure it with the Velcro™ fastener. (Fig. 3)
- Sit Dana™ on the seat, place her feet in the openings on the floor of the Snowmobile and fasten her with the Velcro™ seat belt. (Fig. 4)



Fig. 3

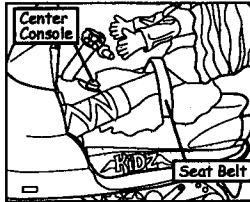


Fig. 4

STEP 3: RACING YOUR SNOWMOBILE

- Move the Remote Control Handset to the "ON" position. An indicator light will light.
- Turn the Snowmobile "ON" by pressing the button on the Center Console. The red, heart-shape taillight will light.
- Straighten the Antenna (Fig. 5)
- Push the FORWARD, BACKWARD, LEFT and RIGHT buttons to race your vehicle in any direction! (Figs. 6 & 7). The "skis" will turn in the direction while you are steering the Snowmobile.

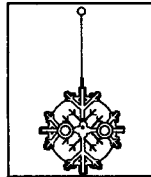


Fig. 5

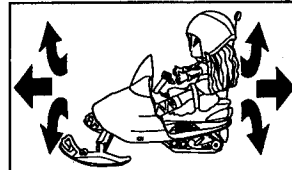


Fig. 6

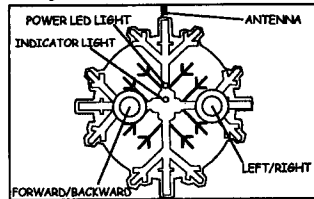


Fig. 7

TROUBLE SHOOTING

IF THERE IS NO FUNCTION BETWEEN THE REMOTE CONTROL HANDSET AND THE SNOWMOBILE:

- Make sure the Remote Control Handset and the Snowmobile switches are in the ON position.
- Make sure the batteries are inserted properly.
- Replace the old batteries with new alkaline batteries.
- Move the Remote Control Handset closer to the Snowmobile to determine the best communication between the two.
- When not in use, turn both the Remote and Snowmobile switches to OFF to save battery power.
- If the snowmobile is not running straight, please fine tune the Steering Adjuster to keep your snowmobile running straight. (Fig. 8)

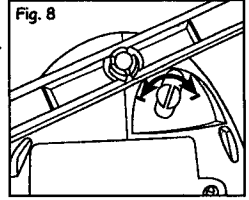


Fig. 8

HELPFUL HINTS

- CAUTION: DO NOT** operate units during thunderstorms. **DO NOT** operate the Snowmobile on the street or in traffic.
- CAUTION: Keep fingers, hair and loose clothing away from the tires, wheel hubs and motors while the Snowmobile is switched on.**
- Avoid water when racing your Snowmobile. In addition, do not submerge your Snowmobile Handset in water.
 - When your Snowmobile starts to lose power and/or experiences a loss of performance ability, replace the batteries.
 - Your Snowmobile is operated by radio waves. It is possible the unit may not perform properly due to interference from nearby devices such as a cordless phones, hair dryers, radios, walkie-talkies or other radio-controlled toys.
 - Avoid operating the Snowmobile in sand and snow.
 - Always select a safe place to play. Never operate your Snowmobile on populated streets.
 - Do not over torque the steering of the Snowmobile. It may cause permanent damage on the product.

SAFE BATTERY USAGE

- Non-rechargeable batteries are not to be recharged;
- Rechargeable batteries are to be removed from the toy before being charged;
- Rechargeable batteries are only to be charged under adult supervision;
- Different types of batteries or new and used batteries are not to be mixed;
- Only batteries of the same or equivalent type as recommended are to be used;
- Batteries are to be inserted with the correct polarity;
- Exhausted batteries are to be removed from the toy;
- The supply terminals are not to be short-circuited;
- Do not dispose of the batteries in fire, batteries may leak or explode.
- Batteries should be replaced by adult.
- Use alkaline batteries for better performance.
- When not in use for an extended time, remove batteries to prevent possible leakage and damage to the unit.

NOTE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

- Not suitable for children under 3 years.
- May contain small parts.

IMPORTANT:

- **WARNING: CHANGES OR MODIFICATIONS TO THIS UNIT NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**
- **EMISSIONS OR INTERFERENCE OF SURROUNDING ELECTRONIC EQUIPMENT MAY AFFECT OPERATING PERFORMANCE.**



Hereby, MGA Entertainment (H.K) Ltd., declares that this Bratz Kidz Winter Vacation RC Snowmobile is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC

Please keep this manual as it contains important information.

The preferred method of contact for Customer Service is through our e-mail contact form at www.mgae.com



0107-0

www.bratz.com
TM & © MGA Entertainment, Inc.
BRATZ™, BRATZ PETZ™, LIL' BRATZ™,
BRATZ BABYZ™, BRATZ KIDZ™ and all related
logos, names, characters, distinctive likenesses
and slogans, as well as the packaging and
images appearing thereon, are the exclusive
property of MGA.
16300 Roscoe Blvd.,
Van Nuys, CA 91406 USA
(800) 222-4685
Printed in China

