



Age 6+ years

**WARNING:**  
CHOKING HAZARD - Small parts.  
Not for children under 3 years.

**PRIMP 'n' PERFORM  
MICROPHONE**

Item no. 396697

 
ADULT BATTERY INSTALLATION REQUIRED

## INTRODUCTION

Turn an ordinary Hairbrush into totally rockin' Wireless Microphone and broadcast your voice over the nearest FM radio! Flip open the Barrette and apply some yummy Lipgloss, then get ready to be a rock star in disguise and ROCK OUT!

## CONTENTS

- a.) 1 Moxie Girlz™ more 2 me™ FM Wireless Microphone
- b.) 2 Moxie Girlz™ more 2 me™ Barrettes with Lipgloss
- c.) 1 Hairbrush Front
- d.) 1 Hairbrush Back

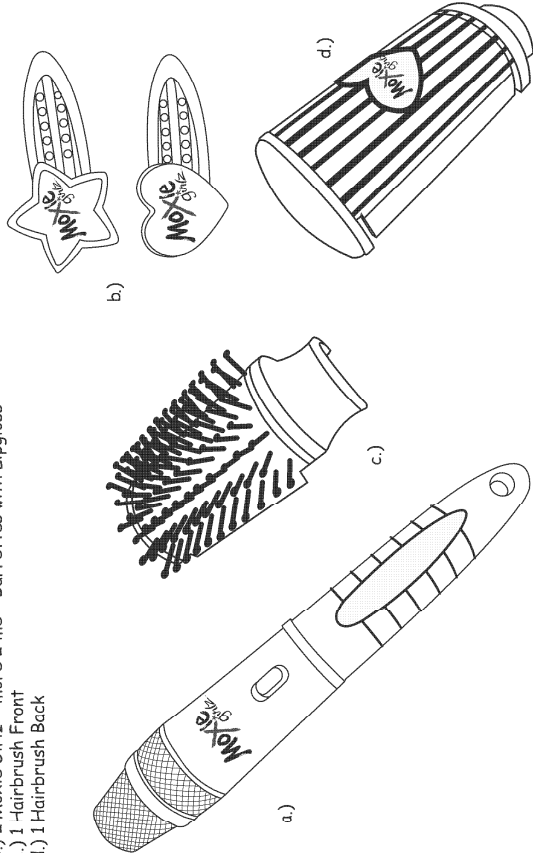


Illustrations may vary from actual contents.

## BEFORE YOU BEGIN

 An adult must install fresh, alkaline batteries. Here's how:

1. Using a Phillips screwdriver (not included), remove the screw and battery compartment cover.
2. Install two (2) AAA alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
3. Replace the compartment cover and tighten the screw.

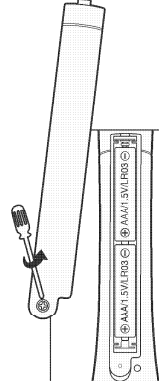

## CAUTION

1. Your FM Microphone has been fully tested and adjusted prior to shipment. Do not attempt to touch, replace or service any of components inside.
2. After use, turn your microphone OFF to save the batteries.
3. If you do not plan to use your microphones for several days, remove the batteries.

## TROUBLESHOOTING

1. If the microphone's transmission begins to weaken, replace the batteries.
2. Under an environment with electrostatic discharge, (static electricity) this product may malfunction and require user to reset the unit by removing and replacing the batteries.

## SAFE BATTERY USAGE

- Use alkaline batteries for best performance and longer life.
  - Use only the type battery recommended for the unit.
  - Batteries should be replaced only by an adult.
  - Insert batteries with the correct polarity (+ and -).
  - Do not mix old and new batteries.
  - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
  - Do not short-circuit batteries.
  - When not used for an extended time, remove batteries to prevent possible leakage and damage to the unit.
  - Do not mix rechargeable and non-rechargeable batteries.
  - Rechargeable batteries are to be removed from the toy before charging.
  - Rechargeable batteries are to be recharged only under adult supervision.
  - Do not recharge non-rechargeable batteries.
  - Exhausted batteries are to be removed from the toy.
  - Do not dispose of batteries in fire as they may leak or explode.
- NOTE: The voltage of a fully-charged, rechargeable battery is often lower than that of a fresh alkaline battery. Therefore, it is recommended that alkaline batteries be used instead of rechargeable batteries for best performance and for longest play time.

## FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference, and
  - (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Modifications not authorized by the manufacturer may void users authority to operate this device.

## ONLINE GAME ACCESS

YOUR SECRET GAME CODE IS F47H31

To access the game, you must create a user account at [moxiegirlz.com](http://moxiegirlz.com). Be sure to ask your parent or guardian's permission before registering online for a [moxiegirlz.com](http://moxiegirlz.com) account! NOTE: [moxiegirlz.com](http://moxiegirlz.com) requires a PC or Mac with a broadband (DSL, Cable, LAN) internet connection and screen resolution of at least 1024x768 at "millions of colors." For complete system requirements and website Terms & Conditions please visit [Moxiegirlz.com](http://Moxiegirlz.com).



Let's care for the environment! The wheeled bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.

Please keep this manual as it contains important information.



[www.moxiegirlz.com](http://www.moxiegirlz.com)  
 © MGA Entertainment, Inc.  
 MOXIE GIRLZ™ is a trademark of MGA in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans and packaging appearance are the property of MGA.  
 16300 Roscoe Blvd.  
 Van Nuys, CA 91406 U.S.A.  
 (800) 222-4685  
 Printed in China

The preferred method of contact for Customer Service is through our e-mail contact form at [www.moxiegirlz.com](http://www.moxiegirlz.com)



0909-0-E

**ASSEMBLING THE HAIRBRUSH HEAD**

Assemble the head of the Hairbrush by snapping the ends of the hinge on the Bristle (front) Side in between the Tabs on the Back Side. (Fig. 1)

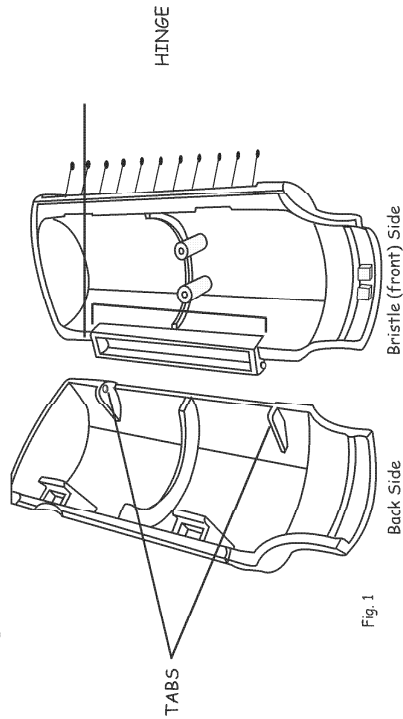 


Fig. 1

**INSERTING THE MICROPHONE INTO THE BRUSH HEAD**

1. Place the Microphone into the Brush Side of the Hairbrush Head. (Fig. 2)
2. Rotate the Microphone until the slot on the back of the Mic (Fig. 3) fits into the tab inside the Back Side of the Hairbrush Head. (Fig. 4)
3. Close the Hairbrush Head (Fig. 5) and snap it shut. (Fig. 6)

NOTE: The Slot on the Mic must fit securely in the Tab on the Brush to keep the Brush from rotating when using it to brush hair.

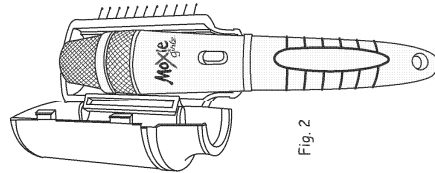 


Fig. 2

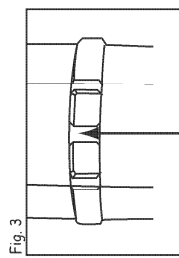 


Fig. 3

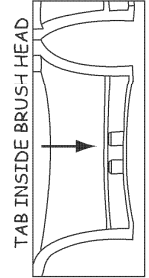 


Fig. 4

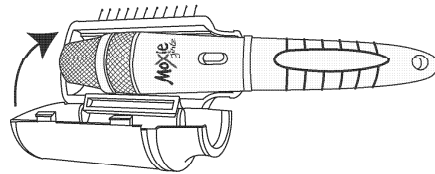 


Fig. 5

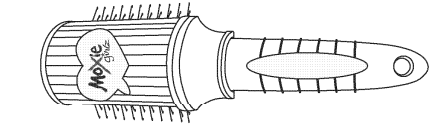 


Fig. 6

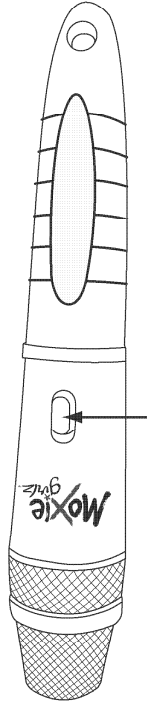 


Fig. 7

ON / OFF SWITCH

**USING THE BARRETTES IN THE HAIR**

1. Open the tab on the underside of the Barrette by pulling it outward.
2. Slide the tab under a layer of your hair then close the tab and press firmly to snap it shut.

**APPLYING LIPGLOSS**

1. Open the barrette by grasping the edge of the heart (or star) and pulling up on the lid. (Figs. 8 & 9)

NOTE: Peel away and discard the plastic film from the lipgloss before using.

2. With clean hands, apply the lipgloss with your-pinkie finger ONLY to your lips.

3. Close the cover and press firmly until it clicks shut.

NOTE: Make sure the lid is firmly closed before wearing the barrette in your hair!

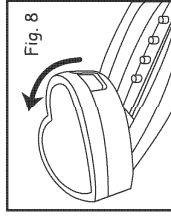 


Fig. 8

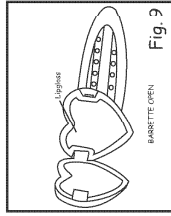 


Fig. 9

**REMOVING LIPGLOSS:**

1. Remove lipgloss from your lips, by washing with soap and water.

**CAUTION:**

- Adult supervision is required
- Lipgloss is laboratory tested and safe for use as described. As with all cosmetics, some individual skin types may experience minor skin irritation. If this occurs, discontinue use.
- Lipgloss is for external use only.
- **DO NOT** use Lipgloss on broken skin.
- **DO NOT** consume (eat) Lipgloss.
- Stop using the Lipgloss immediately if any allergic reaction occurs.
- Lipgloss is recommended for children 6 years and older.
- Lipgloss may damage or stain certain fabrics, carpeting, wood finishes or other porous and polished surfaces. Protect on cover any play surface before using the cosmetics.
- **DO NOT** use Lipgloss for any other purpose than what is described in this manual.
- Clean your hands thoroughly before and after playing with Lipgloss.
- Please remove the FM mic when cleaning the hair brush.

**INGREDIENTS**

**LIP GLOSS INGREDIENTS: (RED VIOLET)**

POLYBUTENE, ETHYLHEXYL PALMITATE, PETROLATUM, MICROCRYSTALLINE WAX, HYDROXYSTEARIC ACID, SYNTHETIC BEESWAX, MITA, PROPYL PARABEN, METHYL PARABEN, BHT, TITANIUM DIOXIDE, D&C RED NO. 27 ALUMINUM LAKE, FD&C BLUE NO. 1 ALUMINUM LAKE NET WT. 0.01 OZ. (0.3 GRAM)

**LIP GLOSS INGREDIENTS: (GERISE)**

POLYBUTENE, ETHYLHEXYL PALMITATE, PETROLATUM, MICROCRYSTALLINE WAX, HYDROXYSTEARIC ACID, SYNTHETIC BEESWAX, MITA, PROPYL PARABEN, METHYL PARABEN, BHT, TITANIUM DIOXIDE, D&C RED NO. 27 ALUMINUM LAKE, FD&C YELLOW NO. 6 ALUMINUM LAKE, D&C RED NO.30 TALC LAKE NET WT. 0.01 OZ. (0.3 GRAM)

THESE COSMETICS ARE RECOMMENDED FOR CHILDREN 6 YEARS AND OLDER. LIP GLOSS MAY DAMAGE OR STAIN CERTAIN FABRICS, CARPETING, WOOD FINISHES OR OTHER POROUS AND POLISHED SURFACES. PROTECT OR COVER ANY PLAY SURFACE BEFORE USING. USE UNDER ADULT SUPERVISION. THESE COSMETICS ARE LABORATORY TESTED AND SAFE FOR USE AS RECOMMENDED. AS WITH ALL COSMETICS SOME INDIVIDUAL SKIN TYPES MAY EXPERIENCE MINOR SKIN IRRITATION, IF THIS OCCURS DISCONTINUE USE.

DO NOT APPLY AROUND EYES. IN CASE OF CONTACT WITH EYES, RINSE IMMEDIATELY WITH PLENTY OF WATER AND SEEK MEDICAL ADVICE. USE UNDER ADULT SUPERVISION.

**USING THE MICROPHONE**

This FM Wireless Microphone operates at approximately 100MHz and will transmit your voice through any FM radio (not included). To do so:

1. Turn ON your Moxie Girlz™ FM wireless mic. (Fig. 7)
2. Turn on your personal radio (not included), and select the FM band.
3. Tune your radio to 100MHz. If there is a radio station at 100MHz with a strong signal, it may overpower your microphone. If you find a commercial station, move the tuner a little to either side of 100MHz.