

### ⚠ WARNING:

- DO NOT allow children to play around water unsupervised.
- DO NOT allow children to play in water near any electrical source or apparatus in order to avoid electrical shock and/or electrocution.
- DO NOT leave doll or near any electrical source or apparatus when wet.

### TROUBLESHOOTING:

IF THERE IS NO FUNCTION BETWEEN THE REMOTE CONTROL AND THE BOAT:

- Make sure the Remote Control switch is in the "ON" position and the Button on the back of the Boat has been pressed.
- Make sure the batteries are inserted properly.
- Replace the old batteries with new alkaline batteries.
- Move the Remote Control closer to the Boat to determine the best communication between the two.

### FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning : Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### SAFE BATTERY USAGE

- Use alkaline batteries for best performance and longer life.
- Use only the type battery recommended for the unit.
- Batteries should be replaced only by an adult.
- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable(nickel-cadmium) batteries.
- Do not short-circuit batteries.
- When not used for an extended time, remove batteries to prevent possible leakage and damage to the unit.
- Do not mix rechargeable and non-rechargeable batteries.
- Rechargeable batteries are to be removed from the toy before charging.
- Rechargeable batteries are to be recharged only under adult supervision.
- Do not recharge non-rechargeable batteries.
- Exhausted batteries are to be removed from the toy.
- Do not dispose of batteries in fire as they may leak or explode.



'Let's care for the environment!' The wheelee bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.

Please keep this manual as it contains important information.



1012-0-E

www.lalaloopsy.com  
 © MGA Entertainment, Inc.  
 LALA-OOPSIES™, MINI LALA-OOPSIES™  
 and LALA-OOPSIES LITTLES™ are  
 trademarks of MGA in the U.S. and  
 other countries. All logos, names,  
 characters, likenesses, images,  
 slogans, and packaging appearance  
 are the property of MGA.  
 16300 Roscoe Blvd.  
 Van Nuys, CA 91406 U.S.A.  
 (800) 222-4685  
 Printed in China

The preferred method of contact for  
 Customer Service is through our e-mail  
 contact form at [www.mgae.com](http://www.mgae.com)



## RC Boat

Age 4+ years

521174 (27 MHz) / 521181 (49MHz)

ADULT BATTERY INSTALLATION REQUIRED



### INTRODUCTION

On land or on sea your Mini Lala-oOpsies™ will travel in style and safety with this cool remote control boat.

### CONTENTS

- 1 Mini Lala-oOpsies™ RC Boat
- 1 Remote Control
- 1 Mini Lala-oOpsies™ Princess Sesame™ Doll



Illustrations are for reference only. Styles may vary from actual contents.



## BEFORE YOU BEGIN

### BOAT

An ADULT must install batteries in the Boat. Here's how:

1. Press the switch on the rear deck of the Boat (behind the seat) to turn it OFF.
2. Using a Phillips screwdriver (not included), remove the screw and battery compartment cover located on the bottom of the Boat. (Fig. 1)
3. Install three (3) AAA alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
4. Replace the compartment cover and tighten the screw.



**IMPORTANT NOTE: BATTERY COMPARTMENT MUST BE SECURELY CLOSED TO ASSURE IT IS WATER TIGHT IN ORDER TO PREVENT IRREPARABLE DAMAGE..**

### REMOTE CONTROL

An ADULT must install batteries in the Remote Control. Here's how:

1. Slide the ON/OFF switch to "OFF."
2. Using a Phillips screwdriver (not included) remove the screw and battery compartment cover on the back of the Remote Control. (Fig. 2)
3. Install two (2) AAA alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment. (Fig. 2)
4. Replace the compartment cover and tighten the screw.




**IMPORTANT NOTE: REMOTE CONTROL IS NOT WATER PROOF. DO NOT ALLOW REMOTE CONTROL TO COME IN CONTACT WITH WATER OR MOISTURE OF ANY KIND.**

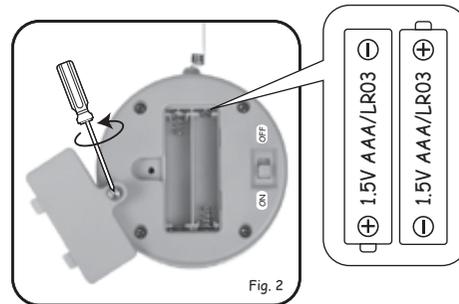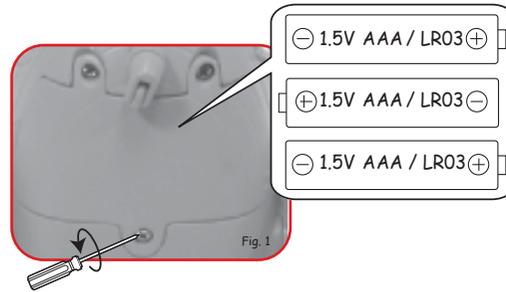

### FASTEN YOUR SEAT BELT!



Before going for a ride on land or water make sure that your doll is in place and buckled up. To do so:

1. Carefully remove the sun shade on top of the boat. (Fig. 3) **TIP: Seek assistance from an ADULT if necessary.**
2. Lift the elastic band on the seat and secure your doll under it. (Fig. 4)
3. Replace the sun shade and you're ready to go! (Fig. 4A)

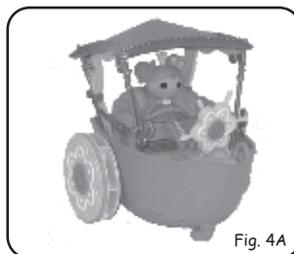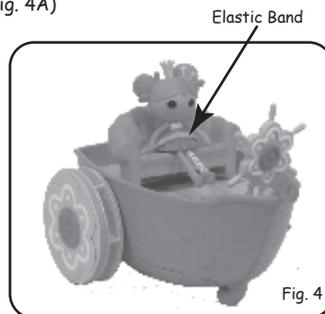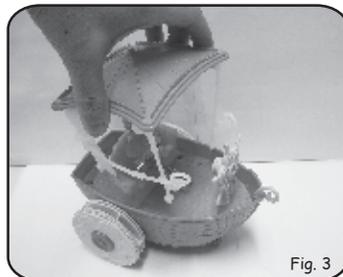

## OPERATING THE BOAT ON LAND

1. Press the switch on the rear deck of the Boat (behind the seat) to turn it ON. (Press again to turn it OFF.)
2. Slide the ON/OFF switch on the back of the Remote Control to the "ON" position.
3. Place the Boat on a flat, level surface.
4. Use the Remote Control to drive your Boat by doing the following:
  - a. Press down on the left side of the Remote Control to go forward. (Fig. 5)
  - b. Press down the right side of the Remote Control to back up and turn to the left. (Fig. 6)

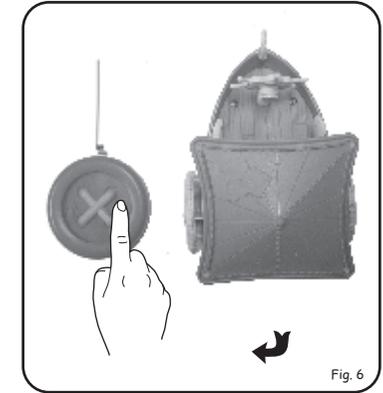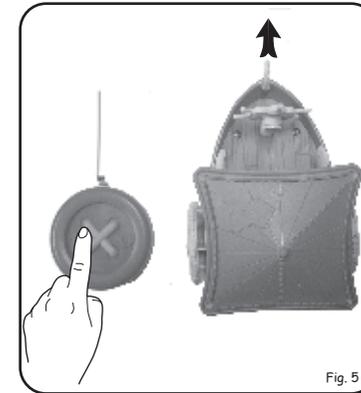

## OPERATING THE BOAT ON WATER

- Follow the steps above but place the boat gently into clean, clear water.
- Use the remote to take your doll on a cruise.
- When done playing remove Boat from the water and dry off with a clean towel.
- Allow boat to dry completely before storing.
- If Boat is not being played with for a period of time, remove the batteries.
- When running your Boat in water make sure you follow all water safety rules (See page 4).
- DO NOT RUN BOAT IN LARGE BODIES OF WATER SUCH AS LAKES, RIVERS OR MOVING STREAMS OR BEACH.

### IMPORTANT INFORMATION

- When driving two RC Boats, they must be of different radio frequencies (e.g. one Boat 49MHz and one Boat 27MHz) or they may not perform as designed.
- When Boat is not being played with, press the button on the back of the Boat to turn it OFF and slide the switch on the Remote to "OFF" to save battery power.
- Your Boat is controlled by radio frequency. It may interfere with nearby devices such as cordless phones, radios, walkie-talkies, or other radio controlled devices. If this occurs, move the Boat to a location away from the interference.
- The Boat must remain in remote control range to operate correctly. The range depends on the surrounding area and on the strength of the battery. Obstructions such as buildings, fences, etc., between the remote control transmitter and the Boat reduce the range.
- If the Boat runs slowly, replace the batteries.

### ⚠ CAUTION:

- DO NOT sit or stand on any part of the Boat.
- DO NOT lift and/or drop the Boat as doing so may cause bodily injury to the user and irreparable damage to the Boat.
- Play with the Boat on the floor or ground or in confined areas of water only.
- DO NOT operate this Boat during thunderstorms.
- Keep hair, fingers, loose clothing and other items away from rotating wheels of the unit.
- DO NOT play with this toy in the street or other places where cars are driven.
- **This toy is to be operated in water only when it is fully assembled in accordance with the instructions.**
- Be sure to clean and dry the boat after going in the water, otherwise it might develop mold or mildew.