WARNINGS

DO NOT stand or jump anywhere on the Little Tikes Rock N Twist Body

Do not bend the microphone stand too much or it might break

FCC Compliance

guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable more of the tollowing measures: the equipment off and on, the user is encouraged to try to correct the interference by one or the instructions, may cause harmful interference to radio communications. However, there is no uses and can radiate radio frequency energy and, if not installed and used in accordance with protection against harmful interference in a residential installation. This equipment generates,

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is
- Consult the dealer or an experienced radio/TV technician for help

any interference received, including interference that may cause undesired operation. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept

Caution: Modifications not authorized by the manufacturer may void users authority to operate

SAFE BATTERY USAGE

- Use alkaline batteries for best performance and longer life
- Use only the type battery recommended for the unit.
- Insert batteries with the correct polarity (+ and -). Batteries should be replaced only by an adult.
- Do not mix different types of batteries or old and new batteries
- Do not short-circuit batteries.
- When not used for an extended time, remove batteries to prevent possible leakage and damage to the unit.
- Do not mix rechargeable and non-rechargeable batteries.
- Rechargeable batteries are to be recharged only under adult supervision Rechargeable batteries are to be removed from the toy before charging.
- Do not recharge non-rechargeable batteries.
- exhausted batteries are to be removed from the toy.
- Do not dispose of batteries in fire as they may leak or explode.

fresh alkaline battery. Therefore, it is recommended that alkaline batteries be used instead of NOTE: The voltage of a fully-charged, rechargeable battery is often lower than that of a rechargeable batteries for best performance and for longest play time

Please keep this manual as it contains important information

TM & © The Little Tikes Company



as the packaging and images appearing thereon, are 2180 Barlow Road Little Tikes Consumer Services the exclusive property of The Little Tikes Company characters, distinctive likenesses and slogans, as well LITTLE TIKES™ and all related logos, names, an MGA Entertainment company Hudson, Ohio 44236 USA

Printed in China (800) 321-0183

Visit us at www.littletikes.com



Ages 2 - 5
ADULT BATTERY INSTALLATION REQUIRED

INTROD

UCITON

Item no.: 600739

keyboard and a fun-function seat that allows children to make music through physical It's time for some BIG music fun from Little Tikes™! This multi-musical station comes with a movement by bouncing and swiveling!

CONTENTS

- 1 Little Tikes TM Rock and Twist Body made up of the following
- 13-Key Keyboard (8 white keys, 5 black keys)
- Left and Right Speaker Pads
- ON/OFF Switch
- d. Rhythm Slider
- Octave Switch
- Mode Slider Switch
- Play Microphone
- Seat with Swivel and Bounce Action
- Seat Handles

Illustrations may vary from actual contents


BEFORE YOU BEGIN

Keyboard Have an adult help you install batteries (not included)

- Make sure the Rock and Twist Body is power off (ON/OFF switch in the OFF position).
- Using a Phillips screwdriver (not included) unscrew of the keyboard. (Fig. and remove the battery door located on the back
- 3. Insert four $(4) \times AA$ (1.5V) alkaline batteries with the positive (+) and negative (-) ends facing in the proper direction as indicated inside the battery compartment (Fig. 2). ⊕1.5V AA/R6 ⊖
- Replace the battery cover and tighten the screw

Θ 1.5V AA/R6⊕]]

- 5. Make sure the seat is power off (ON/OFF switch in the OFF position).
- Using a Phillips screwdriver (not included) unscrew and remove the battery door located on
- the back of the seat. (Fig. 3).
 7. Insert two (2) × AAA (1.5V) alkaline batteries with the positive (+) and negative (-) ends facing battery compartment. (Fig. 4) in the proper direction as indicated inside the
- Replace the battery cover and tighten the screw

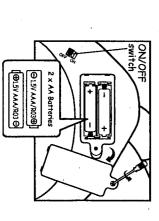

Get ready to move to the music: Sit down on the seat and start the concert by turning the ON/OFF switch to ON.

The Rock N' Roll Body plays eight different songs in the following order:

- Here We Go Round the Mulberry Bush
- Three Blind Mice

Skip-to-my-Lou

- She'll Be Comin' Round the Mountair
- Hey Diddle Diddle


use it to make your own music! Here's how: Use the keyboard to choose the songs you want to hear in four different rhythms. You can also

- Rhythm Slider Move the Rhythm Slider to one of four positions: Classic, Country, Hip-Hop or World Beat. You can even move the Slider while a song is playing to change beats instantly
- Mode Slider Switch This slider switch has three different modes of play: 1. Complete Song Mode - This mode plays entire songs. When a song is complete, the next song in the list will play. You can also press any key on the Keyboard to skip to the next song. If you would like to hear all of the lullabies, you must press hold the button down for 3 sec.
- 2. Stanzas Mode This mode plays part of a song (stanza). Press any key on the Keyboard to
- move to the next stanza. When the song is complete, the next song in the list will play.

 3. Single Note Mode This mode plays single notes on the Keyboard. Try to play along with the music or make your own!
- Octave button Press the Octave button to raise the pitch of the songs. Each button press raises the octave by 1 to a maximum of 8, after which it goes back down to 1 again. The Octave button behaves differently in each Mode:
- In Complete Song Mode, press the Octave button to change the octave of the song on the fly without interrupting the song.
- In Stanzas Mode, press the Octave button to change the octave of the song on the fly
- without interrupting the song.

 3. In Single Note Mode, press the Octave button to raise the octave of the next keyboard

TIP: Try playing some of the songs at instructions the end of these

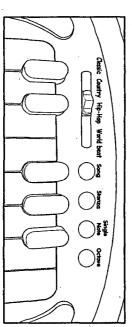

Sleep Mode:

If no keys or other controls are pressed on the keyboard, the Rock & Twist Body will go into Sleep Mode to conserve battery power. Press any key on the Keyboard to bring the Rock & Twist Body back out of Sleep Mode.

Microphone:

with the music! Slide the Microphone button to ON position and sing into the microphone. Your voice will be mixed in with the music! This microphone is on a flexible stand so that you can adjust it to your height and sing along


QUICK START (con't)

is also a musical instrument! You can use it to change music musical maneuvers: Be sure to grip the Seat Handles tightly as you try these speed and even add percussion (drum) sounds The music does not just come from the Keyboard; your seat

Swivel right to make the music slower and swivel left to

Bounce up and down in the seat to make percussion (drum)


Caution: Do not bounce or jump too high in the seat. You only need to do a small bounce to get the sounds.

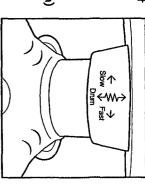

go into Sleep Mode. If no keys or other controls are pressed or the seat is not moved, the Rock & Twist Body will

SONGS

 Here are some really cool songs that you can play on the Keyboard, just follow the keys below:

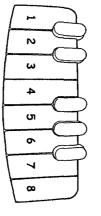

Twinkle, Twinkle Little Star:

Twin-kle Twin-kle Lit-tle Star, How I Won-der What You Ar----e.
1 1 5 5 6 6 5 4 4 3 3 2 2 1-----

Up A-bove the World so High, Like a Dia-mond in the Sky. 5 5 4 4 3 3 2--- 5 5 4 4 3 3 2--

Twin-kle Twin-kle Lit-tle Star, How I Won-der What You Ar----e
1 1 5 5 6 6 5 4 4 3 3 2 2 1-----

London Bridge is Falling Down:

Lon-don Bridge is Fall-ing Down. Fall-ing Down. Fall-ing Down. Fall-ing Down. Fall-ing Down. Fall-ing Down.

Lon-don Bridge is Fall-ing Down, My Fair La-dy, 5 6 5 4 3 4 5 2-5-31.

Mary Had a Little Lamb:

Ma-ry Had a Lit-tle Lamb. Lit-tle Lamb. Lit-tle Lamb. 3 2 1 2 3 3 3 2 2 2 3 5 5.

Ma-ry Had a Lit-tle Lamb Whose Fleece was White As Snow 3 2 1 2 3 3 1 ---.