

## BATTERY SAFETY INFORMATION

- Use only size "AAA" (LR03) alkaline batteries (3 required) and "AA" (LR6) alkaline batteries (3 required).
- Charging of rechargeable batteries should only be done under adult supervision.
- Remove rechargeable batteries from the product before recharging.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instruction.
- Always remove exhausted or dead batteries from the product.
- Dispose of dead batteries properly: do not burn or bury them.
- Do not attempt to recharge non-rechargeable batteries.
- Avoid short-circuiting battery terminals.
- Remove batteries before placing the unit into storage for a prolonged period of time.

## FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3 (B)/NMB-3(B).



'Let's care for the environment!'

The wheelie bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.

Please keep this manual as it contains important information.



1018-2-E/INT

© The Little Tikes Company, an MGA Entertainment company. LITTLE TIKES® is a trademark of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of Little Tikes. Little Tikes Consumer Service 2180 Barlow Road Hudson, Ohio 44236 U.S.A. 1-800-321-0183 Printed in China

MGA Entertainment UK Ltd  
50 Presley Way  
Crownhill  
Milton Keynes  
MK8 0ES  
Bucks, UK  
0800 521 558

www.littletikes.com  
www.littletikes.co.uk





Visit our website at [www.littletikes.com](http://www.littletikes.com) to register your product and to enter our sweepstakes. (No purchase necessary)



AGES 2+  
SKUs: 647529, 647536  
ADULT SUPERVISION RECOMMENDED  
ADULT BATTERY INSTALLATION REQUIRED

## CONTENTS

- A. 1 Remote Control
- B. 1 RC Car

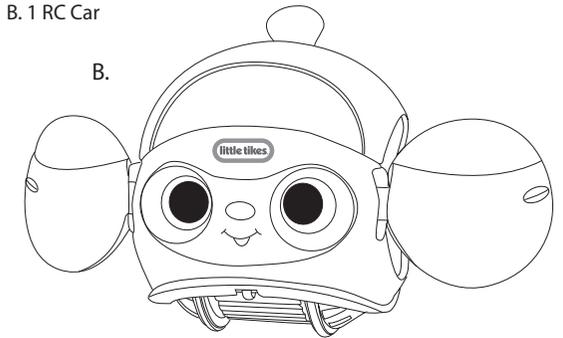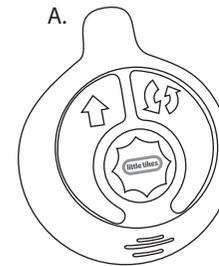


Illustrations are for reference only. Styles may vary from actual contents.

## REMOTE BATTERY INSTALLATION

The batteries included in the remote are for in-store demonstration. Before playing, an adult must install fresh alkaline batteries in the remote control. Here's how:

1. Using a Phillips screwdriver (not included), remove the screw and battery compartment cover located on the back of the remote control.
2. Install three (3) fresh 1.5V AAA (LR03) alkaline batteries (not included) in the remote control making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
3. Replace the compartment cover and tighten the screw.

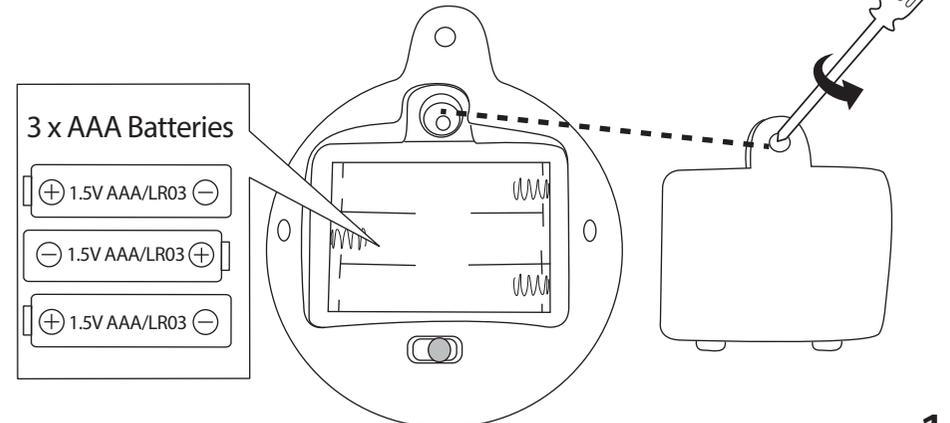


## RC CAR BATTERY INSTALLATION

Before playing, an adult must install fresh alkaline batteries in the RC car. Here's how:

1. Using a Phillips screwdriver (not included), remove the screw and battery compartment cover located under the RC car.
2. Install three (3) fresh 1.5V AA (LR6) alkaline batteries (not included) in the RC car making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.


**NOTE:** Batteries are layered with one battery on the bottom layer and two remaining batteries above it.

3. Replace the compartment cover and tighten the screw.

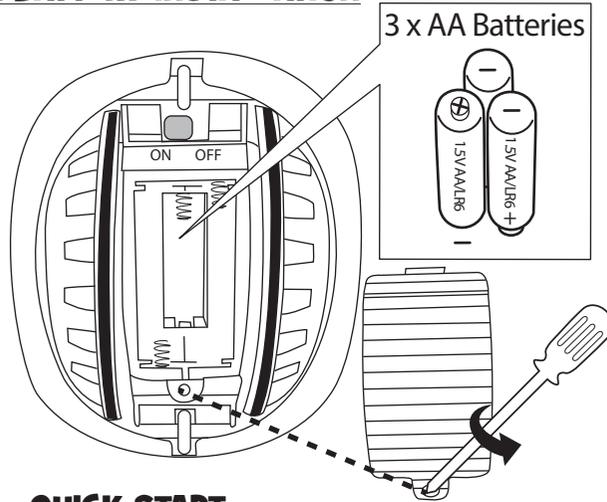


## QUICK START


Recommended for use on hard surfaces like wood flooring.

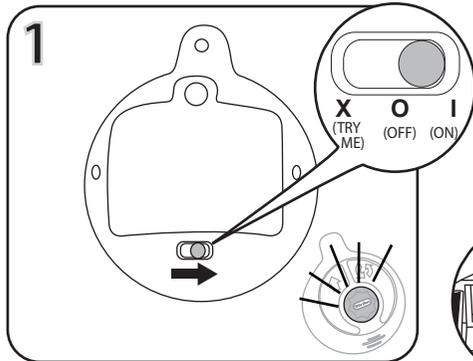


Move the switch on the back of the controller to the ON (I) position. The light on the center button of the remote will flash.

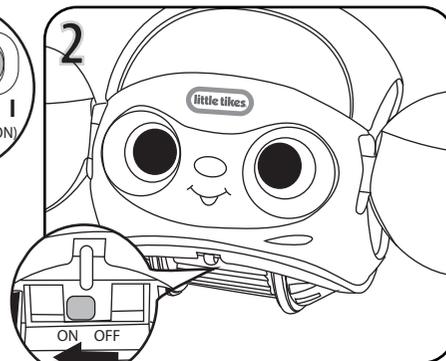


Move the switch under the RC car from OFF to ON. The light on the center button of the remote will remain solid, indicating the remote and RC car are paired.

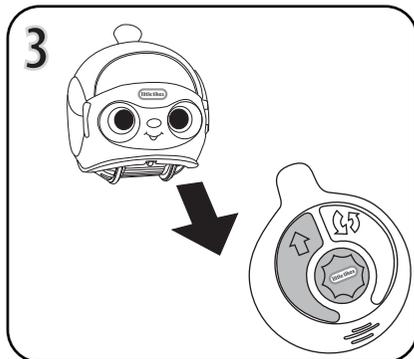

Aim the remote receiver at the RC car and press the left button to move the RC car forward. Press the center button for lights and sound effects!

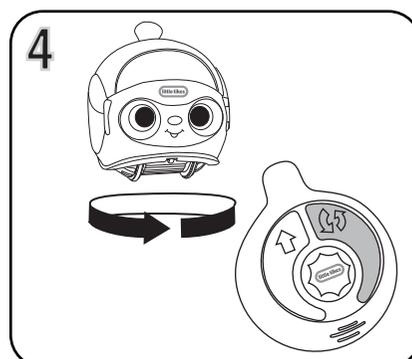

Press the right arrow to turn the RC car in place.

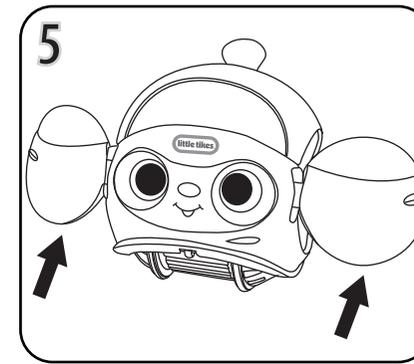

Open and close the RC car's wing doors to reveal pictures!

## TROUBLESHOOTING

If the RC car does not respond:

- The RC car may be out of range. Bring the remote closer to the RC car.
- Check that the RC car and remote control are both turned on.
- Turn the remote and RC car off and back on again to pair them.
- The batteries in the RC car and/or remote control may need to be replaced.

## IMPORTANT INFORMATION

- If the RC car is in the ON position for an extended time, it will go into sleep mode. Turn it off and back on to restart the RC car. Ensure the remote control is also in the ON (I) position.
- Always turn the unit and remote control OFF (O) after playing to preserve battery life.
- Recommended for use on hard surfaces like wood flooring.
- The RC car has a lengthy, but limited range. Keep the remote close to the RC car during use.
- Keep long hair or loose apparel, such as shoestrings, away from the turning wheels of the RC car.
- Do not play with the RC car in the street or where there is vehicular traffic or in heavily traveled areas with pedestrians.
- Do not stand on, sit or throw the RC car, as doing so can result in injury to the person and irreversible damage to the unit.
- Do not run the RC car into furniture, walls, people, pets, etc., as doing so may cause injury to the people and pets and irreparable damage to the unit.
- Do not drive the RC car through mud.
- Wipe clean with a damp cloth and air dry thoroughly. Keep water away from the battery compartments.
- From time to time, objects may become entangled in the wheels. Check for debris and remove regularly.
- Frequency band range is 2.412GHz - 2.468GHz.
- Maximum radio-frequency power is 3dBm.

## LIMITED WARRANTY

The Little Tikes Company makes fun, high quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year \* from the date of purchase (dated sales receipt is required for proof of purchase). At the sole election of The Little Tikes Company, the only remedies available under this warranty will be the replacement of the defective part or replacement of the product. This warranty is valid only if the product has been assembled and maintained per the instructions. This warranty does not cover abuse, accident, cosmetic issues such as fading or scratches from normal wear, or any other cause not arising from defects in material and workmanship. \*The warranty period is three (3) months for daycare or commercial purchasers. U.S.A and Canada: For warranty service or replacement part information, please visit our website at [www.littletikes.com](http://www.littletikes.com), call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires—contact us for details. Outside U.S.A and Canada: Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.