



# Snuggly Baby with Magic Necklace



Ages 3+



Item no.: 901751 / 901768

 
ADULT BATTERY INSTALLATION REQUIRED

## INTRODUCTION

This cuddly cutie is just perfect for snuggling, but she's also pretty smart for her age - she knows when she's being changed, when she's being carried and even who her mommy is . . . you!

## CONTENTS

- a. 1 CHOU CHOU Doll with Outfit
- b. 1 Heart-Shaped Necklace Remote Control
- c. 1 Feeding Bottle
- d. 1 Mini Plush Friend

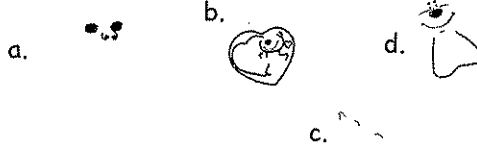


Illustrations may vary from actual contents.

## BATTERY INSTALLATION

 
### CHOU CHOU Doll

1. Ask an adult to help install batteries.
2. Remove CHOU CHOU's outfit to reach the battery compartment on her back.
3. Lift the flap that is held by hook-and-loop closures.
4. Using a Phillips head screwdriver (not included), remove the screw and battery compartment cover.
5. Install three (3) AA alkaline batteries (not included) making sure that the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
6. Replace the compartment cover and tighten the screw.
7. Turn the ON/OFF switch to ON. The switch is located next to the battery.
8. Put CHOU CHOU's outfit back on. She is now ready to play!

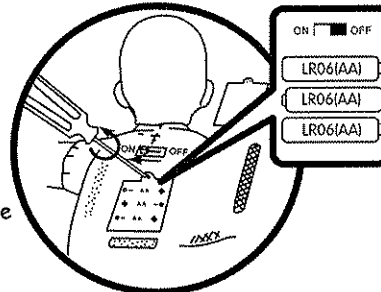

### Necklace Remote Control

 1. Ask an adult to help install batteries.
2. Using a Phillips head screwdriver (not included), remove the screw and battery compartment cover from the back of the heart-shaped necklace.
3. Install two (2) AAA alkaline batteries (not included) making sure that the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
4. Replace the compartment cover and tighten the screw.
5. Turn the ON/OFF switch to ON. The switch is located next to the battery compartment.  
Place the necklace around your neck and you are ready to play!

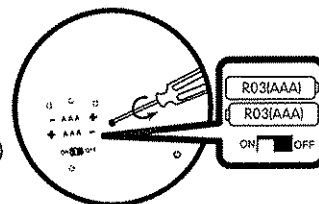

## QUICK START

 
### Active Play

NOTE: CHOU CHOU will only enter Active Play Mode if the Heart-Shaped Necklace is less than 10 inches away from her.

Start by picking up CHOU CHOU and giving her a big hug.

Then try all of her interactive features:

- Hold CHOU CHOU close to you as you wear the necklace. She will recognize you as her "Mommy" and make happy sounds.
  - Press the tip of the Feeding Bottle into CHOU CHOU's mouth, (Fig. 1). She will make drinking noises. When you remove the bottle she will sometimes hiccup or burp!  
CAUTION: NEVER give CHOU CHOU any real liquids or food as this can cause irreparable damage!
  - Rub Snuggly CHOU CHOU's Mini Plush Friend on her breast and she will laugh with delight, (Fig. 2).
  - Move the Necklace away from CHOU CHOU and she will begin to cry. If you move the necklace back and pat her on her lower back/bottom she will make happy noises.
- NOTE: After one minute of crying CHOU CHOU will go into Sleep Mode.
- Swing CHOU CHOU on her tummy and armpits and she will begin to giggle!

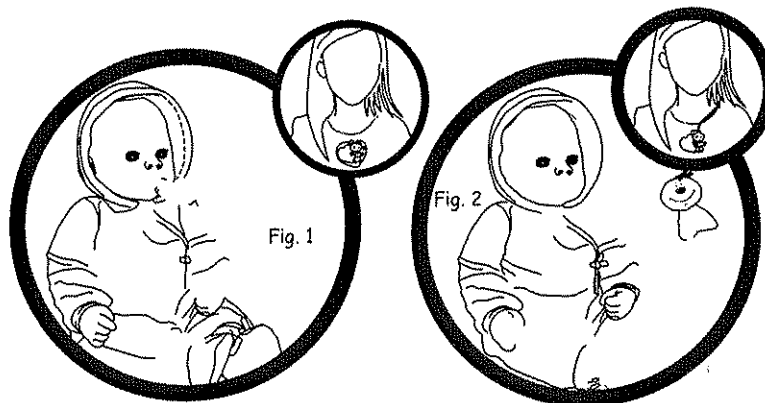

### Automatic Play

If CHOU CHOU is not played with for a few seconds, she will begin to say random baby talk. Once CHOU CHOU is picked up again, she will go back into Active Play mode.

### Sleep Mode

If CHOU CHOU is left alone for one minute, she will go into an energy saving "sleep" mode. This is done to conserve battery power.

To wake CHOU CHOU out of Energy Saving mode, press the tip of the Feeding Bottle into her mouth.

### Turning OFF CHOU CHOU

Turn CHOU CHOU's OFF/ON switch to OFF when she is not going to be played with for long periods of time. This will conserve battery power. Also remember to turn the OFF/ON switch to OFF on the back of the Heart-Shaped Necklace.

## CLEANING INSTRUCTIONS AND WARNINGS

### CHOU CHOU Doll:

Clean the outside of the doll's head, arms and legs with a damp cloth. DO NOT wash CHOU CHOU in a tub or washing machine!

NOTE: Keep moisture away from battery compartment or electronics.

### OUTFIT:

Hand-wash and air dry only. Do not place in washing machine or dryer.

### FEEDING BOTTLE:

Wipe outside of bottle with a damp cloth.

### MINI PLUSH FRIEND:

Wipe with a dry cloth ONLY. Keep away from moisture.

### HEART-SHAPED NECKLACE:

The Heart-shaped Necklace features a breakaway, hook and loop fastener which will open if pressure is applied to the necklace. This is a safety feature to prevent entanglement and possible injury. Do not modify or replace the hook and loop fastener in any way.

## SAFE BATTERY USAGE

- Use alkaline batteries for best performance and longer life.
- Use only the type battery recommended for the unit.
- Batteries should be replaced only by an adult.
- Insert batteries with the correct polarity (+ and -).
- Do not mix different types of batteries or old and new batteries.
- Do not short-circuit batteries.
- When not used for an extended time, remove batteries to prevent possible leakage and damage to the unit.
- Do not mix rechargeable and non-rechargeable batteries.
- Rechargeable batteries are to be removed from the toy before charging.
- Rechargeable batteries are to be recharged only under adult supervision.
- Do not recharge non-rechargeable batteries.
- Exhausted batteries are to be removed from the toy.
- Do not dispose of batteries in fire as they may leak or explode.

NOTE: The voltage of a fully-charged, rechargeable battery is often lower than that of a fresh alkaline battery. Therefore, it is recommended that alkaline batteries be used instead of rechargeable batteries for best performance and for longest play time.

## FCC STATEMENT

### FCC Compliance

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Please keep this manual as it contains important information.



0207-1

CHOU CHOU™ & © Zapf Creation AG  
CHOU CHOU and all related logos, names and slogans,  
as well as the packaging are the exclusive property of  
Zapf Creation AG  
Manufactured and distributed under license by  
MGA Entertainment, Inc.  
16300 Roscoe Blvd.  
Van Nuys, CA 91406 USA  
(800) 222-4685  
Printed in China

The preferred method of contact for  
Customer Service is through our e-mail  
contact form at [www.mgae.com](http://www.mgae.com)

