 


# W/C SPY ROVER™

 
 
## with Walkie Talkies & Surveillance Device

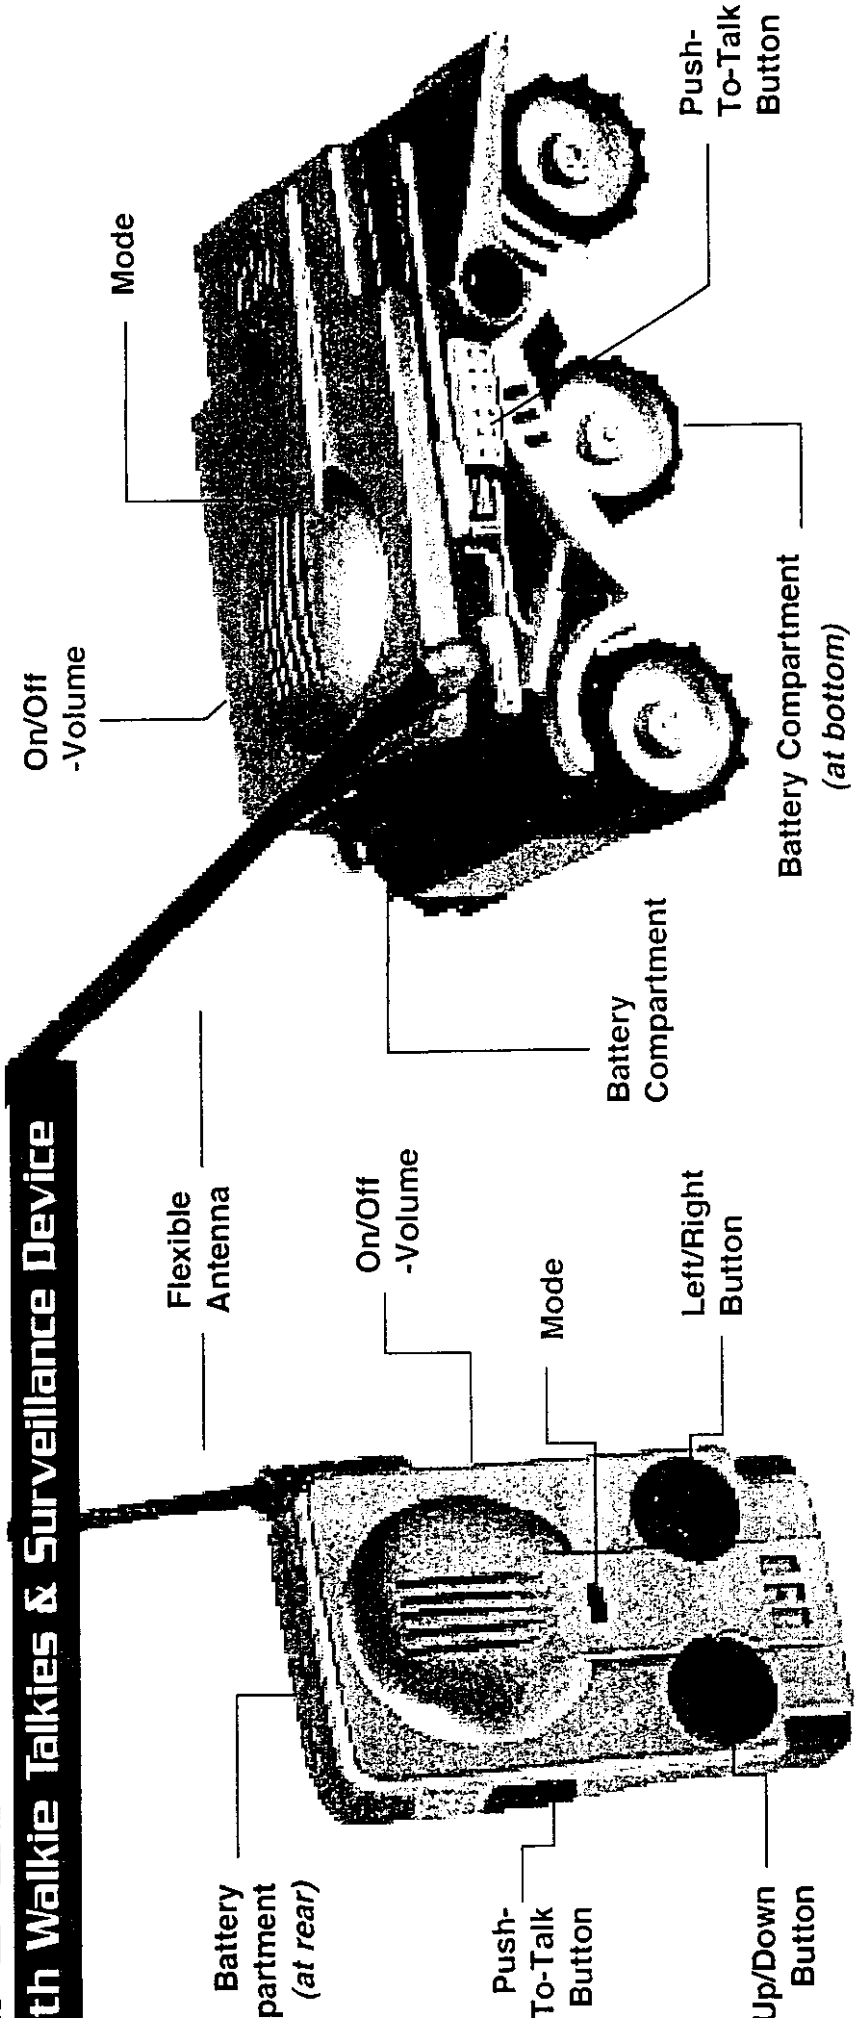

### Installation of Batteries


#### SPY CAR

Open the battery cover on the bottom of car by using small screwdriver. Insert 4 AA batteries with the positive (+) and negative (-) ends facing in the directions indicated. When the other battery cover at the rear of car and snap in a 9-Volt battery. Replace the battery covers.

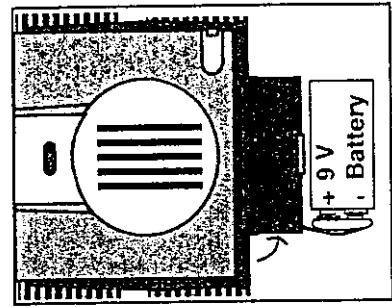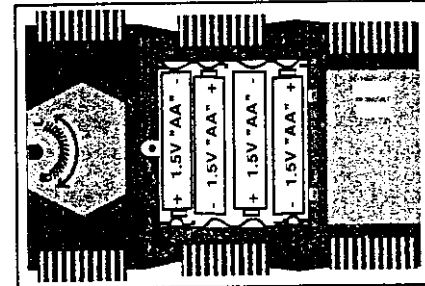

#### Controller

 - Open the battery cover on the bottom of controller and snap in a 9-Volt battery.
- Replace the battery cover.

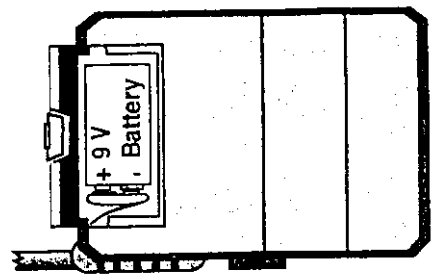

## Battery Precaution

Use alkaline batteries for best performance and longer life.

Do not use rechargeable batteries.

Be careful to insert batteries following the correct polarity.

Exhausted batteries are to be removed from the toy.

The supply terminals are not to be short-circuited.

Different types of batteries or new and used batteries are not to be mixed.

Only batteries of the same or equivalent types as recommended are to be used.

Installation of batteries should be done by adult.

## How to Use RC SPY CAR

Slide the MODE switch of both the CAR and the CONTROLLER to RC

CAR/SPY mode.

Place the CAR on the floor of playing site.

Press UP, DOWN, LEFT & RIGHT buttons of controller to manipulate and

move the car.

## How to Use Walkie Talkies (By Two Players)

Each player holds either the CAR or the CONTROLLER. Then, slide the MODE

switch of both the CAR and the CONTROLLER to WALKIE TALKIE mode.

Turn on the ON/OFF-VOLUME button of both unit and adjust the volume to a

suitable listening level.

Press the PUSH-TO-TALK button for transmitting, and speak in a normal voice level

into the speaker.

Release the PUSH-TO-TALK button for receiving.

## How to Use SPY Function

Slide the MODE switch of both the CAR and the CONTROLLER to RC CAR/SPY

mode.

Turn on the ON/OFF-VOLUME button of car.

Then, turn on the ON/OFF-VOLUME button of CONTROLLER to a suitable listening

level.

Press the PUSH-TO-TALK button of CAR and slide it to the LOCK position.

Place the CAR on the floor.

Press UP, DOWN, LEFT & RIGHT buttons of controller to manipulate and move the

CAR to the desired location.

When you are ready to "SPY", just switch the MODE switch of the CONTROLLER to

WALKIE TALKIE mode. Now the player can hear the sound from the CAR on his

CONTROLLER. When you are ready to move your CAR again, switch the MODE

switch to RC/SPY mode and you can drive the CAR to another location.

(Note : The clearness depends on the distance between the CAR and sound source.)

## Remarks :

For better battery life, please turn the MODE switch to middle position after use.

In order to drive the CAR, both MODE switches must be in the RC CAR/SPY mode. If

the MODE switch in the controller is in the WALKIE TALKIE mode, you will not be

able to drive the CAR.

## LIMITED 90 DAY WARRANTY

MGA Entertainment warrants to the original consumer purchaser this product that the product will be free from defects in material or workmanship for a period of 90 days from the date of original purchase.

This warranty does not cover damages resulting from misuse, improper or abnormal usage, negligence, leaking batteries, improper service or other causes not arising from defects in material or workmanship.

During this 90 day warranty period, the product will be either repaired or replaced (at MGA's option) at no charge to the purchaser, when returned to either the retailer with it's original sales receipt (containing date of purchase) or to MGA.

The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.

All product returned to MGA must be shipped prepaid and insured for loss or damage to:

MGA Entertainment

Repair Department

16730 Schoenborn Street

North Hills, CA 91343-6122

Any returned product should be carefully packed in packing material sufficient to avoid damage during shipment. Please include a written description of the defect, a copy of the original sales receipt (containing date of purchase) and your printed name, address and telephone number.

Some states do not allow limitations on how long an implied warranty last or the exclusion of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific rights and you may also have other rights which vary from state to state.

This warranty is only valid within the United States and Canada.

**Please keep this instruction manual since it contains important information.**

**WARNING : Users are not allowed to modify the low power transmitters.**



®, TM, & © 1998 MGA Entertainment, Inc.  
All Rights Reserved.  
16730 Schoenborn Street,  
North Hills, CA 91343 USA  
www.mage.com  
Made in China