 


PHILIPS

Wireless Speaker

TAS5505

TAPPOOZ

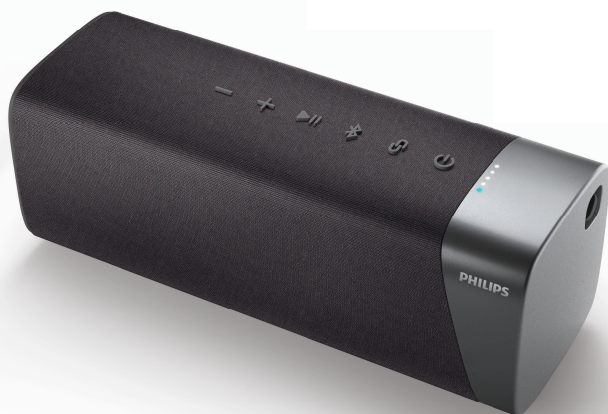

User manual

Register your product and get support at
www.philips.com/support

Contents

1	Important	2
	Safety	2

2	Your wireless speaker	3
	Introduction	3
	What's in the box	3
	Overview of the speaker	3

3	Get started	4
	Charge the built-in battery	4
	Turn on/off	4

4	Play from Bluetooth devices	5
	Play from Bluetooth devices	5
	Control playback	5
	Control phone call	5
	Pairing for stereo mode	5

5	Other features	6
	Play from an external audio device	6
	Multi-color LED light	6

6	Product information	7
----------	----------------------------	----------

7	Troubleshooting	8
	General	8
	Bluetooth	8

8	Notice	9
	Compliance	9
	Care of the environment	9
	FCC Statement	9
	Trademark notice	10

1 Important

Safety

Important safety instructions

- Make sure that the power supply voltage corresponds to the voltage on the back or the underside of the unit.
- The speaker shall not be exposed to dripping or splashing.
- Do not place any source of danger on the speaker (e.g. liquid filled objects, lit candles).
- Make sure that there is enough free space around the speaker for ventilation.
- Please use the speaker safely in an environment with temperature between 0° and 45°.
- Only use attachments and accessories specified by the manufacturer:



Warning

- Never remove the casing of this speaker.
- Never lubricate any part of this speaker.
- Place this speaker on a flat, hard and stable surface.
- Never place this speaker on other electrical equipment.
- Only use this speaker indoors. Keep this speaker away from water, moisture and liquid-filled objects.
- Keep this speaker away from direct sunlight, naked flames or heat.
- Risk of explosion if a battery is replaced by an incorrect type.

Battery safety precautions

- Danger of explosion if a battery is incorrectly replaced. Replace only with the same or equivalent type.
- A battery (battery pack or battery installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- A battery in extreme high or low temperatures during use, storage or transportation, and low air pressure at high altitude can pose safety hazards.
- Do not replace a battery with an incorrect type that can defeat a safeguard (for example, some lithium battery types).

2 Your wireless speaker

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

 
With this speaker, you can enjoy audio from Bluetooth-enabled devices or other audio devices through a 3.5mm audio-in cable.

What's in the box

Check and identify the contents of your package:

- Speaker
- USB cable
- Audio cable
- Quick start guide
- Safety sheet
- Worldwide warranty

Overview of the speaker

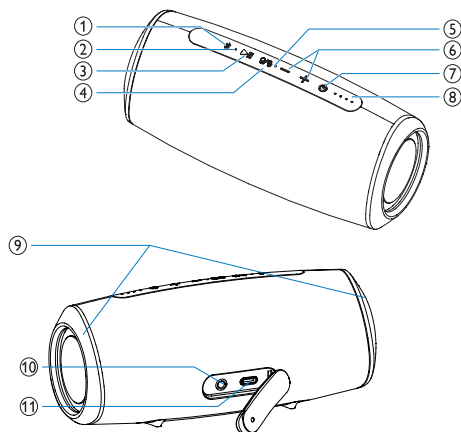

- ①
 - Enter Bluetooth pairing mode.
 - Clear Bluetooth pairing information.
 - Respond to an incoming call through Bluetooth connection.
- ② **LED indicator**
- ③
 - In Bluetooth mode, press to pause or resume play.
 - In Bluetooth mode, press twice to play the next track..
- ④
 - Press to turn the Multi-color LED light on or off.
 - Press and hold to enter stereo pairing mode.
- ⑤ **Microphone**
- ⑥
 - Adjust volume.
- ⑦
 - Turn the speaker on or off.
 - Check the battery level.
 - Show the Bluetooth status.
- ⑧ **Battery level indicators**
 - Show the charging progress.
 - Show the battery level.
- ⑨ **Multi-color LED light**
- ⑩
 - Connect an external audio device.
- ⑪
 - Charge the built-in battery.

3 Get started

Always follow the instructions in this chapter in sequence.

 
Charge the built-in battery

The speaker is powered by a built-in rechargeable battery.

Note

- Fully charge the built-in battery before using.
- When the speaker is turned on and the battery is low, the battery level LED indicator blinks green.

Connect the USB-C socket on the speaker to an outlet (5V = 3A) by using the provided USB cable.

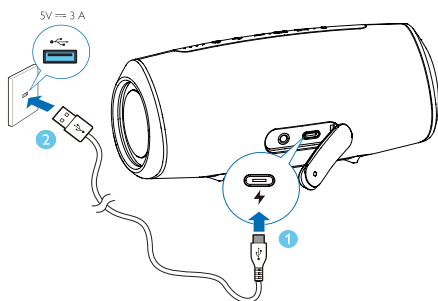

- ↳ When the speaker is being charged, the battery level LED indicator lights up gradually.
- ↳ When the speaker is fully charged, the battery level LED indicator lights on.

! Caution

- Risk of speaker damage! Make sure the power supply voltage corresponds to the voltage printed on the back or the underside of the speaker.
- Risk of electric shock! When unplug the USB cable, always pull the plug from the socket. Never pull the cable.
- Use only a USB cable specified by the manufacturer or sold with this speaker.

Turn on/off

Press  to turn the speaker on.

- ↳ You will hear the prompt sound.
- ↳ If no external audio device is connected to the AUX socket, it will enter Bluetooth pairing mode automatically and the LED indicator will blink blue.

To turn the speaker off, press  again.

Note

- The speaker will turn off automatically after 15 minutes without audio signal from Bluetooth or via AUX IN.