

## Contents

1. Charging the battery
2. Audio player
3. Lock and unlock the keypad
4. Change to meeting profile
5. Camera
6. FM radio
7. How to control volume
8. Restore factory setting

1. Charging the battery:

Unplug the charger from the outlet and the phone when not in use. Do not leave a fully-charged handset connected to a charger because overcharging may shorten the lifetime of the battery.

If unused, a fully-charged battery will lose its charge over time.

If the battery is completely discharged, the charging may not start immediately when you plug in the connector. Wait 10 to 15 minutes for the phone to begin charging.

Use the battery only for its

intended purpose. Never use any charger or battery that is damaged.

Use only Entel Charger & Battery.

Note: The actual operation time of a battery varies based on the operation mode, network strength in different places and talk time.

2. Audio player:

The songs you store in the memory card will appear in the audio player. Please check if you have stored the songs in “My Music” folder. You should also check whether default storage is memory card.

3. Lock and unlock the keypad:

Press \* then “left soft key” to lock the keypad.

Press “left soft key” then \* to unlock the keypad.

4. Change to meeting  
profile in idle:

Long press # to change the  
profile into meeting mode and  
long press # again to change the  
profile into normal mode.

5. Camera:

Press the OK key to take photos  
and the photos will be stored in  
the phone.

Press the left navigation key to  
Video recorder and press the  
right navigation key to camera  
again.

6. FM radio:

Radio FM

Press the OK key to open/close the FM radio.

Press the up and down navigation key to move forward/backward 0.1MHz.

Press the left and right navigation key to switch channel according to the channel list.

It will be exit FM radio interface when pressing the right soft key or the red key. And the FM will be run in the background.

7. How to control volume:

When you call any number you can control your volume, press the up&down navigation key to adjust call volume. You can control the volume by pressing the \* and # when you listening to the music ,FM radio or watching the videos.

8. Restore factory settings:

Reset the phone to default values (factory settings).

The phone password is required, which is "0000" by default

La contraseña del teléfono se requiere, que es "0000" por defecto.

**FCC Caution.**

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

§ 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.



Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee

that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from

that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

#### Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.5 cm must be maintained between the user's body and the handset, including the antenna.

Third-party belt-clips, holsters, and similar accessories used by

this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.