



- |  |  |
|--|--|
| <p><b>EN</b></p> <ol style="list-style-type: none"> <li>1. Mpow Bluetooth speaker</li> <li>2. Charging cable</li> <li>3. 3.5mm audio cable</li> <li>4. User manual</li> </ol> <p><b>FR</b></p> <ol style="list-style-type: none"> <li>1. Mpow haut-parleur Bluetooth</li> <li>2. Câble de recharge</li> <li>3. Câble audio 3.5 mm</li> <li>4. Manuel utilisateur</li> </ol> <p><b>IT</b></p> <ol style="list-style-type: none"> <li>1. Mpow Altoparlante Bluetooth</li> <li>2. Cable di carica</li> <li>3. Cable di audio de 3.5mm</li> <li>4. Manuale di usuario</li> </ol> | <p><b>DE</b></p> <ol style="list-style-type: none"> <li>1. Mpow Bluetooth Lautsprecher</li> <li>2. Ladekabel</li> <li>3. 3.5 mm Audiokabel</li> <li>4. Benutzerhandbuch</li> </ol> <p><b>ES</b></p> <ol style="list-style-type: none"> <li>1. Mpow Altoparlante Bluetooth</li> <li>2. Cable de carga</li> <li>3. Cable de audio de 3.5mm</li> <li>4. Manual de usuario</li> </ol> <p><b>JP</b></p> <ol style="list-style-type: none"> <li>1. スピーカー</li> <li>2. 充電ケーブル</li> <li>3. オーディオケーブル</li> <li>4. 取扱説明書</li> </ol> |
|--|--|

**Specification**

EN	Bluetooth Version	Signal Distance	Compatible Protocol	Input
Soundhot R6	V4.2	100 (R30m)	A2DP/WRCP/HRP/SP	5V=1A







DE	Bluetooth-Version	Signalf Entfernung	Kompatible Protokoll	Eingang
Soundhot R6	V4.2	100 (R30m)	A2DP/WRCP/HRP/SP	5V=1A

FR	Version Bluetooth	Portée Du Signal	Contrat Compatibilité	Contribution
Soundhot R6	V4.2	100 (R30m)	A2DP/WRCP/HRP/SP	5V=1A

ES	Versión De Bluetooth	Distancia De La Señal	Protocolos Compatibles	Entrada
Soundhot R6	V4.2	100 (R30m)	A2DP/WRCP/HRP/SP	5V=1A

**Diagram**

- |   |   |
|---|---|
| <p><b>EN</b></p> <ol style="list-style-type: none"> <li>1. Power button</li> <li>2. Bluetooth / TWS Button</li> <li>3. Pause / Play</li> <li>4. Volume - / Previous track</li> <li>5. Volume + / Next track</li> <li>6. Bass up</li> </ol> <p><b>DE</b></p> <ol style="list-style-type: none"> <li>1. Power-Taste</li> <li>2. Bluetooth / TWS-Taste</li> <li>3. Pause / Wiedergabe</li> <li>4. Lautstärke - / Vorheriger Titel</li> <li>5. Lautstärke + / Nächster Titel</li> <li>6. Bass auf</li> </ol> <p><b>FR</b></p> <ol style="list-style-type: none"> <li>1. Bouton d'alimentation</li> <li>2. Bouton Bluetooth / TWS</li> <li>3. Pause / Lecture</li> <li>4. Volume moins / Piste précédente</li> <li>5. Volume plus / Piste suivante</li> <li>6. la basse</li> </ol> | <ol style="list-style-type: none"> <li>7. Power indicator light</li> <li>8. Bluetooth indicator light</li> <li>9. Microphone</li> <li>10. Micro-USB charging port</li> <li>11. Aux-in Port</li> </ol> <p><b>ES</b></p> <ol style="list-style-type: none"> <li>7. Luz indicadora de potencia</li> <li>8. Luz indicadora de Bluetooth</li> <li>9. Micrófono</li> <li>10. Puerto de carga micro-USB</li> <li>11. Interfaz de entrada de audio Aux-in</li> </ol> <p><b>IT</b></p> <ol style="list-style-type: none"> <li>7. Spia di alimentazione</li> <li>8. Indicatore luminoso Bluetooth</li> <li>9. Microfono</li> <li>10. Porta di ricarica micro-USB</li> <li>11. Porta Aux-in</li> </ol> |
|---|---|

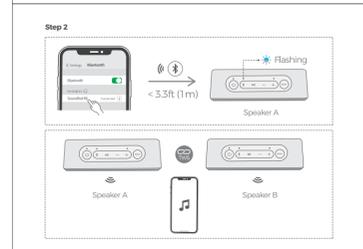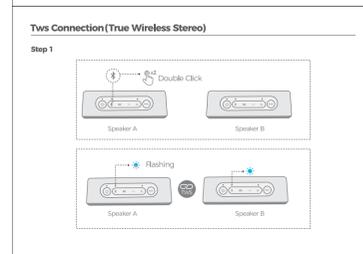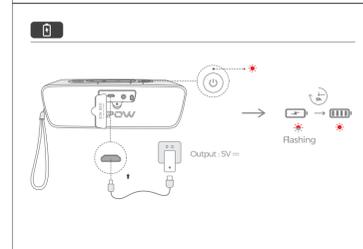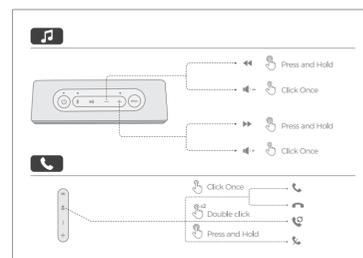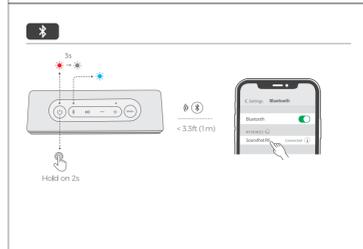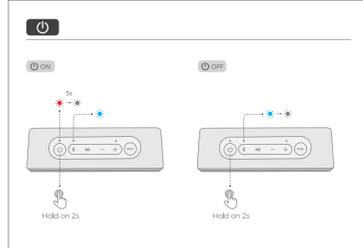

- EN**
- Step 1: Double click the **1** of Speaker A to connect two Soundhot R6 speakers and enter into true wireless stereo sound mode.
- Step 2: Connect Speaker A to your cellphone via Bluetooth. You are now able to connect 2 Soundhot R6 speakers via a single device for double volume.
- DE**
- Schritt 1: Doppelklicken Sie **1** an Lautsprecher A, um zwei Soundhot R6-Lautsprecher anzuschließen und in den echten kabellosen Stereo-Klangmodus zu wechseln.
- Schritt 2: Verbinden Sie Lautsprecher A über Bluetooth mit Ihrem Telefon. Dann können Sie jetzt 2 Soundhot R6-Lautsprecher über ein einzelnes Gerät für doppelte Lautstärke anschließen.
- FR**
- Étape 1: Double-cliquez sur **1** de l'un des haut-parleurs pour connecter les deux soundhot R6 afin de former un stéréo sans fil.
- Étape 2: Connectez le haut-parleur A à votre téléphone portable par Bluetooth, vous pouvez maintenant connecter deux haut-parleurs Soundhot R6 à l'aide d'un seul appareil pour un double volume.
- ES**
- Paso 1: Haga doble clic en **1** el altavoz A para conectar dos altavoces Soundhot R6 y entrar en el modo de sonido estereó inalámbrico verdadero.
- Paso 2: Conecte el altavoz A a su móvil a través de Bluetooth. Ahora puede conectar 2 altavoces Soundhot R6 a través de un solo dispositivo para doble volumen.
- IT**
- Passo 1: Fare doppio clic su **1** di Altoparlante A per collegare due altoparlanti Soundhot R6 ed entra alla modalità audio stereo wireless reale.
- Passo 2: Collegare l'altoparlante A col cellulare tramite Bluetooth. Ora gli due altoparlanti possono riprodurre l'audio del telefono contemporaneamente per il doppio volume.
- JP**
- 第一、二つのスピーカーの電源を入れます。一つのスピーカーの **1** ボタンを2回押しします。
- 第二、スマホと接続する一つのスピーカーはBluetooth接続します。この時、二つのスピーカーが自動的にペアリングして、TWSモードになります。



**FCC Statement**

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference; and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

(3) This device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.