



MODEL : BH344A

VIP X1

X1


Diagram illustrating the back of the device, showing the USB-A port and the SD card slot.

IT: 1. Estrarre 2 auricolari dalla custodia di ricarica, si accendono automaticamente (LED luce blu lampeggiante) e entrare nella modalità di associazione.

2. Nello stato di spegnimento e quando gli auricolari non si trovano nella custodia di ricarica, tenere premuto il pulsante MFB sugli auricolari destro e sinistro per 2 secondo per accendere gli auricolari con la luce LED blu lampeggiante.

IT:

 1. Mettere gli auricolari nella custodia di ricarica e si spengono automaticamente.
2. Se non mettere gli auricolari nella custodia, basta premere il pulsante MFB per 5s secondi sull'auricolare R/L per spegnerli.



FR: 1. Les écouteurs se jumellent automatiquement (avec les voyants rouge et bleu clignotant rapidement sur l'écouteur droit) lorsqu'ils sont retirés du boîtier de chargement et choisissez « Mpow M20 » sur votre appareil.

Remarque : Veuillez désactiver Bluetooth sur l'appareil précédent, et puis vous pouvez connecter les écouteurs avec l'autre appareil.

Play/Pause
Click the MFB button on the Right or Left earphone once.

3 Jugar / Pausa
Haga clic en el botón MFB en el auricular derecho o izquierdo una vez.

**INCOMING CALL/EINGEHENDER ANRUF/
APPEL/LLAMADA ENTRANTE/CHIAMATA
IN ARRIVO**

03 CIDI

03 SIRI
Haga clic en el botón MFB en los auriculares derechos

Premere il pulsante MFB sull'auricolare destro 3 volte

DE: Halten Sie im Ladezustand gleichzeitig beide MFB-Tasten für 10 Sekunden lang gedrückt.

ES: En el estado de carga, presione simultáneamente y mantenga presionados ambos botones MFB durante 10 segundos.

IT: Nello stato di carica, premere contemporaneamente i pulsanti MFB dei due auricolari per 10 secondi.

Output : DC 5V

DE: Legen Sie die Kopfhörer NICHT in die Ladebox, wenn die Kopfhörer nass sind.

FR: Ne pas mettre les écouteurs dans le boîtier de charge lorsque celles-ci sont humides.

IT: Non inserire gli auricolari nella custodia di ricarica quando gli auricolari sono

 (Waste Electrical& Electronic Equipment)

This Marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.
- (3) This device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

www.xmpow.com | support@xmpow.com
MPOW TECHNOLOGY CO., LTD
 Copyright © MPOW Inc. All rights reserved