



X1.1

BH387A

Bluetooth Headphone

For More Information Please Visit
www.xmpow.com

1 Device and Accessories




X1.1 Bluetooth Earphone

USB Charge Cable x1 User Manual x1

S x2 M x2 L x2

Ear Caps
(M Size-On Earphone)

2 Instructions

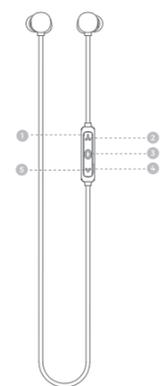

- ① LED
- ② Next Song / Volume Up
- ③ Power / Call
- ④ Micro USB Charging Port
- ⑤ Previous Song / Volume Down

3 Operating the Earphone

Using the "MFB" Buttons


Hold 1s ① Power ON

Hold 5s ④ Power OFF

Hold 8s ③ Pairing Mode

Pairing to a Bluetooth Device

1. Make sure the Bluetooth on your mobile device that you are trying to connect the earphones to is on.
2. When the earphones power on, it will enter into pairing mode automatically and the red and blue indicator will start flashing alternately.
3. In your device's Bluetooth list, search for "MPOW X1.1", click on it, and your device will pair and connect to the earphones.
4. The earphones will power off automatically after 5 minutes without being paired to a device.

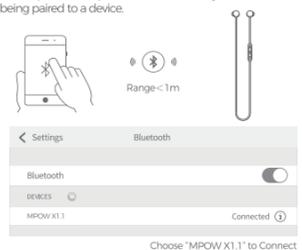

Play / Pause / Answer Call / Hang Up call

Press "MFB" Buttons

Playing Music

Short Press ... ② / ⑤ Play / Pause

Calling

Short Press ... ③ / ④ Answer / Hang up

Hold 1S ③ Reject an Incoming Call

Activating Siri/google

To activate the Siri/google, double-click the "MFB" button. You can demand the Siri/google to do actions what you want.

Last number redial

Press volume+" button and volume-" button at the same time for 1 second.

NOTE

If a call comes in while you are listening music or watch a video, the audio/video will be paused. And you will hear your phones ringtone through the earphone. Once the call is ended, your entertainment will resume.

Next Song / Volume Up / Previous Song / Volume Down

Press "MFB" Buttons

Long Press ② Next Song

Short Press ⑤ Volume Up

Press "MFB" Buttons

Long Press ④ Previous Song

Short Press ③ Volume Down

Charging the Earphone



Output: DC 5V

Charging

This earphone has a built-in, no-removable lithium battery. We highly recommend that you can fully charge the earphones before your firstly use.

1. To charge, use USB cable to charge charging case.
2. The red indicator is on all the time when charging and the red indicators will off when completely charged.
3. Charging 10 minutes, the earphone can work 2 hours.

NOTE

1. As with all rechargeable batteries, the charge/discharge cycles affect the battery's performance over time.
2. The earphones will turn off automatically while charging.

Clear pairing record

In the power on state, press the "MFB" button and "volume +" button for 5 seconds at the same time, and with a prompt tone "Du du disconnected", and blue indicators long bright for 2 seconds.

4 LED Behaviour

Work Status	Indicator Light Status	Voice Prompt
① Power on	Blue indicator flash 1 second	Power on
② Power off	Red indicator flash 1 second, and then go out. *15→*	Power off
③ Pairing	Red and blue indicator flash alternately *	Pairing
④ Connection successful		Connected
⑤ Connection fail		Disconnected
⑥ Low battery warning	Red indicator quickly flash 3 times *x3	Battery Low
⑦ Charging	The red indicator is on all the time when charging and is off when fully charged *	

5 Specifications

① Bluetooth Version	5.0
② Operation Range	33 feet
③ Talking Time	8.5 hours
④ Playing Time	10 hours
⑤ Standby Time	200 hours
⑥ Charging Time	1 hours
⑦ Charging Voltage	DC 5V

NOTE

Actual play and talk times will ultimately depend on the phone / mobile device you are using, the listening volume, as well the frequency of the use of the different buttons and toggling between functions.

6 Limited Warranty

MPOW Technology Co., LTD. warrants to you that the Product (excepting components provided in / with the Product) will be free from defects in workmanship and materials for a period of ONE year from the date of retail purchase by you (the "Warranty Period").

During the Warranty Period, the Product (excepting components), will be repaired or repaired at MPOW's option. Without charge for either parts or labor OR at MPOW's sole option, the price of the Product may be refunded. Subject to depreciation based on your purchase price for the Product pro-rated over the remaining balance of the Warranty Period.

This Limited Warranty does not cover defects which are a result of:

1. Damage caused by accident, unreasonable use or neglect (include the lack of reasonable and necessary maintenance);
2. Damage during shipment (claim must be presented to the carrier);
3. Damage to or deterioration of any accessory or decorative surface;
4. Damage resulting from failure to follow instructions contained in your owner's manual;
5. Damage resulting from the performance of repairs by someone other than an authorized MPOW service center;
6. Deterioration of component parts the nature of which is to become worn or depleted with use, such as batteries and earphone ear pads.

7 FCC Statement

Operation is subject to the following three conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.
3. This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However,

there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or a technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

Bluetooth

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MPOW TECHNOLOGY CO., LTD is under license. Other trademarks and trade names are those of their respective owners.

WARNING!

1. The product can ONLY be charged by 5V Adapter/USB Port, otherwise it will cause heat and fire.
2. Please supervise your children when using the equipment.
3. To avoid potential risk and protect the product, please do not charge it at a temperature lower than 50°F or higher than 113°F.

MPOW TECHNOLOGY CO., LTD
Copyright © MPOW Inc. All rights reserved.
www.xmpow.com | support@xmpow.com
Phone Number: 1-844-869-3583

FCC ID : ZAMH2-BH387A
This device complies with Part 15 of the FCC Rules.
MADE IN CHINA