 


1. Battery Replacement

- Release the lid screw and open the lid.
- Insert batteries (2xAA) according to the "+" and "-" signs. Green LED will illuminate for 2 seconds.
- Close the lid and tighten the screw.
- Touch [A] for 5 seconds. The reader will self calibrate, which will be followed by a series of beeps and blinking LEDs.

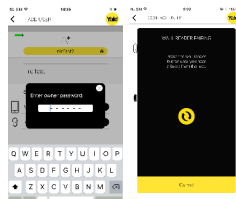

Type in owner password. The lock is waiting for the fingerprint to create the connection.

The lock is waiting for the fingerprint to create the connection.

 
Press #5 to wake-up the Fingerprint Touchpad.



2. Pairing Fingerprint Reader

This procedure is done via the smartphone application. See also: Pairing Touchpad Reader.

Open the smartphone application.

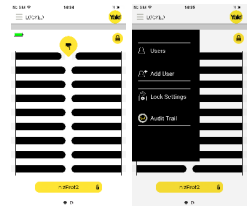

Press on the lock icon on the right side at the top.

Press on lock settings from the list.



Press on "Additional Control Units".

Press on "+ Add" button located under "Wall Reader".

3. Adjust Date & Time



Enter Date Press [OK]



Enter Time Press [OK]



Press [OK]

2 short beeps emitted. Press [OK]



Note: during the pairing process 2 green lock signs blinking in the door unit.

[OK] indication blinks once.

2 short beeps emitted. Fingerprint Reader added.



Pairing failed

1 long beep emitted. Red LED illuminated for 2 seconds.



In the app screen:

"Pairing process had failed. Please try again".



Note: At the end of the initial pairing process, a short notice will be displayed.



4. Add Master User

Setting a Master User requires both fingerprint and PIN code. It is possible to have up to two Master Users.

Note: At any stage you can press and hold the [*] key to move to standby mode.



Type in [Master name] [OK]



Set PIN code



Press [OK]



Type in [PIN Code], (4 to 10 digits). Press [OK]



Retype [PIN Code] Press [OK]

Matched Codes



Mismatched Codes



Set Finger

Blue LED illuminates



Press [OK] Green LED blinking



Place finger on scanner, wait for beep, then swipe finger down several times over fingerprint scanner until two confirmation beeps emitted



Green LED blinking



Place finger on scanner, wait for beep, then swipe finger down several times over fingerprint scanner until two confirmation beeps emitted.



5. Unlock the Door

Note: verify the app is closed.


Option 1:

Place finger on fingerprint scanner. Short beep emitted & white LED illuminates. Swipe finger over fingerprint scanner. Fingerprint authorized: Blue LED blinks and unlock command is sent. Fingerprint not authorized: Red LED illuminates. The device goes to standby.



Option 2:

 Touch the Fingerprint Touchpad. Screen prompts for user code. Enter your code [OK]



Note: In the event, the unlocking attempt fails, 1 long beep emitted. Red LED illuminated for 2 seconds.

6. Lock the Door

Touch the Fingerprint Touchpad. Press [1] [A]

7. Setting Menu

Touch screen



Press [*]



Enter [Master PIN Code] [OK] or swipe finger over fingerprint scanner



8. Add User


The unit support up to 20 users. For each user, two different fingerprints and one PIN code. Use different user name for each user.



Press [OK]



Press [OK]

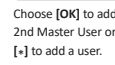

Choose [OK] to add 2nd Master User or [*] to add a user. Note: This screen will not appear if two Master Users are defined.



Type [USER NAME] [OK]



User name added



User name exists



 
Same user name. Choose different user name.



Press [OK] to set a finger or use [8 V] or [2 A] in order to set a code only.




Swipe 2nd finger several times over fingerprint scanner until two confirmation beeps sound.



Swipe 1st finger several times over fingerprint scanner until two confirmation beeps sound.



 Swipe 2nd finger several times over fingerprint scanner until two confirmation beeps sound.




9. Low-battery Indication

Fingerprint Reader Low-Battery Indication: Red LED illuminates for 1 second after 2 long wake-up beeps are emitted.



 10. Delete Fingerprint Reader

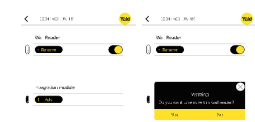

Press on the remove switch.

Press Yes.


11. Enable/Disable User




Press [*]



Enter [Master PIN Code] [OK] or swipe finger over fingerprint scanner

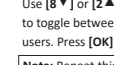

 Note: Repeat this procedure to disable a user.



Use [8 V] or [2 A] to toggle between users. Press [OK]

11. Delete User

1 **USER CODE**
23:49 03/01

Press [*]

2 **MASTER CODE**

23:49 03/01

Enter [Master PIN Code] ►► [OK] or swipe finger over fingerprint scanner

3 **SETTING**
USERS

1 **SETTING**
USERS

2 **USERS**
DELETE USER

Press [OK]

Use [8 ▼] or [2 ▲] to select: [DELETE USER] ►► [OK]

3 **DELETE USER**
JENNIFER
*-NO OK-YES

4 **SURE?**
*-NO OK-YES

Press [OK]

Use [8 ▼] or [2 ▲] to toggle between users ►► [OK]

1 **DELETED**
JENNIFER

2 **DELETED**
JENNIFER

Press [OK]

Use [8 ▼] or [2 ▲] to select: [DELETED USER] ►► [OK]

User deleted

DELETED
JENNIFER

Note: The first Master User can't be deleted without doing a factory reset.

12. Delete all Users

1 **USER CODE**
23:49 03/01

Press [*]

2 **MASTER CODE**

23:49 03/01

Enter [Master PIN Code] ►► [OK] or swipe finger over fingerprint scanner

3 **SETTING**
USERS

1 **SETTING**
USERS

2 **USERS**
DELETE ALL

Press [OK]

Use [8 ▼] or [2 ▲] to select: [DELETE ALL] ►► [OK]

3 **DELETE ALL?**
*-NO OK-YES

4 **SURE?**
*-NO OK-YES

Press [OK]

Use [8 ▼] or [2 ▲] to select: [DELETE ALL] ►► [OK]

All users deleted

SUCCESS
DELETED ALL

Two beeps emitted. Green LED illuminates.

1 **SETTING**
USERS

2 **USERS**
DELETE ALL

Press [OK]

Use [8 ▼] or [2 ▲] to select: [DELETE ALL] ►► [OK]

3 **DELETE ALL?**
*-NO OK-YES

4 **SURE?**
*-NO OK-YES

Press [OK]

Use [8 ▼] or [2 ▲] to select: [DELETE ALL] ►► [OK]

All users deleted

SUCCESS
DELETED ALL

Two beeps emitted. Green LED illuminates.

13. Add Time Schedule

1 **SETTING**
USERS

2 **USERS**
ADD SCHED

Press [OK]

Use [8 ▼] or [2 ▲] to select: [ADD SCHED] ►► [OK]

3 **ADD SCHED**
SARAH

4 **CHOOSE DAY**
Sun-Sat(1-7)

Press [OK]

Use [8 ▼] or [2 ▲] to select a user ►► [OK]

1 **ADD SCHED**
SARAH

2 **CHOOSE DAY**
Sun-Sat(1-7)

Press 1-7 to choose a day.
Example: 1 for Sunday

Press [OK]

3 **FRIDAY**
12:00-13:00
▼ DAY ▲

4 **FRIDAY**
11:00-13:00
~mm~HH~MM

Use [8 ▼] or [2 ▲] to change schedule day ►► [OK]

Use [8 ▼] or [2 ▲] to change the desired schedule to be edited. Pressing on [4 ◀] for 3 seconds shall delete the specific schedule.

5 **FRIDAY**
12:00-13:00
HH:mm~HH:mm

6 **FRIDAY**
12:15-17:00
HH:mm~mm

Use [8 ▼] or [2 ▲] to change START minutes setting. Use [6 ►] to move to the END hour.

Use [8 ▼] or [2 ▲] to change the END hour setting. Use [6 ►] to move to the END minutes.

7 **SUNDAY**
12:00-13:00
*-NO OK-Yes

8 **SUNDAY**
12:15-17:45
*-NO OK-Yes

Press [OK] for YES or [*] for NO

Two confirmation beeps emitted. Green LED illuminates.

9 **FRIDAY**
12:15-17:45
HH:mm~HH:mm

10 **FRIDAY**
12:15-17:45
*-NO OK-Yes

Press [OK] for YES or [*] for NO.

Notes:

- Define up to 7 different time schedules for the same user.
- Press [+] to go back on every menu.
- Press [+] for 3 seconds to exit setting menu.

14. Edit Time Schedule

1 **SETTING**
USERS

2 **USERS**
EDIT SCHED

Press [OK]

Use [8 ▼] or [2 ▲] to select: [EDIT SCHED] ►► [OK]

3 **EDIT SCHED**
SARAH

4 **SUNDAY**
12:00-13:00
*-Back OK-Yes

Press [OK]

Use [8 ▼] or [2 ▲] to toggle between users ►► [OK]

5 **FRIDAY**
12:00-13:00
▼ DAY ▲

6 **FRIDAY**
11:00-13:00
~mm~HH~MM

Use [8 ▼] or [2 ▲] to change schedule day ►► [OK]

Use [8 ▼] or [2 ▲] to choose the desired schedule to be edited. Pressing on [4 ◀] for 3 seconds shall delete the specific schedule.

7 **FRIDAY**
12:00-13:00
HH:mm~HH:mm

8 **FRIDAY**
12:15-17:00
HH:mm~mm

Use [8 ▼] or [2 ▲] to change START minutes setting. Use [6 ►] to move to the START minutes.

Use [8 ▼] or [2 ▲] to change the END hour setting. Use [6 ►] to move to the END minutes.

9 **FRIDAY**
12:15-17:45
HH:mm~HH:mm

10 **FRIDAY**
12:15-17:45
*-NO OK-Yes

Press [OK] for YES or [*] for NO.

11 **FRIDAY**
12:15-17:45
HH:mm~HH:mm

12 **FRIDAY**
12:15-17:45
*-NO OK-Yes

Press [OK] for YES or [*] for NO.

13 **FRIDAY**
12:15-17:45
HH:mm~HH:mm

14 **FRIDAY**
12:15-17:45
*-NO OK-Yes

Press [OK] for YES or [*] for NO.

15 **FRIDAY**
12:15-17:45
HH:mm~HH:mm

16 **FRIDAY**
12:15-17:45
*-NO OK-Yes

Press [OK] for YES or [*] for NO.

17 **FRIDAY**
12:15-17:45
HH:mm~HH:mm

18 **FRIDAY**
12:15-17:45
*-NO OK-Yes

Press [OK] for YES or [*] for NO.

15. Volume Control

1 **USER CODE**
23:49 03/01

Press [*]

2 **MASTER CODE**

23:49 03/01

Enter [Master PIN Code] ►► [OK] or swipe finger over fingerprint scanner

3 **SETTING**
USERS

1 **SETTING**
DEVICE

2 **DEVICE**
VOLUME

Press [OK]

Use [8 ▼] or [2 ▲] to select: [DEVICE] ►► [OK]

3 **VOLUME**
HIGH

4 **VOLUME**
LOW

Press [OK]

Use [8 ▼] or [2 ▲] to toggle between HIGH, MEDIUM or LOW.

1 **SUCCESS**

Two beeps emitted. Green LED illuminates.

1 **SETTING**
DEVICE

2 **DEVICE**
VOLUME

Press [OK]

Use [8 ▼] or [2 ▲] to select: [VOLUME] ►► [OK]

3 **VOLUME**
HIGH

4 **VOLUME**
LOW

Press [OK]

Use [8 ▼] or [2 ▲] to toggle between HIGH, MEDIUM or LOW.

1 **SUCCESS**

Two beeps emitted. Green LED illuminates.

1 **SETTING**
USERS

2 **USERS**
2x Security

Press [OK]

Use [8 ▼] or [2 ▲] to select: [2xSecurity] ►► [OK]

3 **ENABLE?**
*-NO OK-YES

4 **2x Security**
ON

Press [OK]

Two beeps emitted. Green LED illuminates.

1 **SETTING**
USERS

2 **USERS**
DELETE ALL?

Press [OK]

Use [8 ▼] or [2 ▲] to select: [DELETE ALL] ►► [OK]

1 **SETTING**
DEVICE

2 **DEVICE**
2x Security

Press [OK]

Use [8 ▼] or [2 ▲] to select: [2xSecurity] ►► [OK]

3 **ENABLE?**
*-NO OK-YES

4 **2x Security**
ON

Press [OK]

Two beeps emitted. Green LED illuminates.

1 **SETTING**
DEVICE

2 **DEVICE**
VOLUME

Press [OK]

Use [8 ▼] or [2 ▲] to select: [VOLUME] ►► [OK]

3 **VOLUME**
HIGH

4 **VOLUME**
LOW

Press [OK]

Use [8 ▼] or [2 ▲] to toggle between HIGH, MEDIUM or LOW.

1 **SUCCESS**

Two beeps emitted. Green LED illuminates.

1 **SETTING**
EDIT LOG

2 **EVENT #17**
07/06 10:32
FAIL 101

Press [OK]

Use [8 ▼] or [2 ▲] to select: [EDIT LOG] ►► [OK]

3 **DELETE LOG?**
*-NO OK-YES

4 **DELETE ALL?**
*-NO OK-YES

Press [OK]

Use [8 ▼] or [2 ▲] to select: [DELETE LOG] ►► [OK]

1 **SETTING**
USERS

2 **USERS**
DELETE USER

Press [OK]

Use [8 ▼] or [2 ▲] to select: [DELETE USER] ►► [OK]

3 **DELETE USER**
JENNIFER
*-NO OK-YES

4 **SURE?**
*-NO OK-YES

Press [OK]

Use [8 ▼] or [2 ▲] to toggle between users ►► [OK]

1 **DELETED**
JENNIFER

2 **DELETED**
JENNIFER

Press [OK]

Use [8 ▼] or [2 ▲] to select: [DELETE USER] ►► [OK]

3 **DELETE ALL?**
*-NO OK-YES

4 **SURE?**
*-NO OK-YES

Press [OK]

Use [8 ▼] or [2 ▲] to select: [DELETE ALL] ►► [OK]

1 **SETTING**
DELETE LOG

2 **DELETE ALL?**
*-NO OK-YES

Press [OK]

Use [8 ▼] or [2 ▲] to select: [DELETE LOG] ►► [OK]

3 **DELETED**
LOG

1 **SETTING**
EDIT LOG

2 **EVENT #17**
07/06 10:32
FAIL 101

Press [OK]

Use [8 ▼] or [2 ▲] to select: [EDIT LOG] ►► [OK]

3 **DELETE LOG?**
*-NO OK-YES

4 **DELETE ALL?**
*-NO OK-YES

Press [OK]

Use [8 ▼] or [2 ▲] to select: [DELETE LOG] ►► [OK]

1 **DELETED**
LOG

1 **SETTING**
EDIT LOG

2 **EVENT #17**
07/06 10:32
FAIL 101

Press [OK]

Use [8 ▼] or [2 ▲] to select: [EDIT LOG] ►► [OK]

3 **DELETE LOG?**
*-NO OK-YES

4 **DELETE ALL?**
*-NO OK-YES

Press [OK]

Use [8 ▼] or [2 ▲] to select: [DELETE LOG] ►► [OK]

1 **SETTING**
USERS

2 **USERS**
DELETE USER

Press [OK]

Use [8 ▼] or [2 ▲] to select: [DELETE USER] ►► [OK]

3 **DELETE USER**
JENNIFER
*-NO OK-YES

4 **SURE?**
*-NO OK-YES

Press [OK]

Use [8 ▼] or [2 ▲] to toggle between users ►► [OK]

1 **DELETED**
LOG

3 **DELETE ALL?**
*-NO OK-YES

4 **SURE?**
*-NO OK-YES

Press [OK]

Use [8 ▼] or [2 ▲] to select: [DELETE ALL] ►► [OK]

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Labeling Requirements (FCC 15.19)

This device complies with Part 15 of FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifications (FCC 15.21)

Changes or modifications to this equipment not expressly approved by Mul-T-Lock™ may void the user's authority to operate this equipment.

RF Exposure info (FCC 2.1093) for module radio

This equipment has been approved for mobile applications where the equipment should be used at distances greater than 20cm from the human body (with the exception of hands, wrists, feet and ankles). Operation at distances less than 20cm is strictly prohibited.

FOR MOBILE DEVICE USAGE (>20cm/low power) Radiation Exposure Statement:

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

19. Error Codes

Error	Code#
Failed to unlock	01
Failed to lock	02
Unauthorized fingerprint	03
Unauthorized Code	04
2xSecurity mismatch	05
Device failure during operation	06
Absent correct time/date in RTC	07
User out of schedules	08

For radio enclosure

Federal Communications Commission (FCC) Statement labeling requirement for small device operation (FCC15.19 (3))

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radio Frequency Interference (RFI) (FCC 15.105).

This equipment has been tested and found to comply with the limits for Class B digital devices pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications