



AUTO RACING 1:20 R/C

SAFETY FIRST!

Read these instructions carefully before using this product and keep it in a safe place for future reference.

We advise the use of this product whilst under the guidance of an adult.

This toy is for children of 5 years and above.

Do not use this toy on the road and keep away from animals and young children. Do not attempt to modify this product in any way or lift it from the ground whilst in movement.

Keep moving parts of this product away from hair, clothes and hands.

Handle it with care at all times and only when the motor is off.

INSTRUCTIONS OF USE

Operating multiple vehicles with the same frequency in close proximity will cause interference and poor performance.

For the best performance we advise use on flat, clean surfaces.

Hold the transmitter antenna up for best performance.

Ensure that the ON/OFF power switch of vehicle is in the ON position while playing.

FUNCTIONS

Full Functions: Forwards, Backwards, Backwards Right, Forward Right, Backwards Left, Forward Left and Stop.

BATTERIES REQUIRED:

No. 2 * 1.5V AA batteries for the transmitter (not included).

No. 3 * 1.5V AAA batteries for the vehicle (not included).

BATTERY INSTALLATION

A-TRANSMITTER

1. Open the battery door with a screwdriver and install No. 2 * 1.5V AA batteries as shown in the polarity diagram (+/-) inside the compartment
2. Replace the battery door and screw it is well tighten ensuring that it closes securely.
3. Insert the antenna in the small hole located on the top of the remote control unit. Screw it until it is well tighten by turning clockwise.

B-VEHICLE

1. Ensure that the ON/OFF power switch is in the OFF position;

2. Open the battery door with a screwdriver and take out the individual battery box from battery compartment.
3. Remove the battery lid from battery box according to the arrow symbol as shown on battery door.
4. Insert No. 3 * 1.5V AAA batteries as shown in the polarity diagram (+/-) inside the battery box.
5. Replace the battery lid to battery box ensuring that it closes securely.
6. Replace the battery door and screw it is well tighten ensuring that it closes securely.

CLEANING

Clean the vehicle with a damp cloth and dry. Do not submerge this item in water or in any other liquid. Do not expose this toy to direct sunlight or to any other heat source.

FCC Statements

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply within the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installation. This equipment generated, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harm to radio communications.

However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.
- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING!

Improper use of the batteries may lead to overheating, battery leakage, explosion and damage or injury. please read the following instructions carefully.

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix old and new batteries.
- Do not mix Alkaline, Standard(Carbon-Zinc), or Rechargeable(nickel-cadmium) batteries.
- Do not mix different makes or types batteries together.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity (+/-), As shown in the battery compartment.
- Exhausted batteries are to be removed from the product, And dispose of them in the appropriate container.
- The supply terminals are not to be short-circuited.
- Remove the batteries from the toy when not in use for an extended period of time.
- Do not dispose of this product and batteries in a fire. Allow them to leak or explode.
- Keep these instructions for future reference.

NOTE: The manufacturer is not responsible for the possible interferences from radio or Tv owing to non-permitted modifications on this appliance.

MADE IN CHINA**IMPORTED BY:**

Mac Due S.p.A. Società Uninominale

Via Raffaello Sanzio, 19 - 20058, Villasanta - MB - ITALY

Phone no. +39 039 2058.1 - Fax no.+39 039 2058.204

www.motoramaclub.com

Mac Due ITEM: KD0725A/KD0709A/KD0726A – Code 496141

Frequency: 27MHz & 49MHz



WARNING! Not suitable for children under 3 years of age because small parts can be swallowed.

Please retain these particulars for future reference. Right is reserved to effect changes in colours and technical details. Remove all packaging before giving toy to child.