

FRONT

BGS8829-MUG-R1
13-088290X-BW-1A02

Warranty Disclaimer (ENHANCED)

1 YEAR LIMITED WARRANTY

GameShark warrants this product to be free from defects in materials and workmanship for the period of 12 months from the date of purchase. This warranty is limited to the original purchaser of this product. This warranty does not apply to (a) normal wear and tear or abusive use; (b) industrial, professional or commercial use; (c) if the product has been tampered with or modified.

The GameShark two (2) year limited warranty is available to North American customers, including Canada, Mexico and the United States. Your sale and exclusive remedy is repair or replacement of your GameShark product. In no event shall GameShark liability exceed the original purchase price of the product. This warranty does not apply to (a) normal wear and tear or abusive use; (b) industrial, professional or commercial use; (c) if the product has been tampered with or modified.

To receive a warranty service you must:

- Call GameShark Technical Support at 1.800.659.2287 or 1.619.853.2815
- Obtain a Return Authorization Number from GameShark Technical Support
- Ship the product to GameShark for your expense for services
- Enclose a copy of the original sales receipt showing a purchase date
- Enclose a full return address with daytime and evening phone numbers

TECHNICAL SUPPORT

Online Support and User Guides: www.gameshark.com
E-mail: support@gameshark.com
Telephone: Available 9 A.M. to 4 P.M. Pacific Standard Time, Monday through Friday (excluding holidays) at 1.800.659.2287 (US only) or 1.619.853.2815 (outside US)

WARNING

- Lithium ion battery inside the thumbstick
- Do not expose to high temperature
- Do not remove and short-circuit the battery
- May explode if disposed of in fire
- Battery to be used with specified accessories only



CAUTIONS

- Use this unit only as intended
- To prevent fire or shock hazard, do not expose this unit to rain or moisture. Do not use within 20' of any water such as swimming pools, bathtubs, or sinks
- To avoid electrical shock, do not disassemble. Refer servicing to qualified personnel only
- Never push objects of any kind, other than authorized items, into the product as they may touch dangerous voltage points or short on parts that could result in fire or electrical shock
- Stop using this unit immediately if you begin to feel heat if you experience discomfort or pain in your hands, and/or arms while operating the unit. If the condition persists, consult a doctor
- Do not attempt to operate the unit in any way except with your hands. Do not bring the unit in contact with your head, face, or near the bones of any other part of your body
- Avoid prolonged use of 60 Hz unit. Take breaks every 15 minutes
- This product contains small parts that may cause choking if swallowed. Not intended for use with children under 3 years of age.

SEIZURES

Some individuals may have seizures or black outs triggered by the flashing lights on television or in video games, even if they have never before had a seizure. Anyone who has had a seizure, loss of awareness, or other symptoms linked to an epileptic condition should consult a doctor before playing a video game. Parents should be aware when their children play video games and observe them regularly. Stop playing and consult a doctor if you or your child have any of the following symptoms:

- Convulsion
- Loss of awareness
- Involuntary movements
- Eye or muscle twitching
- Altered vision
- Disorientation

When playing video games:

1. Sit or stand as far from the screen as possible.
2. Play video games on the smallest available screen.
3. Do not play if you are tired or need rest.
4. Play in a well-lit room.
5. Take 15 minute break every hour.

REPETITIVE MOTION INJURIES

Playing video games (and the repetitive motion involved) can make your muscles, joints or skin hurt. Playing video games in moderation can help avoid such damage. Alert: Take a 15 to 20 minute break every hour, even if you don't think you need it. If your hands, wrists or arms begin to hurt or sore or tired, stop playing and rest them for several hours before playing again. If pain and soreness continues, stop playing and consult a doctor.

General Setup:

- There are 2 (two) different usage configurations:
- 1. Use appropriate clamp for Sony SIXAXIS™ controller.
- 2. Attach the appropriate clamp to the back of the SIXAXIS™ - the clamp's hole should go over the "PC" button on the front of the SIXAXIS™.
- 3. After the clamp has been installed on the SIXAXIS™, attach the Wireless ThumbPad (referred to as the WTP) to the clamp by sliding the clamp's tabs into the slot on the reverse of the WTP until it

REMARK:

- ** for SLIM version only
- ** add "Warning" paragraph

Instructions:

1. Use appropriate clamp for GameShark wired or wireless GamePad™ controller.
2. Follow the same installation instructions above, attach the appropriate clamp to the GamePad™ on the clamp's hole in over the "Home" button on the front of the GamePad, then attach the WTP onto the clamp.
3. No clamp

To setup with the PS3:

1. Fully charge the WTP's internal battery via the included USB cable using the PS3 or PC--it will take approximately 3 hours. The WTP's LED will be solid green while charging and will go out after charging is complete.
- PLEASE NOTE: After turning your PS3 or PC off, the USB ports of the PS3 and some PCs will not provide power for charging. This is a feature of the PS3 and some PCs and unrelated to the WTP.
2. Insert the USB receiver into any available USB port on the PS3. The Red LED on the USB receiver will flash.
3. Connect any key on the WTP.
4. The Red LED on the WTP and USB receiver will both turn solid, indicating an RF signal has been established.

Low Battery Indicator:

When the WTP's rechargeable battery is low, its Red LED will flash slowly, informing you that the battery should be charged.

Sleep Mode:

If there is no activity on the WTP for 10 (ten) minutes, the following will occur:
1. The WTP will go to "Sleep" and its LED will go out.
2. The USB receiver's LED will flash rapidly.

To resume normal operation within 5 (five) seconds, depress any key on the WTP.

Keyboard Features:

To make use of symbols, hold down the SYMB key while depressing the key which contains the symbol you would like to type.

Example: To type "C", hold down the SYMB key and then depress the "C" (H) key.

F1-F12:

To make use of any of the F key functions, while holding down the FN key, depress the key which contains the appropriate F key function directly above it.

Space/Backspace:

These two functions share the same key--located between the SYMB and FN1 keys at the bottom of the WTP.

To perform the Space function, depress the Space/Backspace key.

To perform the Backspace function, while holding down the SYMB key, depress the Space/Backspace key.

Shift/Caps Lock:

These two functions share the same key--located between the M and Enter (labeled as an arrow containing a "0") angle and pointing left key at the bottom of the WTP.

To perform the Shift function, to make use of capital letters, depress the Shift/Caps key, then depress the key of the character you'd like to capitalize.

To perform the Caps Lock function, while holding down the SYMB key, depress the Shift/Caps key.

General Features:

Operational Distance: Up to 265 - 33 Feet (10-10 Meters)
Battery Life: approximately 80 hours
LED Indicator:

RED

- RF linking (signal search) - Rapid flashing
- RF bond (signal established) - Solid
- Low battery - Slow flashing
- Sleep Mode - Off

GREEN

- Charging - Solid
- Fully charged - Off

FCC Part 15 section 15.105

FCC NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no harmful interference to radio or television reception, which can be determined by turning the equipment off or on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

BACK

Declaration of Conformity:
Trade Name: Wireless Thumbpad
Model Number: B231
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


This Class B digital apparatus complies with Canadian ICES 003.
See appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Thank you for purchasing the GameShark Wireless Thumbpad for use with the PlayStation 3 video game system. Be sure to register your product online at www.gameshark.com and check out our full line of other quality video game accessories.

©2009 Mad Catz, Inc. 7480 Madison Valley Rd., Suite 101, San Diego, CA 92108, USA. GameShark, GamePad, ThumbPad and the GameShark logo are trademarks or registered trademarks of Mad Catz, Inc. or subsidiaries and affiliates. The shape and design of this product is a trade dress of Mad Catz. International and domestic patents pending. PLAYSTATION, SIXAXIS and PS3 are registered trademarks or trademarks of Sony Computer Entertainment Inc. (SCEI). This product is not sponsored, endorsed or approved by SCEI. Made in China. Printed in Hong Kong. All rights reserved. Features, appearance and specifications may be subject to change without notice. Please contact this information for future reference.

Questions? Visit our web site at www.gameshark.com or call 1.800.659.2287 (USA only) or 1.619.853.2815 or +41 (0)1900-336320 in Europe.

Product No. BGS8829
B0W-806820

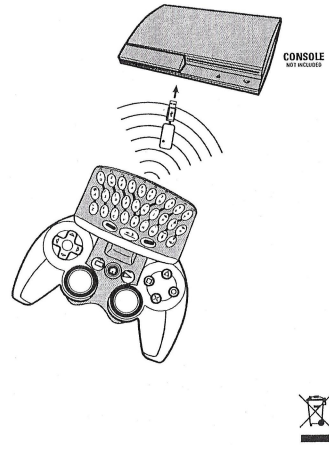

SIZE: 132 X 130MM

SIZE: 132 X 130MM