

CTRL™ R

:: MOBILE GAMEPAD :: MOBILE GAMEPAD :: MOBILE GAMEPAD ::



 BUILT FOR
NVIDIA® TEGRA®

GAMESMART™ 
multiplatform :: multi-plateforme

Android 3.0+

Smart Devices

Windows®

Mac OS X [10.7+]

via Bluetooth® technology/technologie*



FOR POUR FÜR

PACKAGE INCLUDES

ENGLISH

- A Game Controller
- B 2 x AAA Batteries
- C Travel Clip

DEUTSCH

- A Spiele-Controller
- B 2 Mikrobatterien
- C Clip für die Reise

FRANÇAIS

- A Manette de jeu
- B 2 piles AAA
- C Support de voyage

ITALIANO

- A Controller di gioco
- B 2 batterie minitilo
- C Clip da viaggio

ESPAÑOL

- A Mando de juego
- B 2 baterías AAA
- C Clip para viajes

SVENSK

 
 
- A Spelkontroll
- B 2 st. AAA-batterier
- C Resefäste

DANSK

- A Spil-controller
- B 2 x AAA-batterier
- C Rejseklip

PORTUGUÊS

- A Comando de Jogo
- B 2 pilhas AAA
- C Clip de viagem

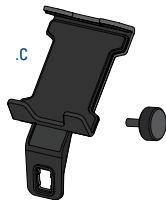


1



- EN Turn Bluetooth on and search for devices
 DE Aktivieren Sie Bluetooth und suchen Sie nach Geräten
 FR Activez la fonction Bluetooth et recherchez les appareils
 IT Attivare Bluetooth e cercare dispositivi
 ES Enciende el Bluetooth y busca dispositivos
 DA Aktivér Bluetooth, og søg efter enheder
 SV Aktivera Bluetooth och sök efter enheter
 PT Ligue o Bluetooth para procurar dispositivos

 2

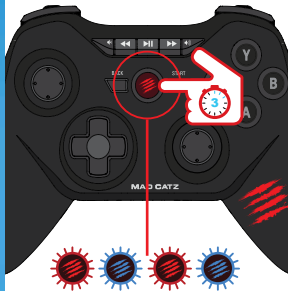

- EN Press and hold for 3 seconds
 DE Halten Sie die Taste für 3 Sekunden gedrückt
 FR Appuyez pendant 3 secondes
 IT Premere e tenere premuto per 3 secondi
 ES Mantén presionado durante 3 segundos
 DA Tryk og hold nede i 3 sekunder
 SV Tryck och håll in i 3 sekunder
 PT Prima e mantenha premido durante 3 segundos

3



- EN Select the gamepad from the list
 DE Wählen Sie das Gamepad aus der Liste aus
 FR Sélectionnez la manette dans la liste
 IT Selezionare il gamepad dall'elenco
 ES Selecciona el dispositivo de control en la lista
 DA Vælg gamepad fra listen
 SV Välj gamepad från listan
 PT Seleccione o comando de consola na lista

CONTENTS

ENGLISH

Insert Batteries	5
Mad Catz App	5
Product Information	6
Setup Instructions	7-10
LED Indicators	8
Firmware Updates	11

DEUTSCH

Einsetzen der Batterien	5
Mad Catz-App	5
Produktinformationen	12
Installationsanleitung	13-16
LED-Anzeigen	14
Firmware-Aktualisierung	17

FRANÇAIS

Piles à insérer	5
Application Mad Catz	5
Information produit	18
Instructions de configuration	19-22
Témoins lumineux (LED)	20
Mises à jour du firmware	23

ITALIANO

Inserire le batterie	5
App Mad Catz	5
Informazioni sul prodotto	24
Istruzioni di configurazione	25-28
Spie LED di indicazione	26
Aggiornamenti firmware	29

ESPAÑOL

Colocar las baterías	5
App Mad Catz	5
Información del producto	30
Instrucciones de configuración	31-34
Indicadores LED	32
Actualizaciones de firmware	35

SVENSK

Sæt batterierne i	5
Mad Catz-app	5
Produktinformation	36
Opsætningsvejledning	37-40
Lysdioder	38
Opdateringar av inbyggd programvara	41


DANSK

Sätt i batterierna	5
Mad Catz-app	5
Produktinformation	42
Installationsanvisningar	43-46
LED-indikatorer	44
Firmwareopdateringer	47

PORTUGUÊS

Inserir Pilhas	5
Aplicação Mad Catz	5
Informações do produto	48
Instruções de configuração	49-52
Indicadores LED	50
Actualizações de firmware	53

 INSERT BATTERIES

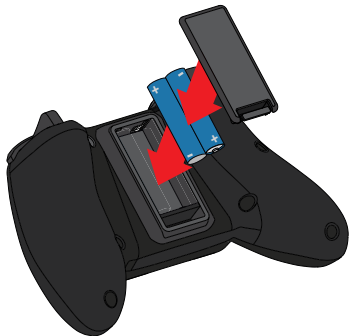

- EN Insert 2x AAA batteries
- DE Setzen Sie die beiden Mikrobatterien ein
- FR Insérez les deux piles AAA
- IT Inserire 2 batterie minitilo
- ES Coloque las 2 baterías AAA
- DA Sæt 2 x AAA-batterier i
- SV Sätt i 2 st. AAA-batterier
- PT Inserir 2 pilhas AAA

MAD CATZ A.P.P.



- EN Download the Mad Catz App
- DE Laden Sie die MadCatz-App
- FR Téléchargez l'application Mad Catz
- IT Scarica l'app Mad Catz
- ES Descargue la aplicación Mad Catz
- DA Download Mad Catz-app
- SV Hämta Mad Catz-appen
- PT Transferir a aplicação Mad Catz

PRODUCT INFORMATION

SHOULDER BUTTONS

MEDIA

ANALOG STICK

BACK

D-PAD

HOME

ACTION

START

ANALOG STICK

TRIGGERS

2 X AAA BATTERIES

MICRO USB

GAMESMART
MODE

MOUSE
MODE

 
PC
MODE



USB **NOT** for charging!
For firmware updates only

SETUP INSTRUCTIONS

CLIP SETUP

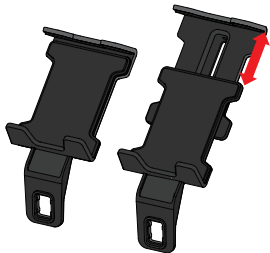

Minimum Device Width = 58.6 mm
Maximum Device Width = 80.5 mm

ATTACHING THE TRAVEL CLIP

1. Unscrew bolt and remove from the pad
2. Place clamp into position
3. Screw bolt into pad to secure clamp

