



# Mad Catz OEM Gamepad

## Setup Instructions

### Version 1.0

## 1. Installation

2 x AAA batteries are required to power the product. 1 battery is inserted into the battery compartment in both left and right handles.

### Setup with Dongle

1. Ensure batteries are inserted.
2. Insert USB dongle into an available USB port.
3. Press and hold the home button for 3 seconds to power the pad on.
4. Wait for the pad to automatically connect.
5. When the Home LED is lit constantly blue, the pad is ready to use.

**Setup without Dongle** – *This is only compatible with Windows 8 and Android 4.4 devices that support Bluetooth Smart devices.*

1. Ensure batteries are inserted.
2. Make sure the USB dongle is not plugged in.
3. Press and hold the home button for 3 seconds to power the pad on.
4. Press and hold the Start button for 5 seconds to enter pairing mode.
5. Search for devices on the host, when the gamepad appears, tap the entry to pair and connect.

### Media Functions

To access the media control press and hold the media shift button (above the home button) and press the corresponding labelled button on the pad.

Release the media shift button to continue using the pad normally.

### LED Indicators

Blinking **Red** to **Blue**: Discoverable

Solid **Blue**: Connected

Solid **Red**: Low Battery

**Purple** Flash: Pairing info is removed

### Important Button Presses

Power product on/off: Press and hold the home button for 3 seconds

Clear pairing information and enter pairing mode: Press and hold Start button for 5 seconds.

### Game Pad Modes

The gamepad has three modes. Each mode is slightly difference in terms of functionality. If you are unsure about which to use, here are our suggestions:

**GameSmart Mode:** Select this mode for Android gaming on M.O.J.O., smartphones and tablets.

**Mouse Mode:** This mode enables the left stick to control the mouse cursor. The face and bumper buttons will control mouse clicks. Select this mode on either Android or PC to navigate menus, enter text, browse apps or play touch input games.

**PC Mode:** Select this mode PC gaming on Windows. In this mode, the pad can also be programmed with profiles to enable compatibility with games that do not support pads.

**FCC Statement**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**IC Statement**

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.


Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

#### **10. MOUSE MODE CONTROLS // COMMANDES DU MODE SOURIS**

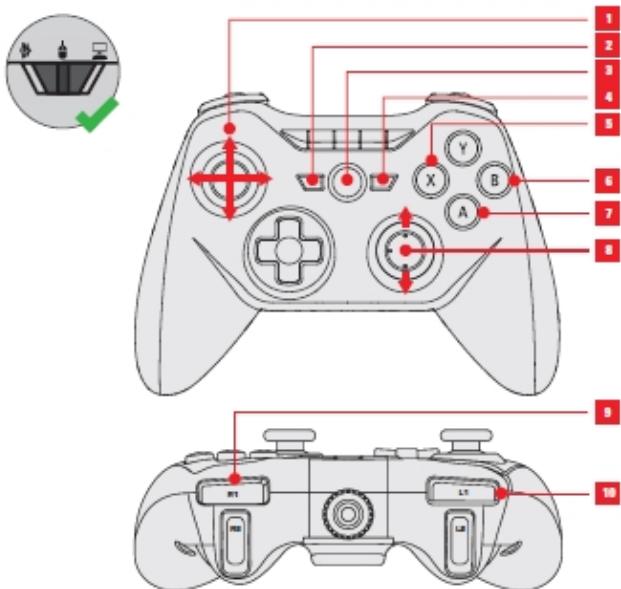


<b>1</b>	<b>EN</b> Mouse cursor <b>DE</b> Mauszeiger <b>FR</b> Curseur de la souris <b>IT</b> Cursoro del mouse <b>ES</b> Mover el cursor <b>DA</b> Musmarkør <b>SV</b> Musmarkör <b>PT</b> Cursor do rato	<b>6</b>	<b>EN</b> Middle click <b>DE</b> Mitte rechtsklick <b>FR</b> Clic central <b>IT</b> Clic con il pulsante centrale del mouse <b>ES</b> Hacer clic con el botón central <b>DA</b> Klikk med den midterste musknappen <b>SV</b> Mellamklik <b>PT</b> Clique com o botão do meio	<b>9</b>	<b>EN</b> Right click <b>DE</b> Rechte maustaste <b>FR</b> Clic droit <b>IT</b> Clic con il pulsante destra del mouse <b>ES</b> Hacer clic con el botón derecho del ratón <b>DA</b> Højreklikka <b>SV</b> Høyreklikk <b>PT</b> Clique com o botão direito do rato
<b>2</b>	<b>EN</b> Back <b>DE</b> Zurück <b>FR</b> Précédant <b>IT</b> Indietro <b>ES</b> Atrás <b>DA</b> Tilbage <b>SV</b> Tillbaka <b>PT</b> Retroceder	<b>6</b>	<b>EN</b> Right click <b>DE</b> Rechte maustaste <b>FR</b> Clic droit <b>IT</b> Clic con il pulsante destro del mouse <b>ES</b> Hacer clic con el botón derecho del ratón <b>DA</b> Højreklicka <b>SV</b> Høyreklikk <b>PT</b> Clique com o botão esquerdo do rato	<b>10</b>	<b>EN</b> Left click <b>DE</b> Linke maustaste <b>FR</b> Clic gauche <b>IT</b> Clic con il pulsante sinistro del mouse <b>ES</b> Hacer clic con el botón izquierdo del ratón <b>DA</b> Vänsterklicka <b>SV</b> Venstreklirk <b>PT</b> Clique com o botão esquerdo do rato
<b>3</b>	<b>EN</b> Home <b>DE</b> Zuhause <b>FR</b> Accueil <b>IT</b> Homo <b>ES</b> Incio <b>DA</b> Hem <b>SV</b> Hemsida <b>PT</b> Home	<b>7</b>	<b>EN</b> Left click <b>DE</b> Linke maustaste <b>FR</b> Clic gauche <b>IT</b> Clic con il pulsante sinistro del mouse <b>ES</b> Hacer clic con el botón izquierdo del ratón <b>DA</b> Vänsterklicka <b>SV</b> Venstreklirk <b>PT</b> Clique com o botão esquerdo do rato		
<b>4</b>	<b>EN</b> Start <b>DE</b> Start <b>FR</b> Démarrer <b>IT</b> Avvio <b>ES</b> Iniciar <b>DA</b> Start <b>SV</b> Start <b>PT</b> Iniciar	<b>8</b>	<b>EN</b> Scroll <b>DE</b> Scrollen <b>FR</b> Défilement <b>IT</b> Scorrimento <b>ES</b> Desplazarse <b>DA</b> Rulla <b>SV</b> Rull <b>PT</b> Deslocar		

#### **11. GAMESMART MODE CONTROLS // COMMANDES DU MODE GAMESMART**

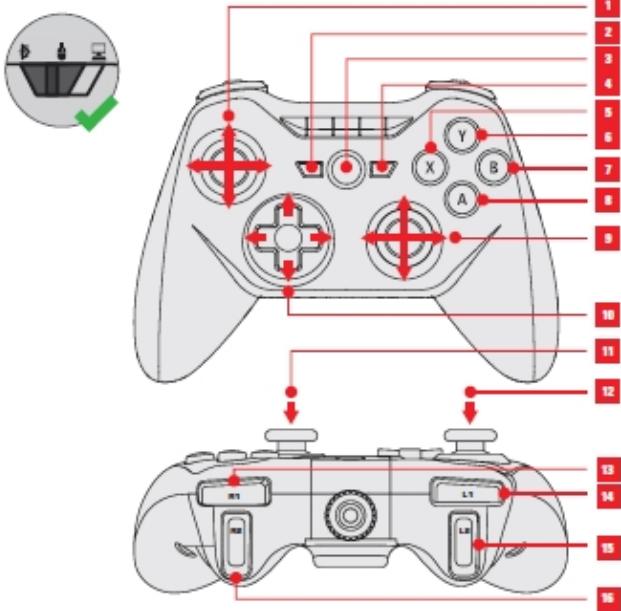

<b>1</b>	EN X & Y Axes DE X & Y-Achsen FR Axes X et Y IT Assi X e Y ES Ejes X e Y DA X- og Y-akser SV X & Y-axar PT Eixos X e Y	<b>5</b>	EN X Button DE X-Taste FR Bouton X IT Pulsante X ES Botón X DA X-knap SV X-knapp PT Botão X	<b>9</b>	EN Z & RT Axes DE Z & RT-Achsen FR Axes Z et RT IT Assi Z e RT ES Ejes Z y RT DA Z- og RT-akser SV Z- och RT-axar PT Eixos Z e RT	<b>13</b>	EN RI DE RI FR RI IT RI ES RI DA RI SV RI PT RI
<b>2</b>	EN Back DE Zurück FR Précédent IT Indietro ES Atrás DA Tilbage SV Tillbaka PT Retrocoder	<b>6</b>	EN Y Button DE Y-Taste FR Bouton Y IT Pulsante Y ES Botón Y DA Y-knap SV Y-knapp PT Botão Y	<b>10</b>	EN D-PAD DE D-PAD FR D-PAD IT D-PAD ES D-PAD DA D-PAD SV D-PAD PT D-PAD	<b>14</b>	EN LI DE LI FR LI IT LI ES LI DA LI SV LI PT LI
<b>3</b>	EN Home DE Zuhause FR Accueil IT Home ES Incio DA Hjem SV Home PT Home	<b>7</b>	EN B Button DE B-Taste FR Bouton B IT Pulsante B ES Botón B DA B-knap SV B-knapp PT Botão B	<b>11</b>	EN R3 DE R3 FR R3 IT R3 ES R3 DA R3 SV R3 PT R3	<b>15</b>	EN L2 DE L2 FR L2 IT L2 ES L2 DA L2 SV L2 PT L2
<b>4</b>	EN Start DE Start FR Démarrer IT Avvio ES Iniciar DA Start SV Start PT Iniciar	<b>8</b>	EN A Button DE A-Taste FR Bouton A IT Pulsante A ES Botón A DA A-knap SV A-knapp PT Botão A	<b>12</b>	EN L3 DE L3 FR L3 IT L3 ES L3 DA L3 SV L3 PT L3	<b>16</b>	EN R2 DE R2 FR R2 IT R2 ES R2 DA R2 SV R2 PT R2

12. PC MODE CONTROLS // COMMANDES DU MODE PC

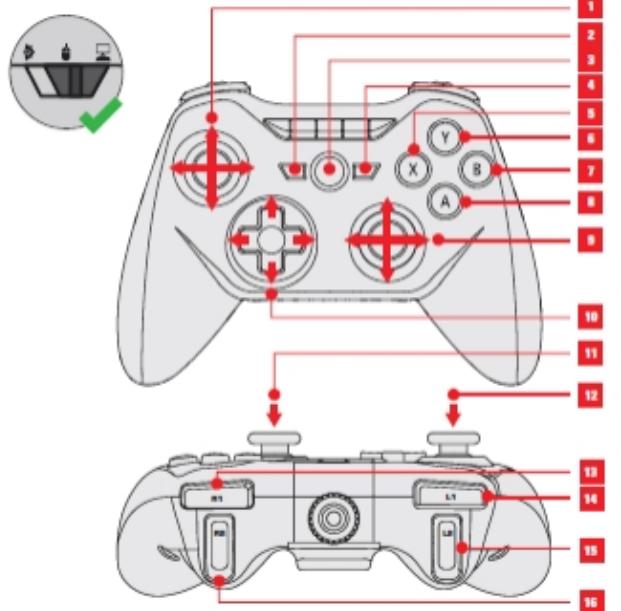

<b>1</b>	EN X & Y Axis DE X- und Y-Achsen FR Axe X et Y IT Assi X e Y ES Ejes X e Y DA X- og Y-akser SV X- och Y-axlar PT Eixos X e Y	<b>2</b>	EN Button 1 DE Taste 1 FR Bouton 1 IT Pulsante 1 ES Botón 1 DA Knap 1 SV Knapp 1 PT Botão 1	<b>3</b>	EN Z & R Axis DE Z & R-Achsen FR Axes Z et Rz IT Assi Z e Rz ES Ejes Z y Rz DA Z- og Rz-akser SV Z & Rz-axlar PT Eixos Z e Rz	<b>4</b>	EN Button 5 DE Taste 5 FR Bouton 5 IT Pulsante 5 ES Botón 5 DA Knap 5 SV Knapp 5 PT Botão 5
<b>5</b>	EN Button 9 DE Taste 9 FR Bouton 9 IT Pulsante 9 ES Botón 9 DA Knap 9 SV Knapp 9 PT Botão 9	<b>6</b>	EN Button 4 DE Taste 4 FR Bouton 4 IT Pulsante 4 ES Botón 4 DA Knap 4 SV Knapp 4 PT Botão 4	<b>7</b>	EN POV DE POV FR POV IT POV ES POV DA POV SV POV PT POV	<b>8</b>	EN Button 13 DE Taste 13 FR Bouton 13 IT Pulsante 13 ES Botón 13 DA Knap 13 SV Knapp 13 PT Botão 13
<b>9</b>	EN Button 3 DE Taste 3 FR Bouton 3 IT Pulsante 3 ES Botón 3 DA Knap 3 SV Knapp 3 PT Botão 3	<b>10</b>	EN Button 12 DE Taste 12 FR Bouton 12 IT Pulsante 12 ES Botón 12 DA Knap 12 SV Knapp 12 PT Botão 12	<b>11</b>	EN Button 7 DE Taste 7 FR Bouton 7 IT Pulsante 7 ES Botón 7 DA Knap 7 SV Knapp 7 PT Botão 7	<b>12</b>	EN Button 11 DE Taste 11 FR Bouton 11 IT Pulsante 11 ES Botón 11 DA Knap 11 SV Knapp 11 PT Botão 11
<b>13</b>	EN Button 2 DE Taste 2 FR Bouton 2 IT Pulsante 2 ES Botón 2 DA Knap 2 SV Knapp 2 PT Botão 2	<b>14</b>	EN Button 1 DE Taste 1 FR Bouton 1 IT Pulsante 1 ES Botón 1 DA Knap 1 SV Knapp 1 PT Botão 1	<b>15</b>	EN Button 10 DE Taste 10 FR Bouton 10 IT Pulsante 10 ES Botón 10 DA Knap 10 SV Knapp 10 PT Botão 10	<b>16</b>	EN Button 8 DE Taste 8 FR Bouton 8 IT Pulsante 8 ES Botón 8 DA Knap 8 SV Knapp 8 PT Botão 8