



TM

MAD CATZ

F.R.E.Q.™ **9**

:: WIRELESS SURROUND HEADSET :: WIRELESS SURROUND-HEADSET :: CASQUE SANS FIL SURROUND ::

QUICK START GUIDE
GUIDE DE DEMARRAGE RAPIDE

1

EN Headset
 DE Headset
 FR Casque audio
 IT Cuffie
 ES Auriculares
 DA Headset
 SV Hörlurar
 PT Auricular
 RU



2

EN Transmitter Box
 DE Transmitter Box
 FR Transmitter Box
 IT Transmitter Box
 ES Transmitter Box
 DA Transmitter Box
 SV Transmitter Box
 PT Transmitter Box
 RU



3

EN Optical Cable
 DE Optical Cable
 FR Optical Cable
 IT Optical Cable
 ES Optical Cable
 DA Optical Cable
 SV Optical Cable
 PT Optical Cable
 RU



5

EN Micro USB Charge Cable
 DE Micro USB Charge Cable
 FR Micro USB Charge Cable
 IT Micro USB Charge Cable
 ES Micro USB Charge Cable
 DA Micro USB Charge Cable
 SV Micro USB Charge Cable
 PT Micro USB Charge Cable
 RU



7

EN Xbox 360 3.5mm to 2.5mm Chat Lead
 DE Xbox 360 3.5mm to 2.5mm Chat Lead
 FR Xbox 360 3.5mm to 2.5mm Chat Lead
 IT Xbox 360 3.5mm to 2.5mm Chat Lead
 ES Xbox 360 3.5mm to 2.5mm Chat Lead
 DA Xbox 360 3.5mm to 2.5mm Chat Lead
 SV Xbox 360 3.5mm to 2.5mm Chat Lead
 PT Xbox 360 3.5mm to 2.5mm Chat Lead
 RU



6

EN 3.5mm to Dual Phono Lead
 DE 3.5mm to Dual Phono Lead
 FR 3.5mm to Dual Phono Lead
 IT 3.5mm to Dual Phono Lead
 ES 3.5mm to Dual Phono Lead
 DA 3.5mm to Dual Phono Lead
 SV 3.5mm to Dual Phono Lead
 PT 3.5mm to Dual Phono Lead
 RU



8

EN Xbox 360 Digital Audio Adapter
 DE Xbox 360 Digital Audio Adapter
 FR Xbox 360 Digital Audio Adapter
 IT Xbox 360 Digital Audio Adapter
 ES Xbox 360 Digital Audio Adapter
 DA Xbox 360 Digital Audio Adapter
 SV Xbox 360 Digital Audio Adapter
 PT Xbox 360 Digital Audio Adapter
 RU



9

EN 3.5mm to 3.5mm Audio Lead
 DE 3.5mm to 3.5mm Audio Lead
 FR 3.5mm to 3.5mm Audio Lead
 IT 3.5mm to 3.5mm Audio Lead
 ES 3.5mm to 3.5mm Audio Lead
 DA 3.5mm to 3.5mm Audio Lead
 SV 3.5mm to 3.5mm Audio Lead
 PT 3.5mm to 3.5mm Audio Lead
 RU



HEADSET INFORMATION :: HEADSET INFORMATION :: HEADSET INFORMATION

Multi-Function Button :: Multi-Function Button :: Multi-Function Button

EN 1. Press and hold for 3 seconds to power the headset ON/OFF
2. Single press to Play/Pause media
3. Single press to answer/end call
4. Press for 1 second to cancel an incoming call

DE 1. Press and hold for 3 seconds to power the headset ON/OFF
2. Single press to Play/Pause media
3. Single press to answer/end call
4. Press for 1 second to cancel an incoming call

FR 1. Press and hold for 3 seconds to power the headset ON/OFF
2. Single press to Play/Pause media
3. Single press to answer/end call
4. Press for 1 second to cancel an incoming call

IT 1. Press and hold for 3 seconds to power the headset ON/OFF
2. Single press to Play/Pause media
3. Single press to answer/end call
4. Press for 1 second to cancel an incoming call

ES 1. Press and hold for 3 seconds to power the headset ON/OFF
2. Single press to Play/Pause media
3. Single press to answer/end call
4. Press for 1 second to cancel an incoming call

DA 1. Press and hold for 3 seconds to power the headset ON/OFF
2. Single press to Play/Pause media
3. Single press to answer/end call
4. Press for 1 second to cancel an incoming call

SV 1. Press and hold for 3 seconds to power the headset ON/OFF
2. Single press to Play/Pause media
3. Single press to answer/end call
4. Press for 1 second to cancel an incoming call

PT 1. Press and hold for 3 seconds to power the headset ON/OFF
2. Single press to Play/Pause media
3. Single press to answer/end call
4. Press for 1 second to cancel an incoming call

RU 1. Press and hold for 3 seconds to power the headset ON/OFF
2. Single press to Play/Pause media
3. Single press to answer/end call
4. Press for 1 second to cancel an incoming call

AM3D Surround Sound / EQ :: AM3D Surround Sound / EQ :: AM3D Surround Sound / EQ

EN 1. Single press to cycle EQ mode (flat, music, gaming, movies, voice)
2. Press and hold for 2 seconds to activate / deactivate

DE 1. Single press to cycle EQ mode (flat, music, gaming, movies, voice)
2. Press and hold for 2 seconds to activate / deactivate

FR 1. Single press to cycle EQ mode (flat, music, gaming, movies, voice)
2. Press and hold for 2 seconds to activate / deactivate

IT 1. Single press to cycle EQ mode (flat, music, gaming, movies, voice)
2. Press and hold for 2 seconds to activate / deactivate

ES 1. Single press to cycle EQ mode (flat, music, gaming, movies, voice)
2. Press and hold for 2 seconds to activate / deactivate

DA 1. Single press to cycle EQ mode (flat, music, gaming, movies, voice)
2. Press and hold for 2 seconds to activate / deactivate

SV 1. Single press to cycle EQ mode (flat, music, gaming, movies, voice)
2. Press and hold for 2 seconds to activate / deactivate

PT 1. Single press to cycle EQ mode (flat, music, gaming, movies, voice)
2. Press and hold for 2 seconds to activate / deactivate

RU 1. Single press to cycle EQ mode (flat, music, gaming, movies, voice)
2. Press and hold for 2 seconds to activate / deactivate

Controls :: Controls :: Controls



a EN EQ / Surround Sound
DE EQ / Surround Sound
FR EQ / Surround Sound
IT EQ / Surround Sound
ES EQ / Surround Sound
DA EQ / Surround Sound
SV EQ / Surround Sound
PT EQ / Surround Sound
RU EQ / Surround Sound


b EN Mic Mute
DE Mic Mute
FR Mic Mute
IT Mic Mute
ES Mic Mute
DA Mic Mute
SV Mic Mute
PT Mic Mute
RU Mic Mute

c EN Microphone
DE Microphone
FR Microphone
IT Microphone
ES Microphone
DA Microphone
SV Microphone
PT Microphone
RU Microphone

d EN Previous Track
DE Previous Track
FR Previous Track
IT Previous Track
ES Previous Track
DA Previous Track
SV Previous Track
PT Previous Track
RU Previous Track

e EN Next Track
DE Next Track
FR Next Track
IT Next Track
ES Next Track
DA Next Track
SV Next Track
PT Next Track
RU Next Track

Controls & Connectors :: Controls & Connectors :: Controls & Connectors

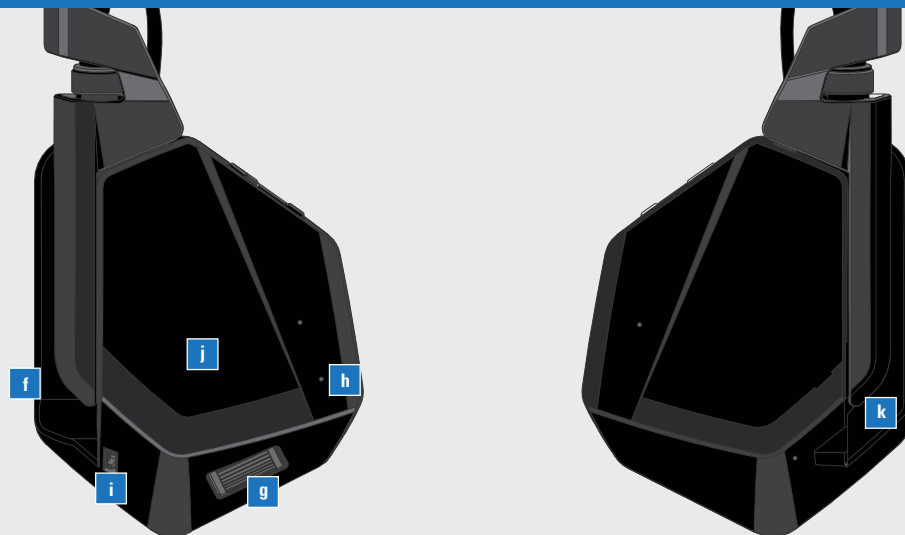

f EN 3.5mm Jack
DE 3.5mm Jack
FR 3.5mm Jack
IT 3.5mm Jack
ES 3.5mm Jack
DA 3.5mm Jack
SV 3.5mm Jack
PT 3.5mm Jack
RU 3.5mm Jack

g EN Volume Wheel
DE Volume Wheel
FR Volume Wheel
IT Volume Wheel
ES Volume Wheel
DA Volume Wheel
SV Volume Wheel
PT Volume Wheel
RU Volume Wheel

h EN Headset LED
DE Headset LED
FR Headset LED
IT Headset LED
ES Headset LED
DA Headset LED
SV Headset LED
PT Headset LED
RU Headset LED

i EN Active Noise Cancelling
DE Active Noise Cancelling
FR Active Noise Cancelling
IT Active Noise Cancelling
ES Active Noise Cancelling
DA Active Noise Cancelling
SV Active Noise Cancelling
PT Active Noise Cancelling
RU Active Noise Cancelling

j EN Multi Function
DE Multi Function
FR Multi Function
IT Multi Function
ES Multi Function
DA Multi Function
SV Multi Function
PT Multi Function
RU Multi Function

k EN Micro USB Charge Socket
DE Micro USB Charge Socket
FR Micro USB Charge Socket
IT Micro USB Charge Socket
ES Micro USB Charge Socket
DA Micro USB Charge Socket
SV Micro USB Charge Socket
PT Micro USB Charge Socket
RU Micro USB Charge Socket

HEADSET INFORMATION

k Headset Status LED / Headset Status LED / Headset Status LED



- EN Power ON > Blue LED blinks 3 times in 1 second
- DE Power ON > Blue LED blinks 3 times in 1 second
- FR Power ON > Blue LED blinks 3 times in 1 second
- IT Power ON > Blue LED blinks 3 times in 1 second
- ES Power ON > Blue LED blinks 3 times in 1 second
- DA Power ON > Blue LED blinks 3 times in 1 second
- SV Power ON > Blue LED blinks 3 times in 1 second
- PT Power ON > Blue LED blinks 3 times in 1 second
- RU Power ON > Blue LED blinks 3 times in 1 second



- EN Power OFF > Red LED blinks 3 times in 1 second
- DE Power OFF > Red LED blinks 3 times in 1 second
- FR Power OFF > Red LED blinks 3 times in 1 second
- IT Power OFF > Red LED blinks 3 times in 1 second
- ES Power OFF > Red LED blinks 3 times in 1 second
- DA Power OFF > Red LED blinks 3 times in 1 second
- SV Power OFF > Red LED blinks 3 times in 1 second
- PT Power OFF > Red LED blinks 3 times in 1 second
- RU Power OFF > Red LED blinks 3 times in 1 second



- EN Low Battery (5%) > The red LED will pulse once every 6 seconds
- DE Low Battery (5%) > The red LED will pulse once every 6 seconds
- FR Low Battery (5%) > The red LED will pulse once every 6 seconds
- IT Low Battery (5%) > The red LED will pulse once every 6 seconds
- ES Low Battery (5%) > The red LED will pulse once every 6 seconds
- DA Low Battery (5%) > The red LED will pulse once every 6 seconds
- SV Low Battery (5%) > The red LED will pulse once every 6 seconds
- PT Low Battery (5%) > The red LED will pulse once every 6 seconds
- RU Low Battery (5%) > The red LED will pulse once every 6 seconds



- EN Paired and operating > The blue LED will pulse once every 6 seconds
- DE Paired and operating > The blue LED will pulse once every 6 seconds
- FR Paired and operating > The blue LED will pulse once every 6 seconds
- IT Paired and operating > The blue LED will pulse once every 6 seconds
- ES Paired and operating > The blue LED will pulse once every 6 seconds
- DA Paired and operating > The blue LED will pulse once every 6 seconds
- SV Paired and operating > The blue LED will pulse once every 6 seconds
- PT Paired and operating > The blue LED will pulse once every 6 seconds
- RU Paired and operating > The blue LED will pulse once every 6 seconds




- EN Pairing Mode > Status LED will blink red and blue once every second until connection is established
- DE Pairing Mode > Status LED will blink red and blue once every second until connection is established
- FR Pairing Mode > Status LED will blink red and blue once every second until connection is established
- IT Pairing Mode > Status LED will blink red and blue once every second until connection is established
- ES Pairing Mode > Status LED will blink red and blue once every second until connection is established
- DA Pairing Mode > Status LED will blink red and blue once every second until connection is established
- SV Pairing Mode > Status LED will blink red and blue once every second until connection is established
- PT Pairing Mode > Status LED will blink red and blue once every second until connection is established
- RU Pairing Mode > Status LED will blink red and blue once every second until connection is established



k FREQ 9 charging options / FREQ 9 charging options / FREQ 9 charging options


1 5

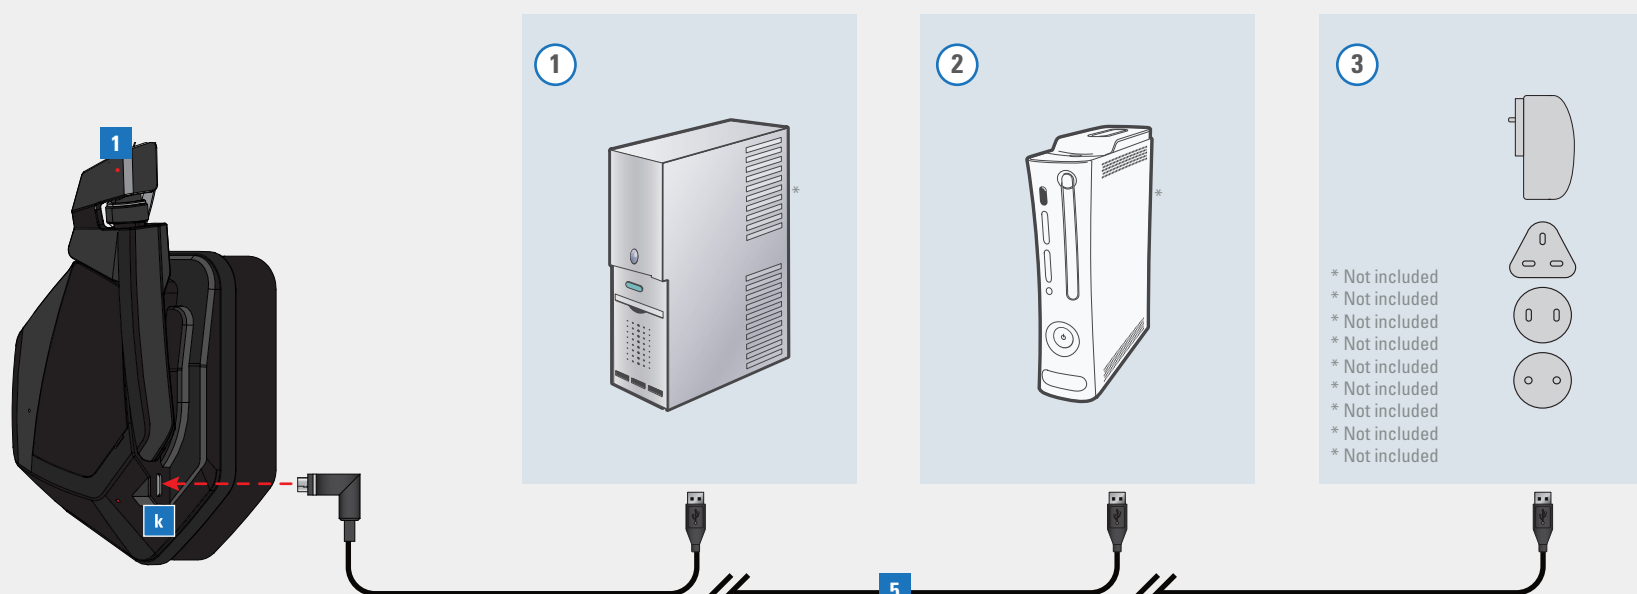

* Not included
 * Not included
 * Not included
 * Not included
 * Not included
 * Not included
 * Not included
 * Not included

● EN Charging > Charge time = 2 hours
 DE Charging > Charge time = 2 hours
 FR Charging > Charge time = 2 hours
 IT Charging > Charge time = 2 hours
 ES Charging > Charge time = 2 hours
 DA Charging > Charge time = 2 hours
 SV Charging > Charge time = 2 hours
 PT Charging > Charge time = 2 hours
 RU Charging > Charge time = 2 hours

● EN Ready > Battery life = 24 hours *based on constant music playback at medium volume level
 DE Ready > Battery life = 24 hours *based on constant music playback at medium volume level
 FR Ready > Battery life = 24 hours *based on constant music playback at medium volume level
 IT Ready > Battery life = 24 hours *based on constant music playback at medium volume level
 ES Ready > Battery life = 24 hours *based on constant music playback at medium volume level
 DA Ready > Battery life = 24 hours *based on constant music playback at medium volume level
 SV Ready > Battery life = 24 hours *based on constant music playback at medium volume level
 PT Ready > Battery life = 24 hours *based on constant music playback at medium volume level
 RU Ready > Battery life = 24 hours *based on constant music playback at medium volume level

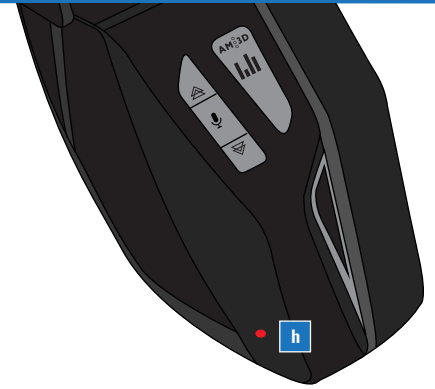

TRANSMITTER BOX INFORMATION :: TRANSMITTER BOX INFORMATION :: TRANSMITTER BOX INFORMATION

I Multi-Function Button :: Multi-Function Button :: Multi-Function Button

Power /Power / Power

EN Press and hold button 'I' for 3 seconds to power ON / OFF
 DE Press and hold button 'I' for 3 seconds to power ON / OFF
 FR Press and hold button 'I' for 3 seconds to power ON / OFF
 IT Press and hold button 'I' for 3 seconds to power ON / OFF
 ES Press and hold button 'I' for 3 seconds to power ON / OFF
 DA Press and hold button 'I' for 3 seconds to power ON / OFF
 SV Press and hold button 'I' for 3 seconds to power ON / OFF
 PT Press and hold button 'I' for 3 seconds to power ON / OFF
 RU Press and hold button 'I' for 3 seconds to power ON / OFF



Connecting To Headset / Connecting To Headset / Connecting To Headset

EN The headset will connect automatically with the box. If not then see below FAQ
 DE The headset will connect automatically with the box. If not then see below FAQ
 FR The headset will connect automatically with the box. If not then see below FAQ
 IT The headset will connect automatically with the box. If not then see below FAQ
 ES The headset will connect automatically with the box. If not then see below FAQ
 DA The headset will connect automatically with the box. If not then see below FAQ
 SV The headset will connect automatically with the box. If not then see below FAQ
 PT The headset will connect automatically with the box. If not then see below FAQ
 RU The headset will connect automatically with the box. If not then see below FAQ


DEFAULT AUDIO SOURCE / DEFAULT AUDIO SOURCE / DEFAULT AUDIO SOURCE

EN To use 3.5mm input, insert 3.5mm cable. To use optical input remove 3.5mm cable
 DE To use 3.5mm input, insert 3.5mm cable. To use optical input remove 3.5mm cable
 FR To use 3.5mm input, insert 3.5mm cable. To use optical input remove 3.5mm cable
 IT To use 3.5mm input, insert 3.5mm cable. To use optical input remove 3.5mm cable
 ES To use 3.5mm input, insert 3.5mm cable. To use optical input remove 3.5mm cable
 DA To use 3.5mm input, insert 3.5mm cable. To use optical input remove 3.5mm cable
 SV To use 3.5mm input, insert 3.5mm cable. To use optical input remove 3.5mm cable
 PT To use 3.5mm input, insert 3.5mm cable. To use optical input remove 3.5mm cable
 RU To use 3.5mm input, insert 3.5mm cable. To use optical input remove 3.5mm cable

FAQ - Repairing / Repairing / Repairing


1

EN Press and hold previous 'a' & next button 'e' on headset for 5 seconds to enter discover mode
 DE Press and hold previous 'a' & next button 'e' on headset for 5 seconds to enter discover mode
 FR Press and hold previous 'a' & next button 'e' on headset for 5 seconds to enter discover mode
 IT Press and hold previous 'a' & next button 'e' on headset for 5 seconds to enter discover mode
 ES Press and hold previous 'a' & next button 'e' on headset for 5 seconds to enter discover mode
 DA Press and hold previous 'a' & next button 'e' on headset for 5 seconds to enter discover mode
 SV Press and hold previous 'a' & next button 'e' on headset for 5 seconds to enter discover mode
 PT Press and hold previous 'a' & next button 'e' on headset for 5 seconds to enter discover mode
 RU Press and hold previous 'a' & next button 'e' on headset for 5 seconds to enter discover mode

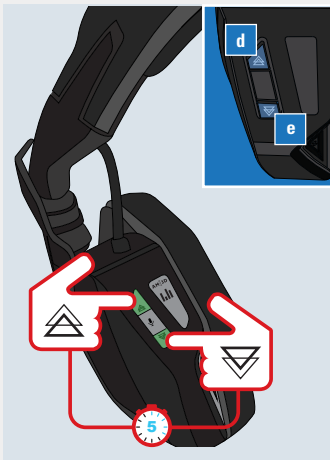


2

EN Double tap button 'I' to pair headset
 DE Double tap button 'I' to pair headset
 FR Double tap button 'I' to pair headset
 IT Double tap button 'I' to pair headset
 ES Double tap button 'I' to pair headset
 DA Double tap button 'I' to pair headset
 SV Double tap button 'I' to pair headset
 PT Double tap button 'I' to pair headset
 RU Double tap button 'I' to pair headset

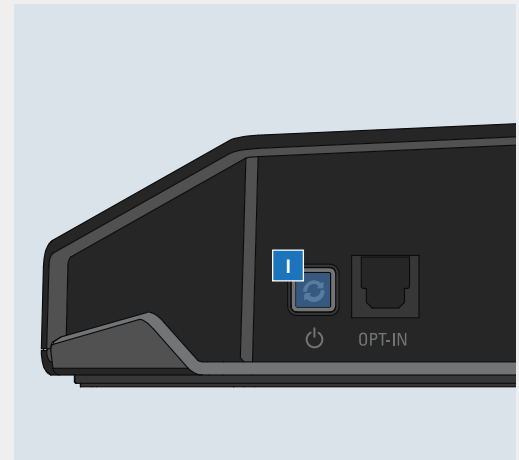

Wii U

1 7

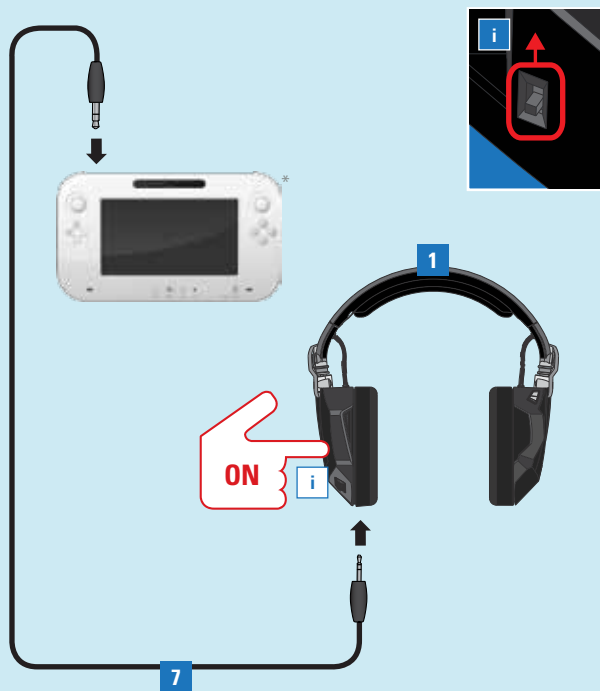


PS4

1 7




PC & MAC - WITHOUT BLUETOOTH

1 2 4 7

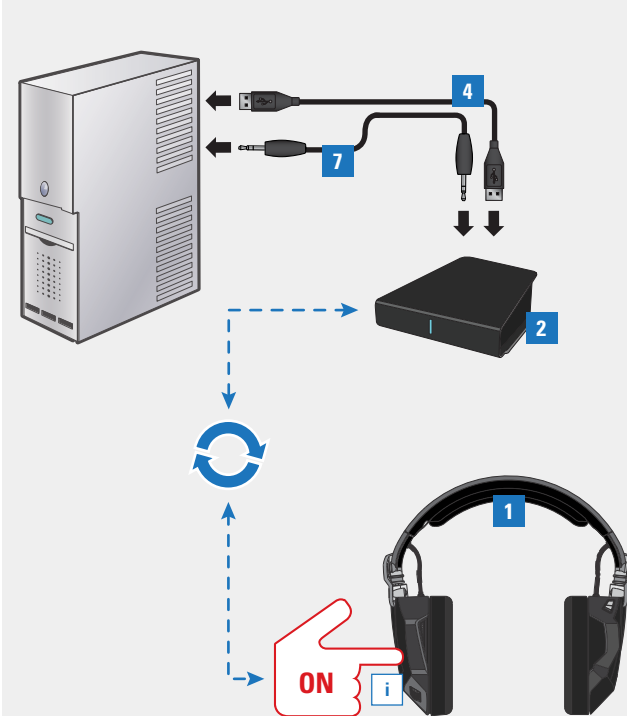


M.O.J.O., TABLET, PHONE, PC & MAC - WITH BLUETOOTH :: M.O.J.O., TABLET, PHONE, PC & MAC - WITH BLUETOOTH :: M.O.J.O., TABLET, PHONE, PC & MAC - WITH BLUETOOTH


1

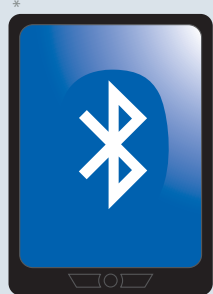

2

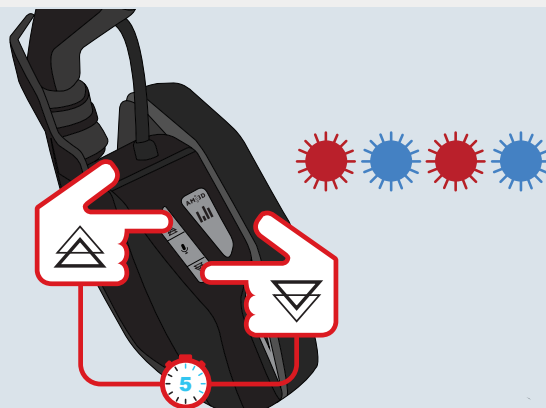

3

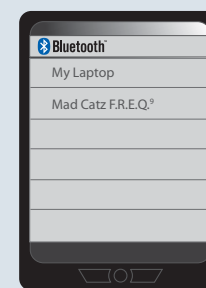


- EN Turn Bluetooth on and search for devices
- DE Aktivieren Sie Bluetooth und suchen Sie nach Geräten
- FR Activez la fonction Bluetooth et recherchez les appareils
- IT Attivare Bluetooth e cercare dispositivi
- ES Enciende el Bluetooth y busca dispositivos
- SV Aktivér Bluetooth, og søg efter enheder
- DA Aktiver Bluetooth og søk efter enheter
- PT Ligue o Bluetooth para procurar dispositivos
- RU Turn Bluetooth on and search for devices

- EN Press and hold for 5 seconds
- DE Halten Sie die Taste für 5 Sekunden gedrückt
- FR Appuyez pendant 5 secondes.
- IT Premere e tenere premuto per 5 secondi
- ES Mantén presionado durante 5 segundos
- SV Tryk og hold nede i 5 sekunder
- DA Tryk og håll in i 5 sekunder
- PT Prima e mantenha premido durante 5 segundos
- RU Press and hold for 5 seconds

- EN Select the headset from the list
- DE Wählen Sie das Headset aus der Liste aus
- FR Sélectionnez le casque dans la liste.
- IT Selezionare le cuffie dall'elenco
- ES Selecciona los auriculares en la lista
- SV Välj headsettet fra listen
- DA Vælg hørulurarna från listan
- PT Seleccione o auricular na lista
- RU Select the headset from the list


XBOX S - HDMI/COMPONENT/COMPOSITE/VGA

1 2 3 4 7

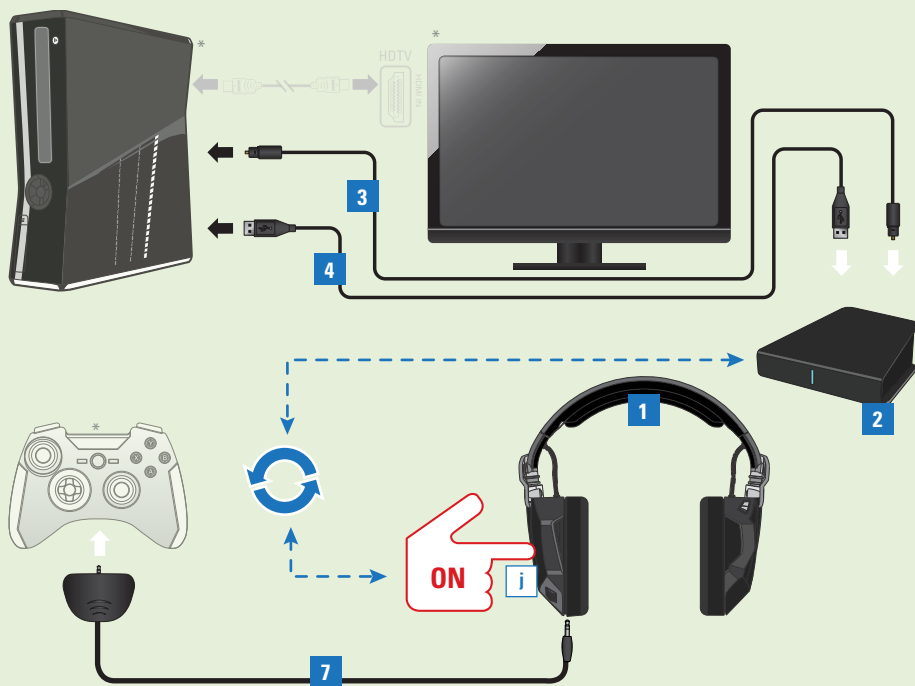


XBOX - COMPONENT/COMPOSITE/VGA

1 2 3 4 7

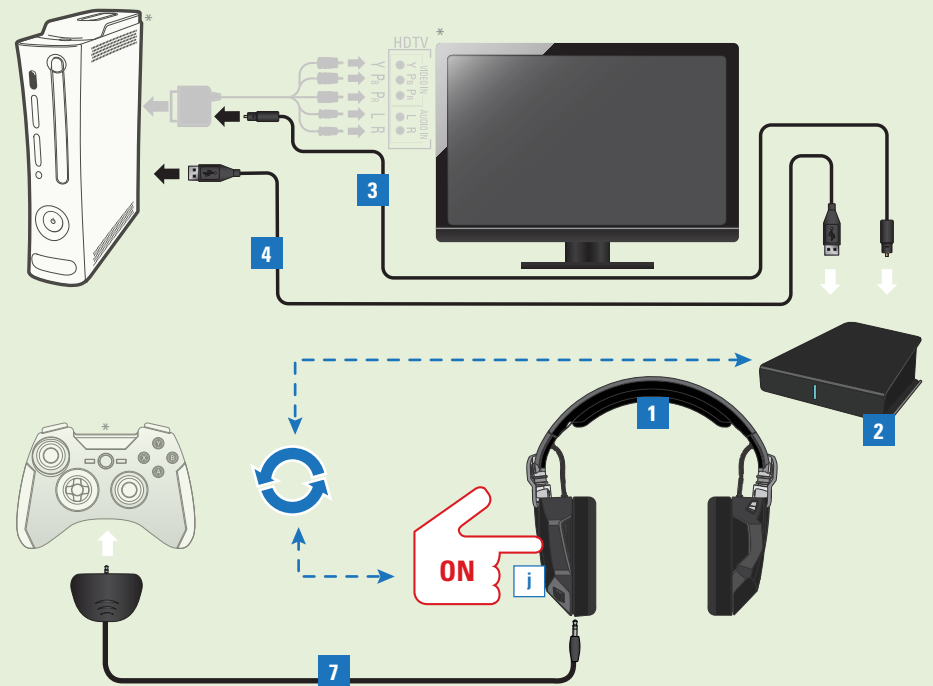

XBOX - HDMI

1 2 3 4 7 8

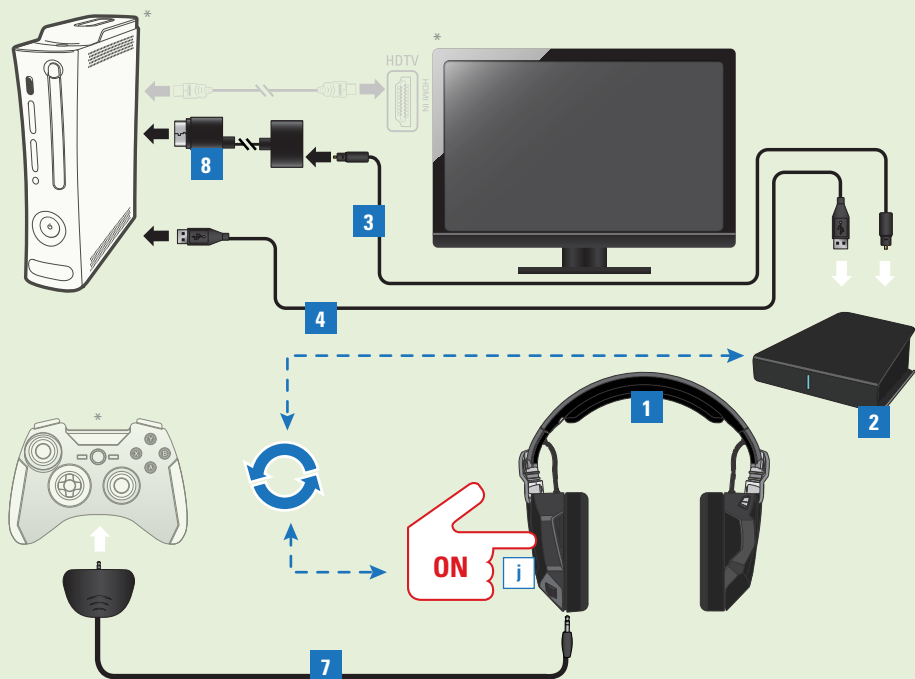

CONNECT TO /CONNEXION À /CONEXIÓN A /ANSCHLUSS AN XBOX

- EN On Xbox 360 navigate to: Settings > System > Console Settings > Audio > Digital Output > Set sound output to Digital Stereo
- DE On Xbox 360 navigate to: Settings > System > Console Settings > Audio > Digital Output > Set sound output to Digital Stereo
- FR On Xbox 360 navigate to: Settings > System > Console Settings > Audio > Digital Output > Set sound output to Digital Stereo
- IT On Xbox 360 navigate to: Settings > System > Console Settings > Audio > Digital Output > Set sound output to Digital Stereo
- ES On Xbox 360 navigate to: Settings > System > Console Settings > Audio > Digital Output > Set sound output to Digital Stereo
- SV On Xbox 360 navigate to: Settings > System > Console Settings > Audio > Digital Output > Set sound output to Digital Stereo
- DA On Xbox 360 navigate to: Settings > System > Console Settings > Audio > Digital Output > Set sound output to Digital Stereo
- PT On Xbox 360 navigate to: Settings > System > Console Settings > Audio > Digital Output > Set sound output to Digital Stereo
- RU On Xbox 360 navigate to: Settings > System > Console Settings > Audio > Digital Output > Set sound output to Digital Stereo

