



ELECTRIC MINI FOOD CHOPPER

Item# 7307-12
Model# CRMFC100W



PLEASE READ AND SAVE ALL INSTRUCTIONS TO ENSURE THE SAFE AND EFFECTIVE USE OF THIS APPLIANCE

ELECTRIC MINI FOOD CHOPPER



What your 2 year warranty means

Great care has gone into the manufacturing of this product and it should therefore provide you with years of good service when used properly. In the event of product failure within its intended use over the course of the first two years after the date of purchase, we will remedy the problem as quickly as possible once it has been brought to our attention. In the unlikely event of such an occurrence, please contact us via customer service department. Contact information can be found below.

Customer Service TEL 1 (888) 775-0202

777 Mark St. Wood Dale, IL 60191
M-F 7:30AM - 7:00PM Central Standard
www.mcappliance.com

Contents

Page 4-5	Important Safety Instructions
Page 6	General Safety Instructions
Page 7	List of Main Parts, Technical Specifications, Contents of Packaging
Page 8	How to Assemble
Page 9	How to Use
Page 10	Care & Maintenance, Service
Page 11	Warranty Card
Page 12	Warranty Information

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic safety precautions should also be observed, including the following. **PLEASE READ AND SAVE ALL INSTRUCTIONS BEFORE USING THE ELECTRIC MINI FOOD CHOPPER.**



READ ALL INSTRUCTIONS BEFORE USE.

1. Please read and save these instructions before using the appliance.
2. Close supervision is necessary when any appliance is used near children.
3. Keep the product out of the reach of children and pets. This product is not intended for use by children.
4. **DO NOT** place on or near a hot gas or electric burner, or in or near a heated oven.
5. Ensure that the power cord does not come into contact with hot surfaces.
6. Household use only. Do not use outdoors.
7. Before using for the first time, check if voltage indicator on the base of the appliance corresponds to the voltage in your home.
8. Do not turn the power on unless this appliance is properly assembled.
9. Leave about 6-8 inches of open space all around the exterior of this appliance, while in use.
10. Find a stable and level area when using the Electric Mini Food Chopper.
11. **DO NOT** touch the appliance or the plug with wet hands.
12. Never use the appliance if the plastic cover or bowl shows any signs of cracks.
13. The cover must be securely locked and in place before operating the appliance. Never try to remove or force the cover open while the appliance is operating.
14. Keep hair, hands, fingers, or any other body part from coming into contact with the moving parts while the product is operating.
15. Keep hands and utensils away from moving blades while operating the product. A spatula may be used but only when the product is not operating.
16. Handle the sharp blades with care. Use caution when attaching or detaching the blades.
17. Never place cutting blades on the base without first putting the bowl properly in place.
18. The use of attachments or accessories not recommended or sold by the manufacturer may result in fire, electric shock or injury.
19. Always ensure the product is unplugged from the electrical outlet and that all parts are stopped before assembling, disassembling, relocating, or cleaning.
20. Unplug unit from electrical outlet when not in use and before cleaning.
21. **DO NOT** place the motor base in water, dishwasher or any other liquid.
22. To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquid.
23. Never move the appliance by pulling the cord. Do not put any stress on the power cord where it connects to the product, as the power cord could fray and break. **DO NOT** let the electrical cord hang over the edge of a table or counter or touch hot surfaces.

24. Do not place the base, power cord, or plug of this product in or expose the parts to water or other liquids.
25. Do not use the Electric Mini Food Chopper with a damaged electrical outlet.
26. Do not leave the product unattended while it is in use. Always unplug the product from the electrical outlet when it is not in use.
27. Do not operate the product if it has a damaged or cut power cord or plug, if wires are exposed, if it malfunctions, if it is dropped or damaged, or if the motor housing is dropped in or exposed to water.
28. This product has no user-serviceable parts. Do not attempt to examine or repair this product yourself. Only qualified service personnel should perform any servicing.
29. Return appliance to authorized service center for examination, repair, or adjustment.
30. Do not use this appliance other than its intended use.

General Safety Instructions

WARNING! Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire or serious personal injury. The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible condition and situations that may occur. It must be understood by the operator that common sense and caution are a factory which cannot be built into this product, but must be supplied by the operator.

SAVE ALL INSTRUCTIONS!

THIS APPLIANCE HAS A POLARIZED PLUG (ONE PIN IS WIDER THAN THE OTHER) TO REDUCE THE RISK OF ELECTRICAL SHOCK. THIS PLUG IS DESIGNED TO FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG DOES NOT FIT FULLY INTO THE ELECTRICAL OUTLET, TRY THE PLUG THE OTHER WAY AROUND. IF THE PLUG STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. DO NOT ATTEMPT TO ALTER, DISMANTLE OR FIND ANOTHER WAY AROUND THIS SAFETY FEATURE.

CAUTION: A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord.

ELECTRIC POWER

If electric circuit is overloaded with other appliances, your appliances may not operate properly. The appliances should be operated on a separate electrical circuit from other operating appliances.

SAFETY WARNING

 
Although your appliance is easy to operate, for your safety, the warnings below must be followed:

1. Do not place the appliance near a heat source.
2. Use the appliance on a stable surface.
3. Do not unplug by pulling on the supply cord.
4. The appliance must be unplugged:
 - a. Before any cleaning or maintenance.
 - b. If it appears to be faulty.

THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY

**SAVE THESE INSTRUCTIONS
FOR FUTURE REFERENCE**

List of Main Parts

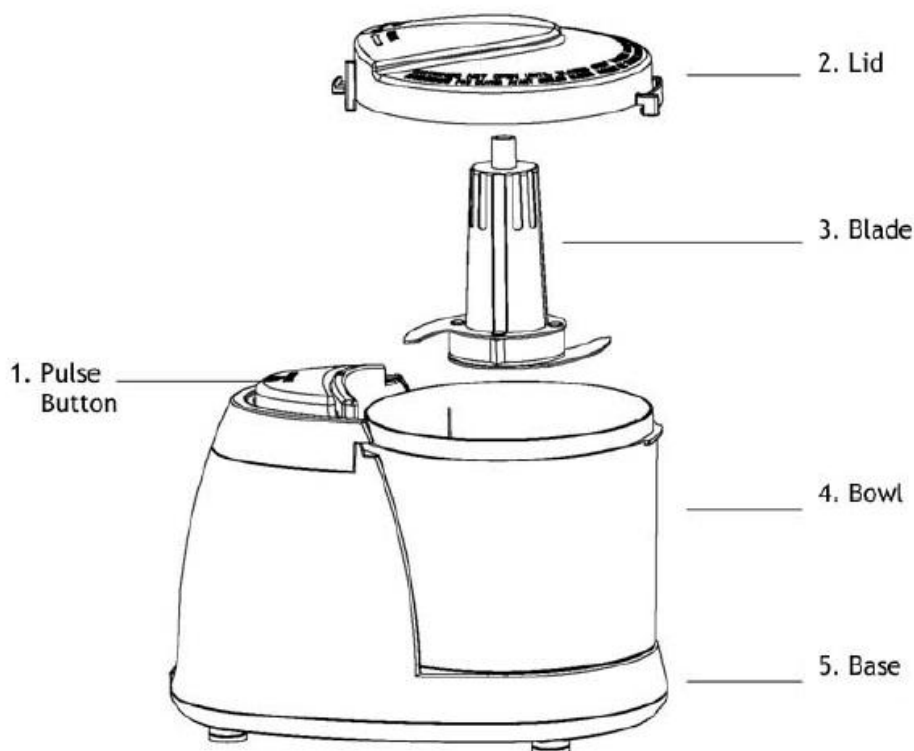

Technical Specifications

Model Number: CRMFC100W
Item Number: 7307-12
Voltage Rating: 120V 60Hz
Power Rating: 100 Watts

Contents of Packaging

Food Chopper Base
Bowl
Blade
Lid
Instruction Manual

 
If any of the above items are missing, please contact our customer service department at 1 (888) 775-0202 or our website <http://www.mcappliance.com> for replacement. M-F 7:30AM - 7:00PM Central Standard

How to Assemble


Operating Instructions

CAUTION: HANDLE THE BLADES WITH CARE, AS THEY ARE *EXTREMELY* SHARP.

- 1) Before using the product for the first time, thoroughly wash the Cover, Bowl, and Blade Assembly in hot, soapy water and dry thoroughly.
- 2) Ensure the product is unplugged from the electrical outlet and place the Base on a flat, level, stable surface.
- 3) Place the column in the center of the Bowl over the Shaft in the Base, aligning the tabs in the bottom edges of the Bowl with the indentations in the edges of the Base.

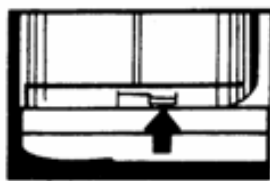


Unlocked Safety Latch

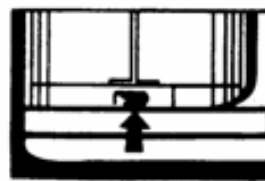 

Locked Safety Latch

- 4) Turn the Bowl clockwise until the tabs on the Bowl slide under the tabs on the Base, as shown in the figure above.
- 5) While holding the Blade Assembly by the top, place it onto the column in the Bowl and turn the Assembly until it rests about one half inch above the bottom of the Bowl.
- 6) Place the Lid onto the Bowl, ensuring that the peg in the Cover is inserted into the top of the Blade Assembly and the small arrow on the top of the Cover points away from the top of the Base.
- 7) Turn the Lid until the inscribed dot meets the inscribed dot on top of the Base by Pulse Button as shown.

 NOTE: The lid must be securely locked in before operating the Food Chopper.

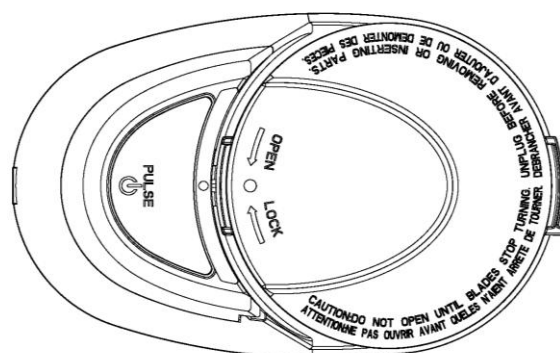

How to Use

WARNING: ALWAYS ASSEMBLE THE PRODUCT COMPLETELY BEFORE PLUGGING IT INTO AN ELECTRICAL OUTLET.

CAUTION: TO PREVENT PRODUCT DAMAGE, DO NOT CHOP AND INSERT INGREDIENTS SUCH AS RAW MEAT, CHEESE, OR CHOCOLATE.

INSTRUCTIONS:

- 1) Cut solid ingredients into small pieces, as needed. Hard vegetables, such as raw carrots, may require splitting and/or quartering for proper product operation.
- 2) Turn the cover counterclockwise and remove it from the bowl.
- 3) Place up to 1½ cups of solid or ¾ cup of liquid ingredients into the bowl. Do not overfill the bowl.
- 4) Reattach the cover securely onto the bowl by aligning the arrow on the cover with the arrow on the base. The product will not operate until the cover is securely locked into place.
- 5) Plug the product into a standard 110-120 volt AC electrical outlet, and then press and hold the on/pulse button.
- 6) When the contents are at the desired consistency, release the on/pulse button, and then allow the Blades to stop completely. Do not operate the Electric Mini Food Chopper continuously for more than 30 seconds at a time.
- 7) Unplug the product from the electrical outlet and then remove the cover. Always unplug the product when it is not in use or is left unattended.
- 8) Turn the bowl counterclockwise to release the tabs on the edges of the bowl from the tabs on the base.
- 9) Remove the blade assembly before pouring contents from the bowl.

Care and Maintenance

WARNING: ALWAYS UNPLUG THE PRODUCT FROM THE ELECTRICAL OUTLET AND ALLOW THE BLADES TO COMPLETELY STOP BEFORE DISASSEMBLING IT FOR CLEANING. NEVER IMMERSE THE CHOPPER BASE IN WATER OR ANY OTHER LIQUID.

CAUTION: USE CAUTION WHEN ATTACHING OR DETACHING THE PARTS TO THE ELECTRIC MINI FOOD CHOPPER. THE BLADES ARE EXTREMELY SHARP. DO NOT USE ABRASIVE CLEANERS OR SCOURING PADS TO CLEAN ANY PART OF THE PRODUCT. STORE THE PRODUCT IN A COOL, DRY PLACE.

CLEANING: MAKE SURE UNIT IS UNPLUGGED BEFORE CLEANING, ALLOW PARTS TO COMPLETELY STOP BEFORE CLEANING THE PRODUCT.

- 1) To clean the Electric Mini Food Chopper, carefully remove the cover, bowl, and blade assembly after the product is stopped and unplugged.
- 2) Dip in hot water for 5 minutes, then wash in warm soapy water, rinse and dry thoroughly.
- 3) To clean the base unit, wipe outside with a damp sponge or cloth and dry with a non-abrasive towel. Do not immerse the base unit in water.
- 4) Store the product in a cool, dry place.

NOTE: DO NOT IMMERSE THE BASE IN WATER! THIS HOLDS ALL OF THE ELECTRICAL COMPONENTS. THE LIFESPAN OF THE PRODUCT DEPENDS ON HOW WELL IT IS CLEANED AND MAINTAINED AFTER EVERY USE. PLEASE BE SURE TO FOLLOW THE CLEANING INSTRUCTIONS. NEVER USE ANY ABRASIVE CLEANING PRODUCTS ON THE BASE TO MAINTAIN ORIGINAL FINISH.

Service

If you have any question in regards to the operation of this appliance or are in need of a spare part please contact our warranty department at:
1 (888) 775-0202



Environmental Protection

If the appliance should no longer work at all, please make sure that it is disposed in an environmentally friendly way.

WARRANTY CARD



Electric Mini Food Chopper, item # 7307-12, model # CRMFC100W

In case you find this product to be defective please call our warranty dept within the warranty period at 1 (888) 775-0202.

This product is warranted to be free from manufacturing defects in original materials, including original parts, and workmanship for 2 years with proof of purchase.

Please fill in your details below and have the product and purchase receipt ready before you call the warranty department. Please read the Limited Warranty conditions mentioned in this instruction manual.

Customer Name	
Street	
City	
State	
ZIP Code	
Purchase Date	
Description of Defect:	



PLEASE DETACH THIS SECTION AND RETURN IT WITH YOUR PRODUCT

WARRANTY CARD

LIMITED WARRANTY

Thank you for purchasing a top quality Crofton product. This **Electric Mini Food Chopper# 7307-12 model# CRMFC100W** was tested and meets our stringent quality standards. This product is warranted to be free from manufacturing defects in original materials, including original parts, and workmanship for 2 years with proof of purchase.

The warranty is void if the defect is due to accidental damage, misuse, abuse, neglect, improper repair or alteration by unauthorized persons or failure to follow operation instructions provided with the product. This warranty does not apply to commercial use.

The warranty is non-transferable and applies only to the original purchase and does not extend to subsequent owners of the product. Liability under this warranty is limited to repair, replacement or refund. In no event shall liability exceed the purchase price paid by the purchaser of the product. Under no circumstances shall there be liability for any loss, direct, indirect, incidental, special or consequential damage arising out of in connection with use of this product. This warranty is valid only in the United States of America. This Warranty gives you specific legal rights, however, you may have other rights that vary from state to state. Some states do not allow limitation on implied warranties or exclusion of consequential damages therefore these restrictions may not apply to you.

In case you find the product to be defective please call the warranty department within the warranty period. Please fill out the Warranty Card and have purchase receipt ready when you call our warranty department at 1 (888) 775-0202.

MC Appliance Corp.
Warranty Department
777 Mark Street
Wood Dale, IL 60191

WARRANTY INFORMATION