



LARGE HEALTH GRILL & PANINI MAKER



Item# 1771-12
Model# CRPPHG4ST



PLEASE READ AND SAVE ALL INSTRUCTIONS TO ENSURE THE SAFE AND
EFFECTIVE USE OF THIS APPLIANCE

LARGE HEALTH GRILL & PANINI MAKER



What your 2 year warranty means

Great care has gone into the manufacturing of this product and it should therefore provide you with years of good service when used properly. In the event of product failure within its intended use over the course of the first two years after the date of purchase, we will remedy the problem as quickly as possible once it has been brought to our attention. In the unlikely event of such an occurrence, please contact us via customer service department. Contact information can be found below.

Customer Service TEL 1 (888) 775-0202

777 Mark St. Wood Dale, IL 60191
M-F 7:30AM - 7:00PM Central Standard
www.mcappliance.com

Contents

Page 4-5	Important Safety Instructions
Page 6	General Safety Instructions
Page 7	List of Main Parts, Technical Specifications, Contents of Packaging
Page 8	How to Use
Page 9	Care & Maintenance, Service
Page 10	Warranty Card
Page 11	Warranty Information

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic safety precautions should also be observed, including the following. **PLEASE READ AND SAVE ALL INSTRUCTIONS BEFORE USING THE LARGE HEALTH GRILL & PANINI MAKER.**



READ ALL INSTRUCTIONS BEFORE USE.

1. Please read and save these instructions before using the appliance.
2. Close supervision is necessary when any appliance is used near children.
3. Keep the product out of the reach of children and pets. This product is not intended for use by children.
4. **DO NOT** place on or near a hot gas or electric burner, or in or near a heated oven.
5. **DO NOT** touch hot surfaces. Use handles or knobs.
6. Ensure that the power cord does not come into contact with hot surfaces.
7. Household use only. Do not use outdoors.
8. Before using for the first time, check if voltage indicator on the base of the appliance corresponds to the voltage in your home.
9. Do not turn the power on unless this appliance is properly assembled.
10. Leave about 6-8 inches of open space all around the exterior of this appliance, while in use.
11. Find a stable and level area when using this appliance.
12. **DO NOT** touch the appliance or the plug with wet hands.
13. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
14. The use of attachments or accessories not recommended or sold by the manufacturer may result in fire, electric shock or injury.
15. Always ensure the product is unplugged from the electrical outlet and that all parts are stopped before assembling, disassembling, relocating, or cleaning.
16. To disconnect, turn the temperature control to the lowest setting and wait for unit to cool, then unplug cord from electrical outlet.
17. Unplug unit from electrical outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
18. To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquid.
19. Never move the appliance by pulling the cord. Do not put any stress on the power cord where it connects to the product, as the power cord could fray and break. **DO NOT** let the electrical cord hang over the edge of a table or counter or touch hot surfaces.
20. Do not place the power cord, plug, or any electrical parts of this product in water or other liquids.
21. Do not use this appliance with a damaged electrical outlet.
22. Do not leave the product unattended while it is in use. Always unplug the product from the electrical outlet when it is not in use.

- 23. Do not operate the product if it has a damaged or cut power cord or plug, if wires are exposed, if it malfunctions, if it is dropped or damaged, or if the motor housing is dropped in or exposed to water.
- 24. This product has no user-serviceable parts. Do not attempt to examine or repair this product yourself. Only qualified service personnel should perform any servicing.
- 25. Return appliance to authorized service center for examination, repair, or adjustment.
- 26. Do not use this appliance other than its intended use.
- 27. Do not immerse this appliance in water or other liquid.

**SAVE THESE INSTRUCTIONS
FOR FUTURE REFERENCE**

General Safety Instructions

WARNING! Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire or serious personal injury. The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible condition and situations that may occur. It must be understood by the operator that common sense and caution are a factory which cannot be built into this product, but must be supplied by the operator.

SAVE ALL INSTRUCTIONS!

THIS APPLIANCE HAS A POLARIZED PLUG (ONE PIN IS WIDER THAN THE OTHER) TO REDUCE THE RISK OF ELECTRICAL SHOCK. THIS PLUG IS DESIGNED TO FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG DOES NOT FIT FULLY INTO THE ELECTRICAL OUTLET, TRY THE PLUG THE OTHER WAY AROUND. IF THE PLUG STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. DO NOT ATTEMPT TO ALTER, DISMANTLE OR FIND ANOTHER WAY AROUND THIS SAFETY FEATURE.

CAUTION: A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord.

ELECTRIC POWER

If electric circuit is overloaded with other appliances, your appliances may not operate properly. The appliances should be operated on a separate electrical circuit from other operating appliances.

SAFETY WARNING


Although your appliance is easy to operate, for your safety, the warnings below must be followed:

1. Do not place the appliance near a heat source.
2. Use the appliance on a stable surface.
3. Do not unplug by pulling on the supply cord.
4. The appliance must be unplugged:
 - a. Before any cleaning or maintenance.
 - b. If it appears to be faulty.

THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY

**SAVE THESE INSTRUCTIONS
FOR FUTURE REFERENCE**

List of Main Parts

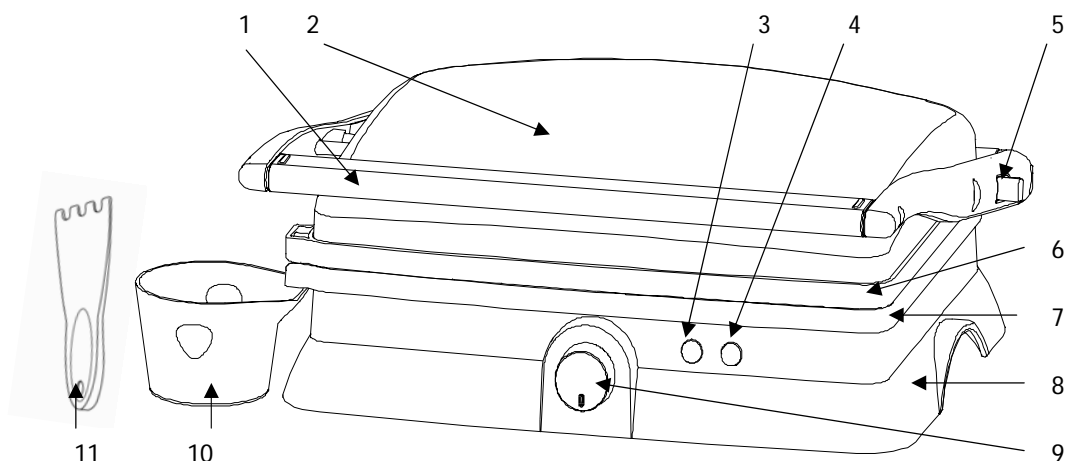

1. Handle
2. Upper Housing
3. Power Light (Red)
4. Ready Light (Green)
5. Handle Control Button
6. Upper Non-stick Plate

7. Lower Non-stick Plate
8. Base
9. Temperature Control
10. Drain Cup
11. Scraper

Technical Specifications

Model Number: CRPPHG4ST
Item Number: 1771-12
Voltage Rating: 120V 60Hz
Power Rating: 1400 Watts
Capacity: 4 Slices

Contents of Packaging

Grill
Grill Scraper
Drain Cups (2)
Instruction Manual

If any of the above items are missing, please contact our customer service department at 1 (888) 775-0202 or our website <http://www.mcappliance.com> for replacement. M-F 7:30AM - 7:00PM Central Standard

How to Use

WARNING: BEFORE USING FOR THE FIRST TIME, WIPE THE COOKING PLATES WITH SOFT, DAMP CLOTH AND DRY. DO NOT IMMERSE THE UNIT IN WATER OR OTHER LIQUID. DO NOT RUN WATER DIRECTLY ONTO THE COOKING SURFACES.

NOTE: WHEN THE GRILL IS HEATED FOR THE FIRST TIME, IT MAY EMIT SLIGHT SMOKE OR ODOR. THIS IS NORMAL WITH MANY HEATING APPLIANCES.

CAUTION: WHEN OPERATING THE GRILL, USE THE HANDLE ONLY FOR PRESSING THE FOOD PLACED ON THE LOWER NON-STICK PLATE. DO NOT USE THE HANDLE TO LIFT THE UNIT. WHEN LIFTING THE UNIT, ALWAYS USE TWO HANDS.

INSTRUCTIONS:

NOTE: TO PRESERVE THE NONSTICK COATING, APPLY A LIGHT COATING OF COOKING OIL OVER THE COOKING SURFACE.

1. Place the grill on a dry, level, heat resistant surface.
2. Turn the temperature control to desired temperature.

PANINI MAKER

- a. Close the grill and plug into electrical outlet. Power and ready light will turn on, indicating the grill is heating.
- b. When the grill reaches the selected temperature, the ready light will turn off.
- c. Open the grill and place food on the bottom cooking plate.
- d. Close the grill. The ready light will turn on.
- e. Cook for 3 to 8 minutes or until golden brown. When the grill reaches the selected temperature, the ready light will turn off.

NOTE: Longer cooking may be necessary for food such as raw meat even after the ready light turns off.

- f. Use the handle and open the grill. Remove food using plastic utensils. Never use metal tongs or knife on non-stick cooking surfaces. Damages may occur.

HEALTH GRILL (180° Open)

- a. Pull the Handle Control Button and open the grill 180°.
- b. Plug into electrical outlet. Power and ready light will turn on, indicating the grill is heating.
- c. When the grill reaches the selected temperature, the ready light will turn off.
- d. Place food on the cooking plates. The ready light will turn on.

NOTE: Both drain cups must be positioned to catch any oil or fluids from cooked foods.

- e. When the grill reaches the selected temperature, the ready light will turn off.

NOTE: Longer cooking may be necessary for food such as raw meat even after the ready light turns off.

- f. Remove food using plastic utensils. Never use metal tongs or knife on non-stick cooking surfaces. Damages may occur.
3. When finished cooking, disconnect plug from electrical outlet. Leave the grill open for cooling.

Care and Maintenance

WARNING: ALWAYS TURN THE TEMPERATURE CONTROL TO LOWEST SETTING BEFORE UNPLUGGING CORD FROM ELECTRICAL OUTLET. MAKE SURE THE APPLIANCE IS COMPLETELY COOLED BEFORE CLEANING.

CAUTION: USE CAUTION WHEN HANDLING THE NON-STICK SURFACE OF THE GRILL. DO NOT USE SHARP UTENSILS OR KNIVES ON THE GRILL. NON-STICK COATING MUST NOT BE SCRATCHED OR SCRAPED.

DO NOT USE ABRASIVE CLEANERS OR SCOURING PADS TO CLEAN ANY PART OF THE PRODUCT. STORE THE PRODUCT IN A COOL, DRY PLACE.

DO NOT IMMERSE THE GRILL IN WATER OR OTHER LIQUID.

1. Turn temperature control to lowest setting and unplug cord from electrical outlet. Make sure the grill is cooled.
2. Wipe the grill and lid with soft, damp cloth.
3. If washing by hand, use a sponge or soft scouring pad with liquid detergent. Do not use any abrasive cleaners or metal pads that can damage the non-stick coating.
4. Rinse and dry.
5. Wipe the outside of the base with a damp cloth. Do not immerse the grill in water or other liquid.
6. Store the grill in a dry place.

NOTE: Remove and empty the drain cup after each use and wash it in warm, soapy water. Do not use harsh scouring pads or detergents. Rinse and dry with a clean, soft cloth before use.

Service

If you have any question in regards to the operation of this appliance or are in need of a spare part please contact our warranty department at:
1 (888) 775-0202



Environmental Protection

If the appliance should no longer work at all, please make sure that it is disposed in an environmentally friendly way.

WARRANTY CARD



LARGE HEALTH GRILL & PANINI MAKER, Item # 1771-12, Model # CRPPHG4ST

In case you find this product to be defective, please call our warranty dept within the warranty period at 1 (888) 775-0202 during the hours of operation in central standard time 7:30 AM to 7:00 PM, Monday to Friday.

This product is warranted to be free from manufacturing defects in original materials, including original parts, and workmanship for 2 years with proof of purchase.

Please fill in your details below and have the product and purchase receipt ready before you call the warranty department. Please read the Limited Warranty conditions mentioned in this instruction manual.

Customer Name	
Street	
City	
State	
ZIP Code	
Purchase Date	
Description of Defect:	



PLEASE DETACH THIS SECTION AND RETURN IT WITH YOUR PRODUCT

WARRANTY CARD

LIMITED WARRANTY

Thank you for purchasing a top quality Crofton product. This **LARGE HEALTH GRILL & PANINI MAKER**, Item# 1771-12, Model# CRPPHG4ST, was tested and meets our stringent quality standards. This product is warranted to be free from manufacturing defects in original materials, including original parts, and workmanship for 2 years with proof of purchase.

The warranty is void if the defect is due to accidental damage, misuse, abuse, neglect, improper repair or alteration by unauthorized persons or failure to follow operation instructions provided with the product. This warranty does not apply to commercial use.

The warranty is non-transferable and applies only to the original purchase and does not extend to subsequent owners of the product. Liability under this warranty is limited to repair, replacement or refund. In no event shall liability exceed the purchase price paid by the purchaser of the product. Under no circumstances shall there be liability for any loss, direct, indirect, incidental, special or consequential damage arising out of in connection with use of this product. This warranty is valid only in the United States of America. This Warranty gives you specific legal rights, however, you may have other rights that vary from state to state. Some states do not allow limitation on implied warranties or exclusion of consequential damages therefore these restrictions may not apply to you.

In case you find the product to be defective please call the warranty department within the warranty period. Please fill out the Warranty Card and have purchase receipt ready when you call our warranty department at 1 (888) 775-0202 during the hours of operation in central standard time 7:30 AM to 7:00 PM, Monday to Friday.

MC Appliance Corp.
Warranty Department
777 Mark Street
Wood Dale, IL 60191

WARRANTY INFORMATION