

User guide



MCR230SL CD CLOCK RADIO

STOP! Read this manual first! If you have any problems, do not attempt to return this product to the store. For fast help, call us first! 1-800-705-2000 Thank you for making Magnavox a part of your home!



Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

- Once your Magnavox purchase is registered, you're eligible to receive all the privileges of owning a Magnavox product. So complete and return the Warranty Registration Card enclosed with your purchase at once. And take advantage of these important benefits.

Warranty Verification, Owner Confirmation, Model Registration. Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your Magnavox warranty.

Know these safety symbols



This "bolt of lightning" indicates uninsulated material within your unit which may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

For Customer Use Enter below the Serial No. which is located on the bottom of the cabinet. Retain this information for future reference.

 
Model No. Serial No.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

IMPORTANT SAFETY INSTRUCTIONS

- 1. Read these instructions. 2. Keep these instructions. 3. Heed all warnings. 4. Follow all instructions. 5. Do not use this apparatus near water. 6. Clean only with dry cloth. 7. Do not block any ventilation openings. 8. Do not install near any heat sources. 9. Do not defeat the safety purpose of the polarized or grounding-type plug. 10. Protect the power cord from being walked on or pinched. 11. Only use attachments/accessories specified by the manufacturer.



EL 6475-E004: 02/8

Class II equipment symbol

This symbol indicates that the unit has a double insulation system.

LIMITED WARRANTY

PORTABLE AUDIO

90 Days Free Exchange This product must be carried in for an exchange.

WHO IS COVERED? You must have proof of purchase to exchange the product. BEFORE REQUESTING EXCHANGE... EXCHANGING A PRODUCT IN U.S.A., PUERTO RICO, OR U.S. VIRGIN ISLANDS... EXCHANGING A PRODUCT IN CANADA... WHERE IS EXCHANGE AVAILABLE?

English

Español

MCR 230SL



English Controls Power supply


- Controls (see figure 1) 1 SET TIME - adjusts clock time 2 ALARM 1 - ON - switches on ALARM 1 - SET - adjusts alarm time of ALARM 1 - OFF - switches ALARM 1 off 3 REPEAT ALARM - switches off alarm for a 6 minute period 4 Display - shows the clock or alarm time or CD tracks 5 ALARM 2 - ON - switches on ALARM 2 - SET - adjusts alarm time of ALARM 2 - OFF - switches ALARM 2 off completely 6 CD Door - lift here to open / close CD door 7 TUNING - tunes to a radio station 8 STOP - stops CD playback 9 PLAY / PAUSE - starts / pauses CD playback 10 MIN / HOUR - adjusts clock / alarm time - skips CD tracks / searches for a particular passage 11 FM-AM-BUZ-CD - selects FM, AM or CD sound source - selects radio, buzzer or CD alarm mode 12 POWER/ALARM RESET - switch the set ON / OFF - stops the active buzzer, radio or CD alarm for 24 hours - switch off the sleep timer 13 SLEEP - switches on radio, CD for timer mode - adjusts timer options for radio / CD playback 14 VOLUME - adjusts sound level 15 Power cord - connects to wall outlet

Clock Radio CD player

- Setting the clock Clock display The time is shown and the display also indicates whether you have switched on the alarm(s), and these indicators will light up respectively next to ALARM 1 and ALARM 2 on the display. Standby power consumption (clock mode) 4.5W Radio 1 Press POWER to switch ON. 2 Use FM-AM-BUZ-CD to select FM or AM waveband. 3 Use TUNING (on the side panel) to find your station. 4 Adjust the sound with the VOLUME control. To improve reception: FM: Extend and adjust power cord for optimum reception. AM: Uses a built-in antenna. Direct the antenna by adjusting the position of your unit. 5 Press POWER to switch OFF. Selecting a different track during playback Press once or more to skip to the next track(s). Press once and playback will return to the beginning of the current track. Press more than once to skip to previous tracks. The track number appears briefly in the display when you press to skip tracks.

CD player Alarm

- Finding a passage within a track During playback, press and hold down. The CD is played at high speed and low volume. Release when you recognize the passage you want. Normal CD playback resumes. Using the alarm option General Two different alarm times ALARM 1 and ALARM 2 can be set in the CD, radio or buzzer modes. Setting the alarm time 1 Push the ALARM 1 or ALARM 2 switch to SET. Display shows Alarm 1 or Alarm 2 time and flashes. Note: Do not intend to push both ALARM 1 to SET at the same time. 2 Press and hold down HOUR or MIN to fast adjust both the hours and minutes settings. 3 Release HOUR or MIN when you have reached the desired setting. 4 Push the ALARM 1 or ALARM 2 switch to OFF. The clock display goes back to clock time. To review your set alarm time, slide the ALARM 1 or ALARM 2 switches to SET. Selecting alarm mode options 1. Press POWER to switch OFF. 2. Select your choice of alarm mode: either FM, AM, CD or buzzer by using the FM/AM/BUZZER/CD source selector. 3. Push the ALARM 1 or ALARM 2 switch to ON. The respective ALARM indicator lights up on the display. At the set alarm time, the radio, CD or buzzer will switch on and it will automatically switch off around 60 minutes later. Note: If CD alarm mode is selected, a CD must be inserted. CD will play from first track. If you have chosen Radio or CD as sleep mode, this will then be your alarm mode. Switching off the alarm There are three ways of switching off the alarm. Unless you choose to cancel the alarm completely, the DAILY ALARM RESET option will be automatically selected after around 60 minutes from the time your alarm time first goes off. Daily alarm reset If you want the alarm mode to be stopped immediately but also wish to repeat the alarm call at the same time for the following day: Press POWER/ALARM RESET during the alarm call. Repeat alarm This will repeat your alarm call at 6-minute intervals. 1 During the alarm call, press REPEAT ALARM. 2 Repeat as desired up to an hour.

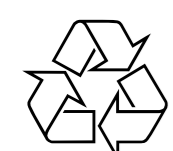

Printed in China

CMM/0243

Alarm Sleep Maintenance

- Switching off the alarm completely Push the ALARM 1 or ALARM 2 switches to the OFF position. The alarm indicator will disappear from the display. Sleep The CD clock radio has a built-in sleep timer, which enables the set to be automatically switched off during radio or CD playback after a set period of time. There are 3 sleep times: 90, 60 or 30 minutes. Setting the sleep time 1 Set the unit to OFF. 2 Set your timer by pressing on the SLEEP button. Display shows "- -". 3 Select your timer option by pressing SLEEP once or more until the desired option is shown. Display shows 90 (minutes) -> 60 -> 30 -> - - -> 90... 4 After a few seconds, the set turns ON. For CD mode is selected, press PLAY/PAUSE to start playback. 5 The set will turn off automatically after the selected time. 6 To cancel the timer function, either press the SLEEP button one or more until "- -" appears or press POWER to switch OFF. Note: The sleep function does not affect your alarm time setting(s). If you have an alarm set in the radio or CD mode, make sure you have adjusted the volume loud enough to wake you up before you set the sleep time.

Troubleshooting

Table with 2 columns: Problem, Solution. Rows include: No sound, Buttons fail to react, CD playback does not work, Occasional crackling sound during FM broadcast, Continuous cracking/hiss disturbances during AM broadcasting, The alarm does not function.

Notes

CAUTION Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation. The set complies with the FCC-Rules, Part 15 and with 21 CFR 1040.10. Operation is subject to the following two conditions: 1. This device may not cause harmful interference, and 2. This device must accept any interference received, including interference that may cause undesired operation. Canada English: This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications. Français: Cet appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le Règlement sur le Brouillage Radioélectrique édicté par le Ministère des Communications du Canada. Environmental information All unnecessary packaging material has been omitted. The packaging can be easily separated into two materials: cardboard and paper pulp. Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging, dead batteries and old equipment.

The typeplate is located on the bottom of the set.