 



HALO[®]
POWERJAM[™]

**POCKET BLUETOOTH SPEAKER
WITH POWER CHARGER**

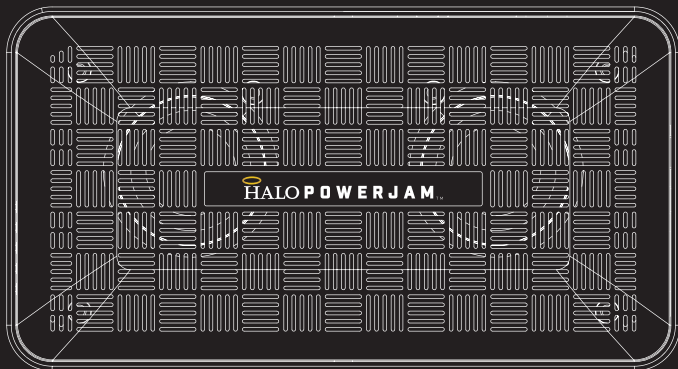

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.



HALO POWERJAM

Thank you for choosing HALO. Innovative, portable and easy to use, the HALO POWERJAM allows you to stream and enjoy music wirelessly from your smartphone, tablet or other Bluetooth devices anywhere you go. The HALO POWERJAM includes a built-in speaker phone, 6000 mAh of portable power and dual USB output ports so you can recharge multiple devices simultaneously. Let HALO POWER YOUR LIFE.

Please read the operating instructions carefully before using your HALO POWERJAM.

CONTENTS

Package Contents

Operating Instructions

Maintenance and Care

Safety Precautions

Specifications

Troubleshooting Guide

 
Compliance with FCC Regulations

Warranty and Contact Information


PACKAGE CONTENTS

- HALO POWERJAM
- Standard USB to Micro USB Cable
- AUX Audio Cable
- Wrist Strap
- Operating Instructions


Side View

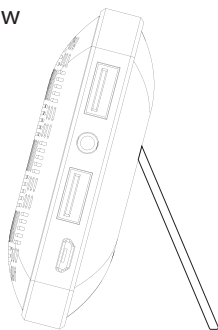

Front View

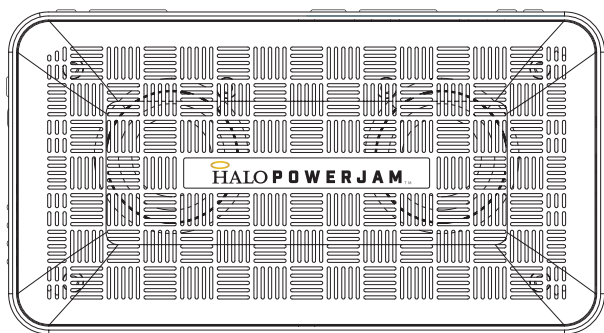 

Back View

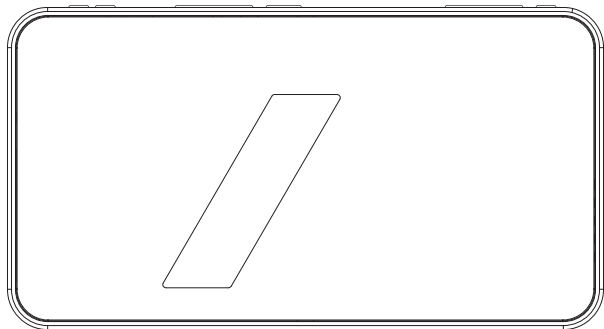 

OPERATING INSTRUCTIONS

Prior to first use, it is recommended to full charge the HALO POWERJAM.

Quickly press and release the power button to display the power level on the HALO POWERJAM. The LED battery indicator will display four solid white lights when fully charged

HALO POWERJAM POWER LEVEL INDICATORS

Indicator Lights	How to Read	Amount of Charge
● ○ ○ ○	One solid light	0%-25%
● ● ○ ○	Two solid lights	26%-50%
● ● ● ○	Three solid lights	51%-75%
● ● ● ●	Four solid lights	76%-100%


HALO POWERJAM POWER LEVEL INDICATORS: WHILE CHARGING

Indicator Lights	How to Read	Amount of Charge
⚡ ○ ○ ○	First light blinking	0%-25%
● ⚡ ○ ○	First light solid, second light blinking	26%-50%
● ● ⚡ ○	First two lights solid, third light blinking	51%-75%
● ● ● ⚡	First three lights solid, fourth blinking	76%-99%
● ● ● ●	All four lights solid	100% fully charged

CHARGING THE HALO POWERJAM

The HALO POWERJAM operates on a rechargeable, Li-ion battery. First, use the **Standard USB to Micro USB Cable** (included) and connect

 the **Micro USB** tip into the **Micro USB** port on the HALO POWERJAM. Next, connect the **Standard USB** end into your computer's USB port or a USB adapter (not included).

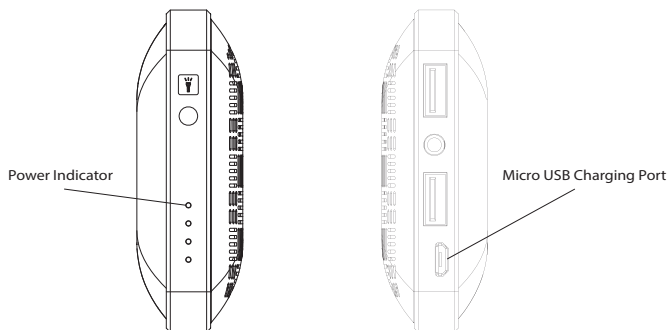

While charging, the **Power Indicator** will turn on and flash. When battery is fully charged, the **Power Indicator** will stop flashing, disconnect the **Standard USB to Micro USB Cable**.

Note: The Micro USB Charging Port located on this unit is only used for charging the internal battery of the HALO POWERJAM.

TURNING THE HALO POWERJAM ON/OFF

Press and hold the **Power Button** on the top of the speaker to turn the HALO POWERJAM on. The speaker will emit an audio tone indicating that the HALO POWERJAM is on. When the unit is on, press and hold the **Power Button** to turn the HALO POWERJAM off. The speaker will emit an audio tone indicating that the HALO POWERJAM is powered off.



Note: Once the unit is powered on, the **Power Indicator** will illuminate indicating the battery level. The **Bluetooth Pairing Mode Indicator** will flash to indicate that the unit is discoverable/ ready to pair or to reconnect with a device.

When the HALO POWERJAM is idle for 90 minutes, it will automatically power off.

PAIRING A BLUETOOTH ENABLED DEVICE

Instructions below are for initial Bluetooth pairing to link the HALO POWERJAM to a new Bluetooth device.

1. When the speaker is turned on, the **Bluetooth Pairing Mode Indicator** will flash indicating that the HALO POWERJAM is ready to pair with your Bluetooth device.
2. Activate Bluetooth on your device, and set it to search for compatible devices.
3. From the list of found devices, select: "HALO POWERJAM".
4. If your Bluetooth devices prompts you for a passkey, enter digits 0000 (four zeros) and press OK.

When pairing complete, the HALO POWERJAM will emit the audio tone "Halo POWERJAM Paired". The **Bluetooth Pairing Mode Indicator** changes from flashing to solid white.

Note: Only one playback unit can be connected to the HALO POWERJAM at a time. If the HALO POWERJAM is already connected to another playback unit, the HALO POWERJAM will not appear on the Bluetooth selection list. The HALO POWERJAM must be unpaired before it can become discoverable by another Bluetooth enabled device.

During **Bluetooth Pairing Mode**, if the unit is idle for 7 minutes, the **Bluetooth Pairing Mode Indicator** (flashing) will automatically turn off. You can activate the **Bluetooth Pairing Mode** again by pressing any button on the HALO POWERJAM.

CONNECTING A PAIRED DEVICE

 
After turning on the HALO POWERJAM, it will automatically search for the last paired device. The **Bluetooth Pairing Mode Indicator** will begin flashing. If the HALO POWERJAM finds the paired Bluetooth device, it will emit an audible sound and **Bluetooth Pairing Mode Indicator** will stop flashing.

After successfully pairing, you can begin to play music wirelessly from your Bluetooth device to the HALO POWERJAM.

CONTROL BUTTONS AND PLAYBACK

The control buttons are located on the top of the speaker.

Top View

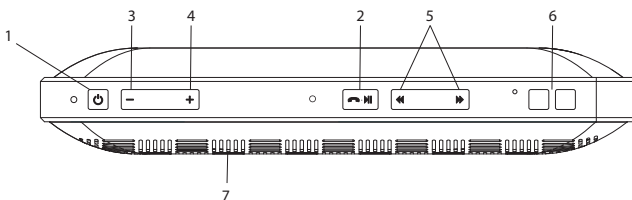


1. **Power Button**

- Press and hold to turn on or off

- The speaker will emit an audible sound indicating when the HALO POWERJAM is on/ off.

2. **Button**

- Press to play or pause the current track.
- When receiving an incoming call on your cell phone, press this  button once to answer the phone, press this button again to end the call.

3. - **Button**

- Press and hold this button to adjust volume level down

4. + **Button**

- Press and hold this button to adjust volume level up.
- Short press this button once to advance to the next track.

5. **«» Next/ Previous Song**

- Press this button to advance to the next track or go to the previous track.
- Short press this button once to return to the beginning of current track or previous track

HANDS-FREE SPEAKER PHONE

1. Pair your cell phone to the HALO POWERJAM via Bluetooth as described above.
2. When receiving an incoming call on your cell phone, press the **Button** on the HALO POWERJAM to switch the incoming call from cell phone to the speaker. The HALO POWERJAM will emit a short beep sound confirming the call was answered. Complete your call using the built-in microphone and speaker.
3. Adjust the volume of your cell phone to obtain the desired sound level.
4. To end the call, just press the button again. The HALO POWERJAM will emit a short beep sound confirming the call has ended. If you were playing music from your cell phone to the HALO POWERJAM before answering the call, the music will automatically resume playing when you hang up.

CHARGING ELECTRONIC DEVICES

For personal electronic devices with a Micro USB port, plug the Micro USB tip of the provided cable into your electronic device. Next, plug the Standard USB end of the provided cable into the HALO POWERJAM output port, charging will commence.

The HALO POWERJAM is also compatible with the charging cable provided with your personal electronic device. To use, plug the Standard USB end of the cable into the HALO POWERJAM USB output port. Plug the other end of the Standard USB cable into your electronic device, charging will commence.

Note: You can continue to listen the HALO POWERJAM while charging.

AUXILIARY INPUT

If you are using an iPod, MP3/MP4 player or other mobile phone which can not connect to the HALO POWERJAM via Bluetooth directly, you can still play music on the HALO POWERJAM via an **AUX Audio Cable**.

1. Plug one end of the **AUX Audio Cable** (included) into the headphone or line out jack on your player. Plug the other end of the cable into the HALO POWERJAM **AUX-IN Jack**.
2. Turn on the external audio source and play your device.
3. The volume level can be controlled through the HALO POWERJAM.

Notes: Use all other functions on the external device when in **AUX Mode**. During **AUX Mode**, if you pull out the **Audio Cable** from the HALO POWERJAM, it will automatically change to Bluetooth mode.

FLASHLIGHT OPERATION

1. Press the flashlight button on the left side of the speaker to turn the flashlight on.
2. When the flashlight is on, press the flashlight button again to activate the **SOS Mode**.
3. When the **SOS Mode** is on, press the flashlight button again to turn off.

MAINTENANCE AND CARE

After prolonged use, the internal battery will become weak and the operation may become intermittent. When the battery is low, only the bottom LED light of the **Power Indicator** will be on. When the battery is very low, it will rapidly flash to alert you to recharge the internal battery as soon as possible.

To maximize battery life: once the battery is fully discharged, immediately recharge (regardless of whether you plan to use this unit or not). If you do not plan to use the battery for an extended period of time (one week or longer), we recommend that you fully charge the battery. For longer periods of storage, please recharge the battery at least every two months to maintain the battery in optimum condition.

To clean the exterior surface, you can wipe it using a dry, soft cloth. Do not use chemicals, solvents or sprays. Keep objects and liquids away from any openings/vents of the HALO POWERJAM.

SAFETY PRECAUTIONS

This HALO POWERJAM has been designed and manufactured to ensure your personal safety when used in the directed manner. Improper use can result in potential hazard.

Please read all safety and operating instructions carefully before

installation and use. Keep these instructions handy for future reference.

- The HALO POWERJAM should not be used near water or wet areas such as bathtubs, showers, bathrooms, sinks, swimming pools or basements.
- To reduce the risk of fire or electric shock, do not expose the HALO POWERJAM to rain or moisture. Keep the HALO POWERJAM away from dripping, splashing, or any objects filled with liquids. Do not place anything on HALO POWERJAM.
- Keep away from heat sources, including but not limited to: open flame sources, radiators, stoves, ovens, cars, and amplifiers that produce heat.
- Do not expose HALO POWERJAM or batteries to fire or sunshine.
- Do not puncture, crush or subject to mechanical shock.
- Do not disassemble .
- Unplug the charger when batteries are fully charged or not in use.
- Li-ion batteries must be recycled. Do not dispose of in the trash.

SPECIFICATIONS

Battery Capacity:	3.7V, 6000mAh
Micro USB Input Charging:	5VDC, 500mA
Battery Charging Time:	5-7 Hours (varies by charging current)
Max Play Time:	16 Hours (varies by volume level and audio content)
USB Output:	5V, 2.1A x2
Bluetooth version:	4.1
Bluetooth Transmitter Frequency Range:	2.402GHz-2.480GHz
Bluetooth Transmission Range:	approx. 10 meters
Dimensions (W x D x H):	148 x 80 x 25mm
Weight:	285g
Working Temperature:	0°C~35°C
Working Humidity:	20%~80%

TROUBLESHOOTING GUIDE

Fault	Cause	Solution
Internal battery not charging	The power adapter (not included) is not plugged into a wall outlet or the USB cable is not plugged into the micro USB port on the speaker	Plug the power adapter (not included) into a wall outlet and plug the USB cable into the micro USB port on the speaker
	Wall outlet is not functioning.	Plug another device into the same outlet to confirm the outlet is functioning correctly.
	Computer USB port is not functioning.	Make sure your computer power is turned on and try another USB port.
No sound	The battery is too low.	Recharge the battery.
	The speaker is not linked with the cell phone.	Go through "Bluetooth Operation" process to link the speaker.
	Volume set too low.	Increase the volume of your device.
No audio signal via Bluetooth connection	Speaker is not paired to the audio source.	Check whether a connection exists. If necessary, pair the speaker again to the audio source.
	Volume is too low.	Increase the volume on speaker/ audio source.
Speaker cannot be connected	Audio source is switched off	Switch on audio source
	Bluetooth is switched off at the audio source.	Switch on Bluetooth function in the audio source.
	Bluetooth version is not supported.	Use a different external device.
Poor sound quality from Bluetooth® device	Bluetooth device is almost out of range of speaker	Move your Bluetooth device closer to speaker

COMPLIANCE WITH FCC REGULATIONS

“Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.”

“NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.”

LIMITED WARRANTY

HALO INTERNATIONAL SECZ LTD warrants its products to be free from defects in material and workmanship under normal use. Conditions are as follows:

- During the first 90 days from date of purchase, HALO INTERNATIONAL SECZ LTD will repair or replace the defective product.
- HALO INTERNATIONAL SECZ LTD will, subject to inspection, repair the defective product or replace it with a new or reconditioned unit. The return must be accompanied by a Return Merchandise Authorization (RMA) number to be issued upon request, and must be shipped prepaid. We do not offer shipping rebates at this time. If this is something you would like to add please give me a call to discuss.
- Warranty is void if the product has been improperly handled or misused in any way, or if the label and/or bar-coded warranty label has been removed or tampered with.
- Where applicable, all requests for warranty returns must be accompanied by a proof of purchase.
- The warranty does not extend to the electronic equipment that is used or which incorporates with any of our products and accessories. HALO INTERNATIONAL SECZ LTD shall not be held responsible for the improper use of its products.
- For all questions or exchange requests, please call 888-907-6274, or email us at support@halo2cloud.com



H®

FOR TECHNICAL SUPPORT PLEASE
EMAIL US AT:

SUPPORT@HALO2CLOUD.COM

OR

CALL US AT: **888-907-6274**

HALO INTERNATIONAL SEZC LTD
68 WEST BAY ROAD
GEORGETOWN, GRAND CAYMAN, KY1-1003

WWW.BESTHALO.COM