 


# BRAND

## Portable Bluetooth Speaker

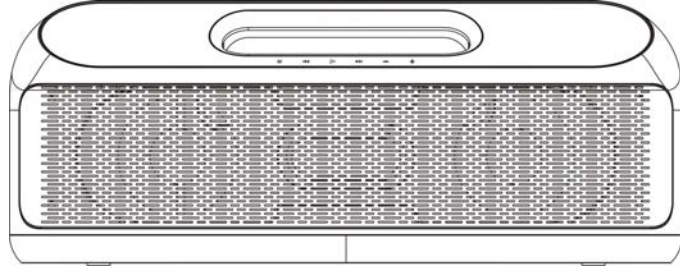

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

Model No. :MW-1361B



## **IMPORTANT SAFETY INSTRUCTIONS**

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacture's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug the apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified personnel. Servicing is required when the

apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

14. CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

15. Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.

16. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.

17. CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

18. WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

29. WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable.

20.  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

21.




- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

- Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.



22.  Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

23. No naked flame sources, such as lighted candles, should be placed on the apparatus.

24. Attention should be drawn to environmental aspects of battery disposal.

25. Use of the apparatus in moderate climates.

#### **COMPLIANCE WITH FCC REGULATIONS**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference.
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

#### **INDUSTRY CANADA REGULATORY INFORMATION**

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Changes or modifications to your device not expressly approved by the party responsible for compliance can void the user's authority to operate the equipment.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Les modifications apportées à votre appareil et non expressément approuvées par la partie responsable de la conformité peuvent annuler le droit de l'utilisateur à utiliser l'équipement.

**Industry Canada Regulatory Information**

 
CAN ICES-3(B)/NMB-3(B)

Avis d'Industrie Canada


CAN ICES-3(B)/NMB-3(B)

**LOCATION OF CONTROLS**

Top View

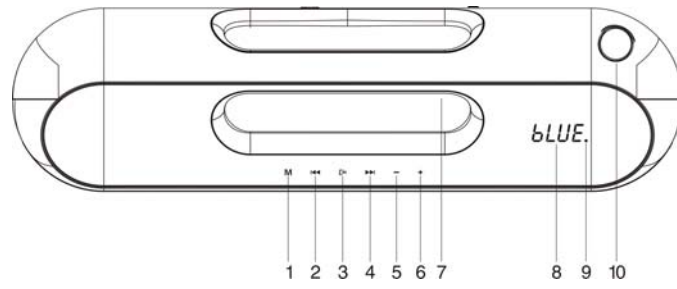

Back View

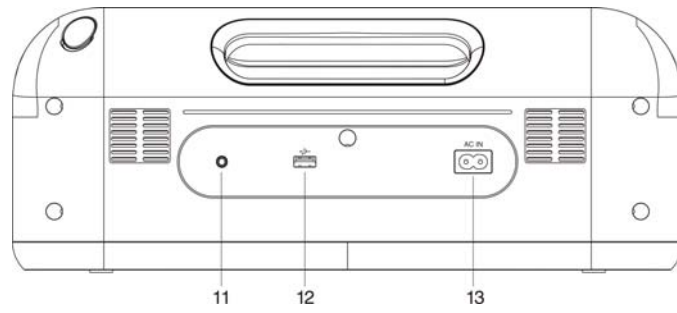 

### 1. M (MODE) Button

.To select different play modes: Bluetooth/FM/USB/Aux

### 2. ⏮ Button

- In Bluetooth or USB mode : Tap this button once to return to the beginning of current track or previous track.
- In FM mode:
  - .Press and hold this button to auto search and automatically save up all the stations with strong signals in sequence. It will automatically play the No. 1 station saved once the auto searching is finished.
  - .Tap this button continuously to manually tune to desired station.

### 3. Play/Pause ▶|| (On/Off) button

- ♦ Press and hold this button to turn the unit On or Off.
- ♦ In Bluetooth or USB playback mode: to play/ pause current playback
- ♦ In Bluetooth mode: when receiving an incoming call on your cell phone, tap this button once to answer the phone, tap this button again to end the call or ignore the incoming call.
- ♦ In FM mode: to select the preset stations in sequence

### 4. ▶▶ Button

- In Bluetooth or USB mode : Tap this button once to advance to the next track.
- In FM mode:
  - .Press and hold this button to auto search and automatically save up all the stations with strong signals in sequence. It will automatically play the No. 1 station saved once the auto searching is finished.



.Tap this button continuously to manually tune to desired station.

**5. -Button**

Press this button to adjust volume level down.

**6. + Button**

- Press this button to adjust volume level up

**7. Built-in Microphone**

**8. LED Display**

**9. Battery Status Indicator (Green color)**

- Rapid flashing =low battery
- ◆ While charging :
  - Flashing =charging
  - Steady Green= full charged

**10. Telescopic Antenna**

**11. Aux-In Jack**

**12. USB port**

**13. AC Socket**

## POWER SOURCES

### Power Supply

This unit is designed to operate on AC 100-240V~50/60 Hz household mains supply or the built-in rechargeable Li-ion battery.

### Connect To AC Power

Before using this new Wireless speaker the first time, you should connect it to AC (mains) power.

- 1.Plug the connector of AC cord into the AC socket on the back of the speaker unit.

2. Plug the AC cord plug into a convenient AC wall outlet.
3. The green color battery charging indicator will light up & charging begins.
3. Press and hold the ►|| Button to turn on the unit, the LED display will light up.
4. Press and hold the ►|| Button again to turn off the unit.
5. Remove the AC cord out of the wall outlet if you want to switch off the main voltage completely.

#### **OPERATING THE SPEAKER IN BLUETOOTH MODE**

Bluetooth involves a technology for wireless radio connection of devices over a short distance. Devices with Bluetooth standard are transmitting between 2.402 and 2.480 GHz in the ISM band (Industrial, Scientific and Medical). Interference can be caused, for example by WLAN-networks, DAB radios, cordless phones, or microwave ovens which work on the same frequency band.

- This speaker offers you the possibility to use a Bluetooth enabled device. The functional radius is limited to approx. 10 metres depending on the surroundings and the unit used.
- If your playing device supports the A2DP profile (Advanced Audio Distribution Profile) and has a music-player function, then you can also wirelessly transfer music to the device. The A2DP profile involves a multi-vendor Bluetooth profile. By streaming, stereo-audio signals are wirelessly transferred between the playing device (source) and the receiving device.

- Due to the different device manufacturers, models, and software versions, a full functionality cannot be guaranteed.

### **Pairing (Linking) A Bluetooth Enabled Cell Phone Or Other Bluetooth Enabled Device To The Speaker**

If the speaker has never been paired with a Bluetooth device before . You need to follow the pairing instructions below to link the speaker with your Bluetooth device .

1. When the speaker turned on, press the “M” button repeatedly, until “bLUE” is shown on the display. The “bLUE” symbol flashes to show that the speaker is ready to pair (link) with your Bluetooth device .
2. Activate Bluetooth on the compatible device, and set it to search for compatible devices.
3. Select the speaker name:”MW-1361B” from the list of found devices.

**Tips:** Only one playback unit can be connected to the speaker. If the speaker is already connected to another playback unit, the speaker will not appear in the BT selection list.



4. If your device asks for a passkey (depending on the device manufacturers, model, and software version), then enter digits “0000” (four zeros) and press OK.

If pairing has been carried out successfully, a beep sound is heard, meanwhile, the “bLUE” symbol stops flashing.

**If the speaker has ever been paired with a Bluetooth device before. You need to follow the pairing instructions below to link the speaker with your Bluetooth device .**

1. After turning on the speaker, the speaker will search for the last paired device. If the unit finds the paired Bluetooth device, a beep sound is heard and **The “bLUE” symbol** stop flashing .
2. After successfully pairing (linking) , you can begin playing music from your Bluetooth device wirelessly to the speaker .
3. Press the + / - button on the speaker to adjust to the desired volume level .
4. To stop the unit, press and hold the Play/Pause on main unit to turn off the device.

#### **Using The Speaker as a Handfree Bluetooth Speakerphone**

1. Link your cell phone to the speaker via Bluetooth as described above .
2. When receiving an incoming call on your cell phone , tap  button on the speaker to switch the incoming call from cell phone to the speaker. A short beep sound will be heard confirming the call was answered. Complete your call using the built-in microphone and speaker.
3. Adjust the volume control of your cell phone to obtain the desired sound level.
4. To end the call, just tap the  button again, a short beep sound will be heard and the call will end. If you were playing music from your cell phone to the speaker before answering

the call, the music will automatically resume playing when you hang up.

## LISTENING TO FM RADIO

### Extend the Antenna

Extend the telescopic antenna fully and adjust the angle of antenna for best reception.

### Tuning and Playing the Radio

1. Press M button until the FM frequency appears on the display to enter FM Radio mode.
2. Press and hold the “▶▶” or “◀◀” button until the frequency digits on display begins to scan then release the button, the unit will auto search from low-end frequency toward high-end frequency and automatically save up all the stations with strong signals in sequence. It will automatically play the No. 1 station saved once the auto searching is finished.
3. Press the ▶|| button to select the preset station in sequence
4. Press the “▶▶” or “◀◀” button to manually tune to desired station.

### Notes:

- Manual tune to select weaker stations that might be by skipped during automatic tuning
- If the automatic tuning does not stop on the exact frequency of the station, for example, it stops on 100.8MHz instead of

100.6MHz, press the “▶▶|” or “|◀◀” button to fine tune to the exact frequency of the desired station.

### **USB port**

- This device has been developed in line with the latest technical advances in the USB filed. The wide range of different USB storage devices of all types which are currently on the market, unfortunately do not allow us to guarantee full compatibility with all USB storage devices. For this reason, in rare cases there may be problems in playing back files from USB storage devices. This is not a malfunction of the device. USB port can connect to USB drive, iPod, etc., but don't connect to PC.

1. Press the M button repeatedly, until “USB” is shown on the display to enter into the USB mode.
2. Connect a USB storage device directly into the port, after a few seconds, it will start music playback automatically.
3. Press “+” or “-” button to raise up/lower the volume level.
4. Press “▶▶|” button to skip to next track or press “|◀◀” button to the previous track.

### **NOTE:**

- The USB port is also designed for charging external devices during any mode other than USB mode.


### **OPERATING THE SPEAKER IN AUX-IN MODE**

If you are using an iPod, MP3/MP4 player or other mobile phone which can not connect this unit via bluetooth directly, you can still play it on the speaker via an audio connecting cable.

1. Plug one end of the 3.5mm audio cable (included) into the headphone or line out jack on your player, plug the other end of cable into the unit AUX-IN jack of the speaker.
2. Turn on the external audio source and play your device.
3. Press M Button until "AUH" shows up in the display to enter the AUX-IN mode.
4. The volume level can now be controlled through the main unit. Operate all other functions on the external device as usual.

**Notes:**

1). If you're connected to the Line out Jack of your external device, then you only need to adjust the volume control of this speaker. If you're connected to the Headphone Jack of your external device, then you may need to adjust both the volume control of your external device and the volume control of this unit to find the most desirable volume setting.

2) Press and hold the  button to turn off the unit when you finish listening.

Don't forget to turn off the power of your external device as well.

**OPERATING ON BATTERY POWER**

A fully charged battery provides approximately three hours of use at maximum volume. The rate of battery discharge varies with the volume setting. You can extend the battery playback time by reducing the volume.

**Battery Status Indicator**

The battery status indicator is normally off to conserve battery power. When the internal battery capacity is very low, the battery Indicator will rapidly flash to alert you to recharge the internal battery as soon as possible.

**Charging The Battery For First Time**

Charge the built-in Li-ion battery a minimum of 4 hours prior to first use.

- 1.) Plug the unit into the AC wall outlet using the included AC cord.
- 2.) The battery charging indicator flashes while charging and it stops flashing when the unit is fully charged.

Unplug the AC cord from the AC wall outlet once the battery is fully charged.

**Notes:**

1. Charging time will vary if you are listening to music while charging the internal battery.
2. To prolong the life of a rechargeable battery, it is recommended to completely discharge it before fully charging it again .
3. Rechargeable batteries need to be cycled for maximum performance and longer battery life. If you don't use the player that often, be sure to recharge the battery at least once a month in order to keep the internal battery working properly.



 **Battery Note and Care**

Do not burn or bury batteries.

Do not puncture or crush.

Do not disassemble.

Li-ion batteries must be recycled. Do not dispose of in the trash.

Use only chargers rated for Li-ion cells. Be sure the charger's voltage and current settings are correct for the battery pack being charged.

Charge batteries on a fireproof surface and away from flammable items or liquids. Batteries should NEVER be left unattended while charging. Only adults should charge the batteries.

Unplug the power cord when the battery is fully charged or not in use.

**CARE AND MAINTENANCE**

- ◆ Do not subject the unit to excessive force, shock, dust or extreme temperature.
- ◆ Do not tamper the internal components of the unit.
- ◆ Clean the unit with a damp (never wet) cloth except metal contact or speaker grille, Solvent or detergent should never be used.
- ◆ Avoid leaving your unit in hot, humid or dusty places.
- ◆ Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
- ◆ Always keep your finger dry and clear before touching all the buttons.

- ◆ Do not dispose of batteries in fire, batteries may explode or leak.

### Troubleshooting Guide

Should you experience difficulties in the use of this player, please refer to the following chart.

Fault	Cause	Solution
Unit cannot be operated.	Unit crashes and "hangs".	Disconnect from the mains for around 5 seconds. Then switch the unit on again.
No Charging	Wall outlet is not functioning.	Plug another device into the same outlet to confirm the outlet is working.
NO Sound	The battery is dead.	Recharge the battery.
	The speaker is not linked with the cell phone.	Go through "Speaker Operations" process to link the speaker.
	Volume set too low.	Increase the volume of your device.
No audio signal via the Bluetooth connection	Speaker is not paired to the audio source.	Check whether a connection exists. If necessary, pair the speaker again to the audio source.
	Volume too low	Increase the volume on

		the speaker
		Increase the volume on the audio source.
Speaker cannot be connected	Pairing does not work	Check whether the audio source supports the A2DP protocol
	Audio source is switched off	Switch on the audio source
	Bluetooth is switched off at the audio source.	Switch on the Bluetooth function in the audio source.
	Bluetooth version is not supported.	Use a different playback unit.
Poor sound quality from a Bluetooth® device	Bluetooth device is almost out of range of the MW-1361B	Move your Bluetooth device closer to the MW-1361B
Radio interference.	Too close to a radio tower.	Move your speakers to see if the interference goes away.

### **SPECIFICATIONS**

Power supply:	AC100-240V~50/60Hz
USB output:	DC 5V==1A
Battery capacity:	3.7V 1800mAH
Power Consumption:	16W
FM Frequency Range:	87.5-108MHz
Working Temperature:	0-35°C
Working Humidity:	20%-80%

Accessories : AC power cord, 3.5mm AUX-in Cable, User Manual

The right to make technical and design modifications in the course of Continuous product development remains reserved.