

BRAND

 
2.0CH Wireless Soundbar



PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

Model No.:MW-1480



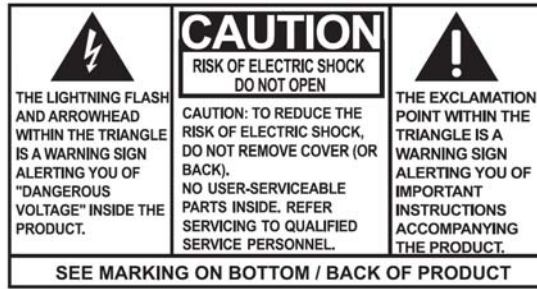

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD. DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: REMOVE THE BATTERY FROM REMOTE CONTROL IF WILL NOT BE IN USE FOR A LONG PERIOD. DO NOT PLACE BATTERY IN TRASH. PLEASE RECYCLE OR MANAGE AS HAZARDOUS WASTE.

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or others apparatus (including amplifiers) that produce heat.

- Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



Portable Cart Warning

- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture has been exposed to rain or moisture, does not operate normally, or has been dropped.
- **WARNING:** Please refer the information on exterior bottom (enclosure) for electrical and safety information before installing or operating the apparatus.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain

or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.

- **WARNING:** The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- **WARNING:** The main plug is used as disconnect device, the disconnect device shall remain readily operable.

ADDITIONAL SAFETY INFORMATION

- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases. Should be placed on the apparatus.
- Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, or in a bookcase or cabinet that may prevent air flow through vent openings.
- Do not place lighted candles, cigarettes, cigars, etc. on the product.
- Care should be taken so that objects do not fall into the product.
- Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.
- The marking information is located at the rear panel of apparatus.
- The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- No naked flame sources such as lighted candles should be placed on the apparatus.
- Only use this in moderate climates.

IMPORTANT BATTERY INFORMATION

Warning: Your product contains a battery and charging system which is designed to work in temperatures that do not exceed 50°C (122°F). Leaving this product in a closed automobile or the trunk of an automobile where temperatures may result in

permanent battery damage, fire, or explosion. Please remove your product from the automobile when you exit, do not place your product in the trunk of your automobile, and do not leave your product in any location where temperatures may exceed 50°C.

ECOLOGY

Your product must be disposed of properly according to local laws and regulations. Because this product contains a battery, the product must be disposed of separately from the household waste.

PRECAUTIONS FOR THE UNIT

- Do not use the unit immediately after transportation from a cold place to a warm place; condensation problems may result.
- Do not store the unit near fire, places with high temperature or in direct sunlight. Exposure to direct sunlight or extreme heat (such as inside a parked car) may cause damage or malfunction.
- Clean the unit with a soft cloth or a damp chamois leather. Never use solvents.
- The unit must only be opened by qualified personnel.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference.
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio

communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

INDUSTRY CANADA REGULATORY INFORMATION

 
This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Changes or modifications to your device not expressly approved by the party responsible for compliance can void the user's authority to operate the equipment.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Les modifications apportées à votre appareil et non expressément approuvés par la partie responsable de la conformité peuvent annuler le droit de l'utilisateur à utiliser l'équipement.

Controls

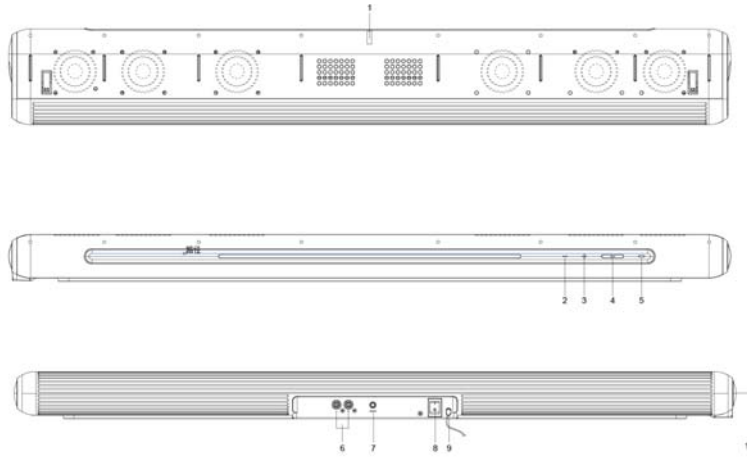

1. Remote Control Sensor

2. - Button

Press to decrease the volume level.

3. +Button

Press to increase the volume level.

4.  /SOURCE Button

Press this button to turn ON or press and hold to Standby mode.

Short press this button to select different play mode during power on

5. LED Status Indicator

Red=Standby mode

Blue=Bluetooth mode

Green=AUX/RCA input mode

Yellow=USB mode

6. RCA (L, R) Socket

 
7. 3.5mm Aux-in Socket





8. Main Power ON/OFF Switch

9. Power Cord

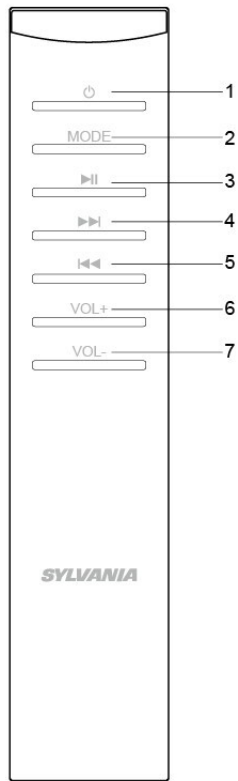10. USB Port

 
REMOTE CONTROL



1.  Power Button (On/Standby)
2. MODE button (Bluetooth/AUX)
3. Play/Pause  button
4.  Next track
5.  Previous track
6. Volume – Button
7. Volume + Button:

Before using the speaker

Plug the power cord to a wall outlet (120V~60Hz).

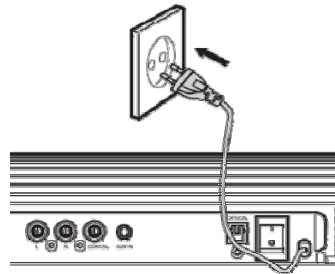

3.5mm AUX/RCA inputs operation

1. Ensure that the unit is well connected to the TV or other audio device via the accompanied 3.5mm-RCA cable.
2. While in Power On mode, press the /SOURCE button on the main unit repeatedly or press the AUX/RCA button on remote control to select the AUX/RCA input mode.
3. Operate your audio device directly for playback features.
4. Press “▲” / “▼” button on remote control or tap the “+” / “-” button on the main unit to raise/lower the volume level.

Note: If you want to play it via RCA input, make sure the 3.5mm Aux in socket is not plugged in

USB port

This Sound bar has also been developed in line with the latest technical advances in the USB filed. The wide range of different USB storage devices of all types which are currently on the market, unfortunately do not allow us to guarantee full compatibility with all USB storage devices. For this reason, in rare cases there may be problems in playing back files from USB storage devices. This is not a malfunction of the device.

1. While in Power On mode, press the /SOURCE button on the main unit repeatedly until the status indicator changed to yellow or press the MODE button on remote control to select the USB mode.
2. Connect a USB storage device directly into the port, after a few seconds, it will start music playback automatically.
3. Press the “◀◀” or “▶▶” button on remote control to skip to the

previous or next track

4. Press "VOL+" / "VOL-" button on remote control or tap the "+" / "-" button on the main unit to raise/lower the volume level.

NOTE:

- The USB port is also designed for charging external devices during any mode other than USB mode.

Connect and use the speaker (Bluetooth mode)

1. Power on the speaker.
2. Change to Bluetooth mode. Status indicator will blink blue.
3. On your Bluetooth device, turn on Bluetooth and scan for device in its Bluetooth menu. When "MW-1480" appears on the device list of your Bluetooth device, select and connect (enter 0000 if pass code is required).
4. The status indicator will change to solid blue after Bluetooth pairing established.

Specification

Speaker

Input voltage: 120V~60Hz

USB output: DC 5V 1A

Power Consumption: 48W

Standby power Consumption: ≤0.5W

Transmission distance: up to 30ft (10m)

Working temperature: 0°C-35°C

Bluetooth version: V2.1+EDR

Supported protocol: A2DP, AVRCP

Frequency response: 60Hz-18KHz@-10dB

Signal noise ratio: 50dB

Dimension: 33.10x4.37x2.17in (840x111x55mm)

Weight: 95 oz (2.7Kg)

Remote control

Use battery: 2pcsxAAA

Working current: 8mA

Sleep mode current: 8μA

Operation distance: up to 10ft (3m)

Operation angel: $\pm 30^\circ$

Trouble shooting

Problem	Cause	Solution
No audio signal via the Bluetooth connection	Speaker is not paired to the audio source.	Check whether a connection exists. If necessary, pair the speaker again to the audio source.
	Volume is setting too low	Increase the volume on the speaker Increase the volume on the the audio source.
Speaker cannot be connected	Pairing does not work	Check whether the audio source supports the A2DP protocol
	Audio source is switched off	Switch on the audio source
	Bluetooth is switched off at the audio source.	Switch on the Bluetooth function in the audio source.
	Existing Bluetooth connection is not unpaired normally	Unpaired current Bluetooth connection and pair again.
Poor sound quality from a Bluetooth® device	Bluetooth device is almost out of range of the speaker	Move your Bluetooth device closer to this unit
Remote control is not functioning properly.	Low battery.	Replace the battery with correct type AAA
	Remote Control is not pointed toward the IR window	Point the Remote Control toward the unit IR window, use within 10 feet of the unit.