



**Uconnect® 8.4/8.4N**

# Owner's Manual Supplement

# TABLE OF CONTENTS

SECTION		PAGE
1	SAFETY GUIDELINES .....	3
2	INTRODUCTION .....	5
3	RADIO MODE .....	11
4	DISC MODE .....	31
5	USB/IPOD® MODE .....	37
6	AUX MODE .....	45
7	SD CARD MODE .....	49
8	BLUETOOTH® MODE .....	57
9	NAVIGATION (8.4N ONLY) .....	61
10	MORE & SETTINGS .....	115



---

# Safety Guidelines

## CONTENTS

---

■ Safety Guidelines . . . . .	4
-------------------------------	---

### Safety Guidelines

Ensure that all persons read this manual carefully before using the radio system. It contains instructions on how to use the system in a safe and effective manner.

#### **WARNING!**

**ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect® features and applications in this vehicle. Only use Uconnect® when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.**

- Use these features only when safe to do so. If prolonged viewing of the screen is required, park in a safe location and set the parking brake.
- Stop use immediately if a problem occurs. Failure to do so may cause injury or damage to the product. Return it to your authorized dealer to repair.
- Make certain the volume level of the system is set to a level that still allows you to hear outside traffic and emergency vehicles.
- The law in some states prohibits the Front Seat DVD Viewer. As a result, it may be disabled prior to delivery to you. If you move to another state, you should consult your dealer for the proper enable/disable setting for your new state. Currently all states prohibit front seat video viewers except for: Arkansas, Delaware, Georgia, Hawaii, Idaho, Iowa, Kentucky, Mississippi, Missouri, Montana, North Dakota and Ohio.

---

# INTRODUCTION

## CONTENTS

---

■ Uconnect® 8.4 System . . . . .	.6
----------------------------------	----

## Uconnect® 8.4 System

### **WARNING!**

**ALWAYS** drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect® features and applications in this vehicle. Only use Uconnect® when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.





### 1 — ON/OFF & VOLUME

Push the ON/OFF button to turn the system ON or OFF. Rotate the rotary knob to adjust the Volume.

**NOTE:** If the ignition is switched OFF with the radio in standby mode, the radio memorizes the standby mode when the ignition is turned ON again. Push the ON/OFF VOLUME Control to turn the radio ON. It is possible to eject the Disc and to display the time if the system is off. The navigation software is always working when the ignition is switched ON, even if the radio is in standby mode.

### 2 — CLIMATE CONTROLS (Manual Controls)

Refer to Climate Controls in your vehicles Owner's Manual on the DVD for further details.

### 3 — RADIO

Press the "Radio" button on the touchscreen to enter the Radio Mode. The different tuner modes; AM, FM and SAT can be selected by pressing the corresponding buttons in the Radio Mode.

### 4 — PLAYER

Press the "Player" button on the touchscreen to access media sources such as: Disc, USB Device and AUX as long as the requested media is present.

### 5 — CONTROLS

Press the "Controls" button on the touchscreen to access the Settings list. Controls such as; Heated Seats, Heated Steering Wheel, Vented Seats, etc. can be selected or turned ON/OFF by pressing the corresponding button.

## 6 — CLIMATE (On-Screen Controls)

Refer to Climate Controls in your vehicle's Owner's Manual on the DVD for further details.

## 7 — NAV (8.4N Only)

Press the "Nav" button on the touchscreen to access the Navigation feature. Refer to the Navigation section in this manual for further details.

## 8 — PHONE — If Equipped

Press the "Phone" button on the touchscreen to access the Uconnect® Phone feature. Refer to the Uconnect® Phone section in the Owner's Manual on the DVD for further details.

## 9 — MORE

Press the "More" button on the touchscreen to access additional options. Options available such as: Settings

and SiriusXM Travel Link (if equipped) can be accessed by pressing the corresponding button in the More Menu.

## 10 — ENTER/BROWSE & TUNE/SCROLL

Push the ENTER/BROWSE button to accept a highlighted selection on the screen. Rotate the TUNE/SCROLL rotary knob to scroll through a list or tune a radio station.

## 11 — SD CARD SLOT

Insert an SD Card containing audio media files to play them through the vehicle's sound system.

## 12 — DISC SLOT

When inserting a disc, ensure the label is facing up. Push the Eject button to eject the disc.



# RADIO MODE

## CONTENTS

---

■ Overview . . . . .	.13	■ Setting Presets . . . . .	.16
■ Common Radio Functions. . . . .	.13	□ Browse in AM/FM . . . . .	.17
□ ON/OFF & Volume Control. . . . .	.13	□ Scrolling Preset List. . . . .	.18
□ Tune/Scroll Control. . . . .	.14	□ Preset Selection From List . . . . .	.18
■ Seek And Direct Tune Functions . . . . .	.14	□ Deleting Presets . . . . .	.18
□ Seek Up. . . . .	.14	□ Return to Main Radio Screen . . . . .	.18
□ Fast Seek Up. . . . .	.14	■ SiriusXM Satellite Radio Mode — If Equipped . . .19	
□ Seek Down. . . . .	.14	□ No Subscription . . . . .	.20
□ Fast Seek Down . . . . .	.15	□ Acquiring SiriusXM Subscription . . . . .	.20
□ Direct Tune. . . . .	.15	□ Replay . . . . .	.21

## 12 RADIO MODE

□ Favorites . . . . .	.22	□ Traffic & Weather . . . . .	.26
□ Traffic & Weather . . . . .	.23	■ Audio . . . . .	.26
■ Browse In Sat . . . . .	.23	□ Balance/Fade . . . . .	.26
□ All. . . . .	.23	□ Equalizer . . . . .	.27
□ Presets . . . . .	.24	□ Speed Adjusted Volume. . . . .	.28
□ Favorites . . . . .	.24	□ Music Info Cleanup. . . . .	.28
□ Game Zone. . . . .	.25	□ Surround Sound — If Equipped . . . . .	.29

## Overview



The radio is equipped with the following modes:

- FM
- AM
- SAT SiriusXM Satellite Radio (if equipped)

Press the “Radio” button, bottom left corner, to enter the Radio Mode. The different tuner modes; AM, FM, and SAT, can then, be selected by pressing the corresponding buttons in the Radio mode.

## Common Radio Functions

The following operations offer the same functionality across all Radio Modes, and further instructions are provided where differences exist.

### ON/OFF & Volume Control



Push the ON/OFF Volume Control knob to turn on the radio. Push the ON/OFF Volume Control knob a second time to turn off the radio.

The electronic Volume control turns continuously (360 degrees) in either direction, without stopping. Turning the ON/OFF Volume Control knob clockwise increases the Volume and counterclockwise decreases it.

When the audio system is turned on, the sound will be set at the same Volume level as last played.

### **Tune/Scroll Control**



Turn the rotary TUNE/SCROLL control knob clockwise to increase or counterclockwise to decrease the radio station frequency. Push the ENTER/BROWSE button to choose a selection.

### **Seek And Direct Tune Functions**

The Seek Up and Down functions are activated by pressing the Double Arrow buttons to the right and left of the radio station display, or by pushing the left Steering Wheel Audio Control (if equipped) up or down.

#### **Seek Up**

Press and release the “Seek Up” button to tune the radio to the next listenable station or channel.

During a Seek Up function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

#### **Fast Seek Up**

Press and hold the Seek Up button on the touchscreen to advance the radio through the available stations or channels at a faster rate, the radio stops at the next available station or channel when the button on the touchscreen is released.

#### **Seek Down**

Press and release the Seek Down button on the touchscreen to tune the radio to the next listenable station or channel.

During a Seek Down function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

## Fast Seek Down

Press and hold the Seek Down button to advance the radio through the available stations or channel at a faster rate, the radio stops at the next available station or channel when the button is released.

## Direct Tune



Press the “tune” button located at the bottom of the radio screen. The Direct Tune screen is available in AM, FM, and SAT radio modes and can be used to direct tune the radio to a desired station or channel.





Press the available number button on the touchscreen to begin selecting a desired station. Once a number has been entered, any numbers that are no longer possible (stations that cannot be reached) will become deactivated/grayed out.

Once the last digit of a station has been entered, the Direct Tune screen will close and the system will automatically tune to that station.

The selected Station or Channel number is displayed in the Direct Tune text box.

### **Undo**

You can backspace an entry by pressing the bottom left “Undo” button.

### **GO**

When pressed, the “GO” button allows the you to commit an entry, at which time the radio will tune to the entered station or channel and close the Direct Tune Screen.

### **Screen Close**

The “X” button at the top right closes the Direct Tune Screen. The Direct Tune Screen also automatically closes if no activity occurs within 10 seconds.

### **Setting Presets**

The Presets are available for all Radio Modes, and are activated by pressing any of the six “Preset” buttons, located at the top of the touchscreen.

When you are receiving a station that you wish to commit into memory, press and hold the desired numbered button for more than two seconds or until you hear a confirmation beep.

The Radio stores up to 12 presets in each of the Radio modes. A set of 6 presets are visible at the top of the radio touchscreen.

You can switch between the two radio presets by pressing the “Arrow” button located in the upper right of the radio screen.

## Browse in AM/FM



3

When in either AM or FM, the Browse Screen provides a means to edit the Presets List and is entered by pressing the “browse” button on the touchscreen.

## Scrolling Preset List



Once in the Browse Presets screen, you can scroll the preset list by rotation of the Tune Knob, or by pressing the Up and Down arrow buttons on the touchscreen, located on the right of the touchscreen.

## Preset Selection From List

A Preset can be selected by pressing of the listed “Presets”, or by pushing the ENTER/BROWSE button on the TUNE/SCROLL knob to select the currently highlighted Preset.

When selected, the radio tunes to the station stored in the Preset and returns to the main radio screen.

## Deleting Presets

A Preset can be deleted in the Presets Browse screen by pressing the “Trash Can” icon for the corresponding Preset.

## Return to Main Radio Screen

You can return to the Main Radio Screen, by pressing the “X” button on the touchscreen when in the Browse Presets screen.

## SiriusXM Satellite Radio Mode — If Equipped



SiriusXM Satellite Radio uses direct satellite-to-receiver broadcasting technology to provide clear, coast to coast radio content. SiriusXM is a subscription based service.

SiriusXM Premier has over 160 channels. Get every channel available on your satellite radio, and enjoy all

you want, all in one place. Hear commercial-free music plus sports, news, talk and entertainment.

Get all the premium programming, including Howard Stern, every NFL game, Oprah Radio®, every MLB® and NHL® game, every NASCAR® race, Martha Stewart and more. And get 20+ extra channels, including SiriusXM Latino, offering 20 channels of commercial free music, news, talk, comedy, sports and more dedicated to Spanish language programming.

SiriusXM services require subscriptions, sold separately after the 12-month trial included with the new vehicle purchase. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call SiriusXM at 1-866-635-2349 to cancel.** See SiriusXM Customer Agreement for complete terms at [www.siriusxm.com](http://www.siriusxm.com). All fees and programming subject to change. Our satellite service is available only to those at least 18 and older in the

48 contiguous USA and D.C. Our Sirius satellite service is also available in PR (with coverage limitations). Our Internet radio service is available throughout our satellite service area and in AK and HI. © 2014 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.

This functionality is only available for radios equipped with a Satellite receiver. To receive satellite radio, the vehicle needs to be outside with a clear view to the sky.

If the screen shows Acquiring Signal, you might have to change the vehicle's position to receive a signal. In most cases, the satellite radio does not receive a signal in underground parking garages or tunnels.

### **No Subscription**

Radios equipped with a Satellite receiver, require a subscription to the SiriusXM Service. When the Radio does not have the necessary subscription, the Radio is able to receive the Preview channel only.

### **Acquiring SiriusXM Subscription**

To activate the SiriusXM Satellite Radio subscription, call 1-800-643-2112 (USA residents) or 1-888-534-7474 (Canadian Residents). You will need to provide the Sirius ID (ESN) located at the bottom of the Channel 0 screen.

The SiriusXM Satellite Mode is activated by a press of the SAT button on the touchscreen.

When in SiriusXM Satellite mode:

- The SAT button is highlighted.
- The SiriusXM Presets are displayed at the top of the screen.

- The Genre is displayed below the Presets Bar.
- The SiriusXM Channel Number is displayed in the center.
- The Program Information is displayed at the bottom of the Channel Number.
- The SiriusXM function buttons are displayed below the Program Information.

Tuning is done by operating the Tune Knob or by Direct Tune, similar to other Radio Bands, see Presets, browse, Tune Knob, and Direct Tune.

In addition to the tuning Operation functions common to all Radio modes, the replay, Traffic/Weather Jump, and fav button functions are available in SiriusXM Mode.

## Replay

The replay function provides a means to store and replay up to 22 minutes of music audio and 48 minutes of talk radio. Once the channel is switched, content in replay memory is lost.

Press the “Replay” button. The Play/Pause, Rewind/Forward and Live buttons will display at the top of the screen, along with the replay time.

You can exit by pressing the “Replay” button any time during the Replay mode.

## Play/Pause

Press the “Pause” or “Play” buttons to pause playing of the content at any time that the content is playing live or rewound content. Play can be resumed again by pressing the “Pause/Play” button.

## Rewind

Press the “RW” button to rewind the content in steps of five seconds. Pressing the “RW” button for more than two seconds rewinds the content. The Radio begins playing the content when the “RW” button is released.

## Forward

Each press of the “FW” button forwards the content in steps of five seconds. Forwarding of the content can only be done when the content is previously rewound, and therefore, can not be done for live content. A continuous press of the “FW” button also forwards the content. The Radio begins playing the content when the “FW” button is released.

## Live

Press the “Live” button to resume playing Live content.

## Favorites

Press the “Fav.” button to activate the favorites menu, which will time out in five seconds in absence of user interaction.

You can exit the Favorites Menu by a press of the “X” in the top right corner.

The favorites feature enables you to set a favorite artist, or song that is currently playing. The Radio then uses this information to alert you when either the favorite song, or favorite artist are being played at any time by any of the SiriusXM Channels.

The maximum number of favorites that can be stored in the Radio is 50.

## Fav. Artist

While the song is playing to set a Favorite Artist, press the “Fav.” button and then the “Fav. Artist” button.

## Fav. Song

While the song is playing to set a Favorite Song, press the “Fav.” button and then the “Fav Song” button.

## Traffic & Weather

Press the “Traffic & Weather” button to tune to a SiriusXM Traffic & Weather channel. To set a Traffic & Weather alert for any one of the cities in the Browse list, see Browse in SAT.

When the Traffic & Weather button is pressed the Jump Traffic & Weather channel is tuned.

If the Traffic & Weather alert City is not set you are presented with a pop up to allow you to select the favorite city using the Browse Screen.

## Browse In Sat

Press the “Browse” button to edit Presets, Favorites, Game Zone and Jump settings, along with providing the SiriusXM Channel List.

This Screen contains many sub menus. You can exit a sub menu to get back to a parent menu by a press of the “Back Arrow.”

## All

Press the All button on the touchscreen at the left of the Browse Screen.

## Channel List

Press the Channel List to display all the SiriusXM Channel Numbers along with the corresponding Genre. You can scroll the Channel list by pressing the up and down arrows, located on the right side of the screen. Scrolling can also be done by operating the Tune/Scroll Knob.



## Genre

Press the Genre button to display a list of Genres. You can select any desired Genre by pressing the Genre list, at which point, the Radio tunes to a channel with the content in the selected Genre.

## Presets

Press the “Presets” button located at the left of the Browse screen.

You can scroll the Presets list pressing the “Up and Down” arrows, located at the right side of the screen. Scrolling can also be done by operating the TUNE/SCROLL knob.

## Preset Selection

A Preset can be selected by pressing any of the listed Presets, or by pushing the ENTER/BROWSE button on

the TUNE/SCROLL knob to select the currently highlighted Preset. When selected, the Radio tunes to the station stored in the Preset, and returns to the main Radio screen.

## Deleting a Preset

A Preset can be deleted in the Presets Browse screen by pressing the “Trash Can” icon for the corresponding Preset.

## Favorites

Press the “Favorites” button, located at the left of the Browse screen.

The Favorites menu provides a means to Edit the Favorites list and to configure the Alert Settings, along with providing a list of Channels currently airing any of the items in the Favorites list.

You can scroll the Favorites list pressing the “Up and Down” arrows, located at the right side of the screen. Scrolling can also be done by operating the TUNE/SCROLL knob.

### **Remove Favorites**

Press the “Remove Favorites” tab at the top of the screen. Press the “Delete All” button to delete all of the Favorites or press the “Trash Can” icon next to the Favorite to be deleted.

### **Alert Settings**

Press the “Alert Setting” tab at the top of the screen. The Alert Settings menu allows you to choose from a Visual alert or Audible and Visual alert when one of your favorites is airing on any of the SiriusXM channels.

### **Game Zone**

Press the “Game Zone” button on the touchscreen, located at the left of the Browse screen. This feature provides you with the ability to select teams, edit the selection, and set alerts.

### **On Air**

Press the “On-Air” tab at the top of the screen. The On-Air list provides a list of Channels currently airing any of the items in the Selections list, and pressing any of the items in the list tunes the radio to that channel.

### **Select Teams**

Press the “Select Teams” button on the touchscreen to activate the League Scroll list. Press the chosen league and a scroll list of all teams within the league will appear, then you can select a team by pressing the corresponding box. A check mark appears for all teams that are chosen.

### **Remove Selection**

Press the “Remove Selection” tab at the top of the screen. Press the “Delete All” button on the touchscreen to delete all of the Selections or press the Trash Can icon next to the Selection to be deleted.

### **Alert Settings**

Press the “Alert Setting” tab at the top of the screen. The Alert Settings menu allows you to choose from “Alert me to on-air games upon start” or “Alert upon score update” or both when one or more of your selections is airing on any of the SiriusXM channels.

### **Traffic & Weather**

Press the “Traffic & Weather” button to tune to a SiriusXM Traffic & Weather channel.

Press the “Up and Down” arrows to the right side of the list to view all the available cities. This operation can also be done with operation of the TUNE/SCROLL knob.

Press the check box next to the desired City. A check mark appears besides the selected City.

### **Audio**

Press the “Audio” button to activate the Audio settings screen to adjust Balance/Fade, Equalizer and Speed Adjusted Volume.

You can return to the Radio screen by pressing the “X” button located at the top right.

### **Balance/Fade**

Press the “Balance/Fade” button to Balance audio between the front speakers or fade the audio between the rear and front speakers.



Pressing the “Front,” “Rear,” “Left,” or “Right” buttons or press and drag the blue “Speaker” icon to adjust the Balance/Fade.

## Equalizer

Press the “Equalizer” button to activate the Equalizer screen.



Press the “+ or –” buttons, or by pressing and dragging over the level bar for each of the equalizer bands. The level value, which spans between  $\pm 9$ , is displayed at the bottom of each of the Bands.

## Speed Adjusted Volume



Press the “Speed Adjusted Volume” button to activate the Speed Adjusted Volume screen.

Press the “Speed Adjusted Volume” button to select between “OFF,” “1,” “2” or “3.” This will decrease the radio volume relative to a decrease in vehicle speed.

## Music Info Cleanup



Press the “On” button to activate the Music Info Cleanup. Press “Off” to deactivate this feature.

When Music Cleanup is On, the radio uses the Gracenotes database to display standard normalized information for song title, artist, album, etc.

## Surround Sound — If Equipped



Press the “On” button to activate Surround Sound. Press “Off” to deactivate this feature.

When Surround Sound is on, you can hear audio coming from every direction as in a movie theatre or home theatre system.



# DISC MODE

## CONTENTS

---

■ Overview . . . . .	.32	■ Source. . . . .	.34
□ Inserting Compact Disc . . . . .	.32	■ Repeat . . . . .	.34
□ Eject Button — Ejecting A Disc . . . . .	.33	■ Shuffle . . . . .	.34
■ Seek Up/Down . . . . .	.33	■ Info . . . . .	.34
□ Fast Seek Up. . . . .	.33	■ Tracks . . . . .	.35
□ Fast Seek Down . . . . .	.33	■ Audio . . . . .	.35
■ Browse . . . . .	.34		



## Overview

Disc Mode is entered by either inserting a Disc or by pressing the “Player” button located on the bottom of the display. Once in Player Mode, press the “Source” button and select Disc.



A “No Disc” message will be displayed on the screen in the Disc mode when a Disc is not present in the Radio.

## Inserting Compact Disc

Gently insert one Disc into the Disc player with the Disc label facing up. The Disc will automatically be pulled into the player and the Disc icon will illuminate on the radio display. If a Disc does not go into the slot more than 1.0 in (2.5 cm), a disc may already be loaded and must be ejected before a new disc can be loaded.

If you insert a disc with the ignition ON and the radio ON, the unit will switch to Disc mode and begin to play when you insert the disc. The display will show the track number, and index time in minutes and seconds. Play will begin at the start of track 1.

**CAUTION!**

- This CD Player will accept 4-3/4 in (12 cm) discs only. The use of other sized discs may damage the CD player mechanism.
- Do not use adhesive labels. These labels can peel away and jam the player mechanism.
- Uconnect® 8.4 is a single Disc player. Do not attempt to insert a second Disc if one is already loaded.

**Eject Button — Ejecting A Disc**

Press the EJECT button to eject the Disc.

If you push EJECT and do not remove the disk within 10 seconds, it will be reloaded. If the Disc is not removed, the radio will reinsert the Disc but will not play it.

A disc can be ejected with the radio OFF and ignition in Accessories (ACC) mode.

**Seek Up/Down**

Press and release the “Right Arrow” button for the next selection on the Disc. Press and release the “Left Arrow” button to return to the beginning of the current selection, or return to the beginning of the previous selection if the Disc is within the first second of the current selection.

**Fast Seek Up**

Press and hold the “Right Arrow” button and the Disc player will begin to fast forward through the current track until the button is released.

**Fast Seek Down**

Press and hold the “Left Arrow” button and the Disc player will begin to rewind through the current track until the button is released.

## Browse

Press the “Browse” button to display the browse window. The left side of the browse window displays a list of ways you can browse through the contents of the Disc. If supported by the device, you can browse by Folders, Artists, Playlists, Albums, Songs, etc. Press the desired button on the left side of the screen. The center of the browse window shows items and its sub-functions, which can be scrolled by pressing the “Up and Down” buttons to the right. The TUNE/SCROLL knob can also be used to scroll.

## Source

Press the “Source” button on the touchscreen to select the desired audio source, Disc/USB/SD Card/AUX/Bluetooth®. This screen will time out after a few seconds and return to the main radio screen if no selection is made.

## Repeat

Press the “Repeat” button to toggle the repeat functionality. The “Repeat” button is highlighted when active. The Radio will continue to play the current track, repeatedly, as long as the repeat is active.

## Shuffle

Press the “Shuffle” button to play the selections on the compact disc in random order to provide an interesting change of pace. Press the “Shuffle” button a second time to turn this feature off.

## Info

Press the “Info” button to display the current track information. Press the “Info” button a second time to cancel this feature.

## Tracks

Press the “trks” button to display a pop up with the Song List. The currently playing song is indicated by an arrow and lines above and below the song title.



Pressing the “trks” button while the pop up is displayed will close the pop up.

## Audio

Refer to Operating Instructions — Radio Mode for adjusting the audio settings.



# USB/iPod® MODE

## CONTENTS

---

■ Overview . . . . .	.38	□ Playlists — If Equipped . . . . .	.41
□ Inserting USB/iPod® Device . . . . .	.38	□ Songs . . . . .	.41
■ Seek Up/Down . . . . .	.38	□ Albums . . . . .	.42
□ Fast Seek Up. . . . .	.39	□ Genres . . . . .	.42
□ Fast Seek Down . . . . .	.39	■ Source. . . . .	.42
■ Browse . . . . .	.39	■ Repeat . . . . .	.42
□ ABC Jump . . . . .	.39	■ Shuffle . . . . .	.42
□ Search . . . . .	.40	■ Info . . . . .	.42
□ Folders — If Equipped. . . . .	.41	■ Tracks . . . . .	.43
□ Artist . . . . .	.41	■ Audio . . . . .	.43

## Overview

USB/iPod® Mode is entered by either inserting a USB device or iPod and cable into the USB Port or by pressing the “Player” button located on the bottom of the display. Once in Player Mode, press the “Source” button and select iPod®.



## Inserting USB/iPod® Device

Gently insert the USB/iPod® device into the USB Port. If you insert a USB/iPod® device into the USB port, with the ignition ON and the radio ON, the unit will switch to USB/iPod® mode and begin to play. The display will show the track number and index time in minutes and seconds. Play will begin at the start of track 1.

## Seek Up/Down

Press and release the right arrow button on the touchscreen for the next selection on the USB device/iPod®. Press and release the left arrow button on the touchscreen to return to the beginning of the current selection, or return to the beginning of the previous selection if the USB device/iPod® is within the first second of the current selection.

### Fast Seek Up

Press and hold the “Right Arrow” button and the USB device/iPod will begin to fast forward through the current track until the button is released.

### Fast Seek Down

Press and hold the left arrow button on the touchscreen and the USB device/iPod® will begin to rewind through the current track until the button on the touchscreen is released.

### Browse

Press the “Browse” button to display the browse window. The left side of the browse window displays a list of ways you can browse through the contents of the USB device/iPod®. If supported by the device, you can browse by Folders, Artists, Playlists, Albums, Songs, etc. Press the desired button on the left side of the screen. The center of the browse window shows items and it’s sub-functions,

which can be scrolled by pressing the “Up and Down” buttons to the right. The TUNE/SCROLL knob can also be used to scroll.

### ABC Jump

Press the “ABC Jump” button tab at the top of the screen to search an alpha numeric keypad used to search by letter/number for a certain Folder, Artist, Song, Album or Genre. Press one letter to select all contents that start with that letter. Press the “123” button to display all contents that start with numbers. Press the “123” button again to return to letters. Press the “X” button to exit the ABC Jump feature.

**NOTE:** Many features of this system are speed dependent. For your own safety these features may be grayed out and not accessible while the vehicle is in motion. Pull over at a safe location to complete your task.





### Search

Press the “Search” tab at the top of the screen to display the Keyboard. This allows you to enter a folder or file name to be searched.



### Up Arrow

Press the “Up Arrow” button to toggle between Upper Case and Lower Case keys.

## ABC, ÅØÛ and 1234!&#@

Press the “ABC” key to activate a keyboard with Alphabetic characters, or press the ÅØÛ to activate a keyboard with accented characters or press the 1234!&#@ key to activate a keyboard with Numeric plus Special characters.

## Folders — If Equipped

Press the “Folders” button on the left side of the screen to display the Folders scroll menu. The Folders list consists of folders and files sorted alphanumerically, followed by a list of files sorted similarly. You can browse the contents of a subfolder by pressing the Folder Name in the list. Press the “Back Arrow” button to return or back up to a previous folder level.

## Artist

Press the “Artist” button on the left side of the screen to display the Artists list in which you can Scroll, Search and Jump to operations.

## Playlists — If Equipped

Press the “Playlists” button on the left side of the screen to display the current playlist information.

## Songs

Press the “Songs” button on the left side of the screen to display the Songs list in which the user can Scroll, Search and Jump to operations.

The currently playing song is displayed with a black background and lines both above and below the title.

## Albums

Press the “Albums” button on the left side of the screen to display the Albums list in which you can Scroll, Search and Jump to operations.

## Genres

Press the “Genres” button to display the Genres list in which you can Scroll, Search and Jump to operations.

## Source

Press the “Source” button on the touchscreen to select the desired audio source, Disc/USB/SD Card/AUX/Bluetooth®. This screen will time out after a few seconds and return to the main radio screen if no selection is made.

## Repeat

Press the “Repeat” button to toggle the repeat functionality. The “Repeat” button is highlighted when active. The Radio will continue to play the current track, repeatedly, as long as the repeat is active.

## Shuffle

Press the “Shuffle” button to play the selections on the USB/iPod® device in random order. Press the “Shuffle” button a second time to turn this feature off.

## Info

Press the “Info” button to display the current track information. Press the “Info” button a second time to cancel this feature.

## Tracks

Press the “trks” button to display a pop up with the Song List. The currently playing song is indicated by an arrow with lines above and below the song title. When in the Tracks List screen you can rotate the TUNE/SCROLL knob to highlight a track (indicated by the line above and below the track name) and then push the ENTER/BROWSE knob to start playing that track.



Pressing the “trks” button while the pop up is displayed will close the pop up.

## Audio

Refer to Operating Instructions — Radio Mode for adjusting the audio settings.



---

# AUX MODE

## CONTENTS

---

■ Overview . . . . .	.46	■ Audio . . . . .	.47
■ Source. . . . .	.47		

## Overview

AUX Mode is entered by inserting an AUX device using a cable with a 3.5 mm audio jack into the AUX port or by pressing the “Player” button located at the bottom of the display. Once in Player Mode, press the “Source” button and select AUX.



## Inserting Auxiliary Device

Gently insert the Auxiliary device cable into the AUX Port. If you insert an Auxiliary device with the ignition ON and the radio ON, the unit will switch to AUX mode and begin to play when you insert the device cable.

## Controlling The Auxiliary Device

The control of the auxiliary device (e.g., selecting playlists, play, fast forward, etc.) cannot be provided by the radio; use the device controls instead. Adjust the volume with the ON/OFF VOLUME rotary knob, or with the volume of the attached device.

**NOTE:** The vehicle radio unit is acting as the amplifier for audio output from the Auxiliary device. Therefore if the volume control on the Auxiliary device is set too low, there will be insufficient audio signal for the radio unit to play the music on the device.

## Source

Press the “Source” button on the touchscreen to select the desired audio source, Disc/USB/SD Card/AUX/Bluetooth®. This screen will time out after a few seconds and return to the main radio screen if no selection is made.

## Audio

Refer to Operating Instructions — Radio Mode for adjusting the audio settings.





# SD CARD MODE

## CONTENTS

---

■ SD Card Mode. . . . .	.50	□ Repeat . . . . .	.54
□ Overview . . . . .	.50	□ Shuffle . . . . .	.54
□ Seek Up/Down. . . . .	.50	□ Info . . . . .	.54
□ Browse. . . . .	.51	□ Tracks . . . . .	.55
□ Source . . . . .	.54	□ Audio . . . . .	.55

## SD Card Mode

### Overview

SD Card Mode is entered by inserting a SD Card containing music into the SD Card slot above the Disc slot on the Instrument Panel or by pressing the “Player” button located at the bottom of the display. Once in Player Mode, press the “Source” button and select SD Card.



### Inserting SD Card

Gently insert the SD Card into the SD Card slot. If you insert a SD Card with the ignition ON and the radio ON, the unit will switch to SD Card mode and begin to play when you insert the card. The display will show the track number, and index time in minutes and seconds. Play will begin at the start of track 1.

### Seek Up/Down

Press and release the “Right Arrow” button for the next selection on the SD Card. Press and release the “Left Arrow” button to return to the beginning of the current selection, or return to the beginning of the previous selection if the SD Card is within the first second of the current selection.

### Fast Seek Up

Press and hold the “Right Arrow” button and the SD Card will begin to fast forward through the current track until the button is released.

### Fast Seek Down

Press and hold the “Left Arrow” button and the SD Card will begin to rewind through the current track until the button is released.

### Browse

Press the “Browse” button to display the browse window. The left side of the browse window displays a list of ways you can browse through the contents of the SD Card. If equipped, you can browse by Folders, Artists, Playlists, Albums, Songs, etc. Press the desired button on the left side of the screen. The center of the browse window shows items and it’s sub-functions, which can be scrolled

by pressing the “Up and Down” buttons to the right. The TUNE/SCROLL knob can also be used to scroll.

### ABC Jump

Press the “ABC Jump” button tab at the top of the screen to display a alpha numeric keypad used to search by letter/number for a certain Folder, Artist, Song, Album or Genre. Press one letter to select all contents that start with that letter. Press the “123” button to search all contents that start with numbers. Press the “123” button to return to letters. Press the “X” button to exit the ABC Jump feature.

**NOTE:** Many features of this system are speed dependent. For your own safety these features may be grayed out and not accessible while the vehicle is in motion. Pull over at a safe location to complete your task.



### Search

Press the "Search" tab at the top of the screen to display the Keyboard. This allows you to enter a folder or file name to be searched.



### Up Arrow

Press the "Up Arrow" button to toggle between Upper Case and Lower Case keys.

## ABC, ÅØÛ and 1234!&#@

Press the “ABC” key to activate a keyboard with Alphabetic characters, or press the ÅØÛ to activate a keyboard with accented characters or press the 1234!&#@ key to activate a keyboard with Numeric plus Special characters.

## Folders — If Equipped

Press the “Folders” button on the left side of the screen to display the Folders scroll menu. The Folders list consists of folders, and files sorted alphanumerical, followed by a list of files sorted similarly. You can browse the contents of a sub-folder by pressing the “Folder Name” in the list. Press the “Back Arrow” button to return or back up to a previous folder level.

## Artist

Press the “Artist” button on the left side of the screen to display the Artists list in which you can Scroll, Search and Jump to operations.

## Playlists — If Equipped

Press the “Playlists” button on the left side of the screen to display the current playlist information.

## Songs

Press the “Songs” button on the left side of the screen to display the Songs list in which the user can Scroll, Search and Jump to operations.

The currently playing song is displayed with a black background and blue lines both above and below the title.

## Albums

Press the “Albums” button on the left side of the screen to display the Albums list in which you can Scroll, Search and Jump to operations.

## Genres

Press the “Genres” button to display the Genres list in which you can Scroll, Search and Jump to operations.

## Source

Press the “Source” button on the touchscreen to select the desired audio source, Disc/USB/SD Card/AUX/Bluetooth®. This screen will time out after a few seconds and return to the main radio screen if no selection is made.

## Repeat

Press the “Repeat” button to toggle the repeat functionality. The “Repeat” button is highlighted when active. The Radio will continue to play the current track, repeatedly, as long as the repeat is active.

## Shuffle

Press the “Shuffle” button to play the selections on the Auxiliary device in random order to provide an interesting change of pace. Press the “Shuffle” button a second time to turn this feature off.

## Info

Press the “Info” button to display the current track information. Press the “Info” button a second time to cancel this feature.

## Tracks

Press the “trks” button to display a pop up with the Song List. The currently playing song is indicated by an arrow with lines above and below the song title. When in the Tracks List screen you can rotate the TUNE/SCROLL knob to highlight a track (indicated by the line above and below the track name) and then push the ENTER/BROWSE knob to start playing that track.



Pressing the “trks” button while the pop up is displayed will close the pop up.

## Audio

Refer to Operating Instructions — Radio Mode for adjusting the audio settings.





# Bluetooth® MODE

## CONTENTS

---

■ Overview . . . . .	.58	■ Repeat . . . . .	.59
■ Seek Up/Down . . . . .	.58	■ Info . . . . .	.59
□ Fast Seek Up. . . . .	.58	■ Tracks . . . . .	.59
□ Fast Seek Down . . . . .	.58	■ Audio . . . . .	.60
■ Source. . . . .	.59		

## Overview

Bluetooth® Streaming Audio (BTSA) or Bluetooth® Mode is entered by pairing a Bluetooth® device, containing music, to the Uconnect® system.

Before proceeding, the Bluetooth® device needs to be paired through Uconnect® Phone in order to communicate with the Uconnect® System.

**NOTE:** See the pairing procedure in the Owner's Manual on the DVD for more details.

Once the Bluetooth® device is paired to the Uconnect® System, press the "Player" button located on the bottom of the display. Once in Player Mode, press the "Source" button and select "Bluetooth®."

## Seek Up/Down

Press and **release** the right arrow button on the touchscreen for the next selection on the Bluetooth® device. Press and **release** the left arrow button on the touchscreen to return to the beginning of the current selection, or return to the beginning of the previous selection if the Bluetooth® device is within the first eight seconds of the current selection.

## Fast Seek Up

Press and hold the "Right Arrow" button and the Bluetooth® device will begin to fast forward through the current track until the button is released.

## Fast Seek Down

Press and hold the "Left Arrow" button and the Bluetooth® device will begin to rewind through the current track until the button is released.

## Source

Press the “Source” button on the touchscreen to select the desired audio source, Disc/USB/SD Card/AUX/Bluetooth®. This screen will time out after a few seconds and return to the main radio screen if no selection is made.

## Repeat

Press the “Repeat” button to toggle the repeat functionality. The “Repeat” button is highlighted when active. The Radio will continue to play the current track, repeatedly, as long as the repeat is active.

## Info

Press the “Info” button to display the current track information. Press the “Info” button a second time to cancel this feature.

## Tracks

Press the “trks” button to display a pop up with the Song List. The currently playing song is indicated by a blue arrow and lines above and below the song title.



Pressing the “trks” button while the pop up is displayed will close the pop up.

## **Audio**

Refer to Operating Instructions — Radio Mode for adjusting the audio settings.

# NAVIGATION (8.4N ONLY)

## CONTENTS

---

■ SAFETY PRECAUTIONS AND IMPORTANT INFORMATION. . . . .	.65	□ Using The On-Screen Buttons . . . . .	.68
□ WARNING. . . . .	.65	□ Finding A Point Of Interest . . . . .	.68
□ CAUTION . . . . .	.66	□ Using The On-screen Keyboard . . . . .	.69
□ NOTICE. . . . .	.66	□ Adding Points To The Active Route . . . . .	.69
□ Map Data Information. . . . .	.66	□ Changing The Destination Of The Active Route . . . . .	.70
■ Getting Started. . . . .	.67	□ Taking A Detour . . . . .	.70
□ Setting Up Your System. . . . .	.67	□ Stopping The Route. . . . .	.70
□ Acquiring Satellites . . . . .	.67	■ Finding Locations. . . . .	.70
□ Main Menu. . . . .	.68	□ Finding An Address . . . . .	.70
		□ Using The Go! Page. . . . .	.71

- Setting A Home Location . . . . .72
- Viewing A List Of Recently Found Locations . . .73
- About Favorites . . . . .73
- Planning A Trip. . . . .74
- Using The Map Buttons. . . . .75
- Browsing The Map By Pressing The Touchscreen . . . . .75
- Entering Coordinates. . . . .76
- Speaking Commands . . . . .77
  - About Voice Commands . . . . .77
  - Activating Voice Command . . . . .77
  - About Icons And Tones . . . . .77
  - Tips for Using Voice Commands. . . . .77
- Navigating To A Popular Location Using Voice Commands. . . . .78
- Speaking An Address . . . . .79
- About The Map Pages . . . . .80
  - Viewing The Map While Navigating . . . . .80
  - About myTrends™ . . . . .81
  - Viewing Trip Information. . . . .82
  - Viewing The Turn List . . . . .83
  - Viewing The Next Turn . . . . .84
  - Viewing The Junction View . . . . .84
- Using The Tools. . . . .85
  - Viewing Current Location Information . . . . .85
  - Using Help. . . . .85

□ Using The World Clock . . . . .	.85	□ Route Preferences . . . . .	.91
□ Using The Calculator . . . . .	.85	□ Language Settings . . . . .	.92
□ Using The Unit Converter . . . . .	.86	□ About Traffic Subscriptions . . . . .	.93
■ Traffic . . . . .	.87	□ Restoring All Original Settings . . . . .	.93
□ Notice . . . . .	.87	■ Appendix . . . . .	.93
□ Subscription Activation . . . . .	.87	□ About GPS Satellite Signals . . . . .	.93
□ About The Traffic Icon . . . . .	.87	□ Updating The Software . . . . .	.93
□ Traffic On Your Route . . . . .	.88	□ Updating The Map Data . . . . .	.94
□ Viewing The Traffic Map . . . . .	.88	□ Custom POIs (Points of Interest) . . . . .	.94
□ Searching For Traffic Delays . . . . .	.88	■ SiriusXM Travel Link . . . . .	.96
■ Customizing The Navigation System . . . . .	.89	□ Fuel Prices . . . . .	.96
□ System Settings . . . . .	.90	□ Movie Listings . . . . .	.96
□ Changing The Map Settings . . . . .	.91		



**64 NAVIGATION (8.4N ONLY)**

□ Ski Info . . . . .	.97	□ Weather . . . . .	.98
□ Sports Scores . . . . .	.97	■ End-User License Agreements . . . . .	.98

## SAFETY PRECAUTIONS AND IMPORTANT INFORMATION

### WARNING

Read this information carefully before starting to operate the navigation system and follow the instructions in this manual. Neither the Chrysler Group LLC nor Garmin shall be liable for problems or accidents resulting from failure to observe the instructions in this manual.

Failure to avoid the following potentially hazardous situations could result in an accident or collision resulting in death or serious injury.

- Always drive safely. Only use the navigation features in this vehicle when it is safe to do so. You accept full responsibility for the use of the features in this vehicle.
- When navigating, carefully compare information displayed on the navigation system to all available navigation sources, including road signs, road closures,

road conditions, traffic congestion, weather conditions, and other factors that may affect safety while driving. For safety, always resolve any discrepancies before continuing navigation, and defer to posted road signs and road conditions.

- The navigation system is designed to provide route suggestions. It is not a replacement for driver attentiveness and good judgement. **Do not follow route suggestions if they suggest an unsafe or illegal maneuver or would place the vehicle in an unsafe situation.**
- Be careful of the ambient temperature. Using the navigation system at extreme temperatures can lead to malfunction or damage. Also note that the unit can be damaged by strong vibration, metal objects, or by water getting inside the unit.

**CAUTION**

The navigation system is designed to provide you with route suggestions. It does not reflect road closures or road conditions, weather conditions, or other factors that may affect safety or timing while driving.

Use the navigation system only as a navigational aid. Do not attempt to use the navigation system for any purpose requiring precise measurement of direction, distance, location, or topography.

The Global Positioning System (GPS) is operated by the United States government, which is solely responsible for its accuracy and maintenance. The government system is subject to changes that could affect the accuracy and performance of all GPS equipment, including the navigation system.

**NOTICE**

This navigation system can be used when the ignition key is turned to ON or ACC. To preserve the battery, however, it should be used with the engine running whenever possible. Using the navigation system for a long time with the engine switched off can cause the battery to run down.

**Map Data Information**

Garmin uses a combination of governmental and private data sources. Virtually all data sources contain some inaccurate or incomplete data. In some countries, complete and accurate map information is either not available or is prohibitively expensive.

## Getting Started

To access the Navigation system, press the “Nav” button on bottom of the screen.

## Setting Up Your System

When using your navigation system for the first time, complete the following tasks:

1. Acquire satellites.
2. Understand the main menu.

## Acquiring Satellites

The  bars indicate satellite strength.

Go to an open area, away from tall buildings and trees.






Acquiring satellite signals can take a few minutes.

## Main Menu



- 1 — Press To Find A Destination
- 2 — Press To View The Map
- 3 — Press To Stop A Route
- 4 — Press To Detour A Route
- 5 — Press To Open The Menu Of Tools
- 6 — Press To Open The Menu Of Settings

## Using The On-Screen Buttons

- Press and hold  to quickly return to the main menu.
- Press  and  to see more choices.
- Press and hold  and  to scroll faster.

## Finding A Point Of Interest



The detailed maps loaded in your navigation system contain points of interest, such as restaurants, hotels and auto services.


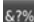
1. From the main menu, press **Where To? > Points of Interest**.
2. Select a category.
3. If necessary, select a subcategory.
4. Select a destination.
5. Press **Go!**.

## Finding A Location By Spelling The Name


1. From the main menu, press **Where To? > Points of Interest > Spell Name**.
2. Enter all or part of the name.
3. Press **Done**.
4. Select a destination.
5. Press **Go!**

## Using The On-screen Keyboard

- Press a character on the keyboard to enter a letter or number.
- Press “Space” to add a space.
- Press  to delete a character.
- Press and hold  to erase the entire entry.


- Press  to select the keyboard language mode.
- Press  to enter special characters, such as punctuation marks.

## Adding Points To The Active Route

1. While navigating a route, press  to return to the main menu.
2. From the main menu, press **Where To?**
3. Select a category.
4. If necessary, select a subcategory.
5. Select a destination.
6. Press **Go!**
7. Press **Add as a Via Point**.

## Changing The Destination Of The Active Route


Before you can change destinations you must be navigating a route.

1. Press  to return to the main menu.
2. Press **Where To?**.
3. Search for the location.
4. Press **Go!**.
5. Press **Set as a New Destination**.

## Taking A Detour


While navigating a route, you can use detours to avoid obstacles ahead of you, such as construction zones.

**NOTE:** If the route you are currently taking is the only reasonable option, the navigation system might not calculate a detour.

1. While navigating a route, press .

2. From the main menu, press **Detour**.

## Stopping The Route

1. While navigating a route, press .
2. From the main menu, press **Stop**.

## Finding Locations

The Where To? menu provides several different categories you can use to search for locations. To perform a simple search, see the “Getting Started” section.

## Finding An Address

**NOTE:** Depending on the version of the built in map data on your navigation system, the button names and the order of steps could be different than the steps below.

1. From the main menu, press **Where To? > Address**.
2. If necessary, change the state, the country, or the province.

3. Press **Spell City**.
4. Enter the city/postal code.

**NOTE:** If you are unsure of the city/postal code, press **Search All**.


5. Press **Done**.
6. If necessary, select the city/postal code.

**NOTE:** Not all map data provides postal code searching.

7. Enter the number of the address.
8. Press **Done**.
9. Enter the street name.
10. Press **Done**.
11. If necessary, select the street.
12. If necessary, select the address.

## Using The Go! Page

The Go! page opens when you select a location to navigate to.

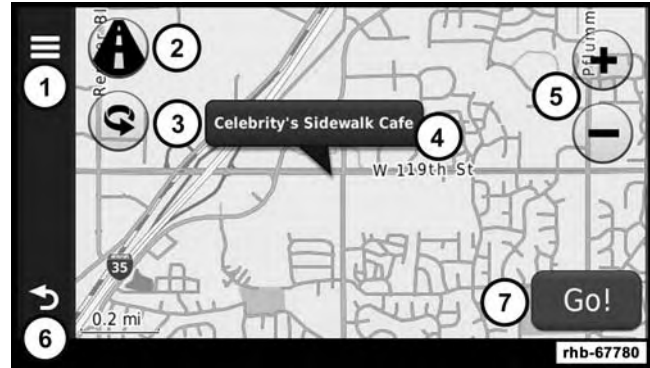

1. Press to call the selected location when your device is connected to phone, or to save the location to your favorites.



2. Press to switch between 2-D and 3-D view.
3. Press to rotate the view.
4. Press to view more information for the location.
5. Press to zoom in and out.
6. Press to return to the previous page. Press and hold to return to the main menu.
7. Press to create a turn-by-turn route to this location.

### Setting A Home Location

You can set your home location for the location you return to most often.


1. From the main menu, press **Where To? > Go Home**.
2. Select **Enter My Address, Use My Current Location or Recently Found**.

### Going Home


Before you can navigate to home you must set a home location.

- From the main menu, press **Where To? > Go Home**.

### Resetting Your Home Location

1. From the main menu, press **Where To? >  > Set Home Location**.
2. Select an option to change your address.

### Editing Your Home Location Information

1. From the main menu, press **Where To? > Favorites > Home**.
2. Press ** > Edit**.
3. Enter your changes.
4. Press **Done**.

## Viewing A List Of Recently Found Locations

Your navigation system stores the last 50 locations you have found.

- From the main menu, press **Where To? > Recently Found**.

## Clearing The List Of Recently Found Locations

From the main menu, press **Where To? > Recently Found >  > Clear > Yes**.

## About Favorites


You can save locations in your Favorites so you can quickly find them and create routes to them. Your home location is also stored in Favorites.

## Saving Your Current Location To Favorites

1. From the map, press the vehicle icon.
2. Press **Save**.
3. Enter a name.
4. Press **Done**.

The location is saved in **Favorites**.


## Saving Locations To Favorites

1. Search for the location.
2. From the Go! page, press  > **Save > OK**.

## Finding Favorites



1. From the main menu, press **Where To? > Favorites**.
2. If necessary, select a category.
3. Select a saved location.

## Editing Favorites

1. From the main menu, press **Where To? > Favorites**.
2. Select a category.
3. Select a favorite.
4. Press the information box.
5. Press  > **Edit**.
6. Select an option:
  - **Name**
  - **Phone Number**
  - **Categories**
  - **Change Map Symbol**
7. Edit the information.
8. Press **Done**.

## Planning A Trip

You can use Trip Planner to create and save a trip with multiple destinations.

1. From the main menu, press **Where To? > Trip Planner**.
2. Press .
3. Press **Select Start Location**.
4. Search for a location.
5. Press **Select**.
6. Press  to add an additional location.
7. Press **Select**.
8. Repeat steps 4–6 to add additional locations to your trip.
9. Press **Next**.

10. Enter a name.

11. Press **Done**.

### Navigating To A Saved Trip

1. From the main menu, press **Where To? > Trip Planner**.

2. Select a saved trip.

3. Press **Go!**.

### Editing A Saved Trip

1. From the main menu, press **Where To? > Trip Planner**.

2. Select a saved trip.

3. Press .

4. Select an option:





- Press **Rename Trip** to edit the trip name.
- Press **Edit Destinations** to add or delete locations.
- Press **Delete Trip** to delete the entire trip.

- Press **Optimize Order** to arrange your trip locations in the most efficient order.

### Using The Map Buttons

1. From the main menu, press **Where To? > Browse Map**.

2. Press anywhere on the map.

- Press  and  to zoom in and out.
- Press  to switch between 2D and 3D views.
- Press  to rotate the view.

### Browsing The Map By Pressing The Touchscreen

- Press an area on the map to select a location.
- An information box appears next to the location.
- Press and drag the map to view different parts of the map.
- Press the map twice to zoom in and center on a location.

## Finding A Location Using The Map

1. From the main menu, press **Where To? > Browse Map**.

2. Press a location.

An information box appears next to the location.

3. Press the information box.

4. Select an option:

- Press  > **Save**.

5. Press **Go!**.


## Setting A Simulated Location

You can use the GPS simulator to select another location, near which you can search for and save points of interest. This may be helpful when planning trips.

1. From the main menu, press **Tools > Settings > System > GPS Simulator > On**.

2. From the main menu, press **Where To? > Browse Map**.

3. Press an area on the map.

4. Press  > **Set Location**.

## Entering Coordinates

If you know the geographic coordinates of your destination, you can use your navigation system to navigate to the destination using the latitude and longitude coordinates.


1. From the main menu, press **Where To? > Coordinates**.

2. Press a field to enter the latitude and longitude data.

3. Press **View on Map**.

4. Press **Go!**.

## Changing The Map Coordinate Format

1. From the Home Screen, press **Where To? > Coordinates >  > Format.**
2. Select a format.

## Speaking Commands

### About Voice Commands



**NOTE:** The voice command feature is not available for all languages or regions.

The voice commands allow you to use your navigation system by speaking the words you see on the screen or by speaking certain commands.

### Activating Voice Command

- Press the “Voice Command” button.
- The navigation system enters voice command.

## About Icons And Tones

- The navigation system sounds two tones when it enters and exits voice recognition mode.
- A  red icon appears in the upper-right corner of the screen when the navigation system is not ready for your command.
- Wait until the  icon is green to speak your command.

## Tips for Using Voice Commands


- Speak in a normal voice directed at the navigation system.
- Speak commands as they appear on the screen.
- Respond to voice prompts from the navigation system as needed.
- Speak “Exit” to exit voice command.

## Navigating To A Popular Location Using Voice Commands


You can speak the names of very popular, well-known locations.

1. Press the voice command button.
2. Speak "Find by Name."
3. Listen for the voice prompt and speak the name of the location.

A list of locations appears.

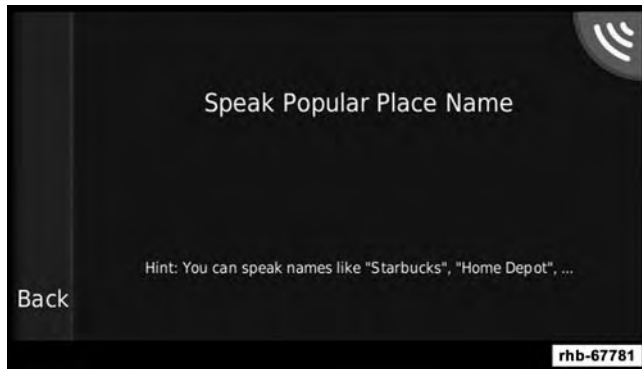

4. Speak the line number.

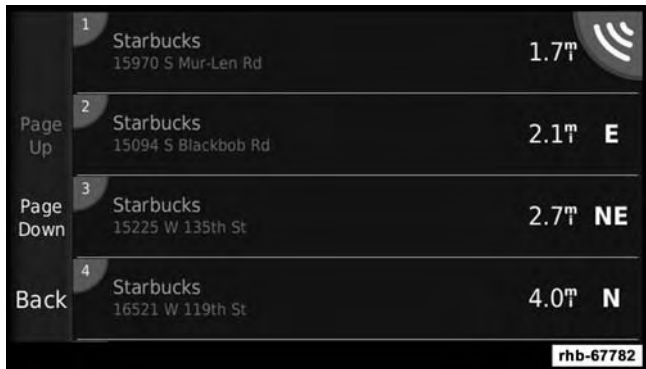

“Line 1”

5. Speak an option:

- Speak “Go!” to navigate to the location.
- Speak “Call” to call the location when connected to a compatible mobile phone.



### Speaking An Address

1. Speak “Voice Command.”
2. Speak “Find Address.”
3. Follow the on-screen prompts.



## About The Map Pages

### Viewing The Map While Navigating

#### NOTICE


In no event shall Garmin be liable for any incidental, special, indirect, or consequential damages, including, without limitation, damages for any traffic fines or citations, whether resulting from the use, misuse, or inability to use the product or from defects in the product. Some states do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you.

Your route is marked with a magenta line. A checkered flag marks your destination.

As you travel, your navigation system guides you to your destination with voice prompts, arrows on the map, and directions at the top of the map. If you depart from the original route, your navigation system recalculates the route and provides new directions.

A speed limit icon displaying the current speed limit may appear as you travel on major roadways.

## Using The Navigation Map

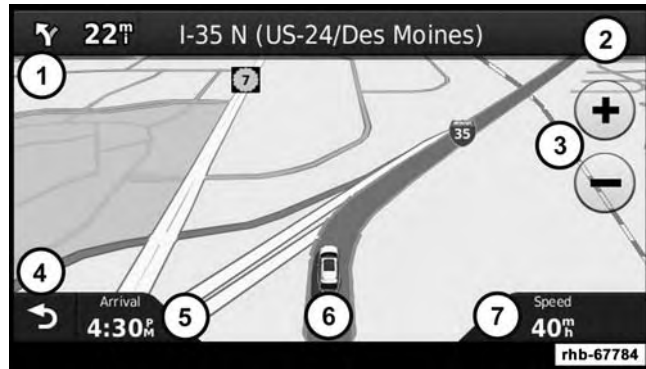

1. Press to view the next turn.

The turn indicator also tells you which lane you should be in to prepare for your next maneuver, when available.

2. Press to view the turn list.
3. Press to zoom in and zoom out.
4. Press to return to the main menu.
5. Press to display a different data field.
6. Press to view information for the location.
7. Press to view trip information.

### About myTrends™

When the myTrends™ feature is enabled, your estimated time of arrival and traffic information for your frequent destinations, like your workplace, automatically appear in the navigation bar at the top of the map.

When myTrends™ information appears in the navigation bar, you can press the navigation bar to view route options for the suggested destination.

### Enabling myTrends™

From the main menu press **Settings > Navigation > myTrends > Enabled**.

### Viewing Trip Information


The trip information page displays your present speed and provides statistics about your trip.

**NOTE:** If you make frequent stops, leave the navigation system turned on so it can accurately measure elapsed time during the trip.

From the map, press the **Speed** field.



### Resetting Trip Information

1. From the map, press the **Speed** field.
2. Press .


3. Select an option:

- Press **Reset Trip Mileage** to reset the information on the trip computer.
- Press **Reset Max. Speed** to reset the maximum speed.


### Viewing The Turn List

When you are navigating a route, you can view all of the turns for your entire route and the distance between turns.

1. From the map, press the text bar on the top of the map.

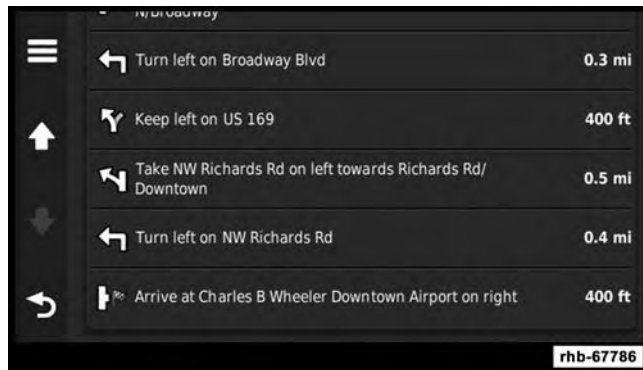

2. Select an option:

- Select a turn on the list to view the next turn.
- Press  > **Map** to view the entire route on the map.

## Viewing The Next Turn

Before you can view the next turn you must be navigating a route.

The next turn shows the turn on the map and the distance and time left before you reach the turn.

Press the turn indicator in the top left corner of the map.



## Viewing The Junction View

Before you can view the junction view, you must be navigating a route.

The junction view displays a view of some upcoming junctions and in which lane you should be driving.



## Using The Tools

### Viewing Current Location Information

Use the Where Am I? page to view information about your current location. This feature is helpful if you need to tell emergency personnel your location.

- From the main menu, press **Tools > Where Am I?**

### Finding Nearby Services

1. From the main menu, press **Tools > Where Am I?**
2. Press **Hospitals, Police Stations** or **Fuel** to view the nearest locations in that category.

### Using Help

From the main menu, press **Tools > Help** to view information about using your navigation system.


### Searching Help Topics

From the main menu, press **Tools > Help**.

## Using The World Clock

1. From the main menu, press **Tools > World Clock**.
2. Press a city name.
3. Enter a new city name.
4. Press **Done**.
5. If necessary, select a city.

### Viewing The World Map

- From the main menu press **Tools > World Clock > **.
- Nighttime hours appear in the shaded area.

### Using The Calculator

From the main menu press **Tools > Calculator**.

## Using The Unit Converter

1. From the main menu press **Tools > Unit Converter**.
2. Press the box with a unit of measure listed.
3. Select a unit of measure.
4. Press **Save**.  
Two units of measure are listed.
5. Press a unit of measure to change.
6. Select a unit of measure.
7. Press **Done**.
8. Repeat steps 5–6, if necessary.
9. Enter a value.
10. Press **Done**.

## Setting Currency Conversion Rates Manually

You can update the currency conversion rates manually so that you are always using the most current rates.

1. From the main menu press **Tools > Unit Converter**.
2. Press the box with a currency listed.
3. Select **Currency**.
4. Press **Save**.
5. Press a currency box.
6. Select the currency you want to update.
7. Repeat steps 3–6 to select a currency to convert to, if necessary.
8. Press a box under a currency.
9. Enter a new value for the currency.

10. Press **Done**.
11. Repeat steps 8–9, if necessary.

## Traffic

### Notice

Garmin is not responsible for the accuracy or timeliness of the traffic information. Your navigation system may receive traffic content via Satellite Radio service in North America or via FM broadcast in other regions.

### Subscription Activation

You do not need to activate the subscription included with your FM traffic receiver. The subscription activates automatically after your navigation system acquires satellite signals while receiving traffic signals from the pay service provider.

## About The Traffic Icon

When you are receiving traffic information, a traffic icon appears on the map. The traffic icon changes color to indicate the severity of traffic conditions.

Color	Description	Meaning
Green	Low severity	Traffic is flowing freely.
Yellow	Medium severity	Traffic is moving but there is a delay. There is moderate traffic congestion.
Red	High severity	Traffic is not moving or moving very slowly. There is a severe delay.
Gray	No data	Traffic information is not available.




## Traffic On Your Route

When calculating your route, the navigation system examines the current traffic and automatically optimizes the route for the shortest time. If a severe traffic delay occurs on your route while you are navigating, the navigation system automatically recalculates the route.


You might still be routed through traffic if no better alternative routes exist.

## Manually Avoiding Traffic On Your Route


1. From the map press the .
2. Press **Traffic On Route**.
3. If necessary, press the arrows to view other traffic delays on your route.
4. Press **Avoid**.

## Viewing The Traffic Map

The traffic map shows color-coded traffic flow and delays on nearby roads.

1. From the map press .
2. Press **Traffic Map** to view the traffic incidents on a map.

## Searching For Traffic Delays

1. From the map page press .
2. Press **Traffic Search** to view a list of roads with traffic delays.
3. Press an item in the list to view delays on the road.
4. If there is more than one delay, press the arrows to view additional delays.

## Adding a Subscription

1. From the main menu, press **Settings** > **Traffic**.
2. Select an option:
  - For non-North American units, press **Subscriptions** > **+**.
  - For North American units, press **+**.
3. Write down the FM traffic receiver unit ID.
4. Go to [www.garmin.com/fmtraffic](http://www.garmin.com/fmtraffic) to purchase a subscription and get a 25-character code.

5. Press **Next**.
6. Enter the code.
7. Press **Done**.

The traffic subscription code cannot be reused. You must obtain a new code each time you renew your service. If you own multiple FM traffic receivers, you must obtain a new code for each receiver.

## Customizing The Navigation System

1. From the main menu press "Settings."



2. Press a setting category.
3. Press the setting to change it.

## System Settings

From the main menu press **Settings > System**.

- **GPS Simulator** — stops the navigation system from receiving a GPS signal, and saves battery power.
- **About** — displays the software version number, the unit ID number and information on several other software features.

**NOTE:** You need this information when you update the system software or purchase additional map data.

## Restoring The System Settings

From the main menu, press **Settings > System > ≡ > Restore**.

## Changing The Map Settings

From the main menu press **Settings > Map**.

- **Map Detail** — sets the level of detail on the map. More detail may result in slower map drawing.
- **Map View** — sets the perspective on the Map page.
- **Map Theme** — changes the color of the map data.
- **Map Data Layout** — changes the amount of data visible on the map.
- **Vehicle** — changes the icon to represent your position on the map.
- **Trip Log**
  - **Show on Map** — displays the path of your travels on the map.
  - **Clear Trip Log**

## Changing The Map Perspective

1. From the main menu press **Settings > Map > Map View**.
2. Select an option:
  - Press **Track Up** to display the map in two dimensions (2-D), with your direction of travel at the top.
  - Press **North Up** to display the map in 2-D with North at the top.
  - Press **3-D** to display the map in three dimensions.

## Route Preferences

From the main menu, press **Settings > Navigation > Route Preference**.

The route calculation is based on road speeds and vehicle acceleration data for a given route.

- **Faster Time** — Calculates routes that are faster to drive but can be longer in distance.

- **Shorter Distance** — Calculates routes that are shorter in distance but can take more time to drive.
- **Prompted** — Select the faster time and shorter distance for your route.

### Avoiding Road Features

1. From the main menu press **Settings > Navigation > Avoidances**.
2. Select the road features to avoid on your routes.
3. Press “Save.”

### About trafficTrends™

When the trafficTrends™ feature is enabled, your navigation system uses historic traffic information to calculate more-efficient routes. Different routes may be calculated based on traffic trends for the day of the week or based on the time of day.

### Enabling trafficTrends™

1. From the main menu press **Settings > Navigation > trafficTrends**.
2. Select **Enabled**.

### Restoring The Original Navigation Settings

From the main menu press **Settings > Navigation >  > Restore**.

### Language Settings

From the main menu press **Settings > Language**.

- **Voice Personality** — sets the language for voice prompts.
- **Keyboard** — sets the language for your keyboard.
- **Keyboard Layout** — sets the keyboard layout.

## Restoring The Original Language Settings

- From the main menu press **Settings** > **Language** >  > **Restore**.

## About Traffic Subscriptions

You can purchase additional subscriptions or a renewal if your subscription expires. Go to [www.garmin.com/fmtraffic](http://www.garmin.com/fmtraffic).

### Viewing traffic Subscriptions

- From the main menu, press **Settings** > **Traffic** > **Subscriptions**.

### Restoring the Original Traffic Settings

- From the main menu, press **Settings** > **Traffic** >  > **Restore**.



### Restoring All Original Settings

From the main menu, press **Settings** >  > **Restore** > **Yes**.

## Appendix

### About GPS Satellite Signals

The navigation system must acquire satellite signals in order to navigate.

When the navigation system has acquired satellite signals, the signal strength bars on the main menu are full . When it loses satellite signals, the bars are clear .

For more information about GPS, go to [www.garmin.com/aboutGPS](http://www.garmin.com/aboutGPS).

### Updating The Software

To update the navigation system software, you must have a USB mass storage device and an Internet connection.

1. Go to [www.garmin.com/Chrysler](http://www.garmin.com/Chrysler).
2. Find your model and select **Software Updates** > **Download**.

3. Read and accept the terms of the Software License Agreement.
4. Follow the instructions on the Web site to complete the installation of the software update.

### Updating The Map Data

To update the navigation system map, you must have a USB mass storage device and an Internet connection. A map update can be purchased once a year.

1. Go to [www.garmin.com/Chrysler](http://www.garmin.com/Chrysler).
2. Select **Order Map Updates** for your unit.
3. Follow the Web site instructions to update your map.

### WARNING

Garmin and Chrysler Group LLC are not responsible for the accuracy of, or the consequences of using, a safety camera database.

Safety camera information is available in some locations. Go to <http://my.garmin.com> for availability. For these locations, the navigation system includes the locations of hundreds of safety cameras. Your navigation system alerts you when you are approaching a safety camera and can warn you if you are driving too fast. The data is updated at least weekly, so you always have access to the most up-to-date information.

You can purchase a new region or extend an existing subscription at any time. Each region that you purchase has an expiration date.

### Custom POIs (Points of Interest)

**NOTE:** Custom POI files must be named "poi.gpi". and located on the USB storage device in a folder named 'POI' within a folder named "Garmin" (Garmin/POI/).

You can manually load custom points of interest (POI) databases, available from various companies on the Internet. Some custom POI databases contain alert information for points such as safety cameras and school zones. The navigation system can notify you when you approach one of these points. You are responsible for ensuring that your use of safety camera information is lawful in your area.

### **WARNING**

Garmin and Chrysler Group LLC are not responsible for the consequences of using custom POI databases, or for the accuracy of custom POI databases.

After downloading your POI database, use the Garmin POI Loader to install the POIs onto a USB mass storage device. Use the USB mass storage device to load the POIs. The POI Loader is available at [www.garmin.com/products/poiloader](http://www.garmin.com/products/poiloader). Refer to the POI Loader Help file for

more information; click **Help** to open the Help file. The file name can only be POI.gpi. No other file name or extension should be used.

**NOTE:** Each time you load custom POIs to the navigation system, any other custom POIs already saved in the system will be overwritten.

### **Finding Custom POIs**

You can view a list of the custom POIs loaded in your navigation system.

- Press **Where To? > Extras > Custom POIs**.

### **Deleting Custom POIs**

1. Press **Tools > My Data > Delete Custom POI(s)**.
2. Press **Yes** to confirm.

**NOTE:** All custom POIs will be deleted from your navigation system.



## Saving Trip Logs

Trip logs are recorded while you navigate a route.

## SiriusXM Travel Link

Now, in addition to delivering over 130 channels of the best sports, entertainment, talk and commercial-free music, SiriusXM now offers premium infotainment services that work in conjunction with compatible navigation systems.

To access SiriusXM Travel Link, press the MENU button then press the “Travel Link” button.

SiriusXM Travel Link brings a wealth of useful information into your vehicle and right to your fingertips:

### Fuel Prices

- Check detailed price information for fuel stations near your current location.

- Sort the list of closest fuel stations by price, distance or alphabetically.
- Route to selected fuel station.
- Store a favorite fuel station for quick access to pricing.

### Movie Listings

- Check which movies are playing at theaters near your current location.
- Sort the list of theaters by distance or alphabetically.
- Show movie titles, start times, ratings, run length, and summaries.
- Store a favorite theater for quick access to schedules.

## Ski Info

- View ski and snowboarding conditions at ski resorts.
- Store a favorite location for quick access to snow conditions.

## Sports Scores

- View scores and upcoming events for all major sports.
- Store your favorite teams for quick access to the scores and schedules.

**NOTE:** SiriusXM Travel Link data services subscription is separate from your SiriusXM Satellite Radio (audio) subscription.

### CAUTION!

**Neither SiriusXM nor Chrysler Group LLC is responsible for any errors in accuracies in the SiriusXM data services or its use in vehicles.**

SiriusXM services require subscriptions, sold separately after the 12-month trial included with the new vehicle purchase. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call SiriusXM at 1-866-635-2349 to cancel.**

See SiriusXM Customer Agreement for complete terms at [www.siriusxm.com](http://www.siriusxm.com). All fees and programming subject to change. Our satellite service is available only to those at least 18 and older in the 48 contiguous USA and D.C. Our Sirius satellite service is also available in PR (with

coverage limitations). Our Internet radio service is available throughout our satellite service area and in AK and HI. © 2014 Sirius XM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc.

## Weather

- View detailed current conditions at your current location.
- Check extended 12-hour and 5-day forecasts.
- Store a favorite location for quick access to weather conditions and forecasts.

## End-User License Agreements

### Software License Agreement

BY USING THE NAVIGATION SYSTEM, YOU AGREE TO BE BOUND BY THE TERMS AND CONDITIONS OF THE FOLLOWING SOFTWARE LICENSE AGREEMENT. PLEASE READ THIS AGREEMENT CAREFULLY.

Garmin Ltd. and its subsidiaries (“Garmin”) grant you a limited license to use the software embedded in this device (the “Software”) in binary executable form in the normal operation of the product. Title, ownership rights, and intellectual property rights in and to the Software remain in Garmin and/or its third-party providers.

You acknowledge that the Software is the property of Garmin and/or its third-party providers and is protected under the United States of America copyright laws and international copyright treaties. You further acknowledge that the structure, organization, and code of the Software, for which source code is not provided, are valuable trade secrets of Garmin and/or its third-party providers and that the Software in source code form remains a valuable trade secret of Garmin and/or its third-party providers. You agree not to decompile, disassemble, modify, reverse assemble, reverse engineer, or reduce to human readable form the Software or any part thereof or create any derivative works based on the Software. You agree not to

export or re-export the Software to any country in violation of the export control laws of the United States of America or the export control laws of any other applicable country.

### **NAVTEQ® End-User License Agreement**

The software embedded in your Garmin product (the “Software”) is owned by Garmin Ltd. or its subsidiaries (“Garmin”). The third-party map data embedded in or accompanying your Garmin product (the “Map Data”) is owned by NAVTEQ North America LLC and/or its affiliates (“NAVTEQ”) and is licensed to Garmin. Garmin also licenses information, text, images, graphics, photographs, audio, video and other applications and data from third-party data providers (“Third-Party Content Data”). The Map Data and Third-Party Content Data are collectively the “Data.” Both the Software and Data are protected under copyright laws and international copyright treaties. The Software and Data are licensed, not

sold. The Software and Data are provided under the following licence and are subject to the following terms and conditions which are agreed to by the End User (“you” or “your”), on the one hand, and Garmin and its licensors (including their licensors and suppliers) and affiliated companies on the other hand.

**IMPORTANT: READ THIS LICENCE CAREFULLY BEFORE USING THIS PRODUCT. INSTALLING, COPYING OR OTHERWISE USING THIS PRODUCT INDICATES YOUR ACKNOWLEDGEMENT THAT YOU HAVE READ THIS LICENCE AND AGREE TO ITS TERMS. IF YOU DO NOT AGREE, RETURN THE COMPLETE PRODUCT WITHIN 7 DAYS OF THE DATE YOU ACQUIRED IT (IF PURCHASED NEW) FOR A FULL REFUND TO THE DEALER FROM WHICH YOU PURCHASED THIS PRODUCT.**

## Licence Terms And Conditions

Garmin (“we” or “us”) provides you with storage media containing the computer Software (the “Software”) and the embedded or accompanying Data, including any “online” or electronic documentation and printed materials (together called the “Product” for purposes of this Licence Agreement), and grants you a limited, non-exclusive licence to use the Product in accordance with the terms of this Agreement. You agree to use this Data together with the Garmin product solely for personal use, or if applicable, for use in your business’ internal operations and not for service bureau, time-sharing, resale or other similar purposes. Accordingly, but subject to the restrictions set forth in the following paragraphs, you may copy this Data only as necessary for your use to (i) view it and (ii) save it, provided that you do not remove any copyright notices that appear and do not modify the Software or Data in any way. You agree not to otherwise reproduce, copy, modify, decompile, disassemble, reverse

engineer or create derivative works of any portion of the Product and you may not transfer or distribute it in any form, for any purpose, except to the extent permitted by mandatory laws. Garmin also reserves the right to discontinue offering any Data supplied by any third-party supplier if such supplier ceases to supply such content or Garmin’s contract with such supplier terminates for any reason.

**Restrictions.** Except where you have been specifically licensed to do so by Garmin and without limiting the preceding paragraph, you may not use this Data with any products, systems or applications installed or otherwise connected to or in communication with vehicles and which are capable of dispatch, fleet management or similar applications where the Data is used by a central control centre in dispatching a fleet of vehicles. In addition, you are prohibited from renting or leasing the Data or the Garmin products containing the Data to any other person or third party. Only those hire car companies that

are specifically authorized by Garmin in writing to rent Garmin products containing the Data to their rental customers are permitted to rent out such products.

**No Warranty.** This Product (including the Data) is provided to you “as it is” and you agree to use it at your own risk. Garmin and its licensors (and their licensors and suppliers) make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, content, quality, accuracy, completeness, effectiveness, reliability, merchantability, fitness for a particular purpose, usefulness, use or results to be obtained from the Product or that the Data or server will be uninterrupted or error-free.

**Disclaimer Of Warranty.** GARMIN AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) DISCLAIM ANY WARRANTIES, EXPRESS OR

IMPLIED, OF QUALITY, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NONINFRINGEMENT. NO ORAL OR WRITTEN ADVICE OR INFORMATION PROVIDED BY GARMIN OR ITS SUPPLIERS AND LICENSORS SHALL CREATE A WARRANTY AND YOU ARE NOT ENTITLED TO RELY ON ANY SUCH ADVICE OR INFORMATION. THIS DISCLAIMER OF WARRANTIES IS AN ESSENTIAL CONDITION OF THIS AGREEMENT. Some States, Territories and Countries do not allow certain warranty exclusions, so to that extent the above exclusion may not apply to you.

**Disclaimer Of Liability.** GARMIN AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) SHALL NOT BE LIABLE TO YOU: IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, WHICH MAY

RESULT FROM THE USE OR POSSESSION OF THE INFORMATION; OR FOR ANY LOSS OF PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR ANY OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE DATA OR INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF GARMIN OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. GARMIN'S AND ITS LICENSORS' TOTAL AGGREGATE LIABILITY WITH RESPECT TO ITS OBLIGATIONS UNDER THIS AGREEMENT OR OTHERWISE WITH RESPECT TO THE GARMIN PRODUCT OR THE DATA SHALL NOT EXCEED \$1.00. Some States, Territories and Countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

**Disclaimer Of Endorsement.** Reference to any products, services, processes, hypertext links to third parties or other Data by trade name, trademark, manufacturer, supplier or otherwise does not necessarily constitute or imply its endorsement, sponsorship or recommendation by Garmin or its licensors. Product and service information are the sole responsibility of each individual vendor. The NAVTEQ name and logo, the NAVTEQ and NAVTEQ ON BOARD trademarks and logos and other trademarks and trade names owned by NAVTEQ North America LLC may not be used in any commercial manner without the prior written consent of NAVTEQ.

**Export Control.** You agree not to export from anywhere any part of the Data provided to you or any direct product thereof except in compliance with, and with all licences and approvals required under, applicable export laws, rules and regulations.

**Indemnity.** You agree to indemnify, defend and hold Garmin and its licensors (including their respective licensors, suppliers, assignees, subsidiaries, affiliated companies and the respective officers, directors, employees, shareholders, agents and representatives of each of them) free and harmless from and against any liability, loss, injury (including injuries resulting in death), demand, action, cost, expense or claim of any kind or character, including but not limited to lawyer's fees, arising out of or in connection with any use or possession by you of the Product (including the Data).

**Canadian Map Data.** The Map Data for Canada may include or reflect data of licensors, including Her Majesty and Canada Post. Such data is licensed on an "as it is" basis. The licensors, including Her Majesty and Canada Post, make no guarantees, representations or warranties respecting such data, either express or implied, arising by law or otherwise, including but not limited to, effectiveness, completeness, accuracy or fitness for a particular

purpose. The licensors, including Her Majesty and Canada Post, shall not be liable in respect of any claim, demand or action, irrespective of the nature of the cause of the claim, demand or action alleging any loss, injury or damages, direct or indirect, which may result from the use or possession of the data or the Map Data. The licensors, including Her Majesty and Canada Post, shall not be liable in any way for loss of revenues or contracts, or any other consequential loss of any kind resulting from any defect in the data or the Map Data. You shall indemnify and save harmless the licensors, including Her Majesty the Queen, the Minister of Natural Resources of Canada and Canada Post and their officers, employees and agents from and against any claim, demand or action, irrespective of the nature of the cause of the claim, demand or action, alleging loss, costs, expenses, damages or injuries (including injuries resulting in death) arising out of the use or possession of the data or the Map Data. The terms contained in this Section are in addition to all



of the rights and obligations of the parties under the Agreement. To the extent that any of the provisions of this Section are inconsistent with, or conflict with, any other provisions of the Agreement, the provisions of this Section shall prevail.

**United States Map Data.** NAVTEQ holds a nonexclusive licence from the United States Postal Service® to publish and sell ZIP+4® information. ©United States Postal Service® 2010. Prices are not established, controlled or approved by the United States Postal Service®. The following trademarks and registrations are owned by the USPS: United States Postal Service, USPS and ZIP+4.

**Canadian Map Data.** Map Data for Canada includes information taken with permission from Canadian authorities, including ©Her Majesty, ©Queen's Printer for Ontario, ©Canada Post, GeoBase®, ©Department of Natural Resources Canada. All rights reserved.

**Australian Map Data.** Map Data for Australia is based on data NAVTEQ has licensed from PSMA Australia Limited ([www.psma.com.au](http://www.psma.com.au)). In addition, the Product incorporates data which is ©2010 Telstra Corporation Limited, GM Holden Limited, Intelematics Australia Pty Ltd, Sentinel Content Pty Limited and Continental Pty Ltd. If your Product uses RDS-TMC Codes contained in the Map Data, the traffic location codes are ©2010 Telstra Corporation Limited and its licensors.

**Term.** This Agreement is effective until such time as (i) if applicable, your subscription term is either terminated (by you or by Garmin) or expires, or (ii) Garmin terminates this Agreement for any reason, including, but not limited to, if Garmin finds that you have violated any of the terms of this Agreement. In addition, this Agreement shall terminate immediately upon the termination of an agreement between Garmin and any third party from whom Garmin licenses the Data.

**Entire Agreement.** These terms and conditions constitute the entire agreement between Garmin (and its licensors, including their licensors and suppliers) and you pertaining to the subject matter hereof and supersedes in their entirety any and all written or oral agreements previously existing between us with respect to such subject matter.

**Governing Law.**

(a) For European Union NAVTEQ Data

The above terms and conditions shall be governed by the laws of the Netherlands, without giving effect to (i) its conflict of laws provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is explicitly excluded. You agree to submit to the jurisdiction of the Netherlands for any and all disputes, claims and actions arising from or in connection with the NAVTEQ Data provided to you hereunder.

(b) For North American NAVTEQ Data and other non-European Union NAVTEQ Data

The above terms and conditions shall be governed by the laws of Illinois, without giving effect to (i) its conflict of laws provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is explicitly excluded. You agree to submit to the jurisdiction of Illinois for any and all disputes, claims and actions arising from or in connection with the NAVTEQ Data provided to you hereunder.

(c) For disputes, claims and actions not related to the NAVTEQ Data

The above terms and conditions shall be governed by the laws of Kansas, without giving effect to (i) its conflict of laws provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is

explicitly excluded. You agree to submit to the jurisdiction of Kansas for any and all disputes, claims and actions arising from or in connection with the Data provided to you hereunder.

**Government End Users.** If the End User is an agency, department or other entity of the United States Government, or funded in whole or in part by the U.S. Government, then use, duplication, reproduction, release, modification, disclosure or transfer of the Product and accompanying documentation is subject to restrictions as set forth in DFARS 252.227-7014(a)(1) (JUN 1995) (DOD commercial computer software definition), DFARS 27.7202-1 (DOD policy on commercial computer software), FAR 52.227-19 (JUN 1987) (commercial computer software clause for civilian agencies), DFARS 252.227-7015 (NOV 1995) (DOD technical data – commercial items clause); FAR 52.227-14 Alternates I, II and III (JUN 1987) (civilian agency technical data and non-commercial computer software clause); and/or FAR 12.211 and FAR

12.212 (commercial item acquisitions), as applicable. In case of conflict between any of the FAR and DFARS provisions listed herein and this Licence, the construction that provides greater limitations on the Government's rights shall control. The contractor/manufacturer is Garmin International, Inc., 1200 East 151st Street, Olathe, KS 66062, USA and NAVTEQ North America LLC, 425 West Randolph Street, Chicago, Illinois 60606 USA.

Garmin® is a trademark of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. These trademarks may not be used without the express permission of Garmin.

NAVTEQ is a trademark in the U.S. and other countries. All other company names and trademarks mentioned or referenced in this documentation are the properties of their respective owners. All rights reserved.

## DMTI Spatial, Inc. End User License Agreement

The software embedded in your Garmin product is owned by Garmin Ltd. or its subsidiaries (“Garmin”). The third-party postal code data (the “Licensed Product”) embedded in or accompanying your Garmin product is owned by DMTI Spatial, Inc. and is licensed to Garmin. Both the software and Licensed Product are protected under copyright laws and international copyright treaties.

THIS is a legal Agreement between you, the end user, and DMTI Spatial, Inc. BY LOADING THE PRODUCT(S) WITH THIS AGREEMENT YOU ARE AGREEING TO BE BOUND BY THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, PROMPTLY (within 7 days of purchase) RETURN THE PRODUCTS AND ANY ACCOMPANYING ITEMS (including written materials) TO Garmin

INTERNATIONAL, INC. CUSTOMER SERVICE, 1200 EAST 151ST STREET, OLATHE, KANSAS 66062, FOR A REFUND.

DMTI Spatial hereby grants to you a non-exclusive, non-transferable license to use the data contained on the media in this package (the “Licensed Product”) solely for personal non-commercial use or internal use in your business, on a single computer, Pocket PC, or Palm device in conjunction with Garmin software, and with compatible Garmin products that you personally own. Your use of the data is subject to the following terms and conditions:

You acknowledge that the Licensed Product(s) belong to DMTI Spatial and its third party supplier, and that the Licensed Product(s) are copyrighted. Unauthorized copying of the Licensed Product(s), is expressly forbidden and you may be held legally responsible for copyright infringement which is caused or encouraged by

your failure to abide by the terms of this agreement. You may make one archival copy of the Licensed Product(s), solely for your own use, subject to the following restrictions: (1) The archival copy must be treated in the same way as the original copy; (2) No copy may be used while any other copy is in use. If you make an archival copy of the Licensed Product(s), you must include on it the copyright notice that is on the original media.

You may not reproduce, sell, rent, lease, loan, distribute or sublicense the Licensed Product(s) or otherwise transfer the Licensed Product(s) to any third party, use the Licensed Product for commercial purposes except for internal use in your business, decompile, disassemble, reverse-engineer the Licensed Product(s), or use the Licensed Product to create any derived product for any of these prohibited purposes. You may not place the Licensed Product(s) on the Internet without a prior written agreement with DMTI Spatial.

In no event shall DMTI Spatial or its third party supplier(s) be liable to you or your organization for any indirect damages including any lost profits, lost savings, interruption of business, loss of business opportunities or other incidental or consequential damages, arising out of your possession, use of, or inability to use the Licensed Product(s), even if DMTI Spatial, its third party supplier(s), or any authorized dealer, has been advised of the possibility of the damages, or for any claim by any other party. In no event shall DMTI Spatial have any liability for damage in excess of the license fee paid for the Licensed Product(s).

You shall indemnify and hold DMTI Spatial, its third party supplier(s) and their officers, employees and agents, harmless from and against any claim, demand or action, irrespective of the nature of the claim, demand or action, alleging loss, costs, damages, expenses, or injury

(including injury from death) resulting from your authorized or unauthorized, use, possession, modification, or alteration of the Licensed Product(s).

THE LICENSED PRODUCT(S) AND THE ASSOCIATED WRITTEN MATERIALS IN CONNECTION THEREWITH ARE PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, ARISING BY LAW OR OTHERWISE, INCLUDING BUT NOT LIMITED TO WARRANTIES OF EFFECTIVENESS, COMPLETENESS, ACCURACY, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LICENSED PRODUCT(S) IS WITH YOU, THE END USER. NO ORAL OR WRITTEN ADVICE GIVEN BY DMTI SPATIAL OR ITS DEALERS, DISTRIBUTORS, AGENTS OR EMPLOYEES CREATES A WARRANTY OR IN ANY WAY INCREASES DMTI SPATIAL'S LIABILITY AND YOU MAY NOT RELY ON ANY SUCH INFORMATION OR ADVICE.

No statement or recommendation made or assistance given by DMTI Spatial or by its representatives or employees shall constitute a waiver by DMTI Spatial or any of the provisions herein. Nor does or will DMTI Spatial warrant any services it may provide in connection with the use of the Licensed product(s), to include any assistance, training, or other consultation with you.

This license is effective until terminated. This license will terminate automatically without notice from DMTI Spatial if you fail to comply with any provision of this License Agreement. Upon termination, you shall destroy or return the Licensed Product(s) including any written materials and all copies of the Licensed Product(s) and any written materials in connection therewith have been destroyed or returned to DMTI Spatial.

This Agreement shall be governed by the laws of the Province of Ontario.

©2007 DMTI Spatial Inc. (except for data licensed from third parties).

DMTI Spatial is an authorized user and distributor of selected Statistics Canada Computer files under Licensing Agreement 6230.

© Copyright, HER MAJESTY THE QUEEN IN RIGHT OF CANADA, as represented by the Minister of Industry, Statistics Canada 1996.

Digital Topographic Data produced under license from Her Majesty the Queen in Right of Canada, with permission of Natural Resources Canada.

### **NAVTEQ Traffic™ End User License Agreement**

Your Garmin product may be equipped to receive traffic data. If it is so equipped, the following terms and conditions apply to your use of your Garmin product.

NAVTEQ North America LLC and/or its affiliates including Traffic.com (“NAVTEQ”) holds the rights to the traffic event data (“Traffic Data”) and, if you receive RDS/TMC or HD Radio™ Traffic Data, the RDS/TMC or HD Radio networks through which it is delivered to your Garmin product. By subscribing to, receiving or otherwise accessing the Traffic Data, you acknowledge that you have read this Agreement, that you understand it, that you agree to be bound by the terms and conditions of this Agreement, and that you are at least 18 years of age. If you do not agree to the terms and conditions of this Agreement, decline the subscription or, if the subscription is bundled as part of your Garmin product, return the product within 7 days for a full refund to the dealer from which you purchased the product.

You agree to use the Traffic Data together with your Garmin product solely for personal, non-commercial purposes, and not for service bureau, time-sharing or other similar purposes. You may not modify, copy, scan,

decompile, disassemble or reverse engineer any portion of the Traffic Data, or use any other method to reproduce, duplicate, republish, transmit, or distribute in any way any portion of the Traffic Data. You agree to indemnify, defend, and hold harmless NAVTEQ (and its affiliates) and Garmin Ltd. (and its subsidiaries) against any and all claims, damages, costs, or other expenses that arise directly or indirectly out of (a) your unauthorized use of the Traffic Data or the RDS/TMC or HD Radio networks, (b) your violation of this Agreement, and/or (c) any unauthorized or unlawful activities by you in connection herewith.

The Traffic Data is informational only. You assume all risk of use. NAVTEQ (and its affiliates), Garmin Ltd. (and its subsidiaries), and their suppliers make no representations about content, traffic and road conditions, route usability, or speed.

The Traffic Data is provided to you “as is,” and you agree to use it at your own risk. NAVTEQ (and its affiliates) and Garmin Ltd. (and its subsidiaries) make no warranty of fitness or compatibility of the Traffic Data with the Garmin product and no warranty that the Traffic Data will operate properly as integrated and interfaced with the Garmin product. In addition, NAVTEQ (and its affiliates) and Garmin Ltd. (and its subsidiaries) make no warranty with regard to the reliability, accuracy, exhaustiveness, and completeness of the Traffic Data, which may contain inaccuracies and/or errors from time to time. To the maximum extent permitted by applicable law, any and all warranties of any kind whatsoever with regard to the Traffic Data are hereby expressly waived and excluded, including, but not limited to, those of merchantability, fitness for a particular purpose, accuracy or completeness of the Traffic Data, and/or a lack of viruses.



NAVTEQ (and its affiliates), Garmin Ltd. (and its subsidiaries), and their suppliers disclaim all liability for any loss, injury, or damage resulting from use of or inability to use the Garmin product and the Traffic Data as a result of weather difficulties, the destruction of transmitters and/or broadcasting infrastructures, a natural disaster, and/or a lack of reliability, completeness, or accuracy of the Traffic Data. In no event shall NAVTEQ (and its affiliates), Garmin Ltd. (and its subsidiaries), and their suppliers be liable to you or any other party for any compensatory, direct, indirect, incidental, special, or consequential damages (including, without limitation, indirect, direct, special, punitive, or exemplary damages for loss of business, loss of profits, business interruption, or loss of business information) arising out of the use of or inability to use the Garmin product or the Traffic Data, even if NAVTEQ or Garmin have been advised of the possibility of such damages.

**Traffic.** If you purchase or your Garmin product is pre-loaded with “lifetime” or “one-time” traffic, you will receive Traffic Data for the useful life of your Garmin traffic receiver (as long as you own a compatible Garmin GPS) or as long as Garmin receives Traffic Data from its third party content supplier, whichever is shorter. Garmin may terminate your traffic subscription immediately if you violate any of the terms of this Agreement. Your traffic subscription may not be transferred to another person or another Garmin product.

**Governing Law.** The above terms and conditions shall be governed by the laws of the State of Illinois, without giving effect to (i) its conflict of laws provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is explicitly excluded. You agree to submit to the jurisdiction of the State of Illinois for any and all disputes, claims and actions arising from or in connection with the Traffic Data provided to you hereunder.

**Government End Users.** If the Traffic Data is being acquired by or on behalf of the United States government or any other entity seeking or applying rights similar to those customarily claimed by the United States government, this Data is a “commercial item” as that term is defined at 48 C.F.R. (“FAR”) 2.101, is licensed in accordance with this Agreement, and the Traffic Data delivered or otherwise furnished shall be marked and embedded as appropriate with the following “Notice of Use,” and shall be treated in accordance with such Notice:

#### **Notice Of Use**

Contractor (Manufacturer/ Supplier) Name: NAVTEQ

Contractor (Manufacturer/supplier) Address: 425 West Randolph Street, Chicago, Illinois 60606

This Data is a commercial item as defined in FAR 2.101 and is subject to the NAVTEQ Traffic™ End User License Agreement under which this Data was provided.

© 2011 NAVTEQ; © 2011 Traffic.com – All rights reserved.

If the Contracting Officer, federal government agency, or any federal official refuses to use the legend provided herein, the Contracting Officer, federal government agency, or any federal official must notify NAVTEQ prior to seeking additional or alternative rights in the Traffic Data.

NAVTEQ and Traffic.com are trademarks in the U.S. and other countries. © 2011 NAVTEQ; © 2011 Traffic.com. All rights reserved.

HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. HD Radio™ and the HD, HD Radio, and “Arc” logos are proprietary trademarks of iBiquity Digital Corp.

Garmin® is a trademark of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. This trademark may not be used without the express permission of Garmin. All other company names and trademarks mentioned or referenced in this documentation are the properties of their respective owners. All rights reserved.

# MORE & SETTINGS

## CONTENTS

---

■ MORE & SETTINGS . . . . .	.116	□ Display . . . . .	.118
□ More Main Menu . . . . .	.116	□ Clock Setting . . . . .	.119
□ Settings Main Menu . . . . .	.116		

## MORE & SETTINGS

### More Main Menu

The More Main Menu consists of the following options:

- *Settings*

Refer to the Settings information in this section for more details.

- *SiriusXM Travel Link (if equipped)*

Refer to the Navigation section in this manual for more details.

### Settings Main Menu



Press the “Settings” button to display the list of available settings.

The Setting Main Menu consists of the following options:

## Display

Refer to this section for more details.

## Clock

Refer to this section for more details.

## Safety & Driving Assistance

Refer to “Understanding Your Instrument Panel/Uconnect® System” section in your vehicle Owner’s Manual on the DVD for details.

## Lights

Refer to “Understanding Your Instrument Panel/Uconnect® System” section in your vehicle Owner’s Manual on the DVD for details.

## Doors & Locks

Refer to “Understanding Your Instrument Panel/Uconnect® System” section in your vehicle Owner’s Manual on the DVD for details.

## Auto-On Comfort & Remote Start

Refer to “Understanding Your Instrument Panel/Uconnect® System” section in your vehicle Owner’s Manual on the DVD for details.

## Engine Off

Refer to “Understanding Your Instrument Panel/Uconnect® System” section in your vehicle Owner’s Manual on the DVD for details.

## Compass

Refer to “Understanding Your Instrument Panel/Uconnect® System” section in your vehicle Owner’s Manual on the DVD for details.

## Audio

Refer to this section for more details.

## Phone/Bluetooth®

Refer to “Understanding The Features Of Your Vehicle/ Uconnect® 8.4” section in your vehicle Owner’s Manual on the DVD for details.

## SiriusXM Setup — If Equipped

Refer to the Radio section in this manual for more details.

## Display

Your Uconnect® display can be customized by following the steps:

1. Press the “More” button on the bottom of the screen.
2. Then press the “Settings” button.



3. Press the “Display” button to enter the Display Menu



4. The Display Menu shows the following options for you to customize your display.
- Display Mode
  - Display Brightness with Headlights On
  - Display Brightness with Headlights Off
  - Set Language
  - Units

- Voice Response Length
  - Touchscreen Beep
  - Navigation Turn-by-Turn Displayed in the Cluster (If Equipped)
  - Fuel Saver Displayed in the Cluster (If Equipped)
5. Press the “+ or –” button to change the Brightness. Or press the check mark or empty box to change a selection.

**NOTE:** The check-mark indicates the current selection is active.

6. Press the “X” button to exit from the Display Menu and Settings.

### Clock Setting

1. Press the “More” button on the bottom of the screen.
2. Then press the “Settings” button.





**NOTE:** The Clock Setting Menu can also be accessed by pressing the time as it is displayed on the screen.

3. Press the “Clock” button to enter the Clock Menu.

4. In the Set Time screen, press the “+ or -” buttons to adjust the hours or minutes.

5. Other options available:
  - Sync with GPS Time
  - Time Format
  - Show Time in Status Bar
6. Press the check mark or empty box to change a selection.

**NOTE:** The check-mark indicates the current selection is active.





15UC84-526-AA  
First Edition  
Uconnect® 8.4/8.4N

Chrysler Group LLC  
Printed in the USA



DODGE

CHRYSLER

Jeep

