

 **PIONEER**[®]
The Art of Entertainment

*Service
Manual*

ORDER NO.
ARP2786

CD CDV LD PLAYER

CLD-1850
HEZ, HB, HPW

- Refer to the service manual ARP2543 for CLD-1700/HEZ.
- This manual is applicable to CLD-1850/HEZ, HB and HPW.

1. SAFETY INFORMATION

(FOR EUROPEAN MODEL ONLY)

VARO!

AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET ALTTIINA NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.



LASER
Kuva 1
Lasersäteilyn
varoituserkki

WARNING!

DEVICE INCLUDES LASER DIODE WHICH EMITS INVISIBLE INFRARED RADIATION WHICH IS DANGEROUS TO EYES. THERE IS A WARNING SIGN ACCORDING TO PICTURE 1 INSIDE THE DEVICE CLOSE TO THE LASER DIODE.



LASER
Picture 1
Warning sign for
laser radiation

ADVERSEL:

USYNLIG LASERSTRÅLING VED ÅBNING NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDSÆTTELSE FOR STRÅLING.

VARNING!

OSYNLIG LASERSTRÅLING NÅR DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD. BETRAKTA EJ STRÅLEN.

IMPORTANT


THIS PIONEER APPARATUS CONTAINS LASER OF CLASS 1. SERVICING OPERATION OF THE APPARATUS SHOULD BE DONE BY A SPECIALLY INSTRUCTED PERSON.

LASER DIODE CHARACTERISTICS


MAXIMUM OUTPUT POWER: 5 mw
WAVELENGTH: 780-785 nm

LABEL CHECK

HB model

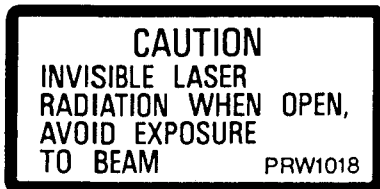


HEZ model

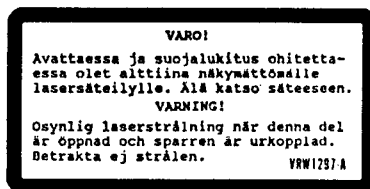

HEZ and HB model




HEZ model

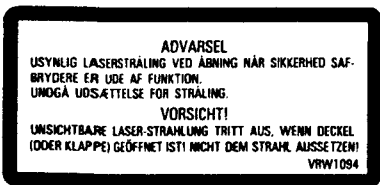

HEZ and HB models

FRONT

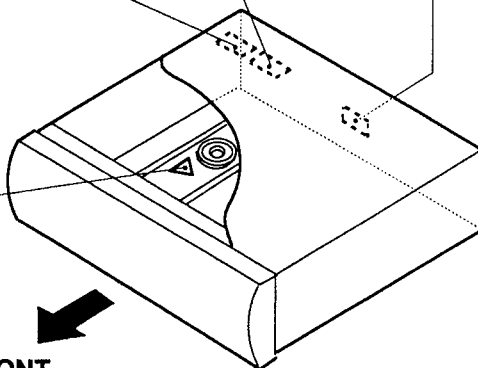

Additional Laser Caution

1. The ON/OFF statuses of the slider - position detection switches (PARK INNER, PARK OUTER on the PKSB assembly), loading - status detection switches (SW 1, 2 and 3 on PKSB assembly) are detected by the microprocessor (IC101 in the MOTHER ASSY). To permit the laser diode to oscillate, it is required to set the slider - position detection switch for the LD ACTIVE status (PARK INNER: OFF, PARK OUTER: OFF), and to set the loading - status detection switch for clamped state (SW1: OFF, SW2: ON, SW3: ON). As long as these requirements are not satisfied, the laser diode will not oscillate. When the requirements are met in any way, the laser diode can oscillate. The laser diode oscillation will continue if pin 29 of IC801 is shorted to GND or the emitter and collector of Q809 are shorted each other (fault condition) in MOTHER ASSY. *
In test mode (see page 51), the laser diode oscillates when microprocessor detects a PLAY signal or when the PLAY key is pressed (S223: ON in the FLKY assembly), with the above requirements satisfied.

2. When the cover is open, close viewing through the objective lens with the naked eye will cause exposure to a Class 1 laser beam.

* : Refer to service manual ARP2543, CLD-1700.

2. CONTRAST OF MISCELLANEOUS PARTS

NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.
 - Ex.1 When there are 2 effective digits(any digit apart from 0), such as 560 ohm and 47k ohm(tolerance is shown by J=5%, and K=10%).
 - 560 Ω \rightarrow $56 \times 10^1 \rightarrow 561$ RD1/8PM $\boxed{5} \boxed{6} \boxed{1} J$
 - 47k Ω \rightarrow $47 \times 10^3 \rightarrow 473$ RD1/4PS $\boxed{4} \boxed{7} \boxed{3} J$
 - 0.5 Ω \rightarrow 0R5 RN2H $\boxed{0} \boxed{R} \boxed{5} K$
 - 1 Ω \rightarrow 010 RSIP $\boxed{0} \boxed{1} \boxed{0} K$
 - Ex.2 When there are 3 effective digits(such as in high precision metal film resistors).
 - 5.62k Ω \rightarrow $562 \times 10^1 \rightarrow 5621$ RN1/4PC $\boxed{5} \boxed{6} \boxed{2} \boxed{1} F$

CLD- 1850/HEZ, HB, HPW and CLD - 1700/HEZ have the same construction except for the following :

Mark	Symbol & Description	Part No.				Remarks
		CLD-1700 /HEZ	CLD-1850 /HEZ	CLD-1850 /HB	CLD-1850 /HPW	
⊙	FLKB assembly	VWM1278	
NSP	FLKB assembly	VWM1367	VWM1367	VWM1367	
NSP	FLKY assembly	VWG1336	
	FLKY assembly	VWG1410	VWG1410	VWG1410	
NSP	PSWB assembly	VWG1315	VWG1449	VWG1449	VWG1449	
NSP	HEPB assembly	VWV1254	VWV1320	VWV1320	VWV1320	
⊙	MOTHER assembly	VWM1276	
	MOTHER assembly	VWX1167	VWX1167	VWX1167	No. 1
NSP	AUDIO assembly	VWX1124	
NSP	MAIN assembly	VWX1123	
⊙	SYPS assembly	VWR1146	VWR1146	VWR1147	VWR1178	
⊙	SCRB assembly	VWV1248	
	DSCB assembly	VWV1296	VWV1296	VWV1296	No. 2
	Rack assembly	VWT1080	VWT1099	VWT1099	VWT1099	
NSP	Pickup assembly	VWY1030	VWY1036	VWY1036	VWY1036	
Δ	Strain relief	CM-22B	CM-22B	CM-22B	
Δ	AC power cord	VDG1028	PDG1003	VDG1051	RDG1022	No. 3
Δ	Fuse (FU1 : T13A)	VEK1003	No. 4
	Fuse holder	VKR1002	No. 5
NSP	PC support	VEC1584	VEC1415	VEC1415	VEC1415	
	Packing case	VHG1260	VHG1271	VHG1272	VHG1272	
NSP	Rear panel	VNA1278	
	Rear panel (FE)	VNA1330	VNA1331	VNA1331	
NSP	CD door assembly-S	VXX1728	VXX1848	VXX1848	VXX1848	
	CD door	VNK2033	VNK2244	VNK2244	VNK2244	
NSP	Center panel assembly-S	VXX1757	VXX1859	VXX1859	VXX1952	
	Center panel	VNK2085	VNK2265	VNK2265	VNK2265	
	Front panel assembly	VXA1867	VXA1962	VXA1962	VXA1962	
	FL filter	VNK1694	VNK1694	VNK1694	VNK1695	
	Operating instructions(English/French/German/Italian)	VRE1010	VRE1015	
	Operating instructions (Dutch/Swedish/Spanish/Portuguese)	VRF1017	VRF1022	
	Operating instructions (English)	VRB1085	VRB1085	
	Remote control unit (CU-CLD077)	VXX1758	
	Remote control unit (CU-CLD082)	VXX1832	VXX1832	VXX1832	
NSP	Warranty card	ARW-088	ARW-088	ARW-088	ARY1067	
	Battery cover	VNK1293	DNK2286	DNK2286	DNK2286	
	Pin cap	VEC1616	No. 6
	Pad (R)	VHA1106	VHA1106	VHA1123	VHA1123	
NSP	Caution label	PRW1018	PRW1018	
NSP	Caution label	VRW1094	VRW1094	
NSP	Caution label HE	VRW1297	VRW1297	

Note: The numbers in the remarks column correspond to the numbers on the exploded diagram. Refer to "EXPLODED VIEWS".

FLKY ASSEMBLY

VWG1410 and VWG1336 have the same construction except for the following :

Mark	Symbol & Description	Part No.		Remarks
		VWG1336	VWG1410	
	IC201 D211, D212	PD3214B	PD3246A MTZ5.6B	

SYPS ASSEMBLY

VWR1147, VWR1178 and VWR1146 have the same construction except for the following :

Mark	Symbol & Description	Part No.			Remarks
		VWR1146	VWR1147	VWR1178	
△	L2 Line filter	VTL-004	

PSWB ASSEMBLY

Although VWG1449 and VWG1315 are different in part number, they have the same service parts.

HEPB ASSEMBLY

Although VWV1320 and VWV1254 are different in part number, they have the same service parts.

• PCB PARTS LIST

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
DSCB ASSEMBLY				CAPACITORS			
SEMICONDUCTORS						C137, C141, C145, C149	CCSQCH101J50
		IC104, IC105	BA15218			C232	CCSQCH150J50
		IC103, IC106	BA15218N			C139, C143, C147, C151	CCSQCH221J50
		IC101	CXD2500BQ			C220, C221	CCSQCH271J50
		IC107	LA7955			C258-C263	CCSQCH390J50
		IC110	NJM78L05A			C274, C275, C301	CEANP220M10
		IC108	NJM78M08FA			C222, C223	CEANP2R2M50
		IC109	NJM79L08A			C215	CEANPR47M50
		IC102	PD2026B			C133, C134, C138, C140, C142, C144,	CEAS100M50
		Q224	2SA933S			C146, C148, C150, C152, C160, C228,	
		Q111, Q112	2SC1740S			C284, C285	
		Q208, Q209, Q220, Q222, Q223	2SC2412K			C207, C279	CEAS101M10
		Q204, Q205	2SD2144S			C155, C203, C208, C211, C225, C226,	CEAS470M10
		Q203, Q207, Q210, Q212-Q216, Q221	DTA124EK			C230, C252, C253, C270-C273, C283	
		Q113, Q206, Q225	DTC124EK			C153, C154	CEAS471M10
		D202, D207	DAN202K			C255, C257	CEAS471M6R3
		D210, D211	ERA83-006			C131, C159	CEJA100M16
		D201	FC54M			C327	CKSQYB102K50
COILS AND FILTER						C287	CKSQYB682K50
		L201, L202, L204-L206, L301-L303	LAU010K			C132, C157, C206, C213, C216, C217,	CKSQYF103Z50
		L203	LAU220J			C231, C234, C251, C286, C320, C323, C324	
		F201	TH1016			C204, C209, C212, C254, C288, C310,	CKSQYF104Z25
						C311, C322, C325, C326	
						C201, C224	CKSQYF473Z25
						C268, C269	CQMA102J50
						C202, C264, C265	CQMA152J50
						C266, C267	CQMA682J50

Mark	No.	Description	Part No.
RESISTORS			
△	R169, R170		DCN1003
	R212, R213, R220, R221		RD1/6PM470J
	R160, R164		RD1/6PM471J
	R140, R141, R159, R163		RD1/6PM750J
	OTHER RESISTORS		RS1/10S□□□J

OTHERS			
CN105	5P TOP POST		B5P-SHF
	3P CABLE HOLDER		51048-0300
J1	3P JUMPER WIRE		D20PDY0360G
JA101	RGB CONNECTOR		VKB1056
JA102	2P PIN JACK		VKB1060
	TERMINAL		VNE1841
	EARTH PLATE (FE)		VNF1081
X201	CRYSTAL RESONATOR (16MHz)		VSS1057

MOTHER ASSEMBLY

SEMICONDUCTORS

IC805		BA10393F
IC203, IC602, IC804		BA15218N
IC205		BU4053B
IC351		CA0002AM
IC801		CXA1081S
IC802		CXA1372S
IC403		CXL1009P
IC807		LA6510L
IC405		M50552-132SP
IC803		NJM072L
IC404		PA0017-P
IC401		PA5013A
IC101		PD0173A
IC201		PD3239A
IC402		PM0001
IC601		PM3002
IC204		TA7320P
IC806		TA8464K
IC202		TC7SU04F
Q204, Q254, Q263, Q406, Q407, Q411, Q456, Q496, Q502, Q503, Q511, Q540, Q611, Q613, Q614, Q703, Q704, Q802, Q812, Q831, Q905, Q909, Q917		2SA1037K
Q809		2SA1399
Q532		2SA933S
Q401		2SB1237X
Q261, Q351, Q431, Q524		2SC1740S
Q202, Q203, Q205, Q252, Q253, Q255, Q256-Q260, Q262, Q352, Q404, Q408, Q497-Q501, Q548, Q549, Q601-Q605, Q700-Q702, Q801, Q803-Q805, Q807, Q811, Q813, Q915, Q918		2SC2412K
Q402		2SD1858X
Q908		2SK184
Q201, Q251, Q403, Q405, Q504, Q512, Q606, Q808, Q810, Q814, Q903, Q913		DTA124EK
Q101, Q505, Q522, Q530, Q531, Q612, Q615, Q624, Q901, Q902, Q911, Q912, Q914		DTC124EK

Mark	No.	Description	Part No.
	D805		1SR35-100AVL
	D101-D103, D401, D502, D801-D803, D806, D807		ISS254
	D601, D810, D811		DA204K
	D201		DAN202K
	D403		DAP202K
	D203		SVC201SPA

COILS AND FILTERS

L801		LAU100J
L203, L204, L251, L252, L255, L412, L413, L442, L443, L521		LAU120J
L414, L415, L430		LAU150J
L497, L802, L804		LAU151J
L346		LAU180J
L345, L348, L803		LAU181J
L201, L202		LAU1R2J
L347, L351, L496, L530, L601		LAU220J
L600		LAU270J
L525		LAU330J
L523		LAU390J
L432		LAU430J
L433		LAU470J
L805		LAU4R7J
L522		LAU560J
L411, L431		LAU680J
L458		LFA221J
L457, L524		LFA561J
F204 3. 2MHz L. P. FILTER		VTF1011
F203 4. 43MHz B. P. FILTER		VTF1034
F202 COMB FILTER		VTF1042
F201 8MHz B. P. FILTER		VTF1051

CAPACITORS

VC201 (10p)		PCM1001
VC202 (20p)		VCM-008
VC203 (30p)		VCM1005
C203, C431, C438, C441, C816, C844		CCSQCH050C50
C207, C500, C532, C774		CCSQCH100D50
C124, C125, C212, C231, C256, C265, C419, C461, C496, C632, C809, C811, C430		CCSQCH101J50
C345, C456		CCSQCH120J50
C352, C439, C440		CCSQCH121J50
C264, C348, C509, C550, C570, C771, C772		CCSQCH151J50
C409, C415, C417, C423, C424, C485, C529, C612, C633		CCSQCH180J50
C437		CCSQCH220J50
C266, C374, C660		CCSQCH221J50
C204, C208, C341, C416, C495, C510, C520, C775, C779, C810, C843		CCSQCH270J50
C402, C463, C507, C508, C918, C930, C957		CCSQCH271J50
C104, C105, C205, C462, C560		CCSQCH330J50
C211, C343, C433, C524, C528, C559		CCSQCH390J50
C252, C406		CCSQCH391J50
C455, C845, C846		CCSQCH470J50
C841, C999		CCSQCH471J50
C847		CCSQCH510J50
C342, C549, C778		CCSQCH560J50



Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	C206, C344, C346, C808, C812		CCSQCH680J50		C102, C407, C408, C466, C467, C483,		CKSQYF473Z25
	C293, C347, C349, C411, C412, C498,		CCSQCH820J50		C487, C488, C527, C601, C629, C813,		
	C609, C806				C815, C943, C948, C949, C951, C956		
	C536		CCSQCH910J50		C858		CKSYF105Z16
	C530, C848		CEANP100M16		C219, C605-C607		CQMA102J50
	C284, C551, C613, C620, C623		CEANP220M10		C618		CQMA103J50
	C277, C278, C283		CEANP470M10		C608		CQMA152J50
	C537, C945		CEAS010M50		C627		CQMA222J50
	C354, C522		CEAS100M50		C444, C611		CQMA272J50
	C364, C434, C445, C452, C457, C489,		CEAS101M10		C218, C355-C358		CQMA472J50
	C490, C643, C647, C842				C958		VCH1115
	C472, C473, C477		CEAS3R3M50	RESISTORS			
	C101, C150, C201, C209, C213, C220,		CEAS470M16		VR608		VRTB6VS153
	C221, C222, C227, C254, C258, C260,				VR201, VR601		VRTB6VS222
	C262, C268, C270, C280-C282, C286,				VR441		VRTB6VS223
	C288, C290, C363, C369, C428, C474,				VR605, VR606		VRTB6VS333
	C484, C499, C501, C502, C512, C521,				VR202		VRTB6VS471
	C525, C533, C552, C558, C622, C624,				VR204, VR481, VR482, VR521		VRTB6VS472
	C801, C802, C901, C902				VR603, VR604, VR607		VRTB6VS473
	C443		CEAS4R7M50		R994		DCN1001
	C368		CEASR47M50		R496		RD1/6PM101J
	C367, C831, C941, C942		CEHAQ100M50		R564		RD1/6PM102J
	C273, C275		CEJA470M6R3		R667		RD1/6PM103J
	C401, C405, C619		CEJANP2R2M35		R287, R605, R817		RD1/6PM221J
	C625, C628, C926, C932		CEJANP4R7M16		R406		RD1/6PM224J
	C223		CEJANPR47M50		R619, R631, R854		RD1/6PM225J
	C368, C849		CEJAR47M50		R286		RD1/6PM2R2J
	C446		CFTXA103J50		R255, R261, R289, R845, R846		RD1/6PM470J
	C365, C366, C514		CFTXA104J50		R591		RD1/6PM471J
	C224		CFTXA223J50		R431		RD1/6PM510J
	C359, C360, C471, C603		CFTXA224J50		R290, R358		RD1/6PM680J
	C614, C626		CFTXA332J50		R438		RN1/6PQ1503F
	C361, C362		CFTXA393J50		R511		RN1/6PQ2002F
	C610, C617		CFTXA563J50		R415, R416		RN1/6PQ3002F
	C515, C517		CFTXA683J50		R434		RN1/6PQ5101F
	C832, C940, C944		CKSQYB102K50		OTHER RESISTORS		RS1/10S□□□□
	C913, C925, C929, C936		CKSQYB333K25	OTHERS			
	C920, C923		CKSQYB562K50		CN120 11P TOP POST		B11P-SHF-1AA
	C103, C106, C108, C109, C120, C121,		CKSQYF103Z50		CN103 FFC CONNECTOR(23P)		HLEM23S
	C122, C130-C133, C202, C210, C214,				CN105 6P JUMPER CONNECTOR		SBRK06S
	C215-C217, C225, C226, C230, C232,				7P CABLE HOLDER		51048-0700
	C233, C251, C253, C255, C257, C259,				9P CABLE HOLDER		51048-0900
	C261, C263, C269, C271, C274, C276,				CN106 KR CONNECTOR		B7B-PH-K
	C285, C289, C291, C350, C351, C414,				J5 7P JUMPER WIRE		D20PDY0720G
	C418, C421, C422, C425, C426, C458,				J4 9P JUMPER WIRE		D20PDY0910G
	C459, C460, C475, C476, C486, C535,				J3 13P JUMPER WIRE		D20PDY1325G
	C553, C554, C557, C561, C562, C565,				JA3, JA4 JACK/12V		PKN1004
	C566, C602, C604, C615, C616, C621,				JA2 MINI JACK		PKN1005
	C644, C651, C776, C777, C780, C781,				JA5 OPTICAL OUTPUT JACK		TOTX178
	C783, C803-C805, C807, C814, C817,				PCB BINDER		VEF1040
	C818, C850, C855-C857, C904, C914,				JA1 1P PIN JACK		VKB1063
	C915, C917, C928, C931, C933, C934,				TERMINAL		VNE1841
	C937-C939, C946, C950				EARTH METAL		VNF-091
	C107, C151, C371-C373, C403, C404,		CKSQYF104Z25		X202 CRYSTAL RESONATOR(14. 318MHz)		VSS1029
	C427, C429, C435, C442, C479, C480,				X101 CERAMIC RESONATOR(9MHz)		VSS1040
	C481, C503-C506, C511, C513, C526,				X203 CRYSTAL RESONATOR(17. 734MHz)		VSS1059
	C531, C821, C911, C912, C916, C919,				X201 CRYSTAL RESONATOR(14. 22MHz)		VSS1060
	C922, C924, C927, C947, C952, C959				SCREW		BBZ30P060FCC

● EXPLODED VIEWS (BASE SECTION)

Note:
The numbers on the exploded diagram correspond to the numbers in the remarks column of the comparative table. Refer to "CONTRAST OF MISCELLANEOUS PARTS".

A

A

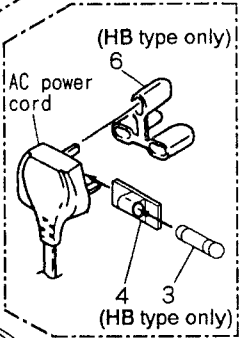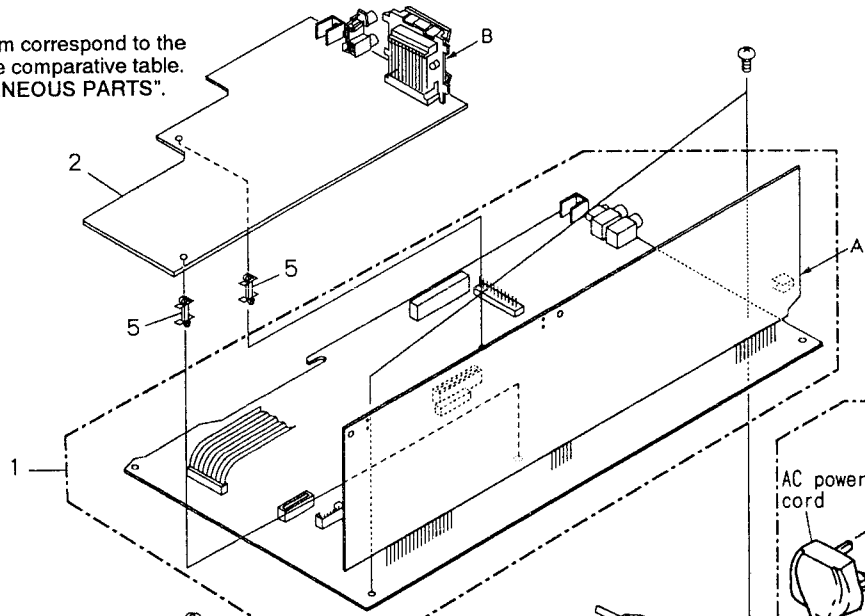


B

* 1: Q3 on the SYPS assembly

B

C

C

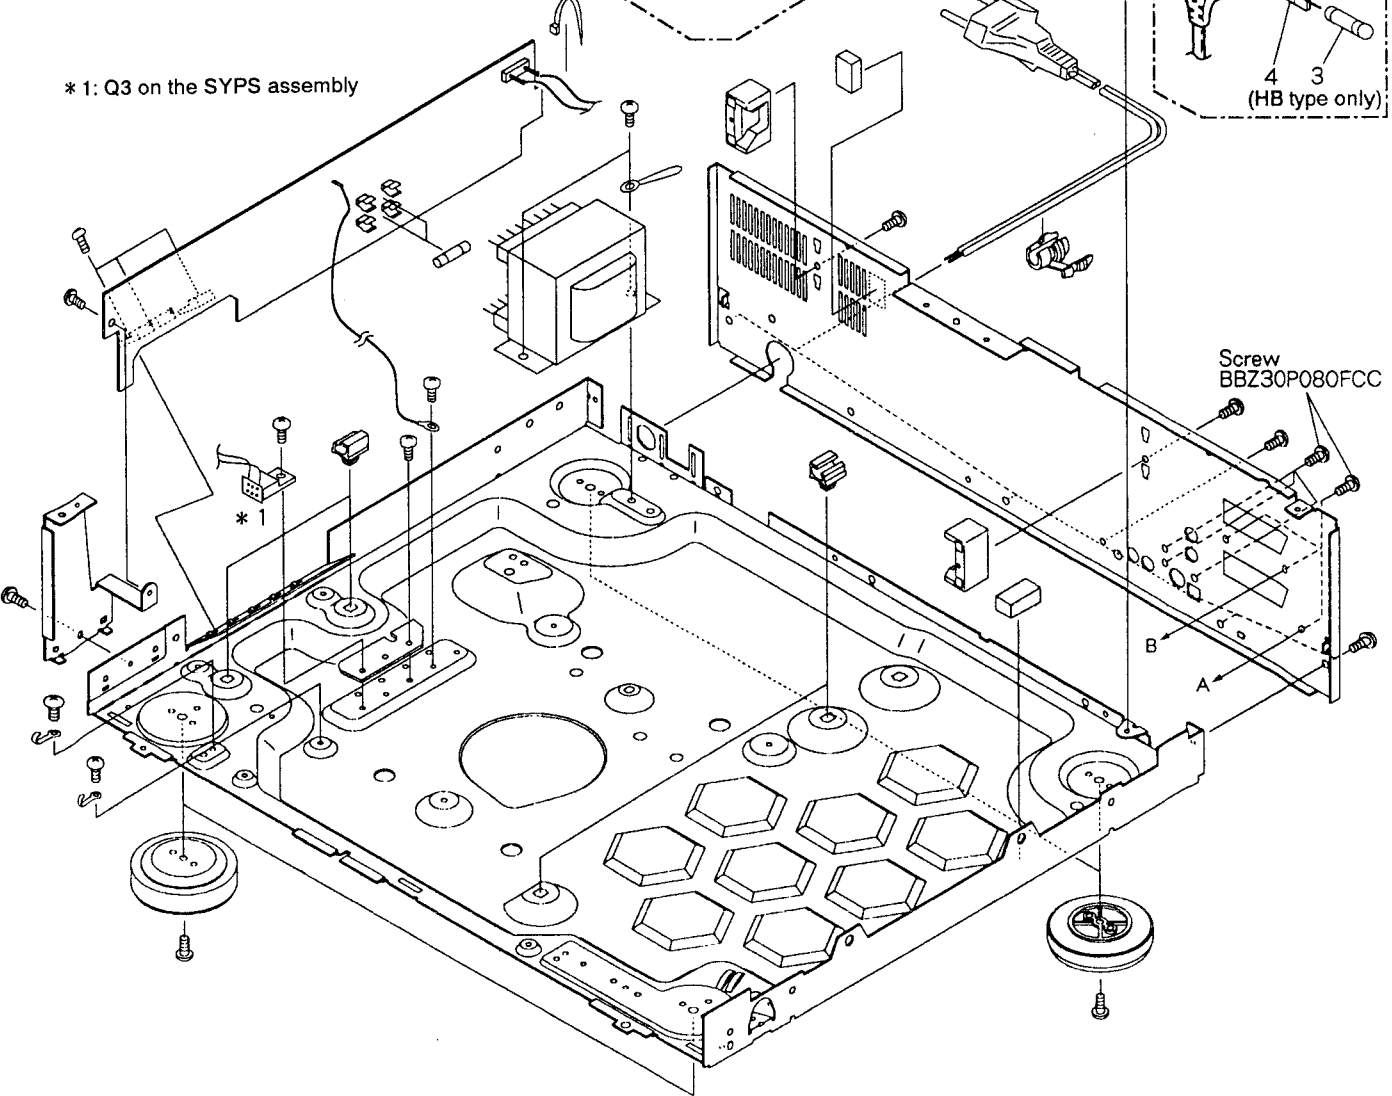

Screw BBZ30P080FCC

D

D

● SCHEMATIC DIAGRAMS AND PCB PATTERNS

NOTE FOR SCHEMATIC DIAGRAMS (Type 4A)

- When ordering service parts, be sure to refer to "PARTS LIST of EXPLODED VIEWS" or "PCB PARTS LIST".
- Since these are basic circuits, some parts of them or the values of some components may be changed for improvement.
- RESISTORS:**
Unit: k:kΩ, M:MΩ, or Ω unless otherwise noted.
Rated power: 1/4W, 1/6W, 1/8W, 1/10W unless otherwise noted.
Tolerance:(F): ±1%, (G): ±2%, (K): ±10%, (M): ±20% or ±5% unless otherwise noted.
- CAPACITORS:**
Unit: p:pF or μF unless otherwise noted.
Ratings: capacitor (μF) / voltage (V) unless otherwise noted.
Rated voltage: 50V except for electrolytic capacitors.
- COILS:**
Unit: m:mH or μH unless otherwise noted.
- VOLTAGE AND CURRENT:**
□ or ←V: DC voltage (V) in PLAY mode unless otherwise noted.
⇐mA or ←mA: DC current in PLAY mode unless otherwise noted.
Value in () is DC current in STOP mode.
- OTHERS:**
 - ⊙ or ○: Adjusting point.
 - ◀: Measurement point.
 - The Δ mark found on some component parts indicates the importance of the safety factor of the parts. Therefore, when replacing, be sure to use parts of identical designation.
- SCH - □ ON THE SCHEMATIC DIAGRAM:**
 - SCH-□ indicates the drawing number of the schematic diagram. (SCH stands for schematic diagram.)
- SWITCHES (Underline indicates switch position):**

PKSB ASSEMBLY
S224 :POWER (STANDBY/ON)

PKSB ASSEMBLY
S4 :PARK OUT
S5 :PARK IN

LOSB ASSEMBLY
S1 :TILT LOADING 1
S2 :TILT LOADING 2
S3 :TILT LOADING 3


FLKY ASSEMBLY
S201 :LANGUAGE
S202 :SYSTEM
S203 :RANDOM PLAY
S204 :CHP/TIME
S205 :PGM EDIT
S206 :SKIP(◀◀)
S207 :SKIP(▶▶)
S208 :1
S209 :2
S210 :3
S211 :4
S212 :6
S213 :7
S214 :8
S215 :9
S216 :0
S217 :5
S218 :PGM
S219 :+10
S220 :DIRECT CD (CD)
S221 :OPEN/CLOSE (▲)
S222 :STOP (■)
S223 :PLAY/PAUSE (▶/||)
S225 :SCAN REV ◀ FWD

NOTE FOR PCB CONNECTION DIAGRAMS

P.C.B. pattern diagram Indication	Corresponding part symbol	Part name
		Transistor
		FET
		Diode
		Zener diode
		LED
		Varactor
		Tact switch
		Inductor
		Coil
		Transformer
		Filter
		Ceramic capacitor
		Mylar capacitor
		Styrol capacitor
		Electrolytic capacitor (Non polarized)
		Electrolytic capacitor (Noiseless)
		Electrolytic capacitor (Polarized)
		Electrolytic capacitor (Polarized)
		Power capacitor
		Semi-fixed resistor
		Resistor array
		Resistor
		Resonator
		Thermistor

- This P.C.B. connection diagram is viewed from the parts mounted side.
- The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the above Table.
- The capacitor terminal marked with □ shows negative terminal.
- The diode marked with ○ shows cathode side.
- The transistor terminal marked with □ shows emitter.


1. FLKY, PSWB, HEPB, SYPS, CAMB, LOSB, LOMB, FG, PKSB, PICKUP ASSEMBLIES AND OVERALL WIRING DIAGRAM

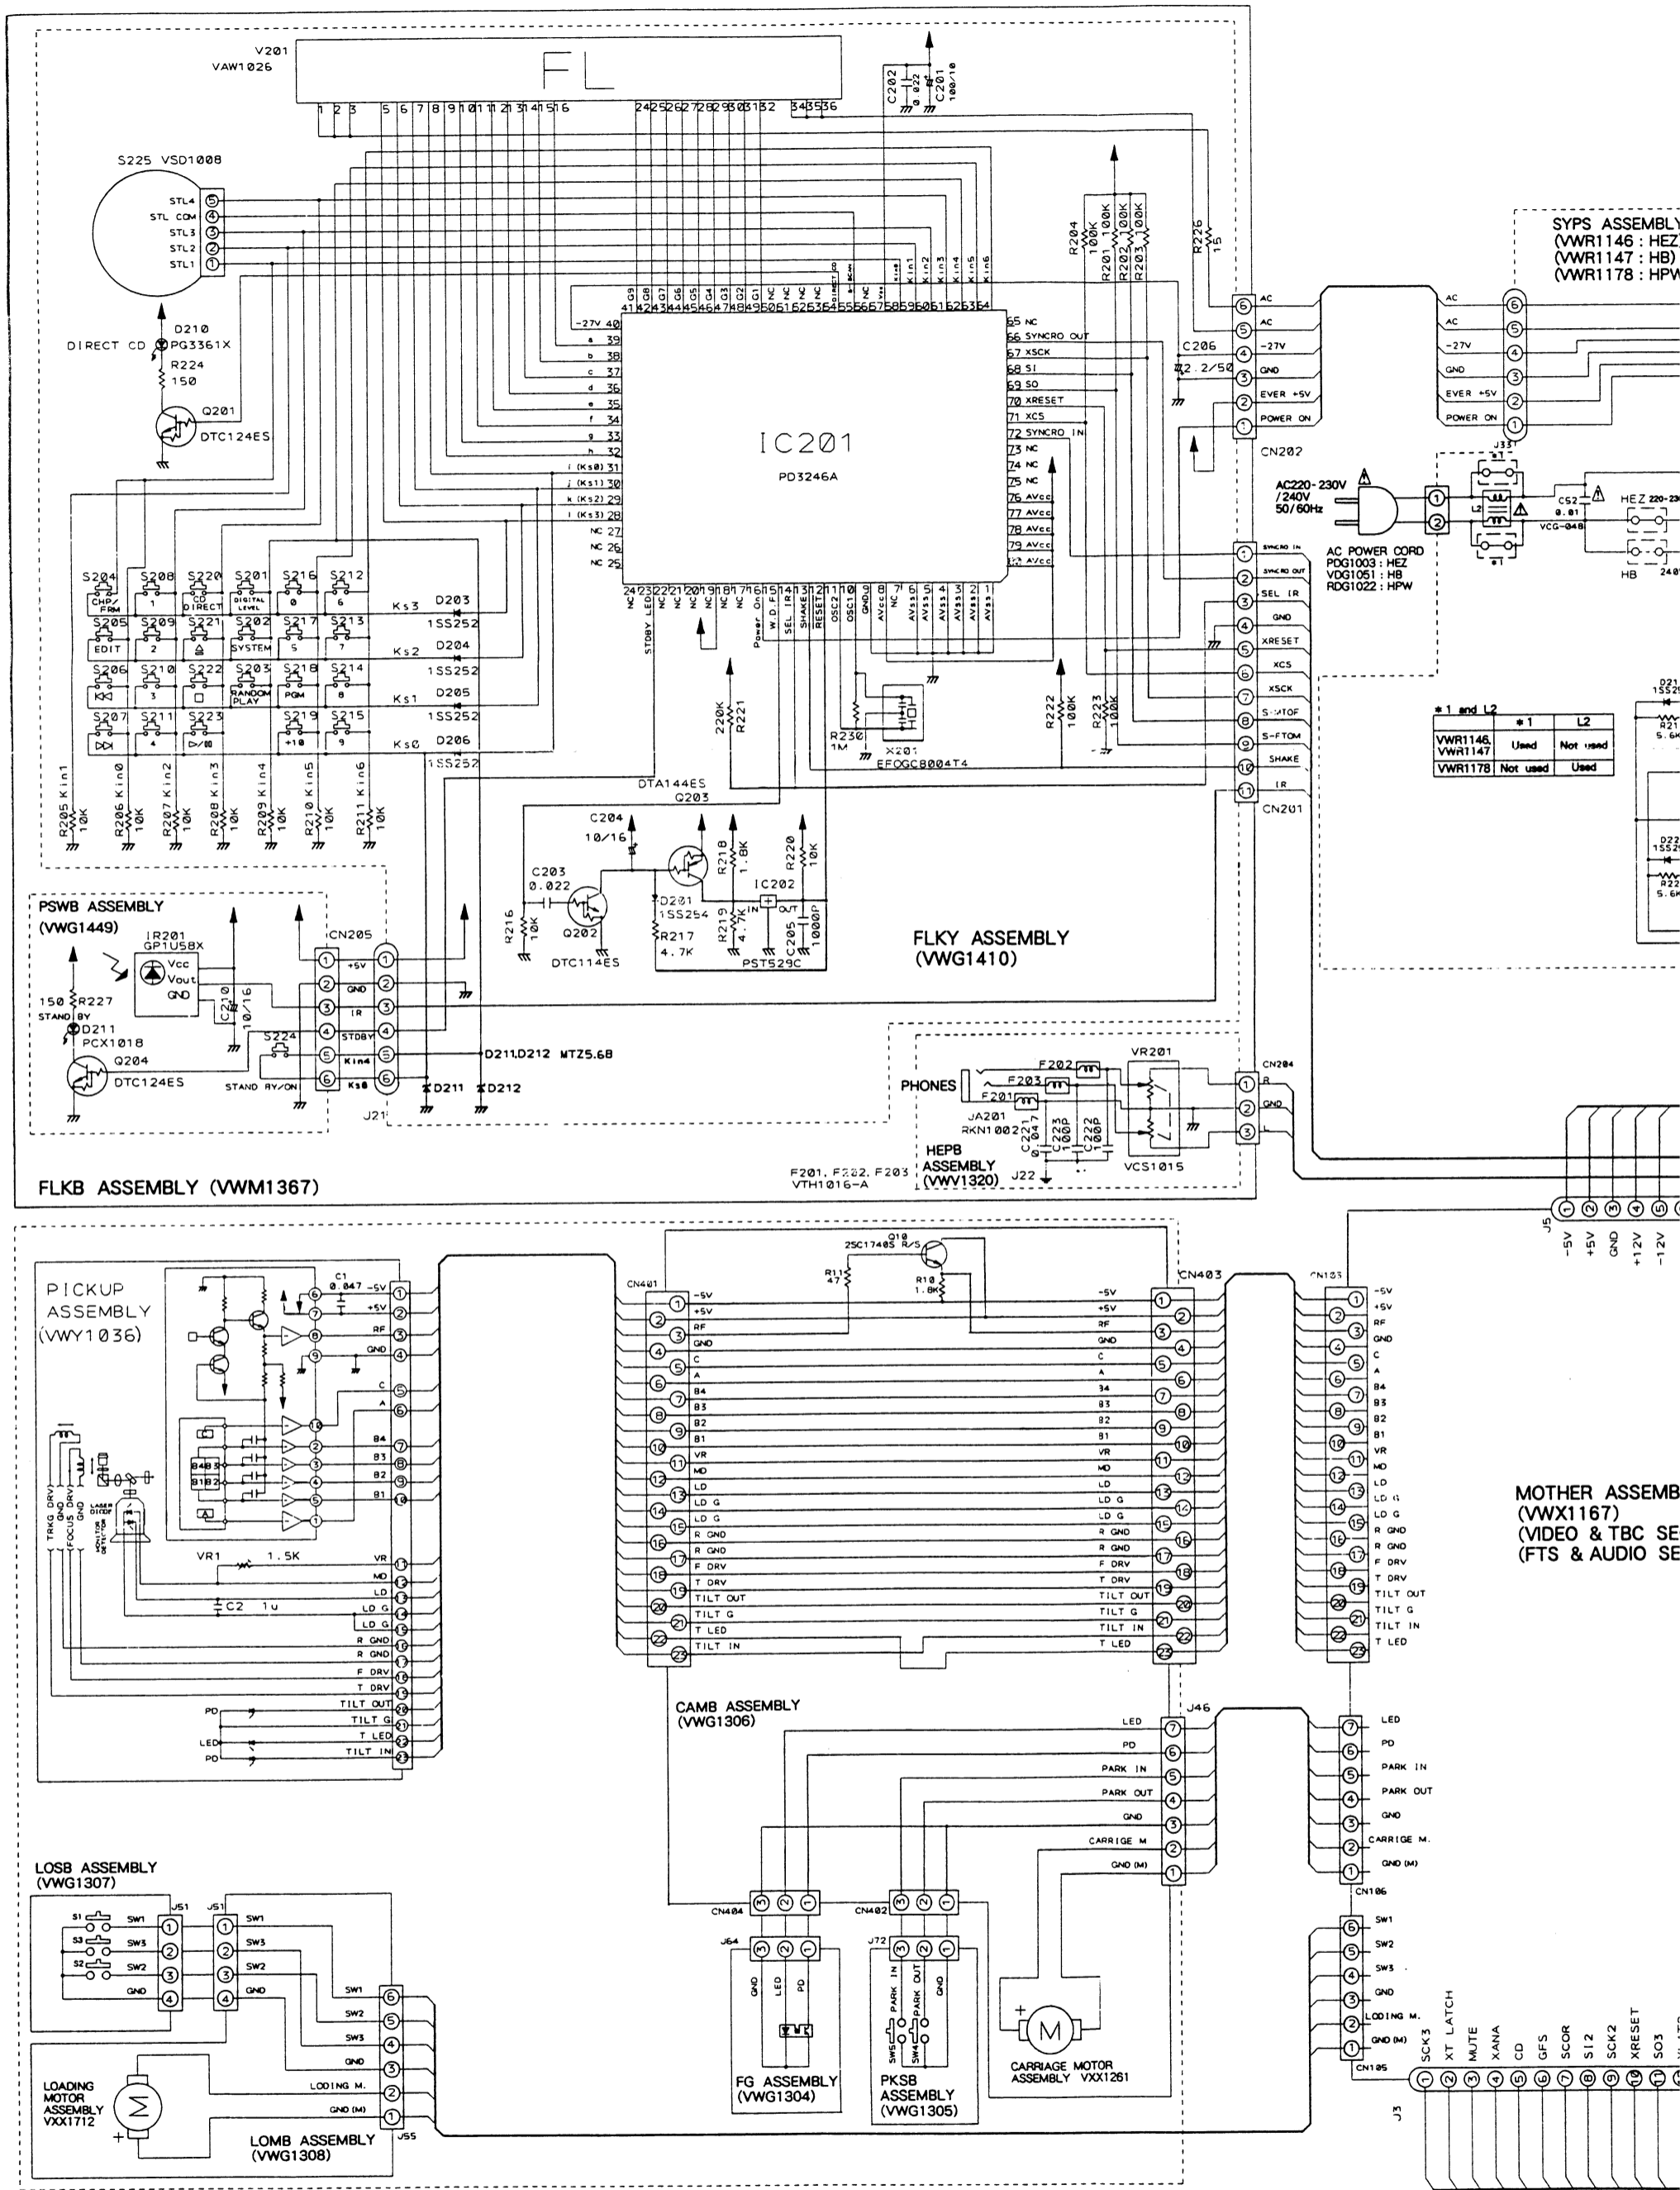




SCH-1F

OVERALL WIRING DIAGRAM,
 FLKY ASSY, PSWB ASSY, HEPB ASSY,
 SYPS ASSY, CAMB ASSY, LOSB ASSY,
 LOMB ASSY, FG ASSY, PKSB ASSY,
 PICKUP ASSY


* 1 and L2 location on PCB diagram

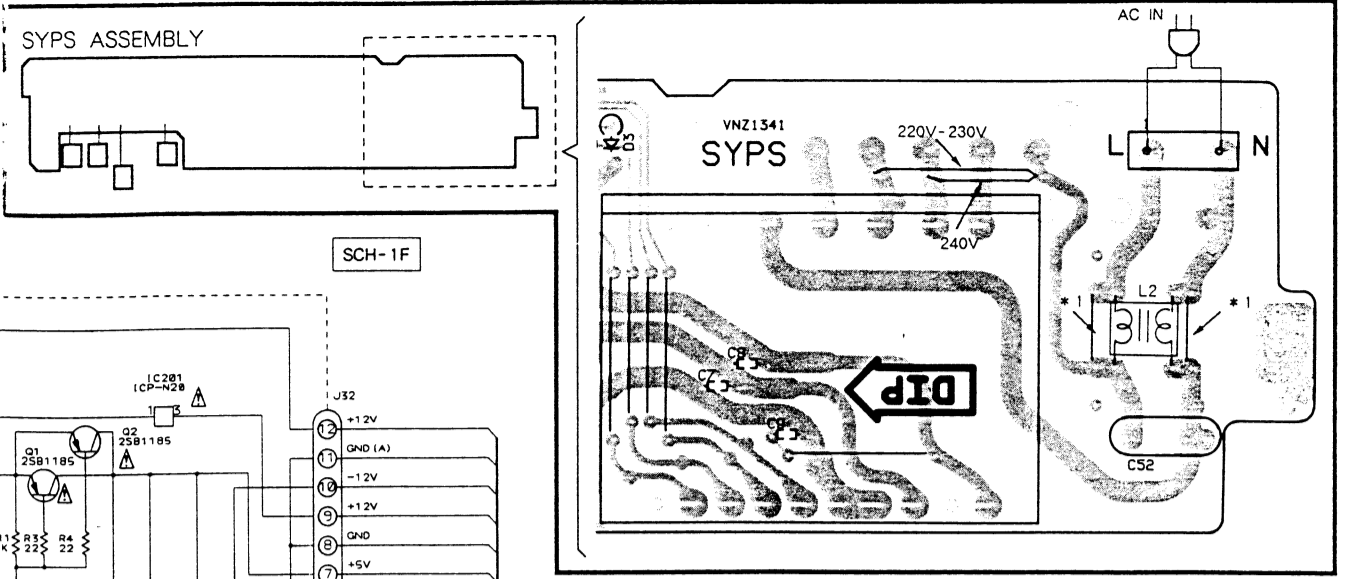

SYPS ASSEMBLY
 (VWR1146 : HEZ)
 (VWR1147 : HB)
 (VWR1178 : HPW)

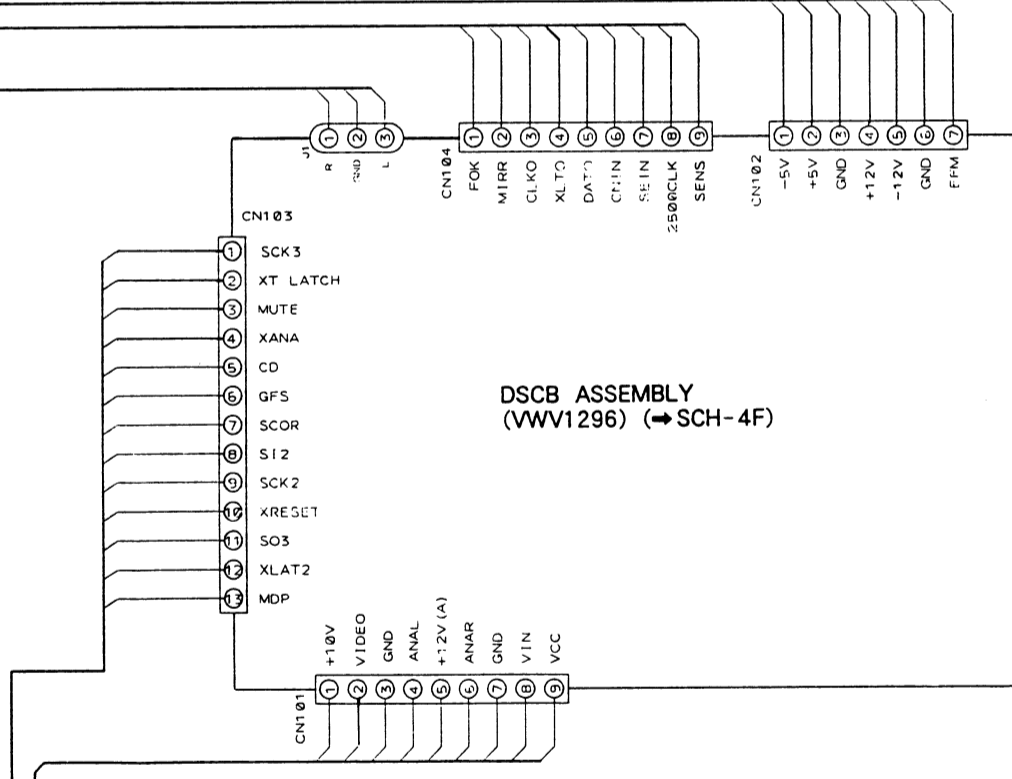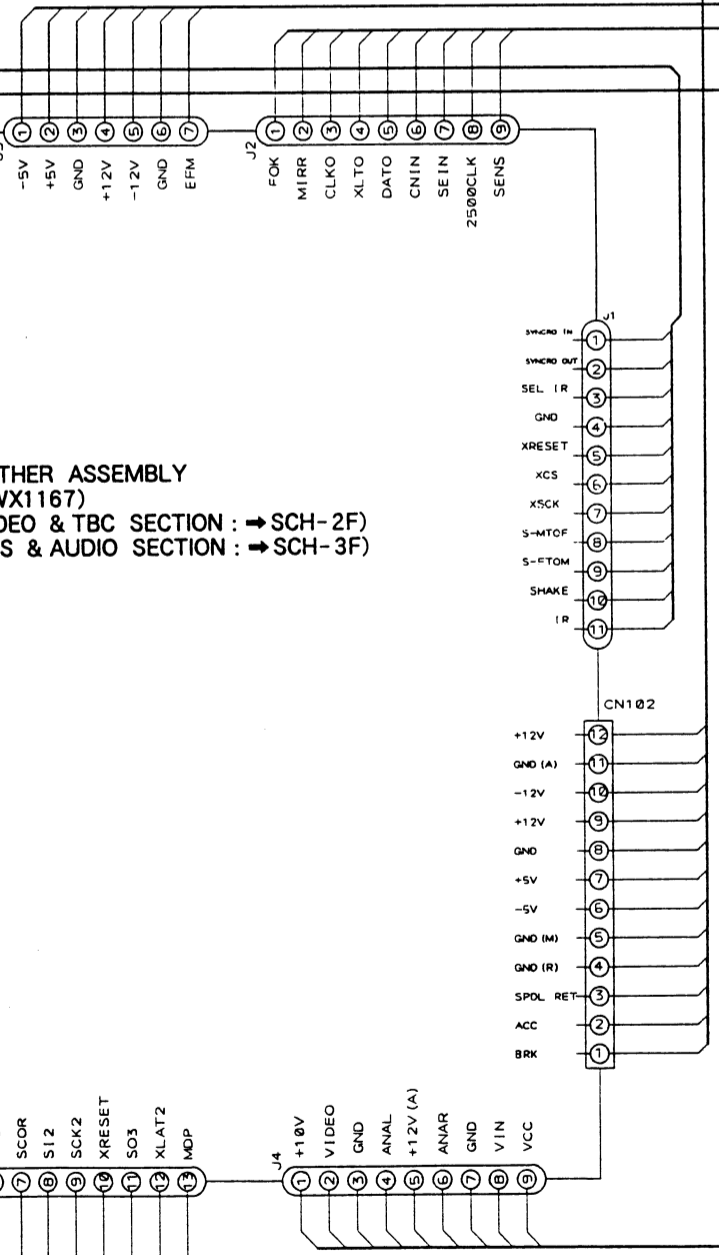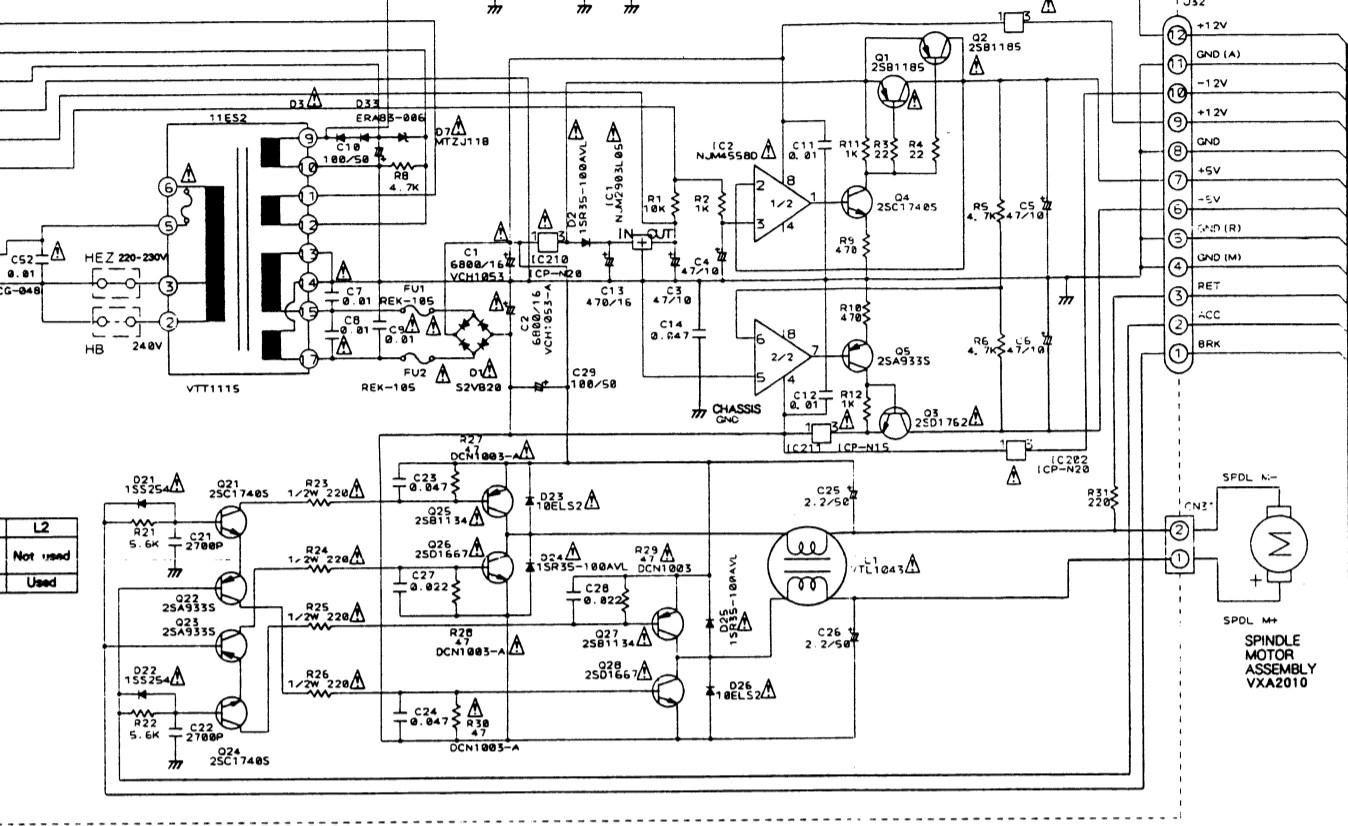

D211 and D212 location on PCB diagram

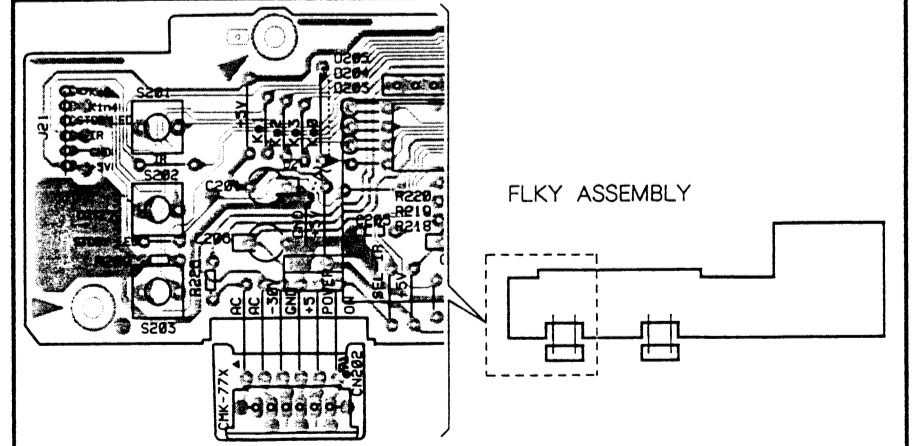


OVERALL WIRING DIAGRAM,
 FLKY ASSY, PSWB ASSY, HEPB ASSY,
 SYPS ASSY, CAMB ASSY, LOSB ASSY,
 LOMB ASSY, FG ASSY, PKSB ASSY,
 PICKUP ASSY

SCH-1F

MOTHER ASSEMBLY (1/2) (VWX1167)

• VIDEO SECTION

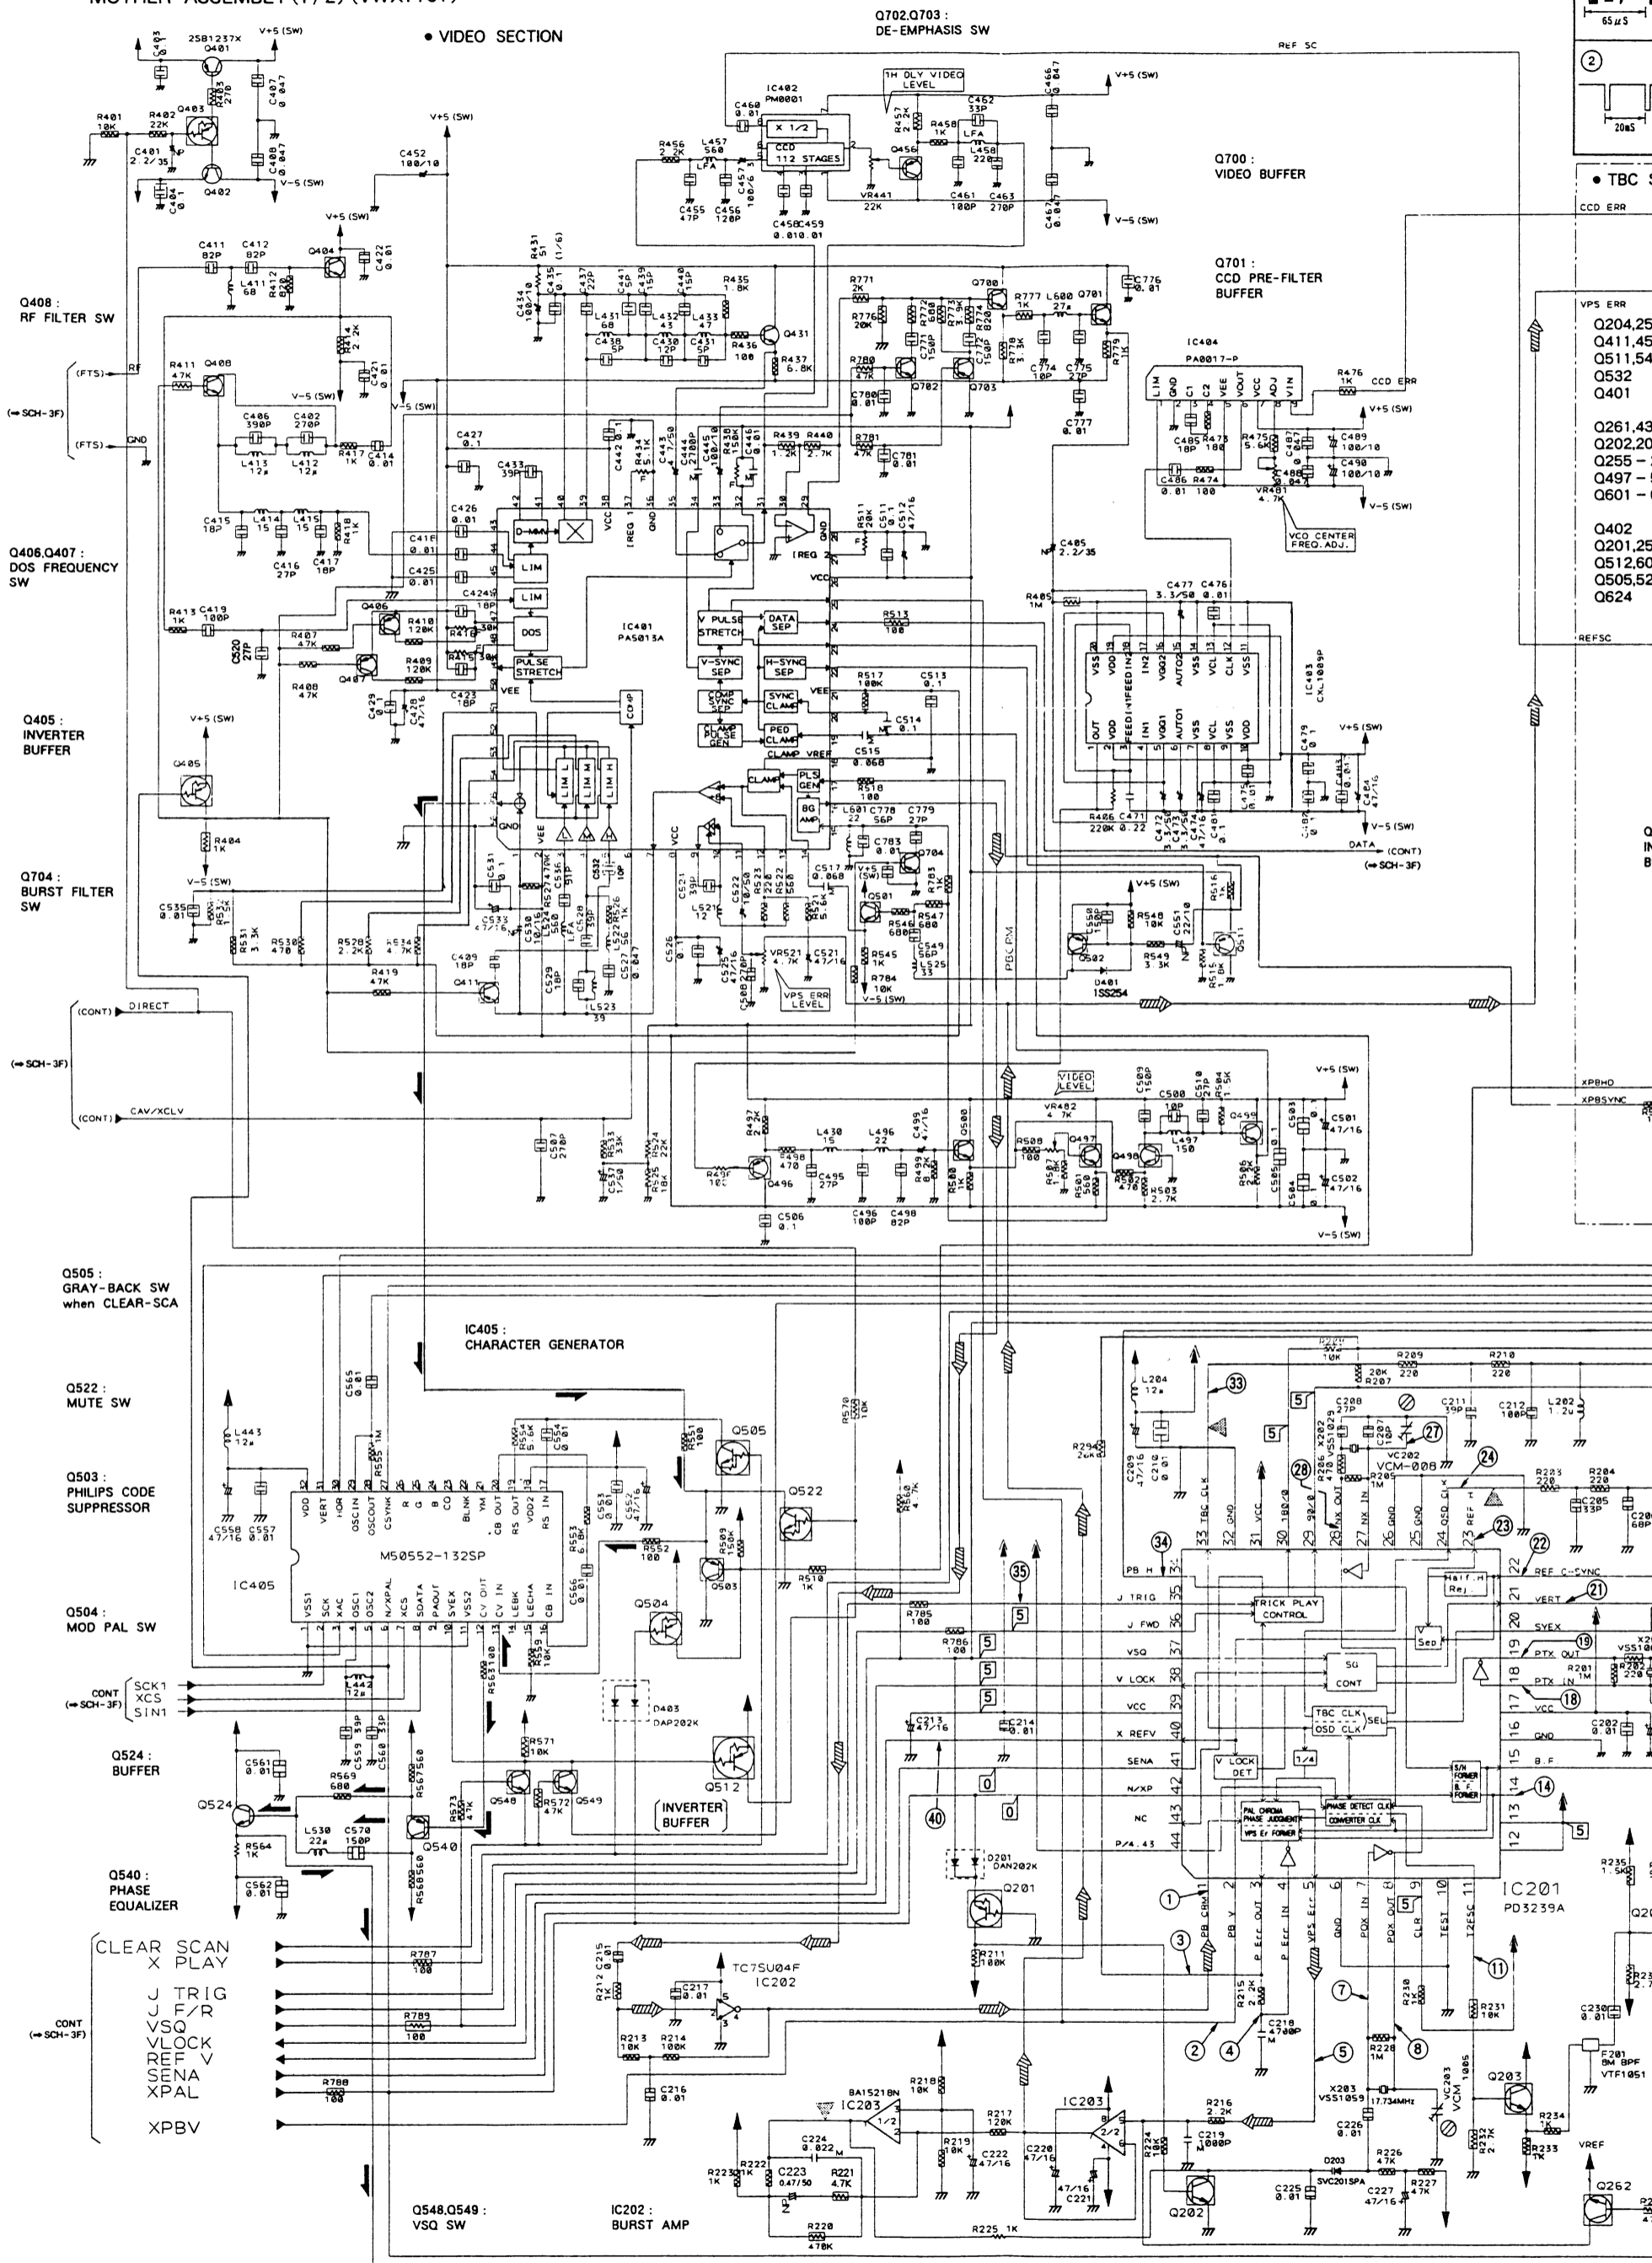

Q408 : RF FILTER SW
 Q406,Q407 : DOS FREQUENCY SW
 Q405 : INVERTER BUFFER
 Q704 : BURST FILTER SW

Q505 : GRAY-BACK SW when CLEAR-SCA
 Q522 : MUTE SW
 Q503 : PHILIPS CODE SUPPRESSOR
 Q504 : MOD PAL SW
 Q524 : BUFFER
 Q540 : PHASE EQUALIZER

CLEAR SCAN X PLAY
 J TRIG
 J F/R
 VSO
 VLOCK
 REF V
 SENA
 XPAL
 XPBV

 
Q548,Q549 : VSO SW
 IC202 : BURST AMP

IC203 (1/2) : VCXO EQ AMP
 Q201 : BUFFER
 IC203 (2/2) : VPS ERROR AMP
 Q202 : MUTE SW
 Q203 : BUFFER

SCH-2F

MOTHER ASSY (1/2) (VIDEO & TBC)

IC201 (PD3)

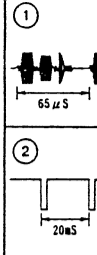

• TBC S

CCD ERR

Q204,25
 Q411,45
 Q511,54
 Q532
 Q401

Q261,43
 Q202,20
 Q255 - 2
 Q497 - 5
 Q601 - 6

Q402
 Q201,25
 Q512,60
 Q505,52
 Q624

REF SC

Q IN BU

XPBD

XPBSYNC


REF C-SYNC

VREF

MOTHER ASSEMBLY

PCB-1F

DSCB ASSEMBLY CN101

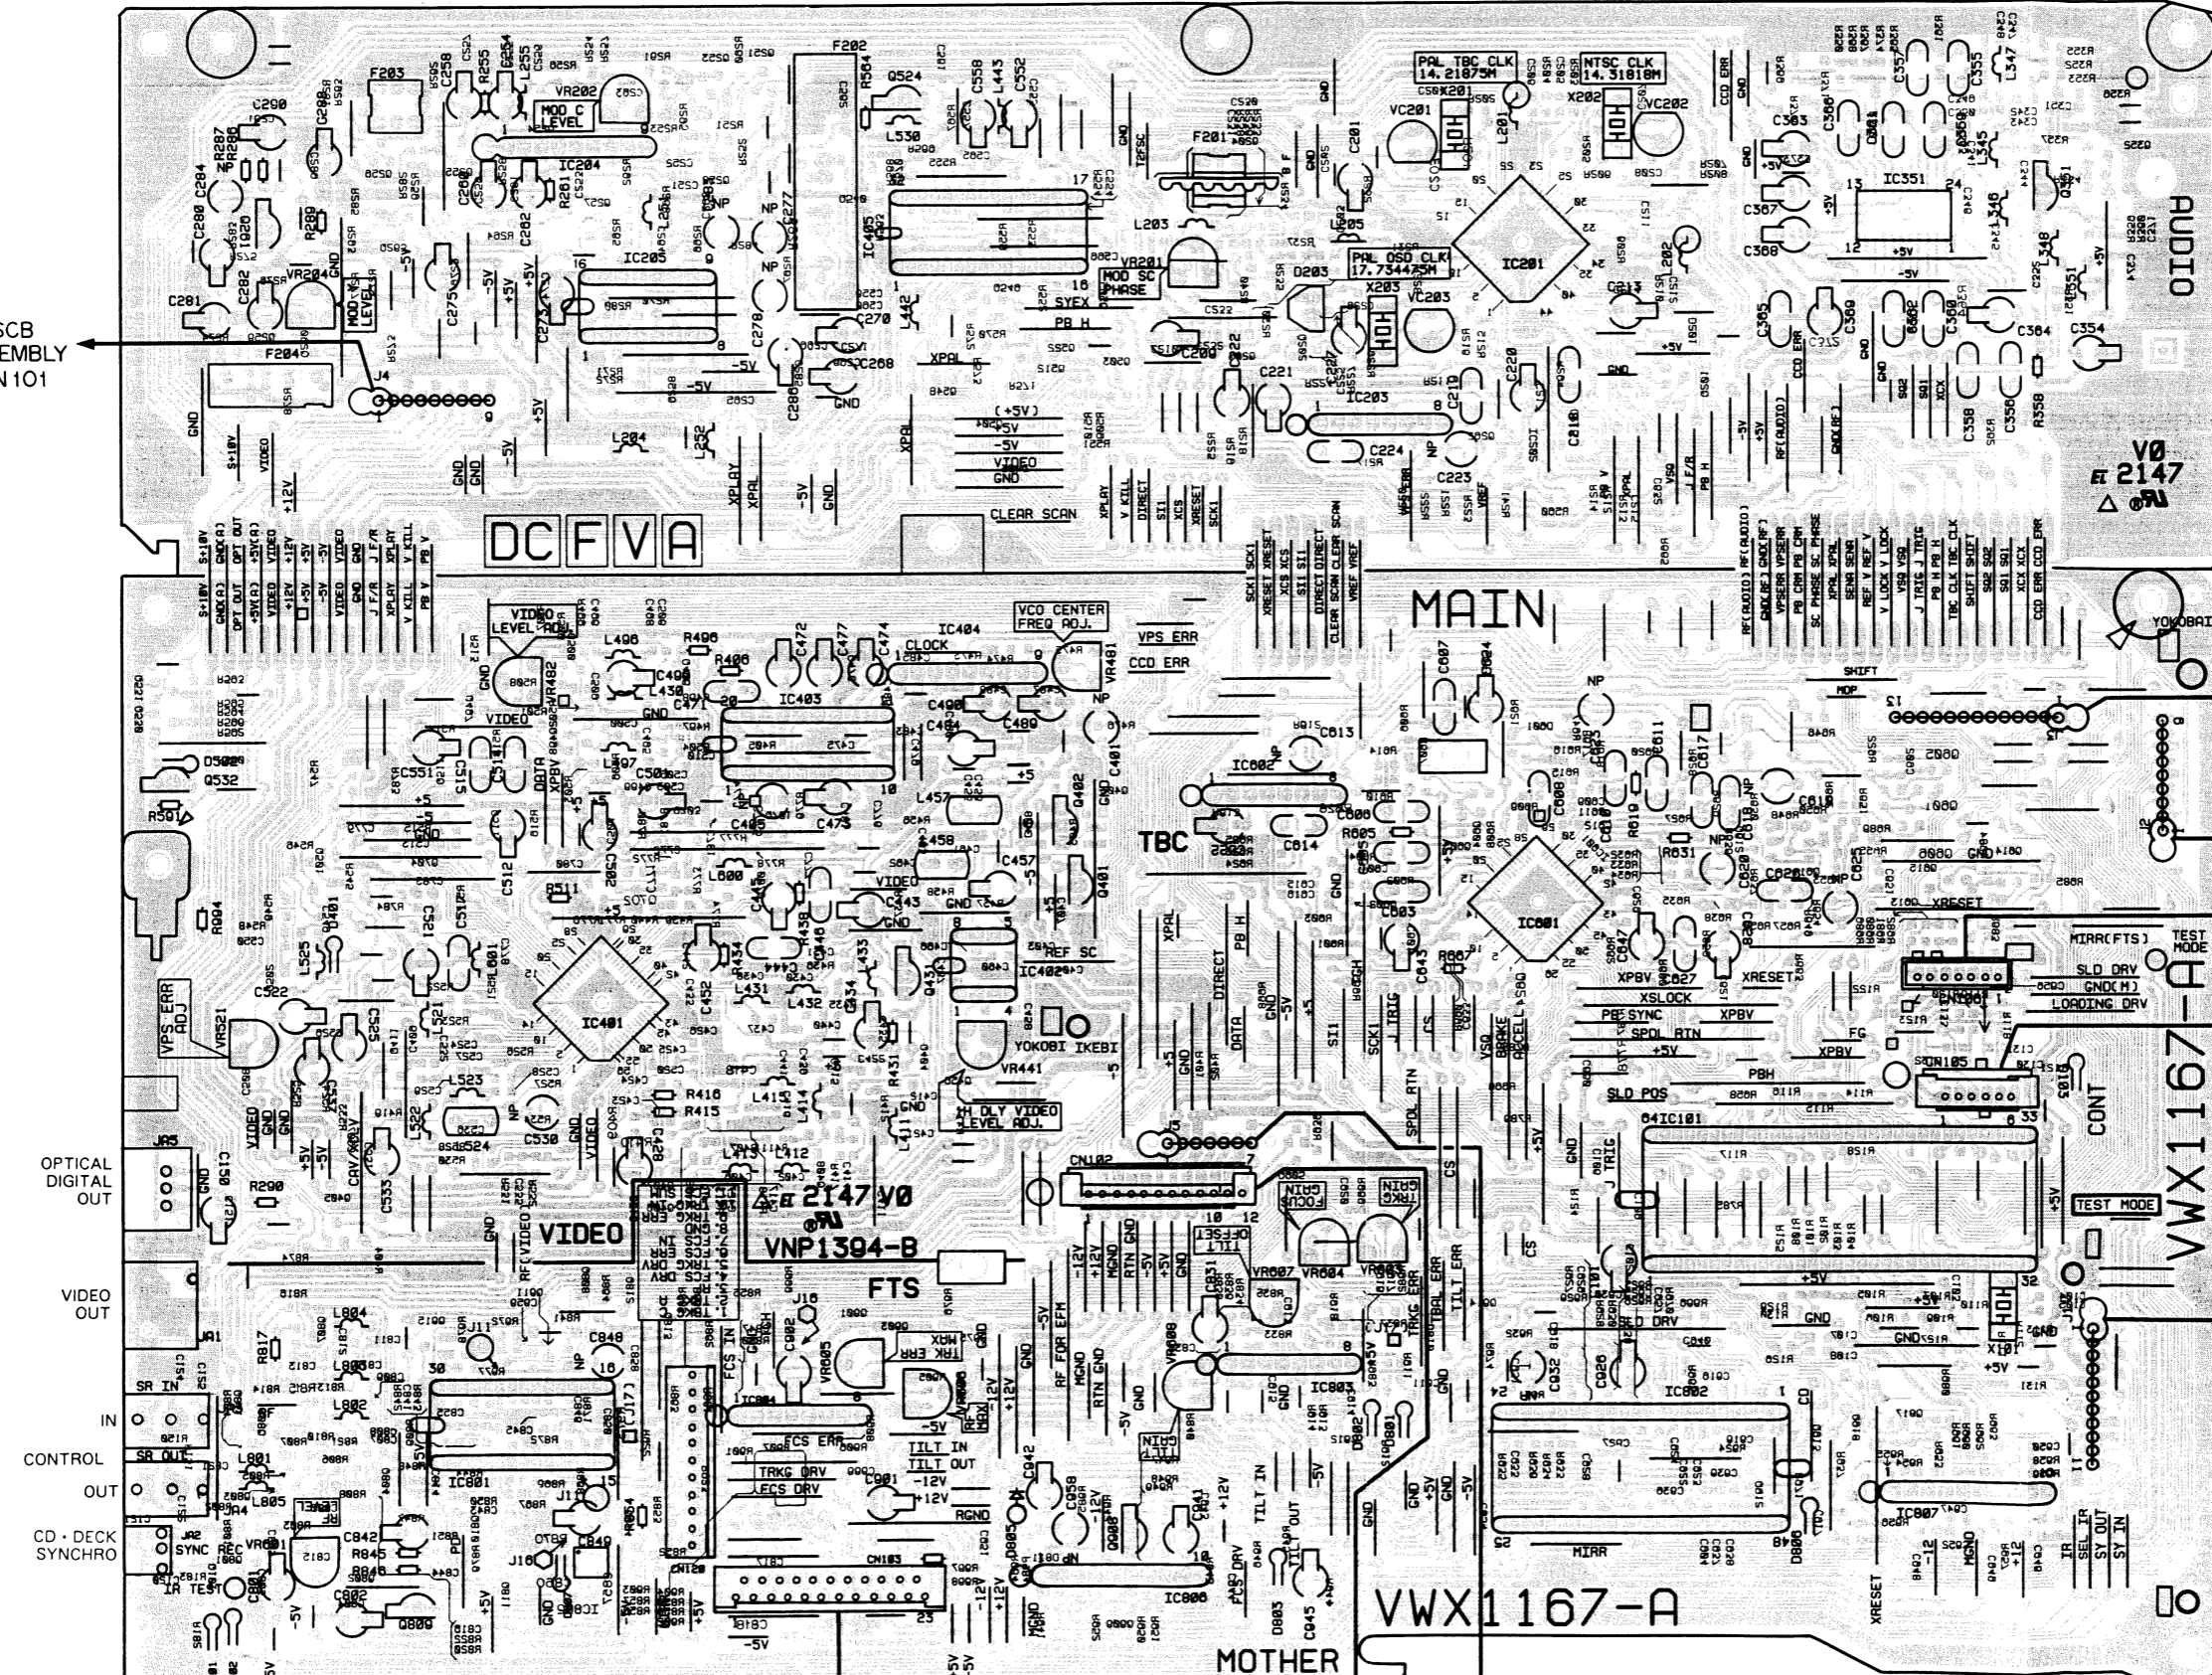

VR202	1250								
VC201	2250								
VC202	2250								
Q524	2250								
IC204	2250	2250	2250	2250					
Q351	2250	2250	2250	2250					
IC351	2250	2250	2250	2250					
Q261	2250	2250	2250	2250					
IC405	2250	2250	2250	2250					
VR201	2250								
VR204	2250								
IC205	2250	2250	2250	2250					
VC203	2250	2250	2250	2250					
IC203	2250	2250	2250	2250					
IC404	2250								
IC403	1120	2250	2250	2250					
Q532	2250	2250	2250	2250					
IC602	2250	2250	2250	2250					
IC601	2250	2250	2250	2250					
IC402	2250	2250	2250	2250					
Q431	2250	2250	2250	2250					
IC401	2250	2250	2250	2250					
VR521	1120								
VR441	2250								
IC101	2250	2250	2250	2250					
VR603	2250								
VR604	2250								
VR607	2250	2250	2250	2250					
IC803	2250	2250	2250	2250					
IC804	2250	2250	2250	2250					
IC801	2250	2250	2250	2250					
IC802	2250	2250	2250	2250					
IC807	2250	2250	2250	2250					
Q908	2250	2250	2250	2250					
IC806	2250	2250	2250	2250					
Q809	2250	2250	2250	2250					

DSCB ASSEMBLY CN103

DSCB ASSEMBLY CN104

CAMB ASSEMBLY J46

LOMB ASSEMBLY J55

FLKY ASSEMBLY CN201

CAMB ASSEMBLY CN403

SYPs ASSEMBLY J32

DSCB ASSEMBLY CN102

This P. C. B. connection diagram is viewed from the parts mounted side.

A B C D


Q251	Q252	Q253	Q254	Q255	Q256	Q257	Q258	Q259	Q260	Q261	Q262	Q263	Q264	Q265	Q266	Q267	Q268	Q269	Q270	Q271	Q272	Q273	Q274	Q275	Q276	Q277	Q278	Q279	Q280	Q281	Q282	Q283	Q284	Q285	Q286	Q287	Q288	Q289	Q290	Q291	Q292	Q293	Q294	Q295	Q296	Q297	Q298	Q299	Q300
------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------

IC303	IC302	IC301	IC300	IC299	IC298	IC297	IC296	IC295	IC294	IC293	IC292	IC291	IC290	IC289	IC288	IC287	IC286	IC285	IC284	IC283	IC282	IC281	IC280	IC279	IC278	IC277	IC276	IC275	IC274	IC273	IC272	IC271	IC270	IC269	IC268	IC267	IC266	IC265	IC264	IC263	IC262	IC261	IC260	IC259	IC258	IC257	IC256	IC255	IC254	IC253	IC252	IC251	IC250
-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------

IC404	IC403	IC402	IC401	IC400	IC399	IC398	IC397	IC396	IC395	IC394	IC393	IC392	IC391	IC390	IC389	IC388	IC387	IC386	IC385	IC384	IC383	IC382	IC381	IC380	IC379	IC378	IC377	IC376	IC375	IC374	IC373	IC372	IC371	IC370	IC369	IC368	IC367	IC366	IC365	IC364	IC363	IC362	IC361	IC360	IC359	IC358	IC357	IC356	IC355	IC354	IC353	IC352	IC351	IC350
-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------

IC809	IC808	IC807	IC806	IC805	IC804	IC803	IC802	IC801	IC800	IC799	IC798	IC797	IC796	IC795	IC794	IC793	IC792	IC791	IC790	IC789	IC788	IC787	IC786	IC785	IC784	IC783	IC782	IC781	IC780	IC779	IC778	IC777	IC776	IC775	IC774	IC773	IC772	IC771	IC770	IC769	IC768	IC767	IC766	IC765	IC764	IC763	IC762	IC761	IC760	IC759	IC758	IC757	IC756	IC755	IC754	IC753	IC752	IC751	IC750
-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------

PCB-1E

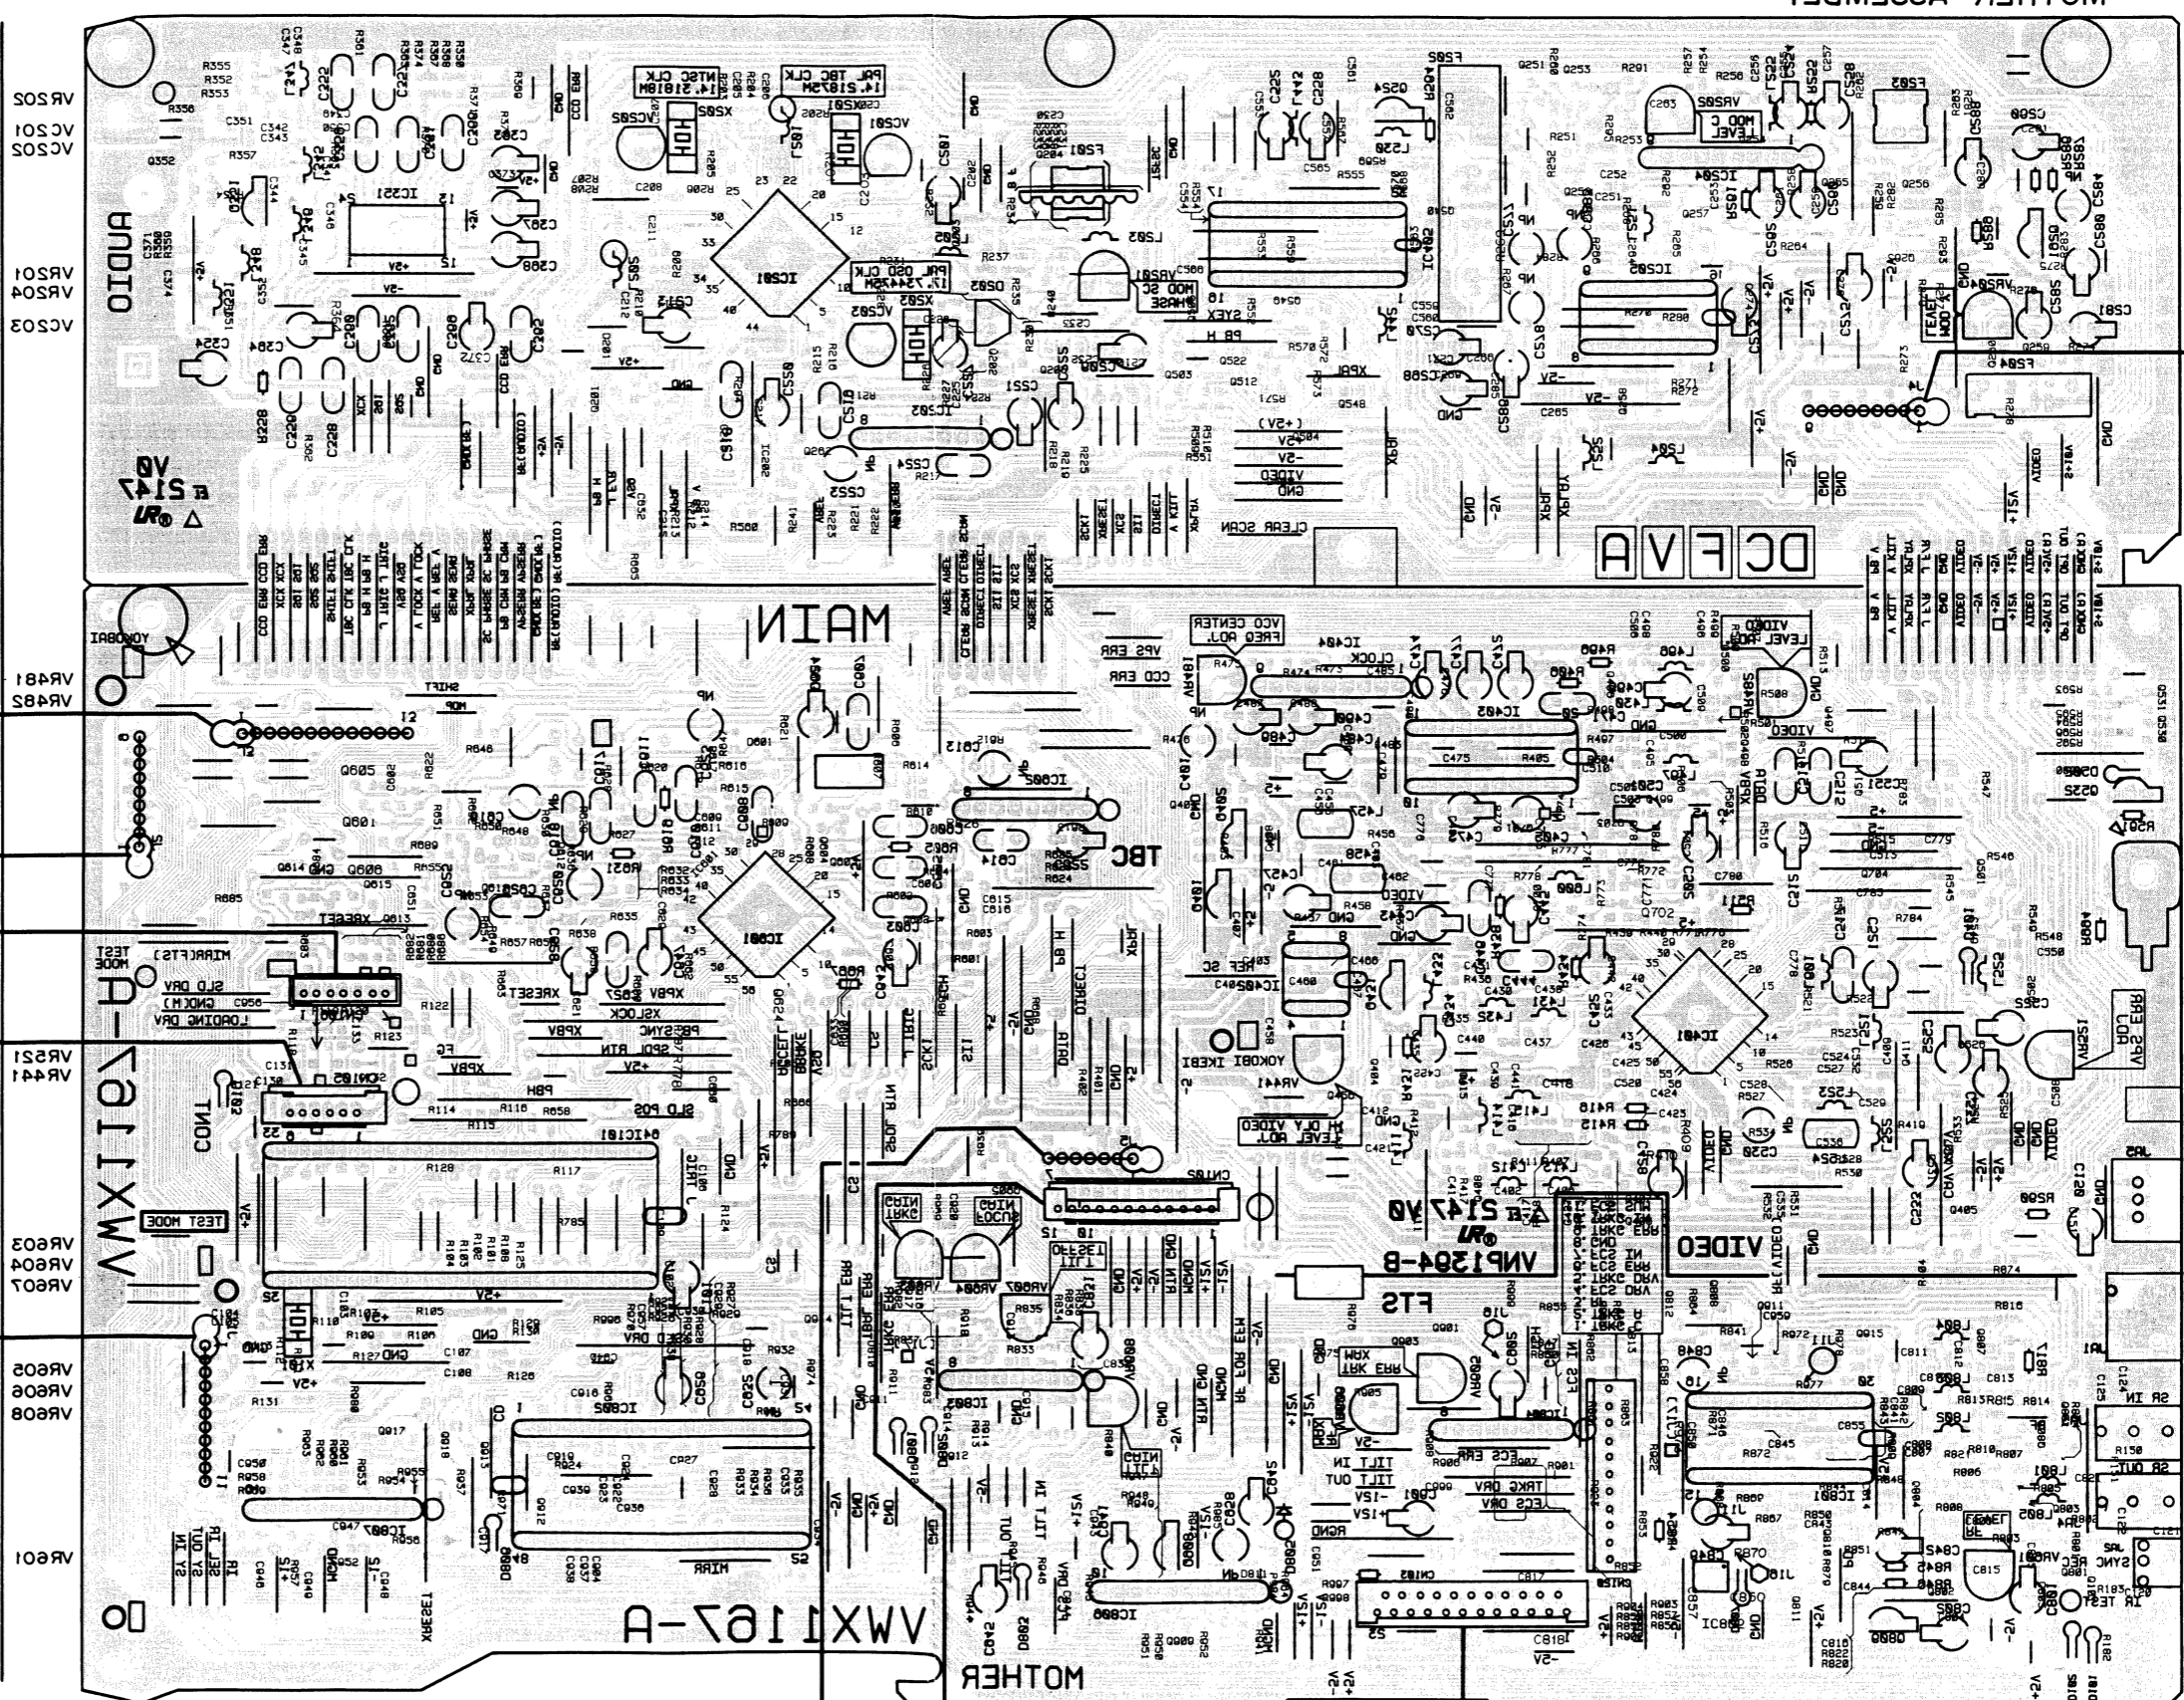

DSCB ASSEMBLY CN101

ASSEMBLY CN102

ASSEMBLY CN103

ASSEMBLY CN104

ASSEMBLY CN105

ASSEMBLY CN106

ASSEMBLY CN107

ASSEMBLY CN108

ASSEMBLY CN109

ASSEMBLY CN110

ASSEMBLY CN111

ASSEMBLY CN112

ASSEMBLY CN113

ASSEMBLY CN114

ASSEMBLY CN115

ASSEMBLY CN116

ASSEMBLY CN117

ASSEMBLY CN118

ASSEMBLY CN119

ASSEMBLY CN120

ASSEMBLY CN121

ASSEMBLY CN122

ASSEMBLY CN123

ASSEMBLY CN124

ASSEMBLY CN125

ASSEMBLY CN126

ASSEMBLY CN127

ASSEMBLY CN128

ASSEMBLY CN129

ASSEMBLY CN130

ASSEMBLY CN131

ASSEMBLY CN132

ASSEMBLY CN133

ASSEMBLY CN134

ASSEMBLY CN135

ASSEMBLY CN136

ASSEMBLY CN137

ASSEMBLY CN138

ASSEMBLY CN139

ASSEMBLY CN140

ASSEMBLY CN141

ASSEMBLY CN142

ASSEMBLY CN143

ASSEMBLY CN144

ASSEMBLY CN145

ASSEMBLY CN146

ASSEMBLY CN147

ASSEMBLY CN148

ASSEMBLY CN149

ASSEMBLY CN150

ASSEMBLY CN151

ASSEMBLY CN152

ASSEMBLY CN153

ASSEMBLY CN154

ASSEMBLY CN155

ASSEMBLY CN156

ASSEMBLY CN157

ASSEMBLY CN158

ASSEMBLY CN159

ASSEMBLY CN160

ASSEMBLY CN161

ASSEMBLY CN162

ASSEMBLY CN163

ASSEMBLY CN164

ASSEMBLY CN165

ASSEMBLY CN166

ASSEMBLY CN167

ASSEMBLY CN168

ASSEMBLY CN169

ASSEMBLY CN170

ASSEMBLY CN171

ASSEMBLY CN172

ASSEMBLY CN173

ASSEMBLY CN174

ASSEMBLY CN175

ASSEMBLY CN176

ASSEMBLY CN177

ASSEMBLY CN178

ASSEMBLY CN179

ASSEMBLY CN180

ASSEMBLY CN181

ASSEMBLY CN182

ASSEMBLY CN183

ASSEMBLY CN184

ASSEMBLY CN185

ASSEMBLY CN186

ASSEMBLY CN187

ASSEMBLY CN188

ASSEMBLY CN189

ASSEMBLY CN190

ASSEMBLY CN191

ASSEMBLY CN192

ASSEMBLY CN193

ASSEMBLY CN194

ASSEMBLY CN195

ASSEMBLY CN196

ASSEMBLY CN197

ASSEMBLY CN198


ASSEMBLY CN199

ASSEMBLY CN200

This P. C. B. connection diagram is viewed from the foil side.

3. MOTHER ASSEMBLY (2/2)

• FTS & CONT SECTION • AUDIO SECTION

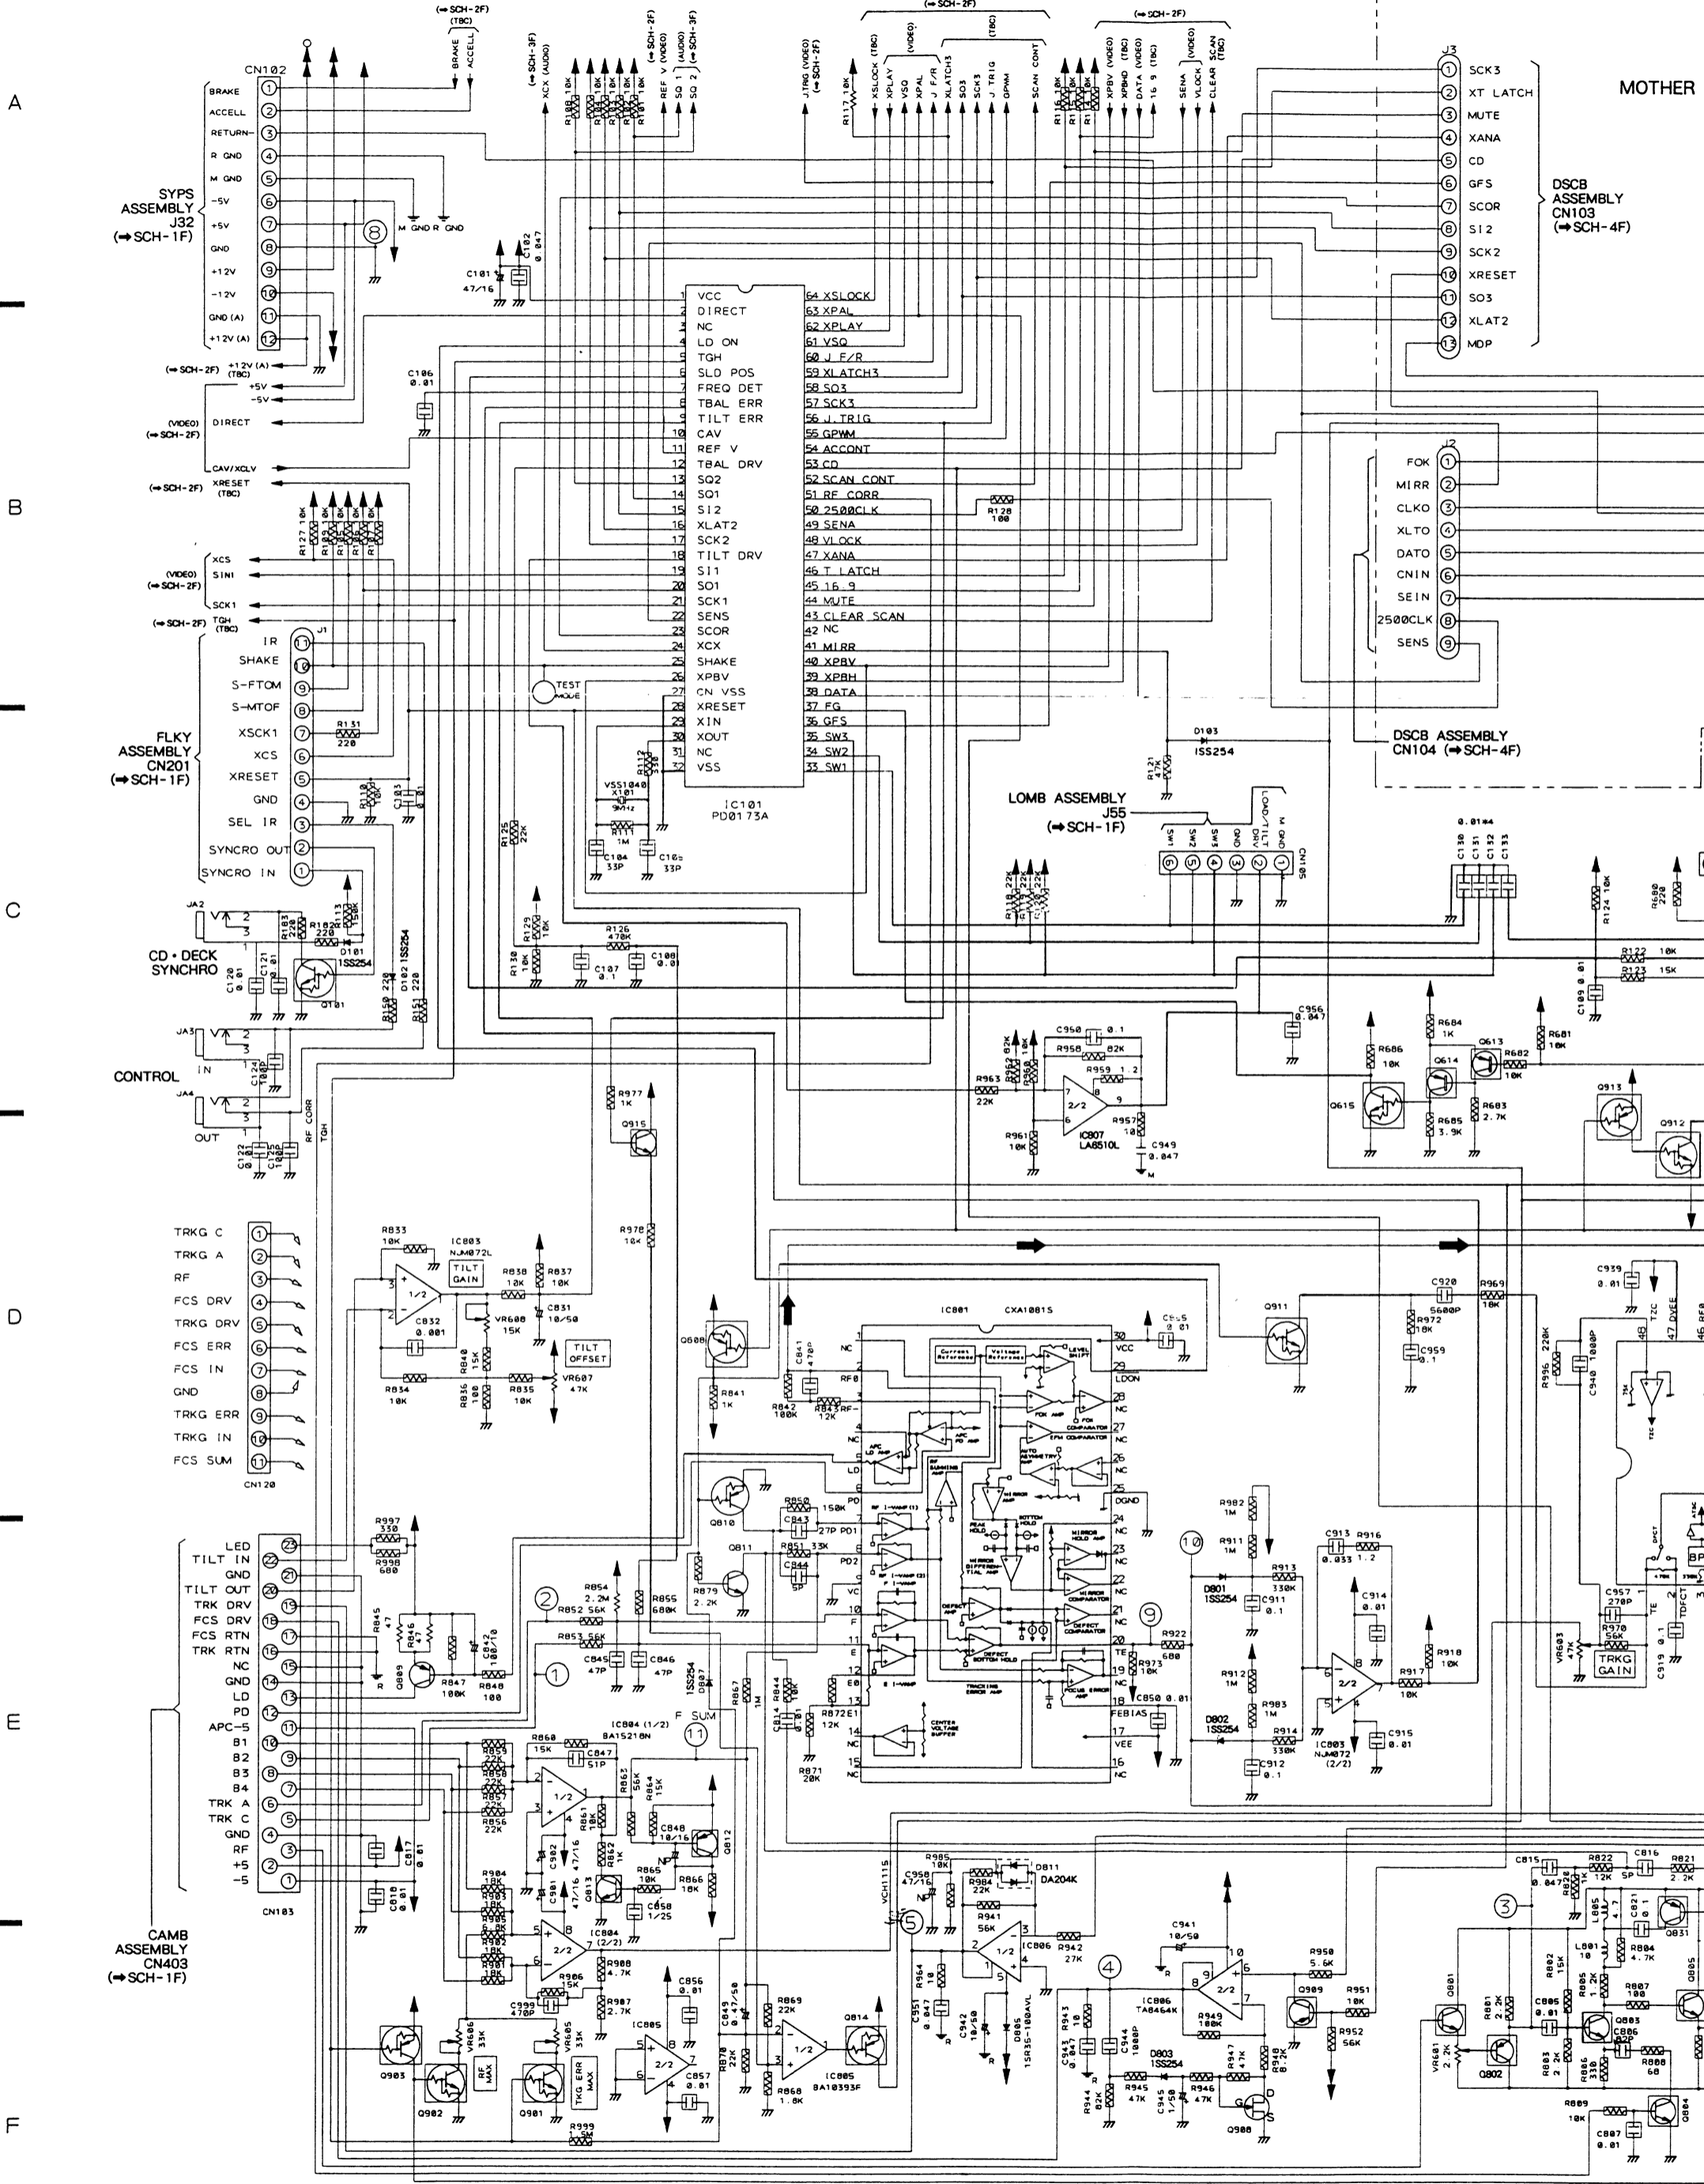

SCH-3F

MOTHER ASSY (2/2)
(FTS, CONT & AUDIO)


MOTHER ASSEMBLY (2/2) (VWX1167)

- 0611,613,614,802,812, 2SA1037K
- 0831,905,909,917
- Q809 2SA1399
- Q351 2SC1740S
- Q352,801,803 - 805, 2SC2412K
- Q807,811,813,915,918
- Q908 2SK184
- Q808,810,814,903,913 DTA124EK
- Q101,615,901,902,911, DTC124EK
- Q912,914


DSCB ASSEMBLY CN103 (SCH-4F)

Waveforms Note : (No.) in the table correspond to the pin No.




Values indicate the waveforms in the play mode.

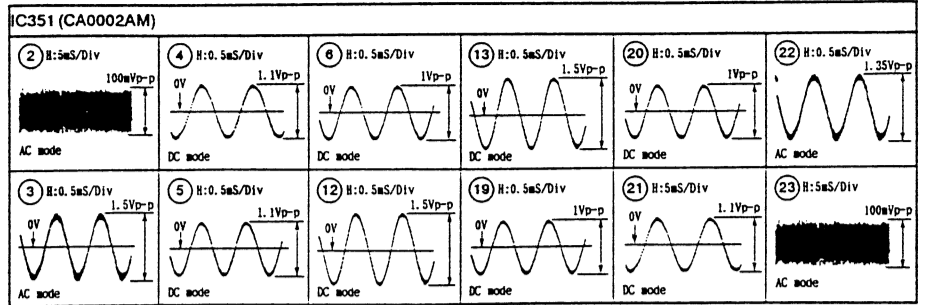

SCH-3F

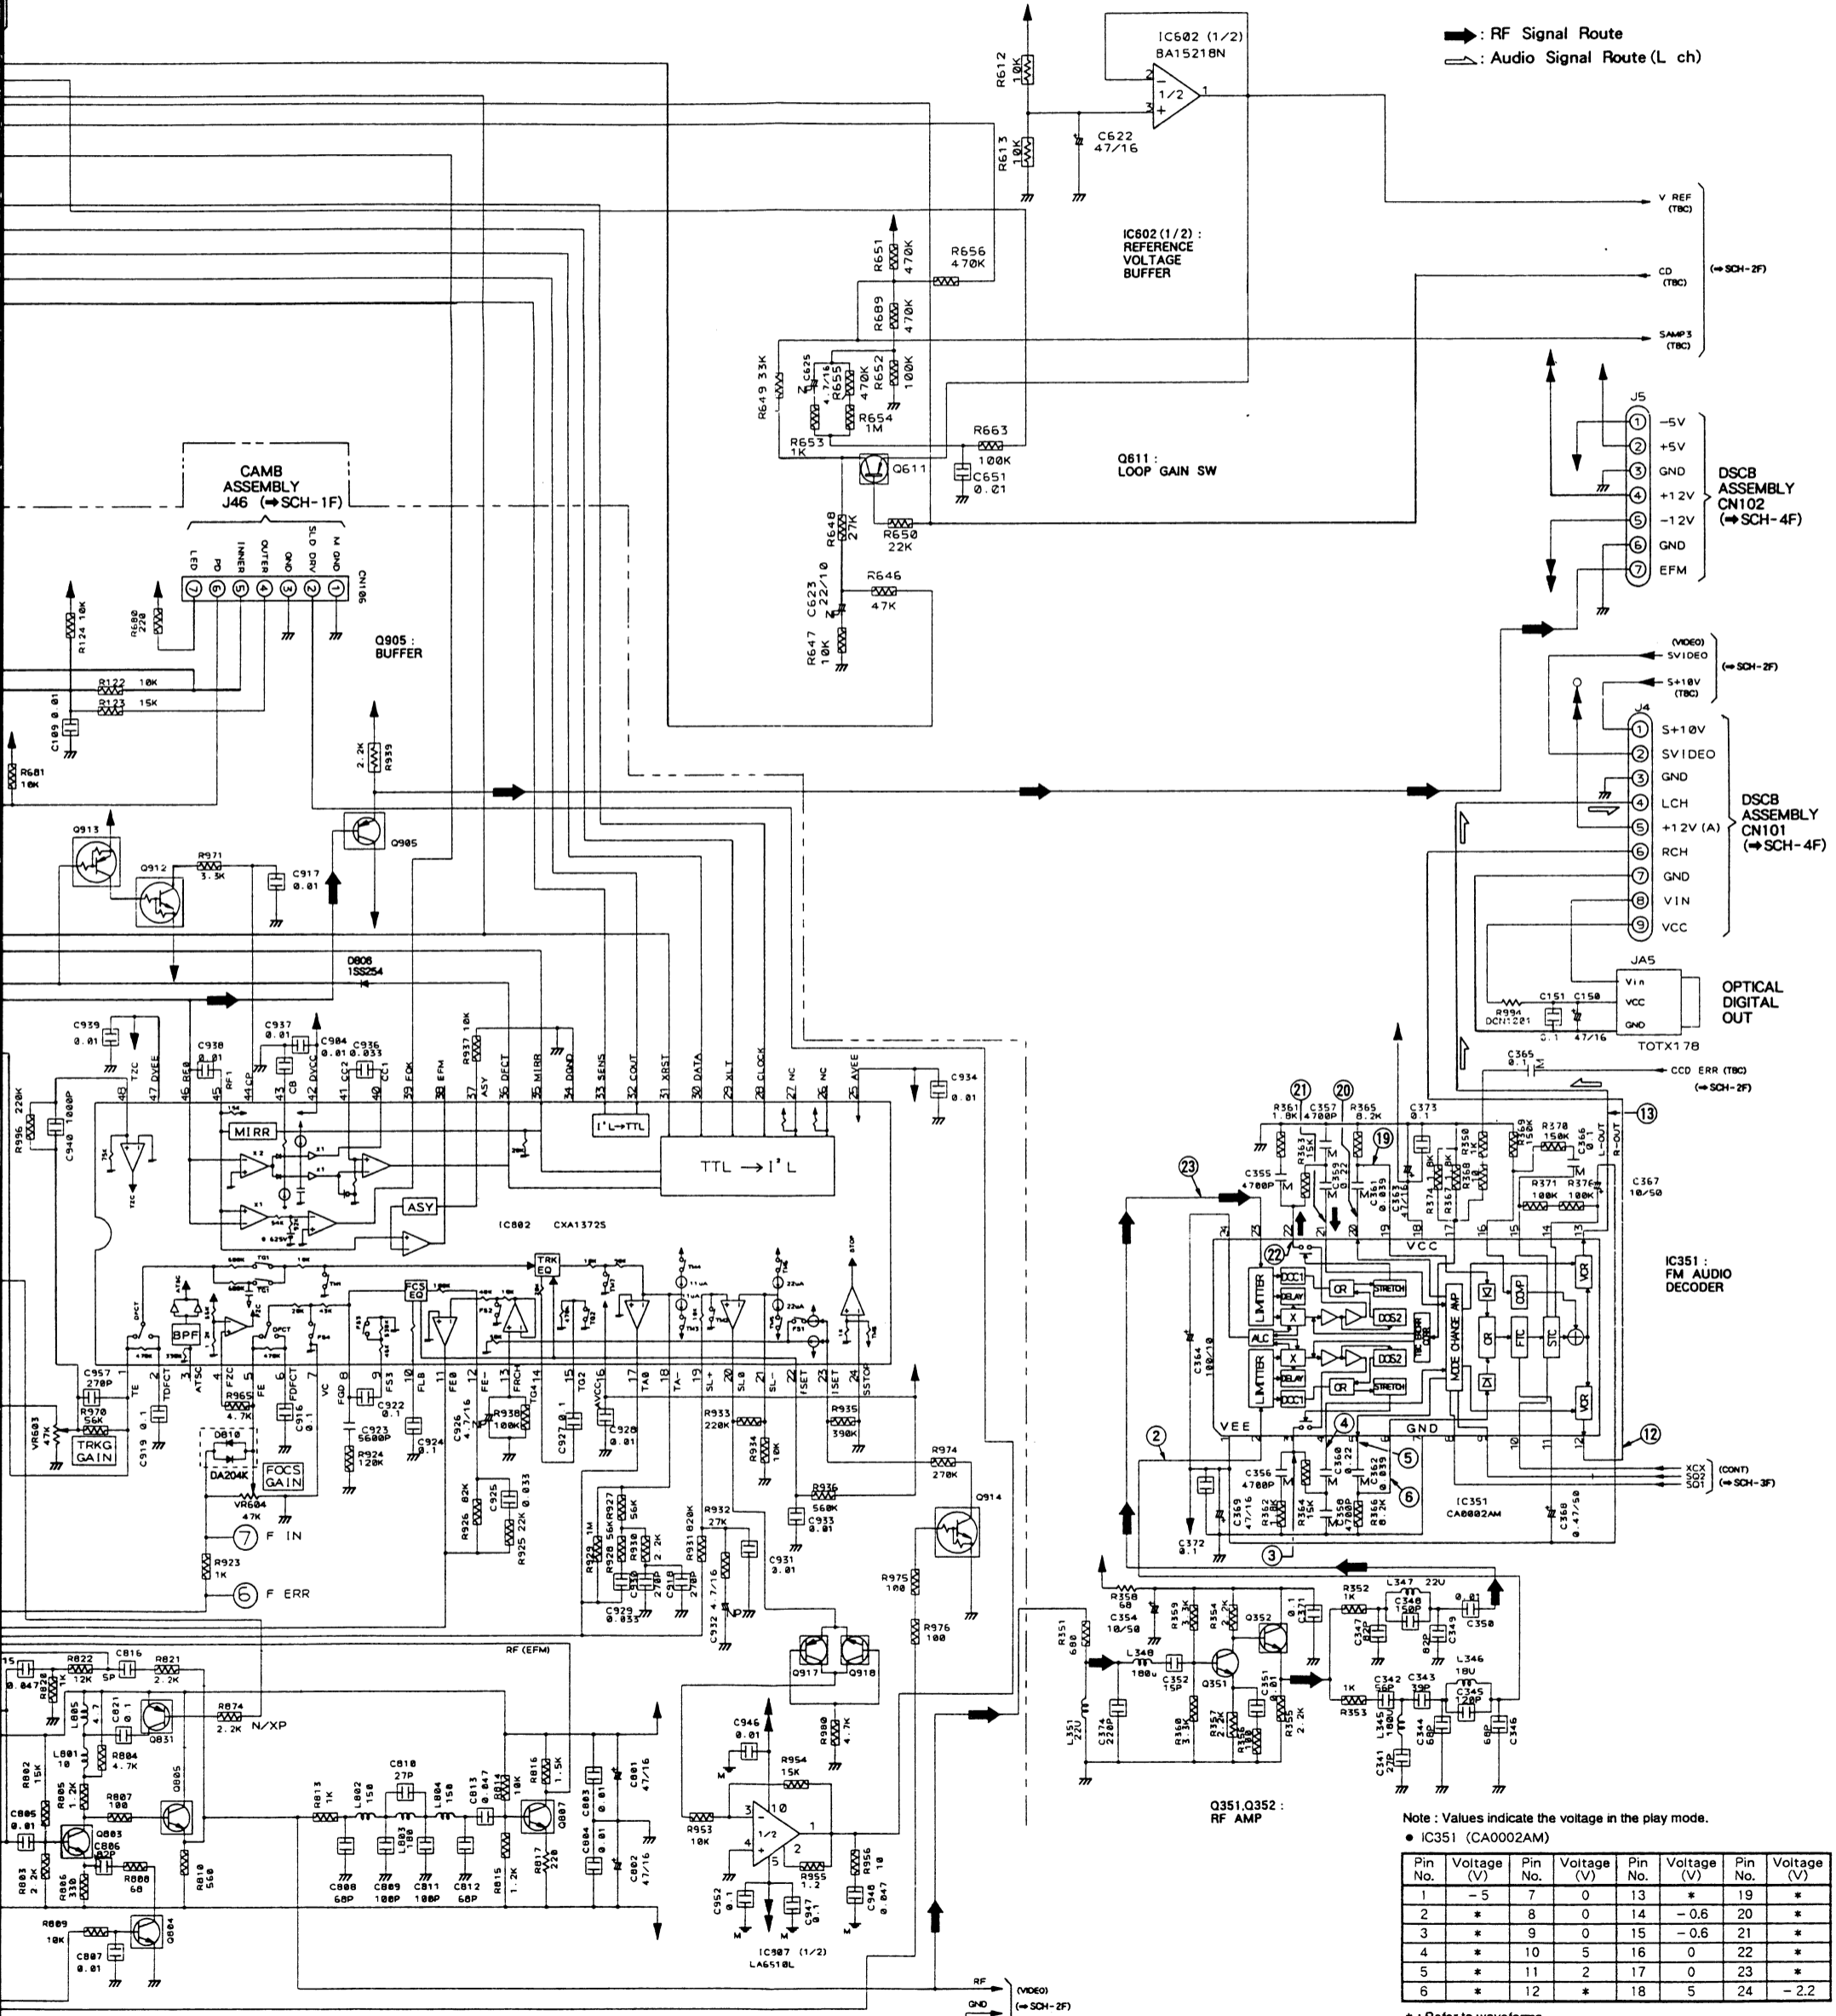

RF Signal Route
Audio Signal Route (L ch)

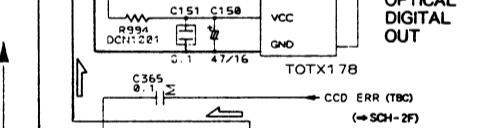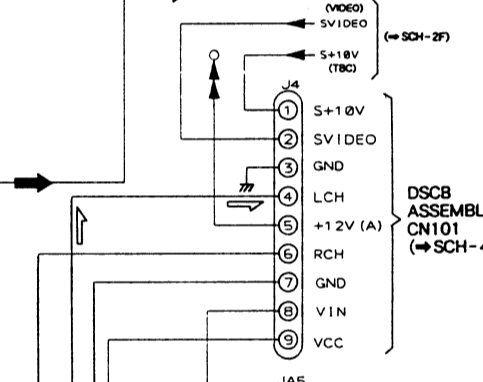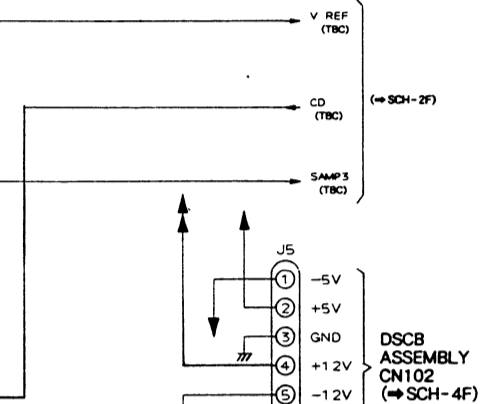

Note : Values indicate the voltage in the play mode.

IC351 (CA0002AM)

Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)
1	-5	7	0	13	*	19	*
2	*	8	0	14	-0.6	20	*
3	*	9	0	15	-0.6	21	*
4	*	10	5	16	0	22	*
5	*	11	2	17	0	23	*
6	*	12	*	18	5	24	-2.2



* : Refer to waveforms.

MOTHER ASSY (2/2) (FTS, CONT & AUDIO)


SCH-3F

4. DSCB ASSEMBLY

DSCB ASSEMBLY (VWV1296)

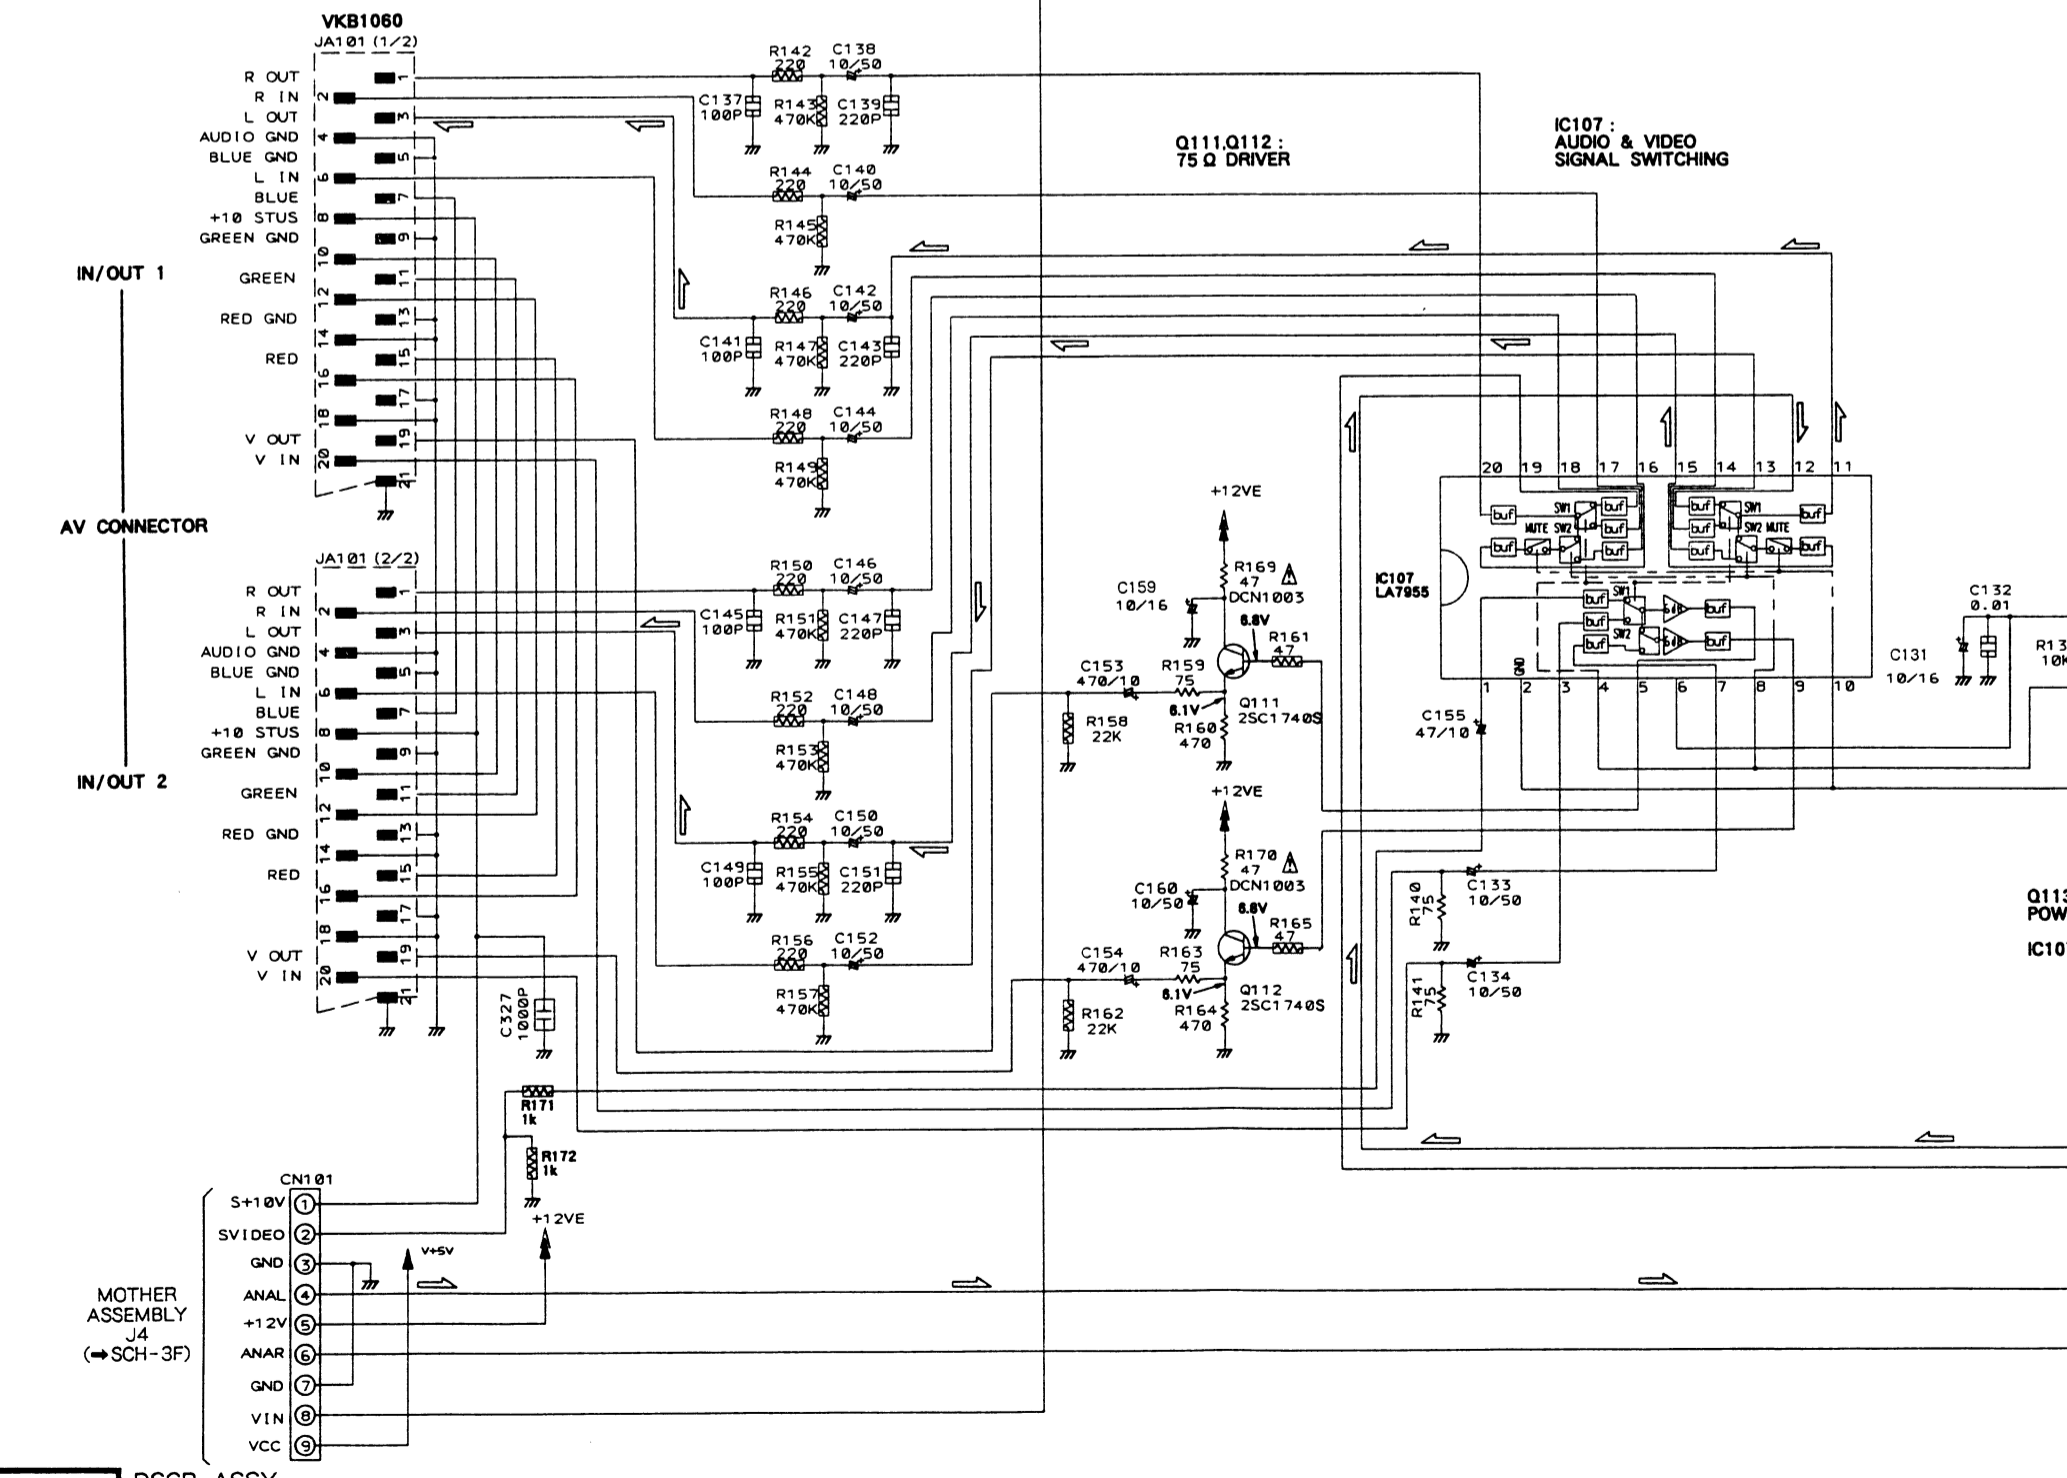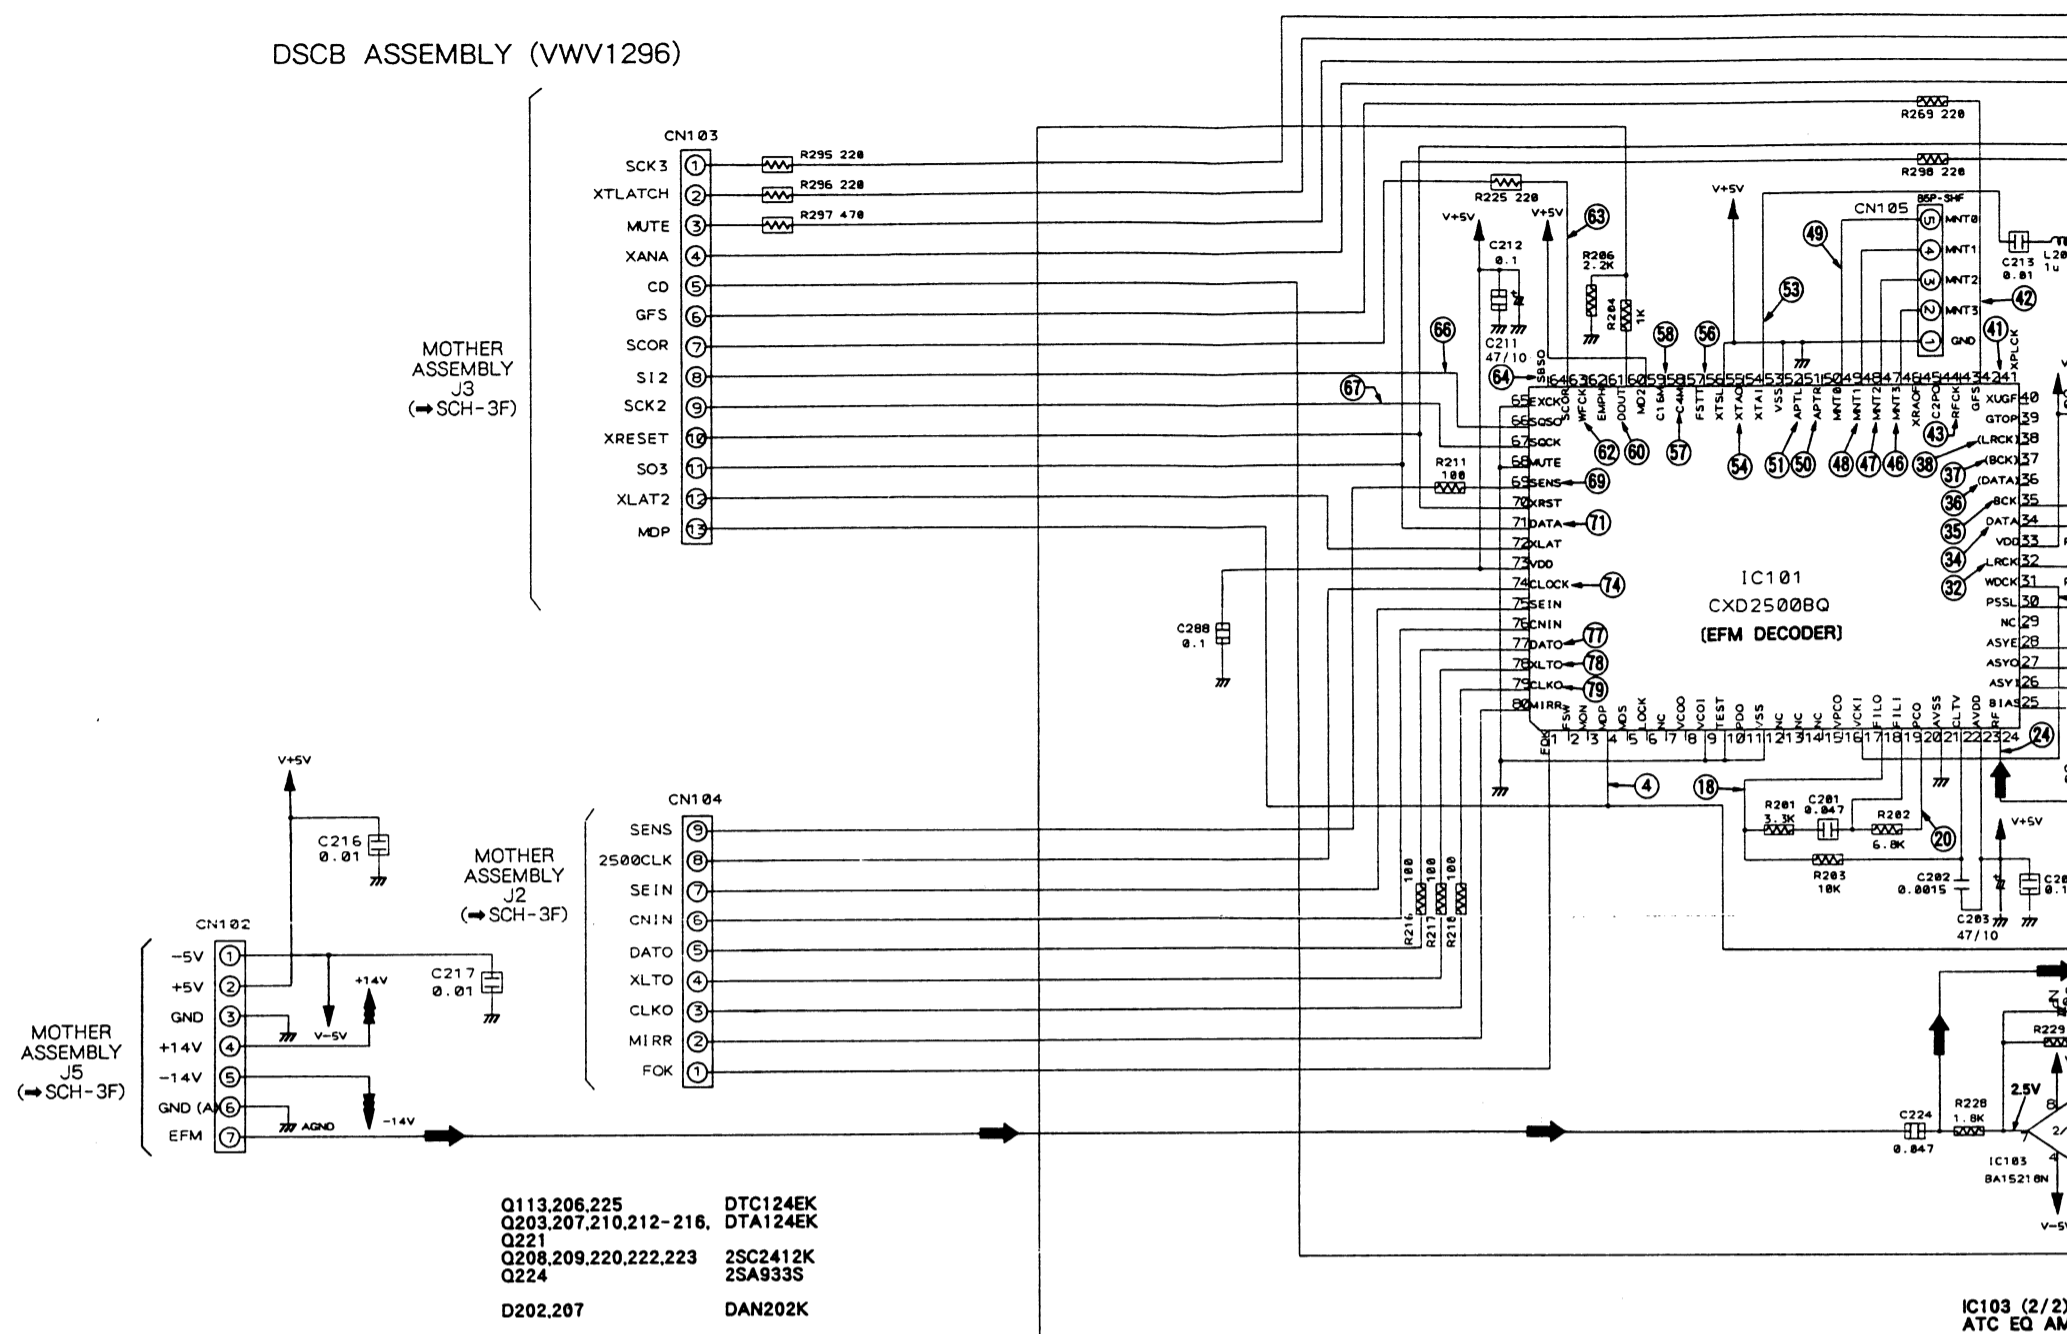

SCH-4F

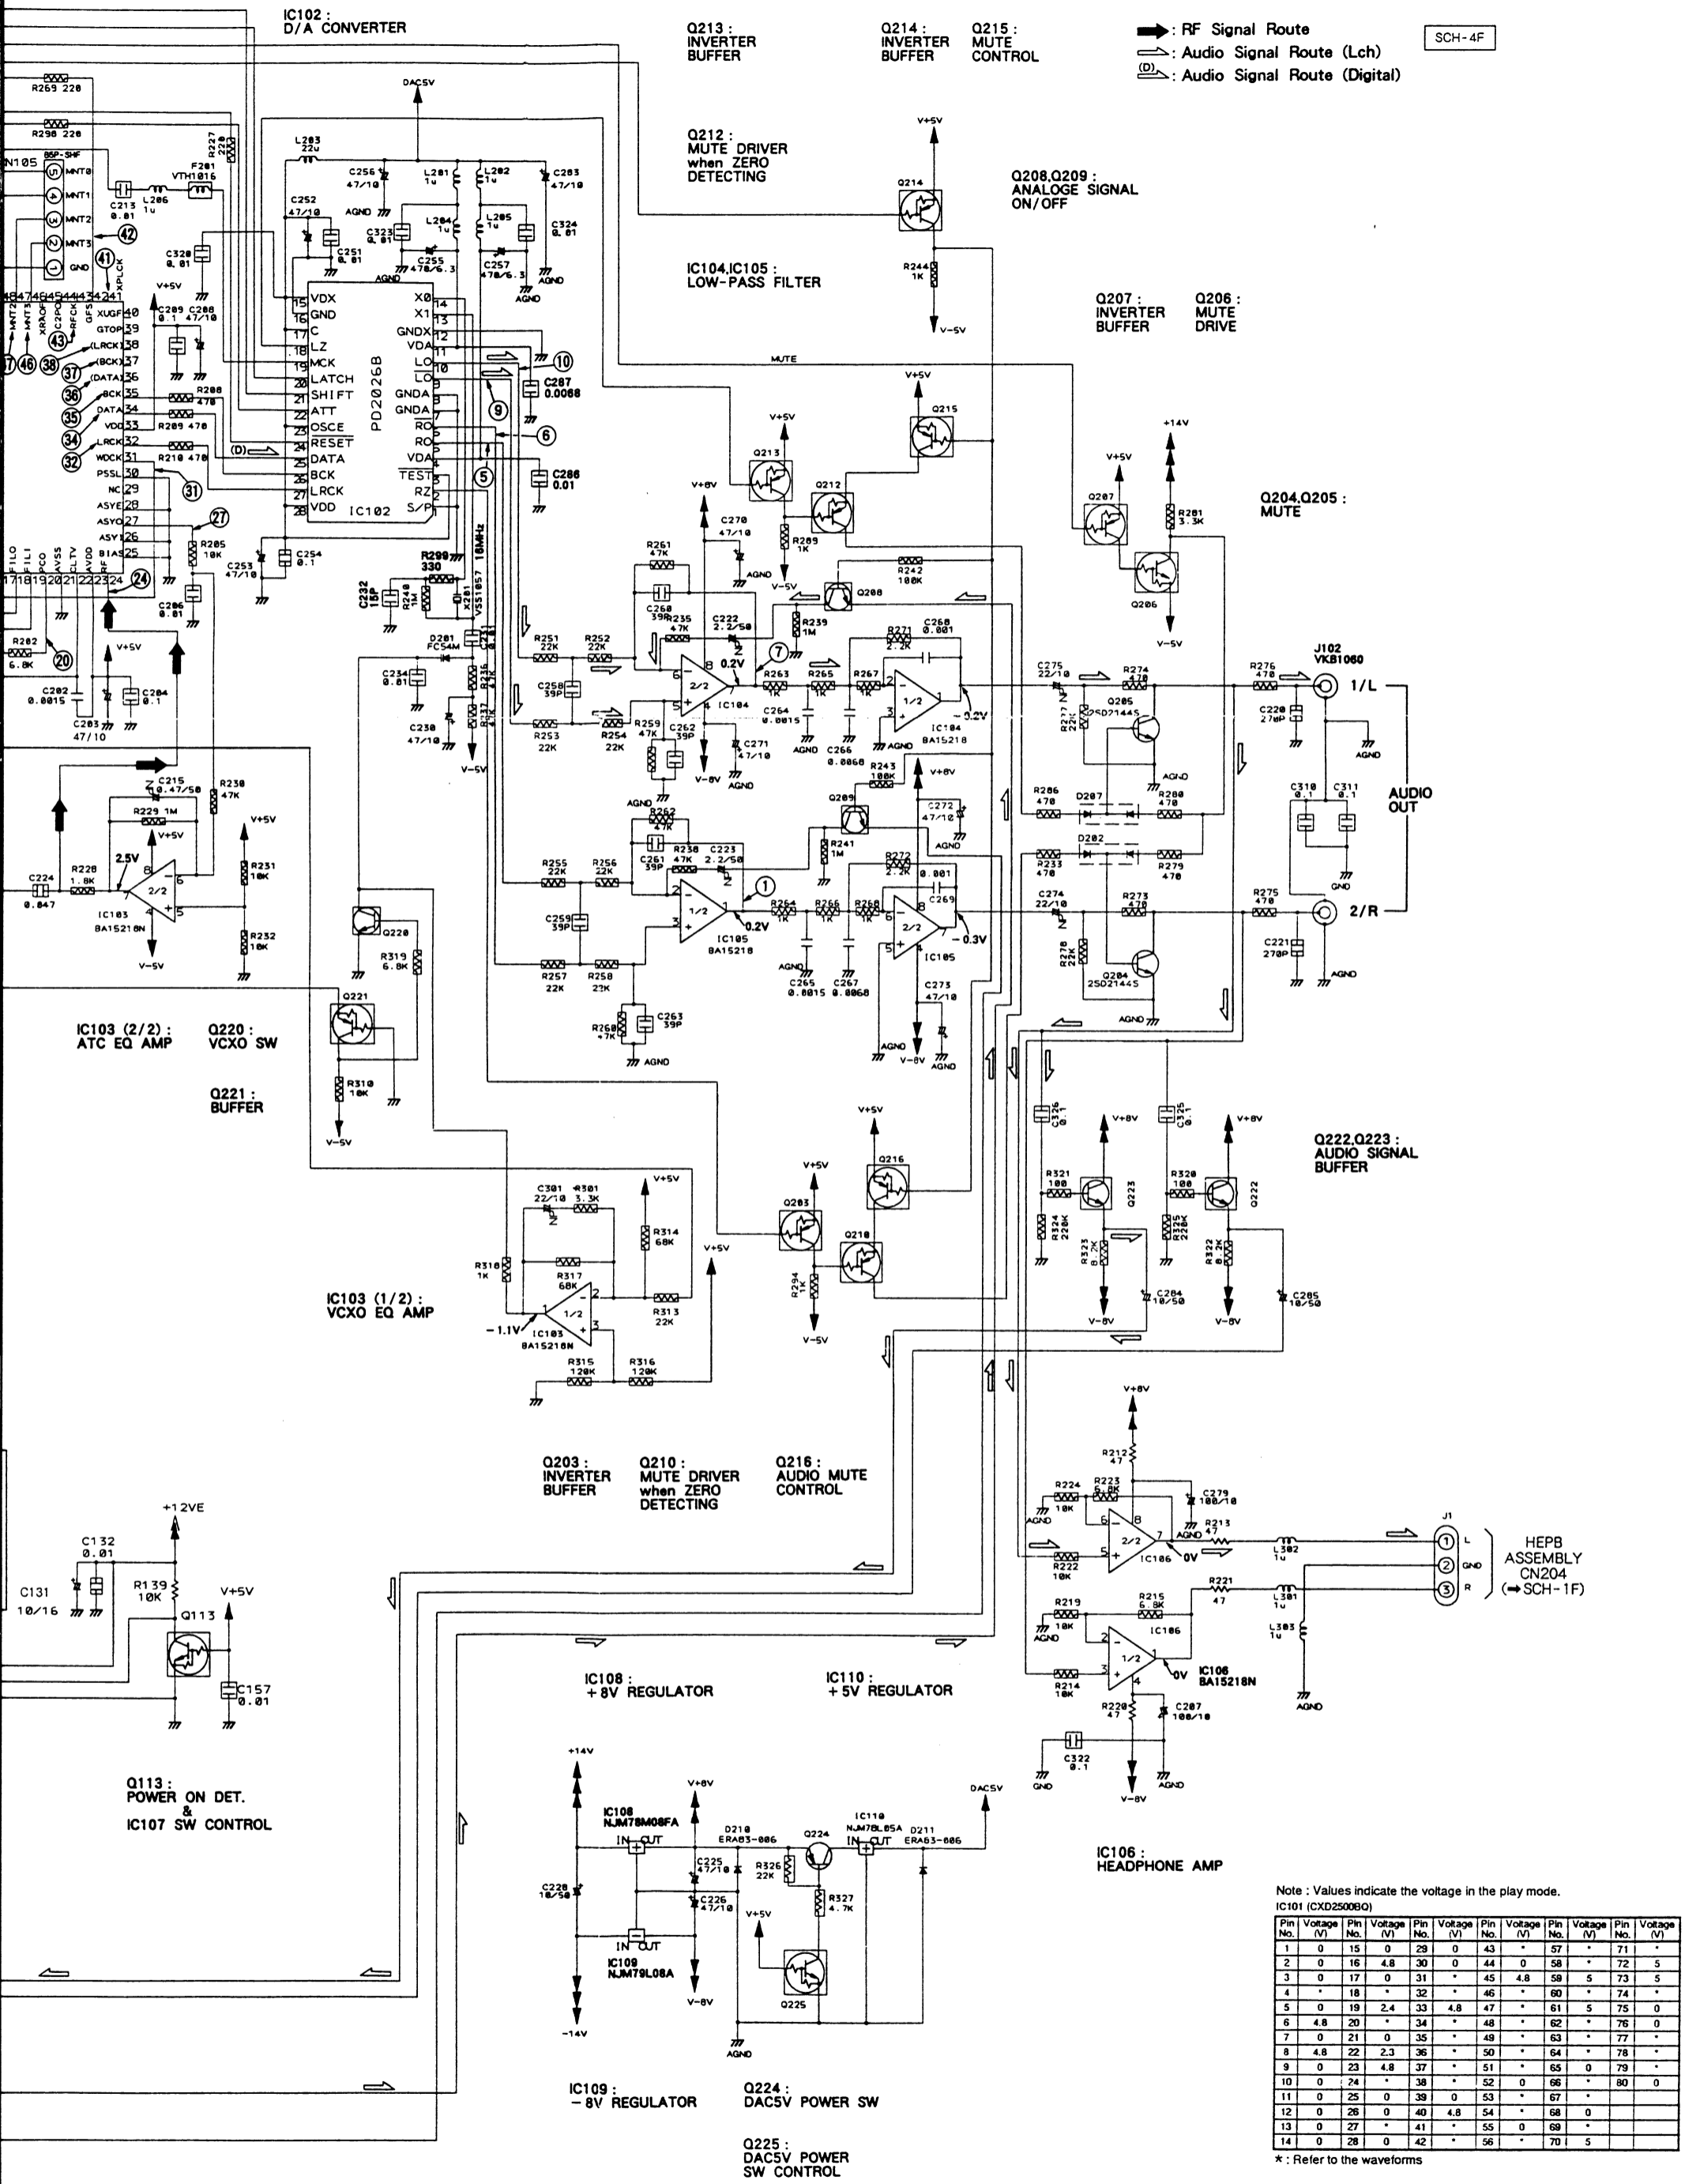

→ RF Signal Route
 ⇄ Audio Signal Route (Lch)
 (D) Audio Signal Route (Digital)

SCH-4F

Note: Values indicate the voltage in the play mode.

IC101 (CXD2500B)													
Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)
1	0	15	0	29	0	43	*	57	*	71	*		
2	0	16	4.8	30	0	44	0	58	*	72	5		
3	0	17	0	31	*	45	4.8	59	5	73	5		
4	*	18	*	32	*	46	*	60	*	74	*		
5	0	19	2.4	33	4.8	47	*	61	5	75	0		
6	4.8	20	*	34	*	48	*	62	*	76	0		
7	0	21	0	35	*	49	*	63	*	77	*		
8	4.8	22	2.3	36	*	50	*	64	*	78	*		
9	0	23	4.8	37	*	51	*	65	0	79	*		
10	0	24	*	38	*	52	0	66	*	80	0		
11	0	25	0	39	0	53	*	67	*				
12	0	26	0	40	4.8	54	*	68	0				
13	0	27	*	41	*	55	0	69	*				
14	0	28	0	42	*	56	*	70	5				


*: Refer to the waveforms

DSCB ASSY


SCH-4F

DSCB ASSEMBLY

A
B
C
D

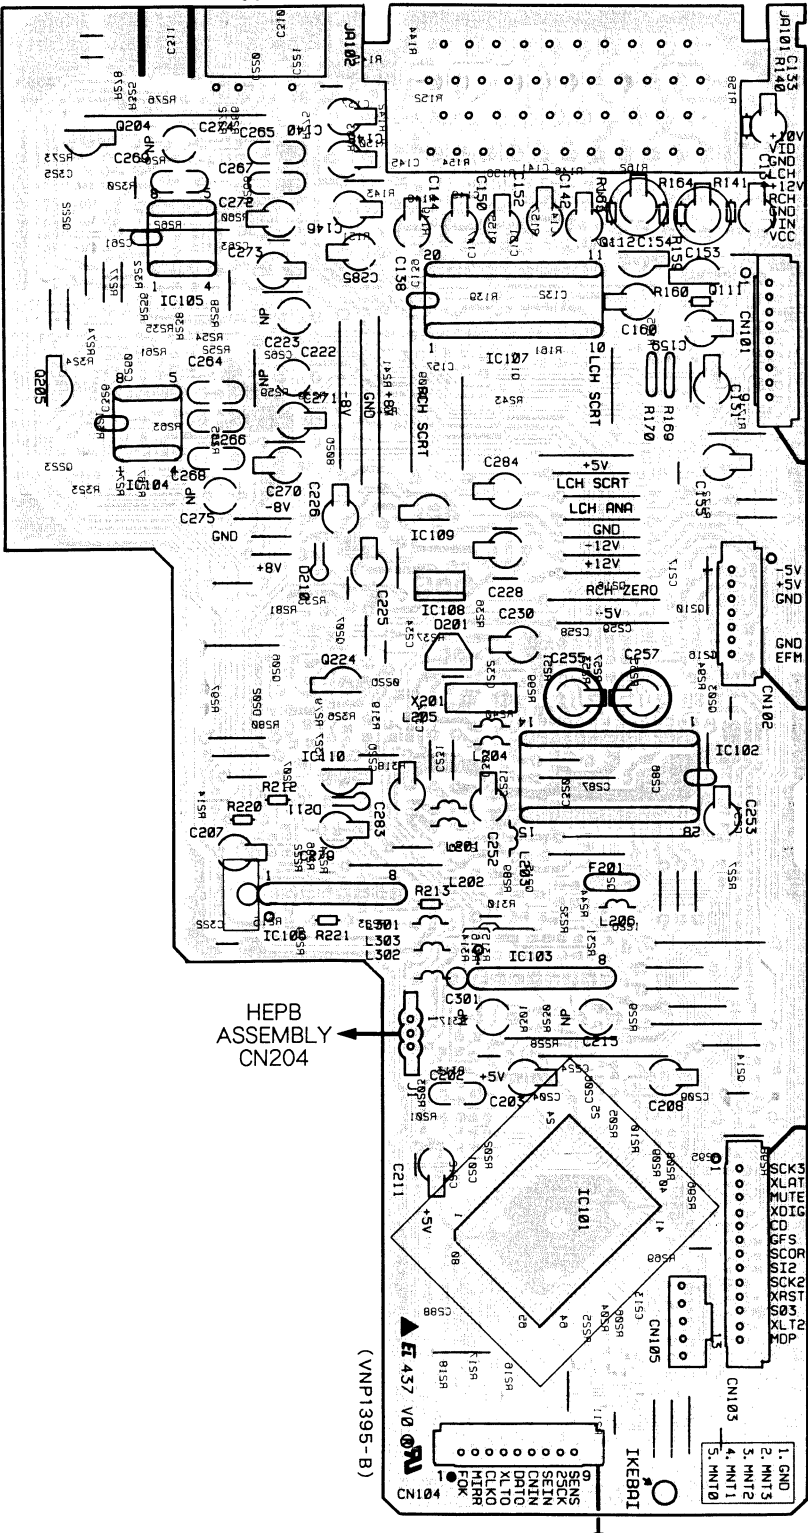


This P. C. B. connection diagram is viewed from the parts mounted side.

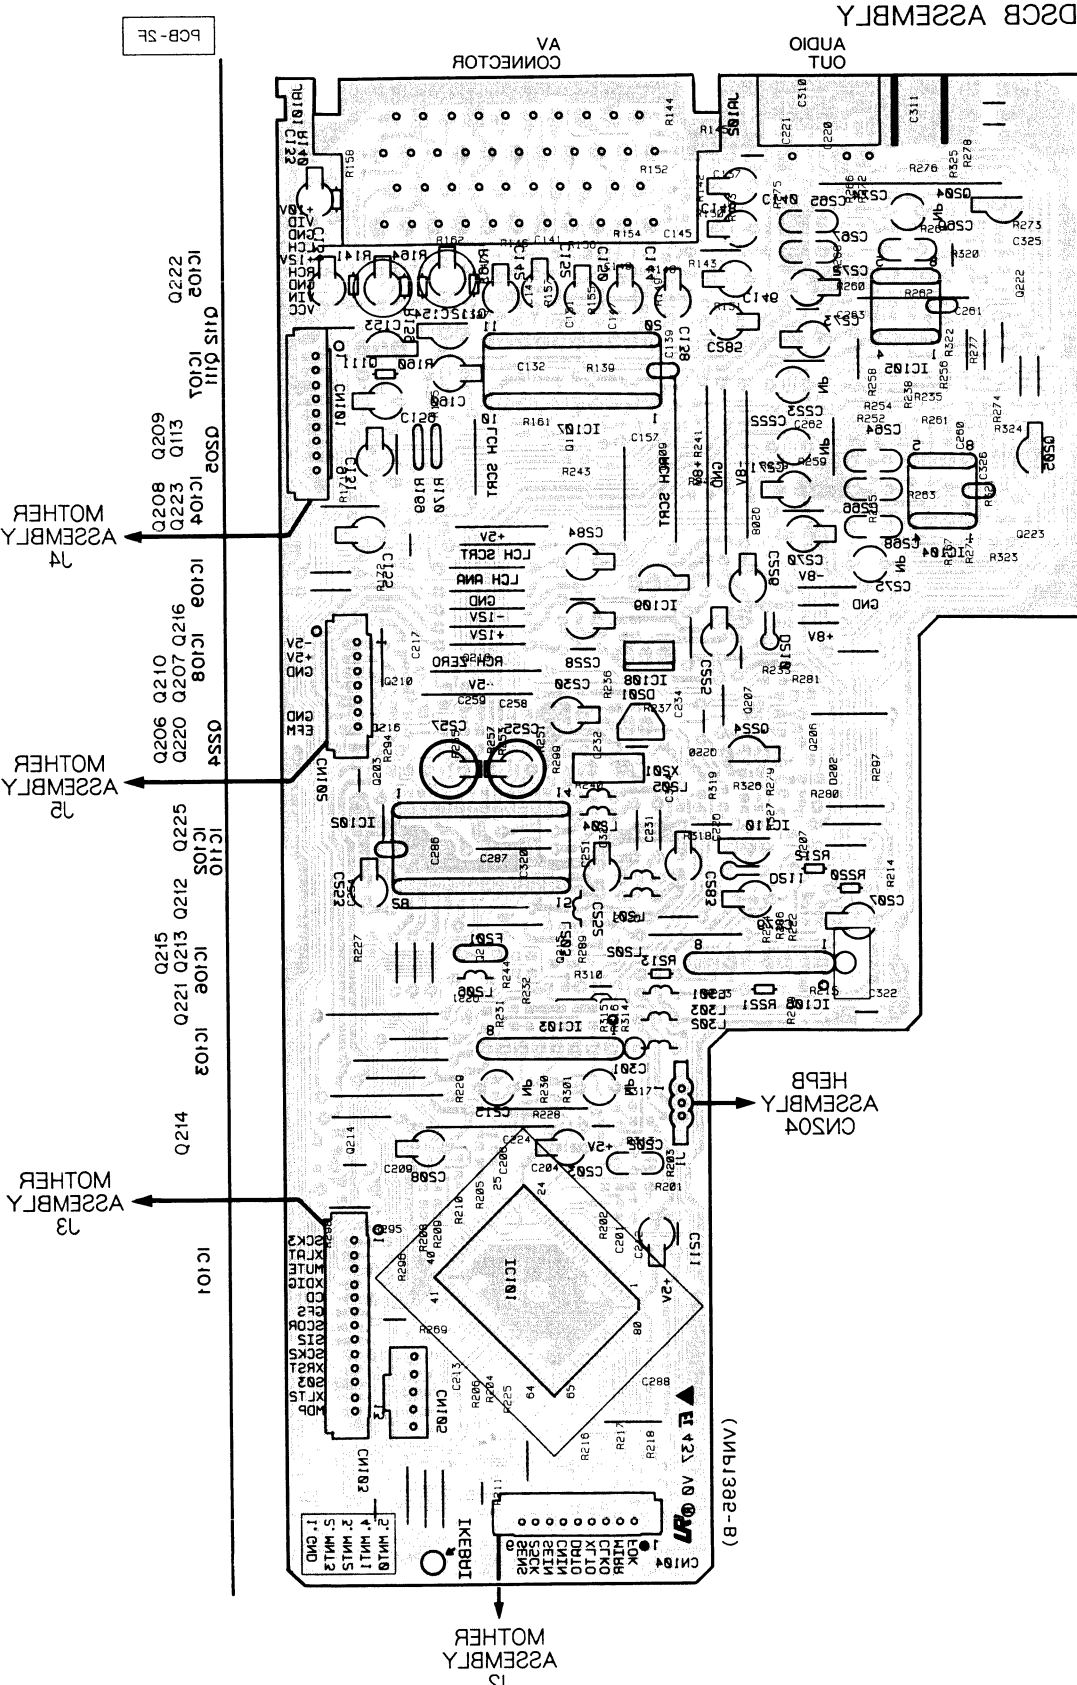

This P. C. B. connection diagram is viewed from the foil side.

Waveforms of DSCB assembly


Note : (No.) in the table correspond to the pin No.

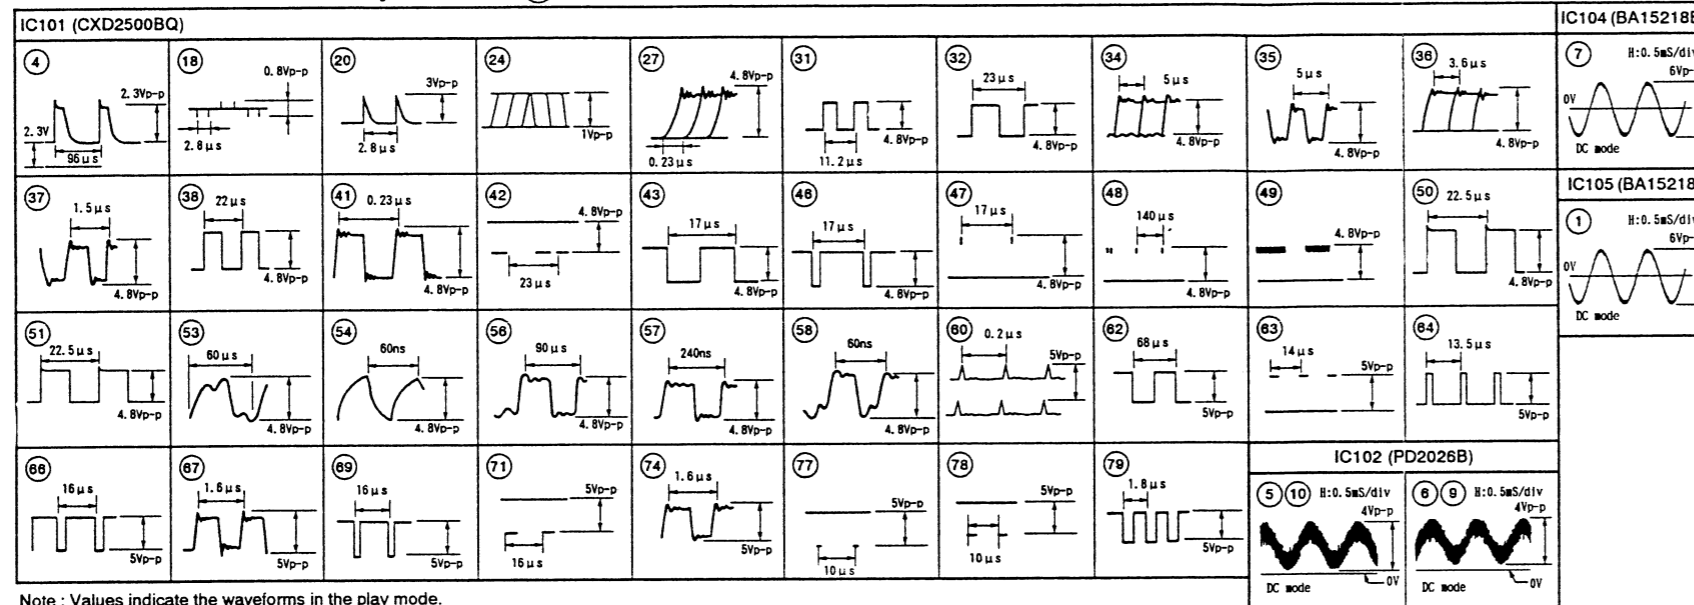

Note : Values indicate the waveforms in the play mode.

ADJUSTMENTS

Adjustment Locations

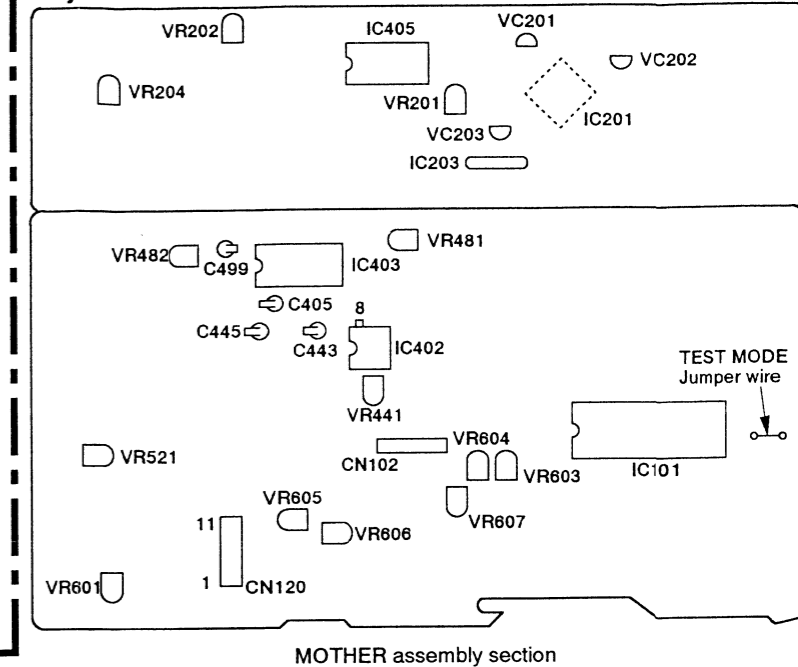


Adjustment name	Adjustment point	Measuring equipment and jigs	Measurement point	Player condition	Adjustment procedure	Waveform and connection diagram
9 TRK Servo loop gain adjustment	VR603	• Oscilloscope • GGV1003 • AF Oscillator • Resistor (47kΩ)	CN120 X: ⑩ Pin (TRK IN) Y: ⑨ Pin (TRK ERR)	• Test mode Stop mode or TRK Servo Close Tilt Servo ON • GGV1003 #15,000 STILL	1. Xch: Connect the 47kΩ resistor to channel and connect to TRK IN. Ych: Connect to TRK ERR. 2. Connect the AF oscillator between Xch and the 47kΩ resistor and note the tilt angle against the horizon with the disc in the stopped state. 3. Search for address 15,000 of GGV1003 and still the address. 4. Set the disc PLAY mode (TRK servo closed, TILT on). Adjust VR603 so that the tilt angle of the waveform will be the same as the tilt angle noted in step 3.	<p>Adjust until the Lissajous figure is symmetrical.</p>
10 RF level adjustment	VR601	• Oscilloscope • GGV1003	CN120 ③ Pin (RF)	• Test mode TRK Servo Close Tilt Servo ON • GGV1003 #15,000 STILL	1. Search for address 15,000 of GGV1003 and still the address. Observe RF at CH1 of the oscilloscope. 2. Adjust VR601 until the RF amplitude is 300mV ± 50mVp-p.	
11 NTSC reference clock adjustment	VC202	• Frequency counter • GGV1003	IC201 - ③③ Pin (TBC CLK)	• NTSC PLAY mode Play the NTSC disc. or Select the NTSC mode with the SYSTEM button of the front panel. (*1)	Adjust 4fsc frequency (14.31818MHz) ± 100Hz.	
12 PAL reference clock adjustment	VC201	• Frequency counter • GGV1007	IC201 - ③③ Pin (TBC CLK)	• PAL PLAY mode Play the PAL disc. or Select the PAL mode with the SYSTEM button of the front panel. (*1)	Adjust 910 fH frequency (14.21875MHz) ± 100Hz.	
13 PAL reference clock adjustment	VC203	• Frequency counter • GGV1007	IC201 - ②④ Pin (OSD CLK)	• PAL PAUSE mode Play the PAL disc and set to PAUSE state. or Select the PAL mode with the SYSTEM button of the front panel. (*1)	Adjust 4fsc frequency (17.734475MHz) ± 100Hz	
14 PAL VCXO ERR OFFSET Check	VC201	• Oscilloscope • GGV1007 • Digital volt meter	IC203 - ① Pin (VCXO ERR)	• Play the PAL disc.	Play the PAL disc and check that the voltage of VCXO ERR at IC203-1 pin is 0V ± 100mV. If the specified voltage is not obtained, adjust VC201 so that the voltage becomes 0V ± 100mV. Note : The adjustment of VC201 in this step should have priority over that in step 12.	

*1 PAL mode → NTSC mode → MOD PAL mode (cyclic change)

	Adjustment name	Adjustment point	Measuring equipment and jigs	Measurement point	Player condition	Adjustment procedure	Waveform and connection diagram
15	VCO center frequency adjustment	VR481	<ul style="list-style-type: none"> Oscilloscope GGV1007 	CH1: C405 lead wire CH2: C499 lead wire	<ul style="list-style-type: none"> Normal mode GGV1007 #4,000 STILL 	Place a trigger in CH1 and adjust until the center of the CH2 video signal jitter is $75 \mu\text{sec} (1H + 11 \mu\text{sec}) \pm 1.4 \mu\text{sec}$ compared to the CH1 video signal.	<p>V:20mV/div (CH1) 20mV/div (CH2) H:10 μsec/div (Trigger) AC mode</p> <p>CH1 CH2 Jitter due to the eccentricity 11 μS 75 μS</p>
16	Video level adjustment	VR482	<ul style="list-style-type: none"> TV monitor Oscilloscope GGV1003 	Video output terminal	<ul style="list-style-type: none"> Normal mode GGV1003 #19,900 STILL 	Connect a 75Ω resistor to the VIDEO output terminal (possibly by connecting to the monitor) and adjust until the sync tip to 100% white level is $1V_{p-p} \pm 5\%$ at the white (100%) signal.	<p>Video level 1.0V_{p-p} ± 5% Oscilloscope range V:20mV/div 10 μsec/div (Trigger) AC mode</p> <p>TV monitor Oscilloscope</p>
17	1H delay video level adjustment	VR441	<ul style="list-style-type: none"> Oscilloscope GGV1003 	CH1: C443 lead wire CH2: C445 lead wire	<ul style="list-style-type: none"> Normal mode GGV1003 #19,900 STILL 	Adjust until the sync tip to 100% white level at the white (100%) signal is the same as in CH1 and CH2.	<p>V:20mV/div (CH1) 20mV/div (CH2) H:10 μsec/div (Trigger) AC mode</p> <p>CH1 CH2 Main video signal 1H delay video signal</p>
18	VPS error level adjustment	VR521	<ul style="list-style-type: none"> TV monitor GGV1003 	TV monitor	<ul style="list-style-type: none"> Normal mode GGV1003 #8,000 STILL (Magenta screen) 	Adjust until the color irregularity on the magenta screen is minimized.	<p>Color irregularity on the magenta screen is minimized.</p>
19	MOD Y-signal level adjustment	VR204	<ul style="list-style-type: none"> Oscilloscope GGV1003 	CH1: IC205-② Pin CH2: IC205-① Pin	<ul style="list-style-type: none"> Normal mode GGV1003 #19,900 STILL 	Adjust until the sync tip to 100% white level at the white (100%) signal is the same as in CH1 and CH2.	<p>V:20mV/div (CH1) 20mV/div (CH2) H:10 μsec/div AC mode</p> <p>CH1 CH2</p>
20	MOD C-signal level adjustment	VR202	<ul style="list-style-type: none"> Oscilloscope GGV1003 	CH1: IC205-② Pin CH2: IC205-① Pin	<ul style="list-style-type: none"> Normal mode GGV1003 #8,000 STILL 	Adjust until the chroma signal level at the magenta signal is the same as in CH1 and CH2.	<p>V:20mV/div (CH1) 20mV/div (CH2) H:10 μsec/div (Trigger) AC mode</p> <p>CH1 CH2</p>
21	PAL inverting SC phase adjustment	VR201	<ul style="list-style-type: none"> TV monitor GGV1007 	TV monitor	<ul style="list-style-type: none"> Normal mode GGV1007 #6,500 STILL (Magenta screen) 	Adjust until the color irregularity on the magenta screen is minimized.	<p>Color irregularity on the magenta screen is minimized.</p>

Service Manual

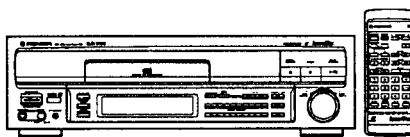

ORDER NO.
ARP2543

CD CDV LD PLAYER

CLD-1700

CLD-700

CLD-1700 AND CLD-700 HAVE THE FOLLOWING :

Type	Model		Power Requirement	Remarks
	CLD-1700	CLD-700		
HEZ	○	○	AC220-230V, 240V (switchable) *	
HB	-	○	AC220-230V, 240V (switchable) *	

*Change the connection of the power transformer's primary wiring.

- This manual is applicable to the following : CLD-1700/HEZ; CLD-700/HEZ and HB.
- For CLD-700/HEZ and HB, refer to page 82.
- Ce manuel pour le service comprend les explications de réglage en français.
- Este manual de servicio trata del método ajuste escrito en español.

CONTENTS

1. SAFETY INFORMATION	2	5. ADJUSTMENTS	50
2. EXPLODED VIEWS, PACKING AND PARTS LIST	3	REGLAGES	59
3. SCHEMATIC AND PCB CONNECTIONS DIAGRAMS	16	AJUSTES	68
4. PCB PARTS LIST	43	6. IC INFORMATION	77
		7. FOR CLD-700/HEZ AND HB	82
		8. CONNECTIONS	85
		9. PANEL FACILITIES	87
		10. SPECIFICATIONS	90

1. SAFETY INFORMATION

(FOR EUROPEAN MODEL ONLY)

VARO!

AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET ALTTIINA NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.



LASER
Kuva 1
Lasersäteilyn
varoituserkki

WARNING!

DEVICE INCLUDES LASER DIODE WHICH EMITS INVISIBLE INFRARED RADIATION WHICH IS DANGEROUS TO EYES. THERE IS A WARNING SIGN ACCORDING TO PICTURE 1 INSIDE THE DEVICE CLOSE TO THE LASER DIODE.



LASER
Picture 1
Warning sign for
laser radiation

ADVERSEL:

USYNLIG LASERSTRÅLING VED ÅBNING NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION UNDGÅ UDSAETTELSE FOR STRÅLING.

VARNING!

OSYNLIG LASERSTRÅLING NÅR DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD. BETRakta EJ STRÅLEN.

IMPORTANT

THIS PIONEER APPARATUS CONTAINS LASER OF CLASS 1. SERVICING OPERATION OF THE APPARATUS SHOULD BE DONE BY A SPECIALLY INSTRUCTED PERSON.

LASER DIODE CHARACTERISTICS


MAXIMUM OUTPUT POWER: 5 mw
WAVELENGTH: 780-785 nm

LABEL CHECK

HB model




HEZ model

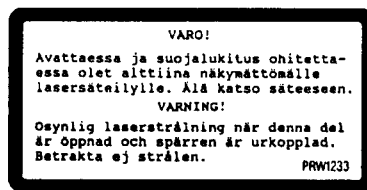

HEZ and HB model




HEZ model

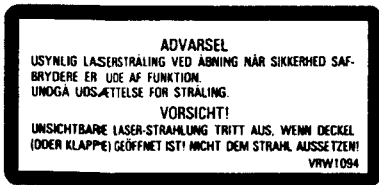

HEZ and HB models

FRONT

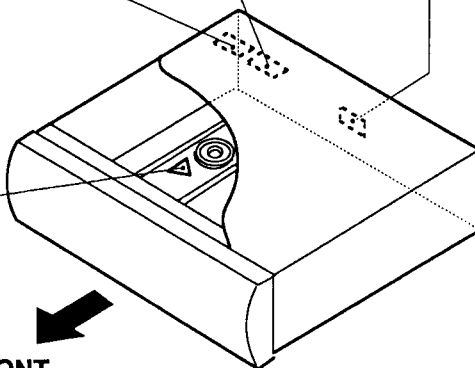

Additional Laser Caution

1. The ON/OFF statuses of the slider - position detection switches (PARK INNER, PARK OUTER on the PKSB assembly), loading - status detection switches (SW 1, 2 and 3 on PKSB assembly) are detected by the microprocessor (IC101 in the MAIN assembly). To permit the laser diode to oscillate, it is required to set the slider - position detection switch for the LD ACTIVE status (PARK INNER: OFF, PARK OUTER: OFF), and to set the loading - status detection switch for clamped state (SW1: OFF, SW2: ON, SW3: ON). As long as these requirements are not satisfied, the laser diode will not oscillate. When the requirements are met in any way, the laser diode can oscillate. The laser diode oscillation will continue if pin 29 of IC801 is shorted to GND or the emitter and collector of Q809 are shorted each other (fault condition) in MAIN assembly.
In test mode (see page 51), the laser diode oscillates when microprocessor detects a PLAY signal or when the PLAY key is pressed (S223: ON in the FLKY assembly), with the above requirements satisfied.
2. When the cover is open, close viewing through the objective lens with the naked eye will cause exposure to a Class 1 laser beam.

2. EXPLODED VIEWS, PACKING AND PARTS LIST


NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

(1) EXTERIOR SECTION

Parts List

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Guide plate (L)	VNE1805		16	Tray panel	VNK2032
	2	Guide plate (R)	VNE1806		17	Door holder	VNE1812
	3	Lock plate spring	VBH1188		18	Door shaft	VLL1441
	4	Lock plate	VNL1513		19	
	5	CD tray	VNK1992	NSP	20	Spacer	VEC1585
	6	Tray assembly - S	VXX1729	NSP	21	Damp cushion	VEC1110
NSP	7	LD tray	VNK1991	NSP	22	PCB holder	VNE1830
	8	Disc pad	VEC1191		23	Screw	BPZ30P060FCU
	9	Disc pad (C)	VEC1380		24	Screw	IPZ26P060FMC
NSP	10	Label	VRW1289		25	Screw	BBZ30P080FCC
	11	Bonnet S	VXX1726		26	Screw	BCZ40P060FZK
	12	Door spring	VBH1202		27	Screw	IPZ20P050FMC
	13	CD door assembly - S	VXX1728		28	Screw	VBA1032
	14	Cushion	VEC1578		29	Tray rubber	VEB1091
NSP	15	CD door	VNK2033				

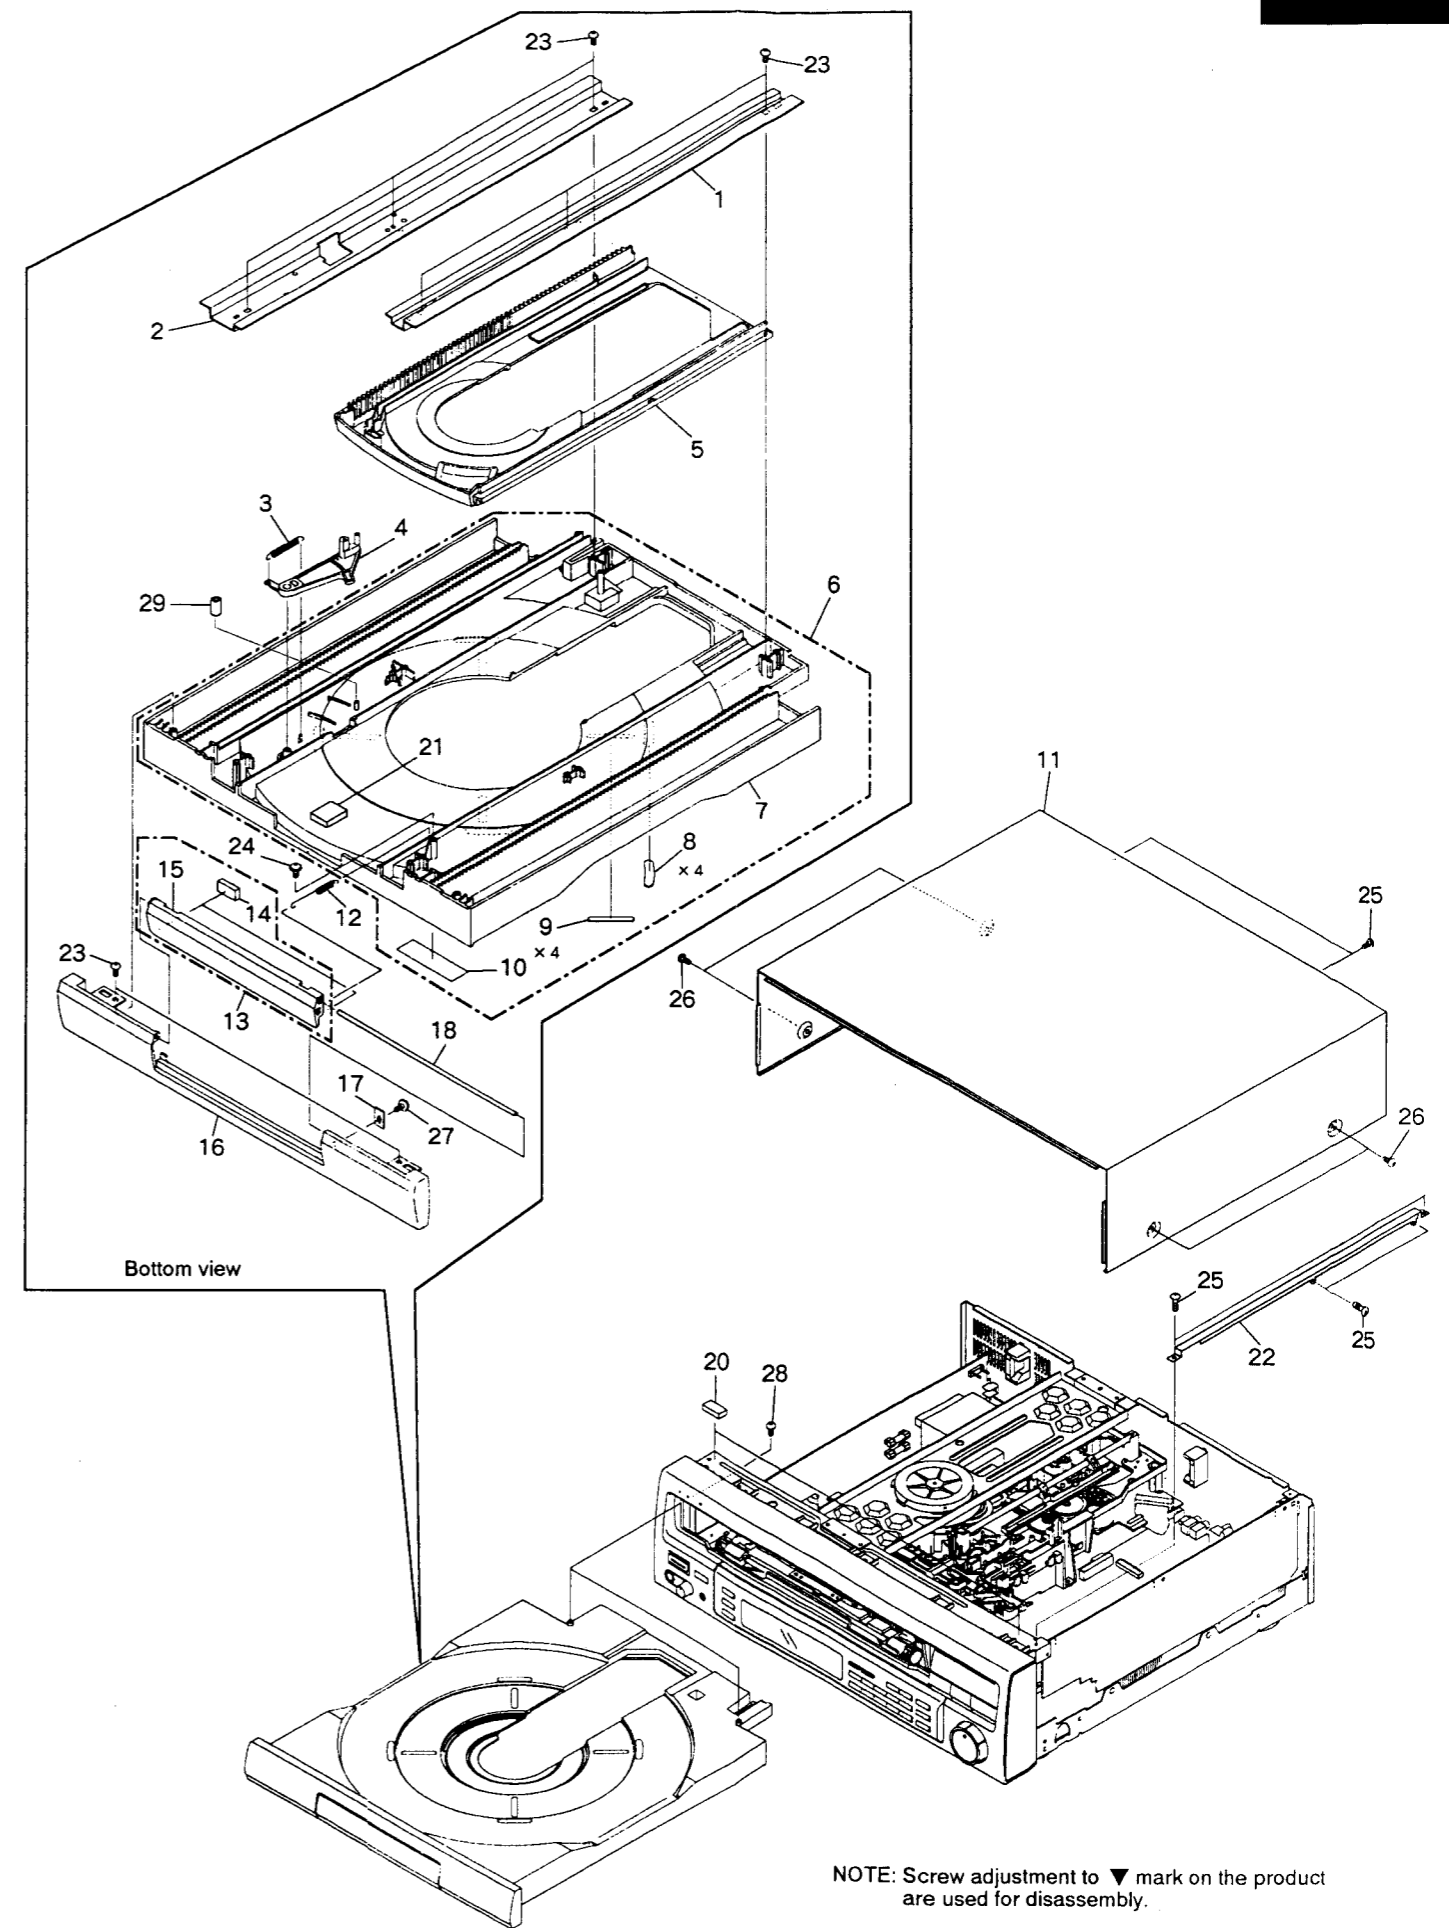


NOTE: Screw adjustment to ▼ mark on the product are used for disassembly.

(2) TOP VIEW SECTION

Parts List


Mark	No.	Description	Part No.
A	1	Clamper holder	VNL1514
	2	Rubber sheet	VEB1114
	3	Thrust holder	VNL1289
	4	Clamper head	VNL1516
	5	Clamper	VNL1515
	6	Clamper spring	VBH1192
	7	Clamper arm	VNE1804
	8	Stabilizer	VNE1807
	9	Rack assembly	VWT1080
	10	Carriage shaft	VLL1434
NSP	11	Side stay (R)	VNE1810
NSP	12	Front angle	VNE1808
	13	Screw	CPZ20P050FMC
	14	Screw	BBZ30P080FCC
	15	Screw	IBZ30P060FCC
B	16	Screw	IPZ30P060FMC
	17	Screw	PCZ30P060FMC
	18	Earth plate	VNE1518

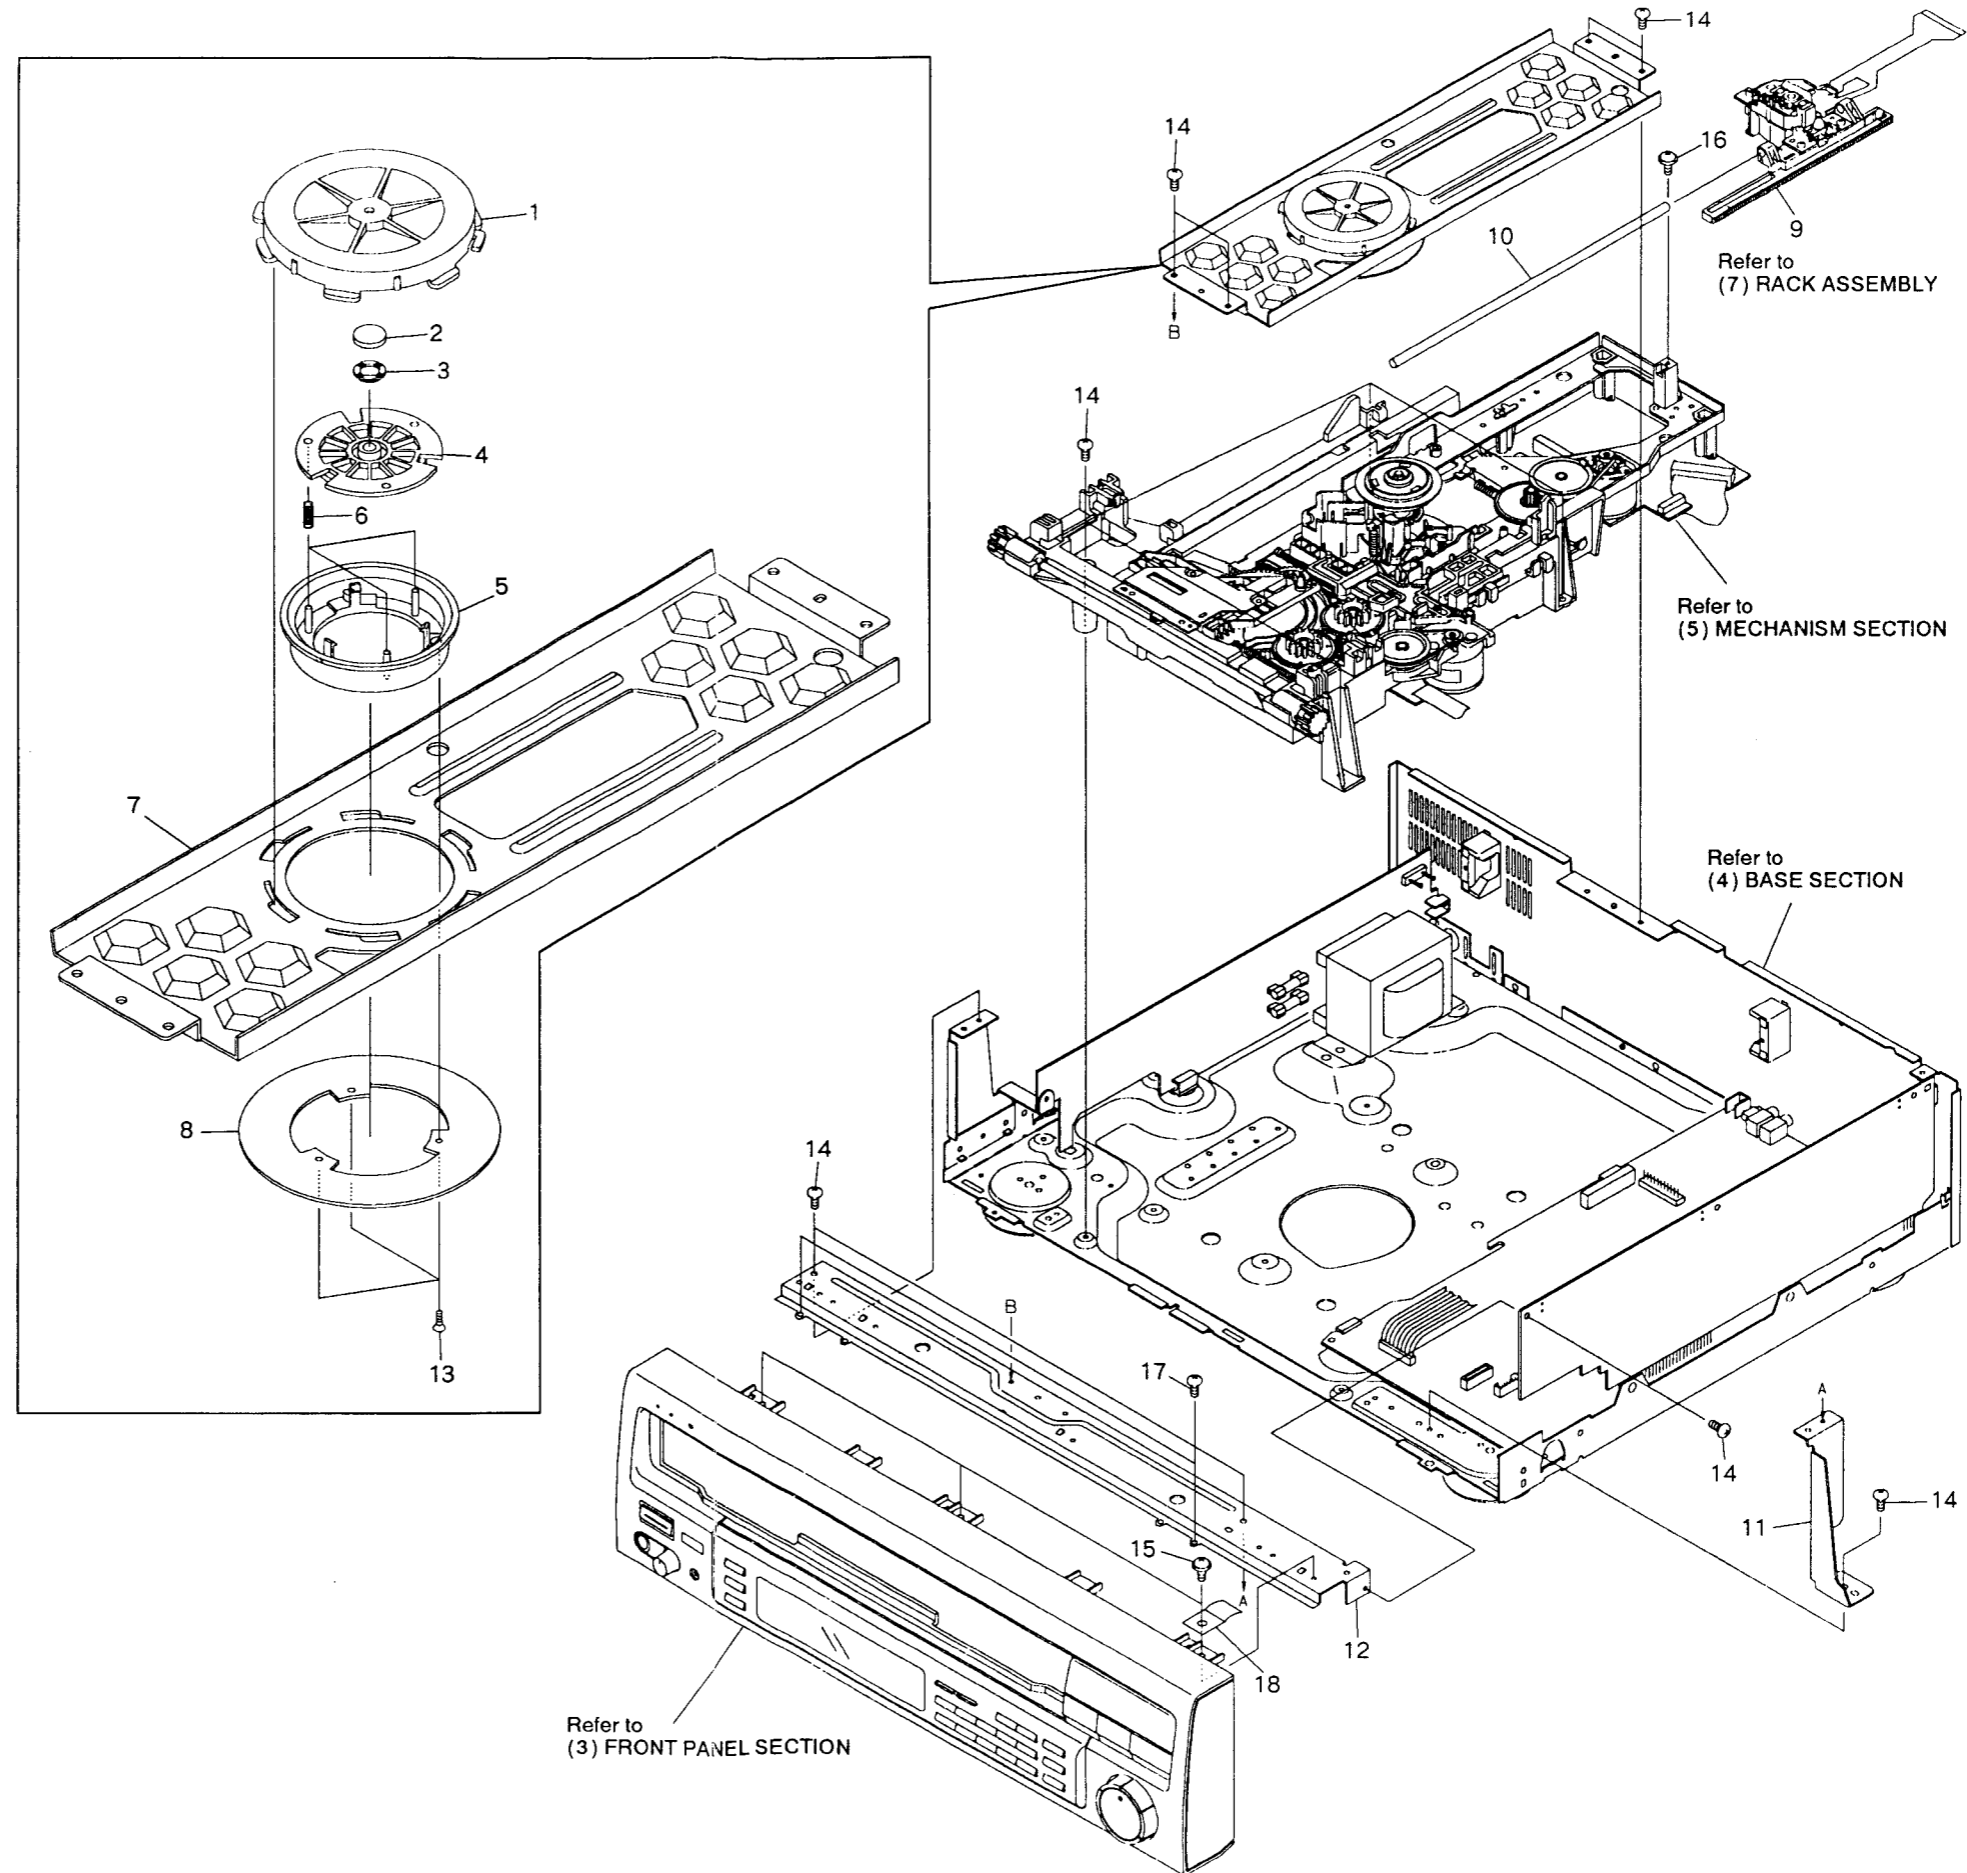

(3) FRONT PANEL SECTION

Parts List

Mark No.	Description	Part No.	Mark No.	Description	Part No.
NSP 1	PSWB assembly	VWG1315	NSP 11	Center panel	VNK2085
2	PW button	VNK2002	12	FL lens	VEC1568
3	Mode key	VNK2037	13	FL filter	VNK1694
NSP 4	FLKY assembly	VWG1336	14	Center panel assembly - S	VXX1757
5	CD button	VNK2038	15	Screw	BPZ26P060FCU
6	Ten key	VNK2036	NSP 16	HEPB assembly	VWV1254
7	Main key	VNK2035	17	Jack holder	VNE1811
8	Front panel assembly	VXA1867	18	Snap plate	VNE1102
9	Shuttle knob	VNK2039	19	Volume knob	VNK2003
10	Sub panel	VNK2034			

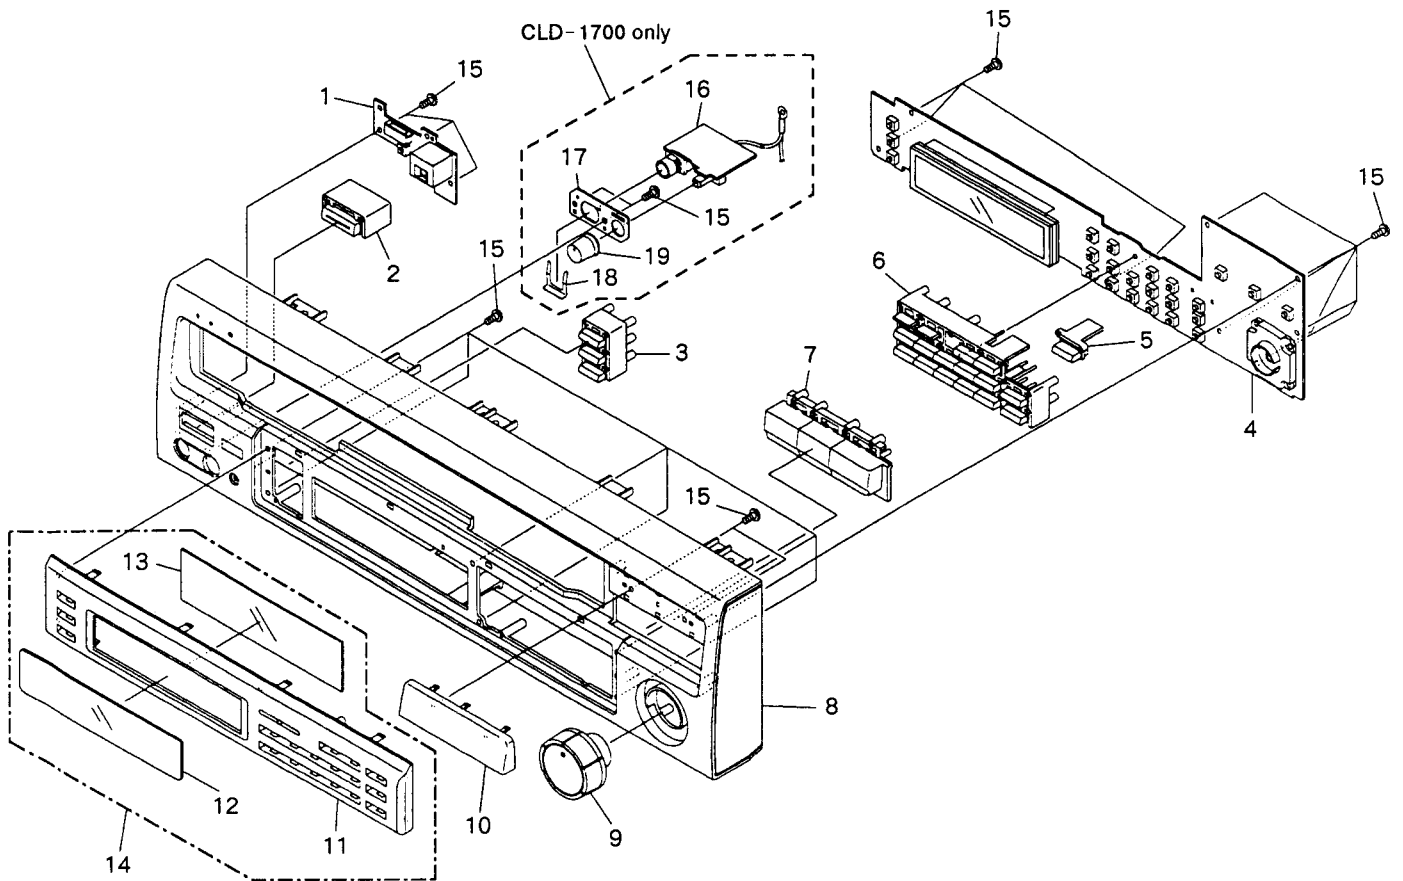

(4) BASE SECTION

Parts List

Mark	No.	Description	Part No.
NSP	1	MAIN assembly	VWX1123
NSP	2	AUDIO assembly	VWX1124
⊙	3	SYPS assembly	VWR1146
	4	Tray stopper	VNL1519
△	5	AC power cord	VDG1028
	6	Cord stopper	CM-22B
NSP	7	Rear panel	VNA1278
	8	PCB cushion	VEC1573
NSP	9	Cord clamber	VNF-005
NSP	10	PCB hinge	VEC1174

Mark	No.	Description	Part No.
△	11	Power transformer	VTT1115
△	12	Fuse (FU1, FU2) (3.15A)	REK-105
NSP	13	P. plate holder	PNY-405
NSP	14	Side stay (L)	VNE1809
	15	Cord clamber	VNF-069
	16	Insulator	PNW1912
NSP	17	Base chassis	VNA1255
	18	Insulator assembly	VXA1881
	19	Screw	BBZ30P080FCC
	20	Screw	BBZ30P040FMC
	21	Screw	BCZ40P060FZK
	22	Screw	BCZ30P080FCC
⊙	23	SCRB assembly	VWV1248
NSP	24	Support cushion	VEC1601
NSP	25	PC suport	VEC1584
NSP	26	Plate	VNE1854
	27	Binder	VEC-067

A


B

C

D

* 1: Q3 on the SYPS assembly


* 2: CLD-1700 only

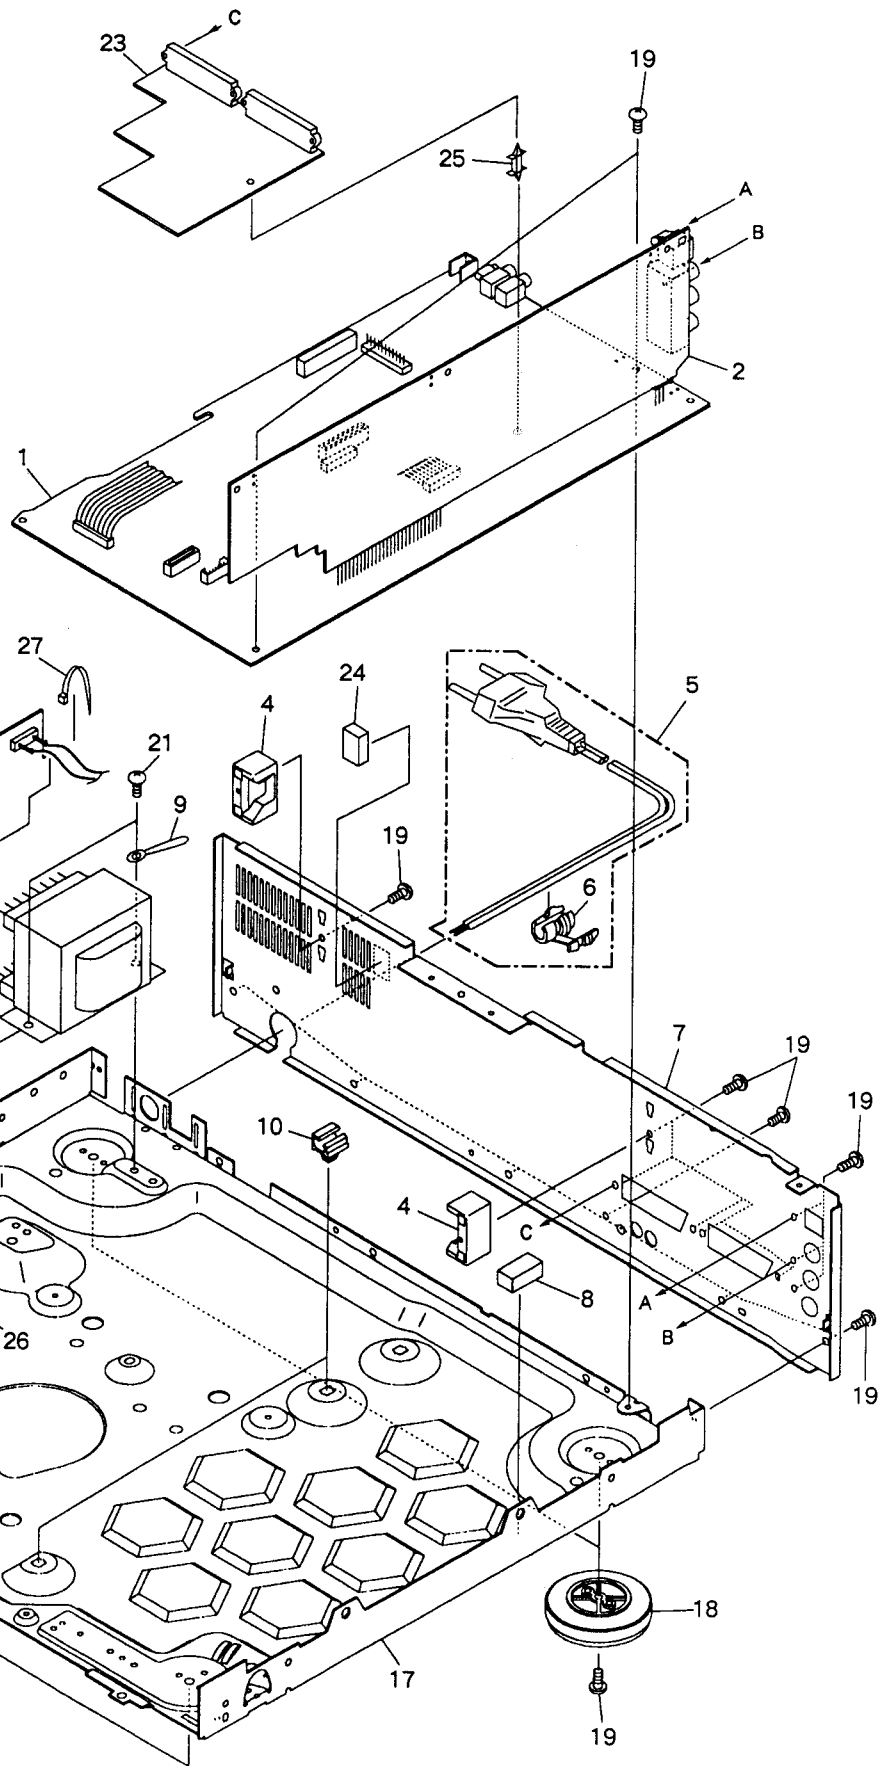

(5) MECHANISM SECTION

Parts List

<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>Part No.</u>
	1	Mechanism base	VNK1990		14	L-SW lever	VNL1504
	2	Flexible cable	VDA1409		15	C-SW lever	VNL1505
	3	Clamp cam	VNL1500		16	R-SW lever	VNL1506
	4	Shaft holder	VNE1817		17	LOSB ASS'Y	VWG1307
	5	Cam plate	VNL1511	NSP	18	Synchro gear ASS'Y	VXA1822
	6	CAS spring	VBH1190		19	Roller	VNL1042
	7	Cam gear	VNL1507	NSP	20	LOMB ASS'Y	VWG1308
	8	CD plate	VNL1512		21	Loading motor ASS'Y	VXX1712
	9	CDP spring	VBH1191		22	Slider motor	VXM1033
	10	Rubber belt	VEB1184	NSP	23	Motor pulley	PNW1643
	11	Gear pulley	VNL1510		24	Screw	Z39-019
	12	Twin gear	VNL1508		25	Screw	BMZ26P040FMC
	13	Center gear	VNL1509				

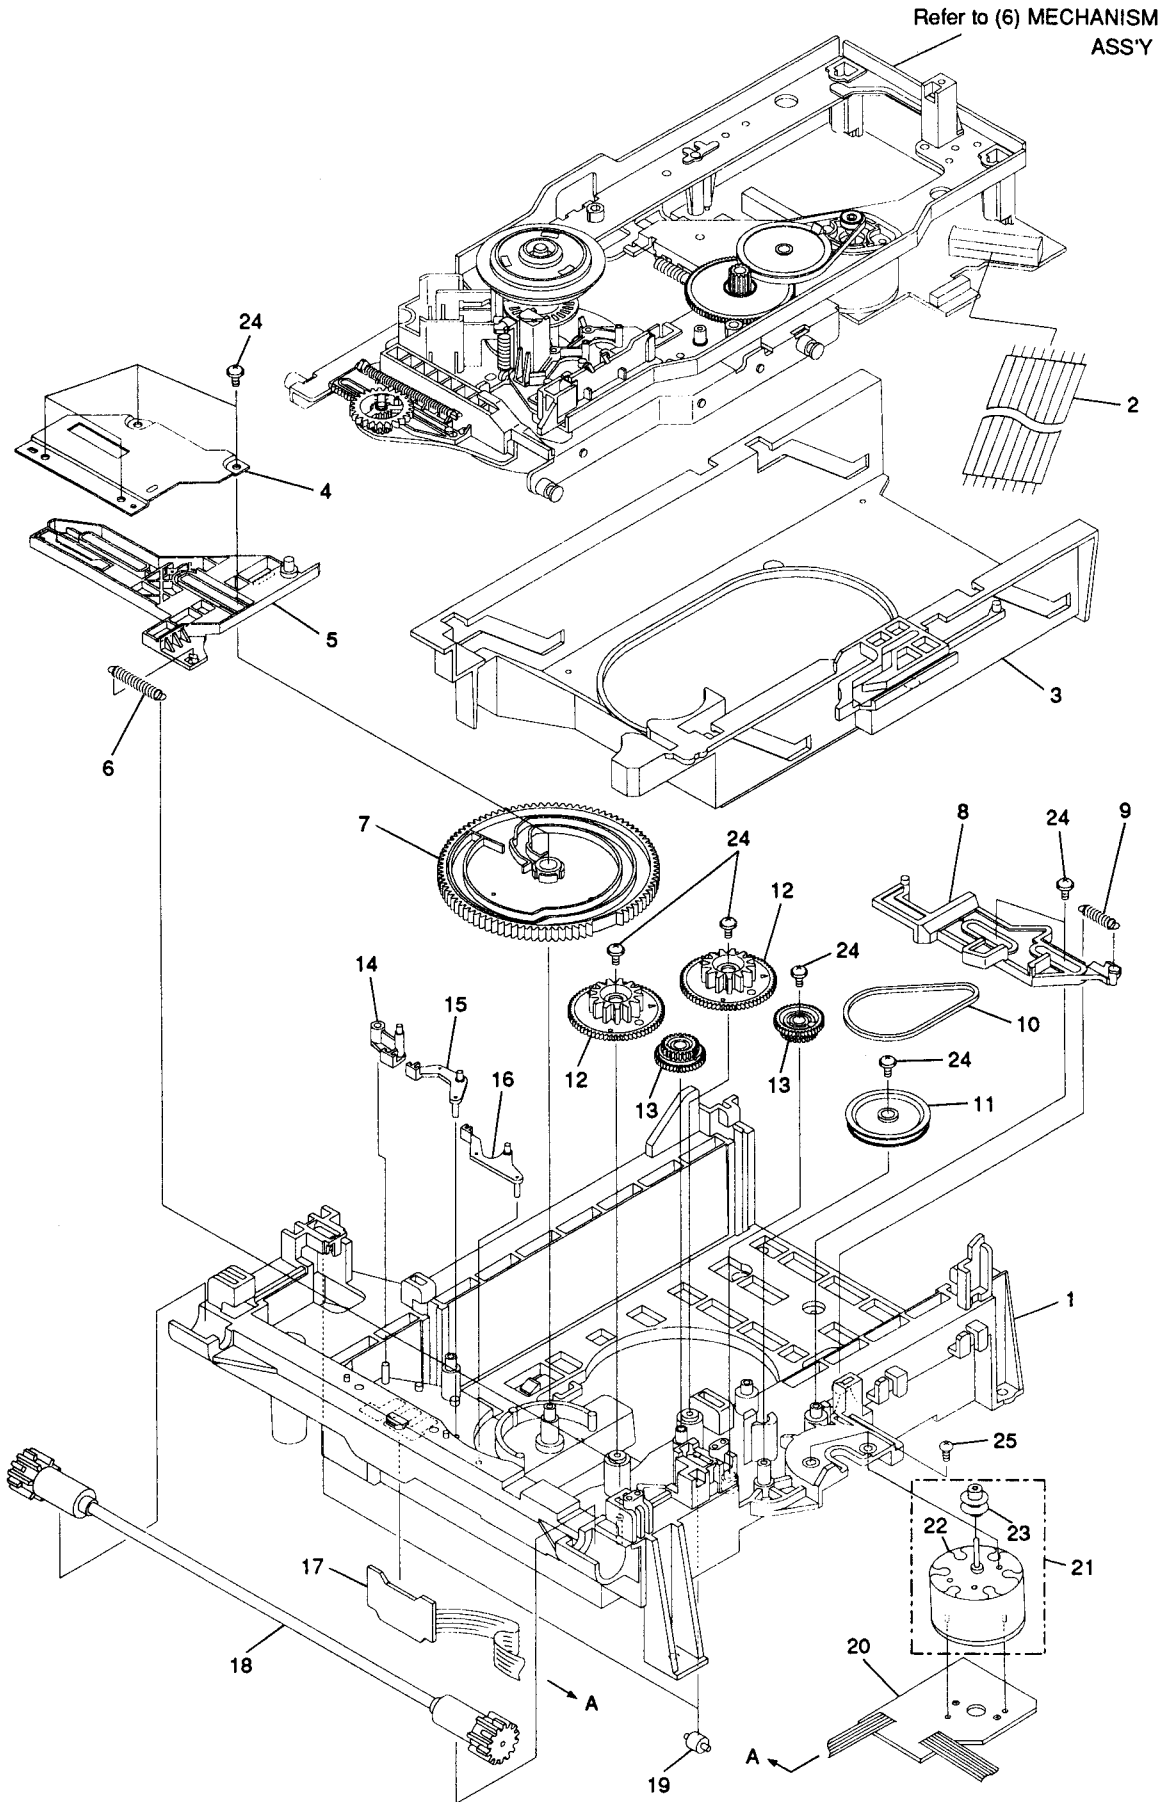

(6) MECHANISM ASS'Y

Parts List


Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	CA belt	VEB1077		16	Y gear	VNL1501
	2	CA pulley	VNL1496		17	Tilt cam spring	VBH1189
	3	CA gear	VNL1497		18	Tilt cam	VNL1502
	4	Tilt base	VNL1499		19	Spindle motor ASS'Y	VXA1825
	5	CA-SW lever	VNL1498		20	Centering hab	VNL1174
NSP	6	CAMB ASS'Y	VWG1306		21	Centering spring	VBH1083
	7	CRG motor ASS'Y	VXX1261	NSP	22	Rubber sheet	VEB1103
NSP	8	Slider motor	VXM1033	NSP	23	Turn table ASS'Y	VXA1283
	9	CA pulley (1)	VNL1197	NSP	24	Oil stopper	VBH1002
NSP	10	PKSB ASS'Y	VWG1305	NSP	25	Spindle motor	VXM1050
	11	Radial spring	VBH1201		26	Motor base	VNE1803
	12	Thrust spring	VBH1200		27	Screw	BMZ26P040FMC
	13	Tilt tension	VBH1187		28	Screw	ABZ30P300FMC
NSP	14	FG ASS'Y	VWG1304		29	Screw	PMA30P050FMC
	15	FG base	VNL1503		30	Washer	WT26D060D025

C

D

E


F

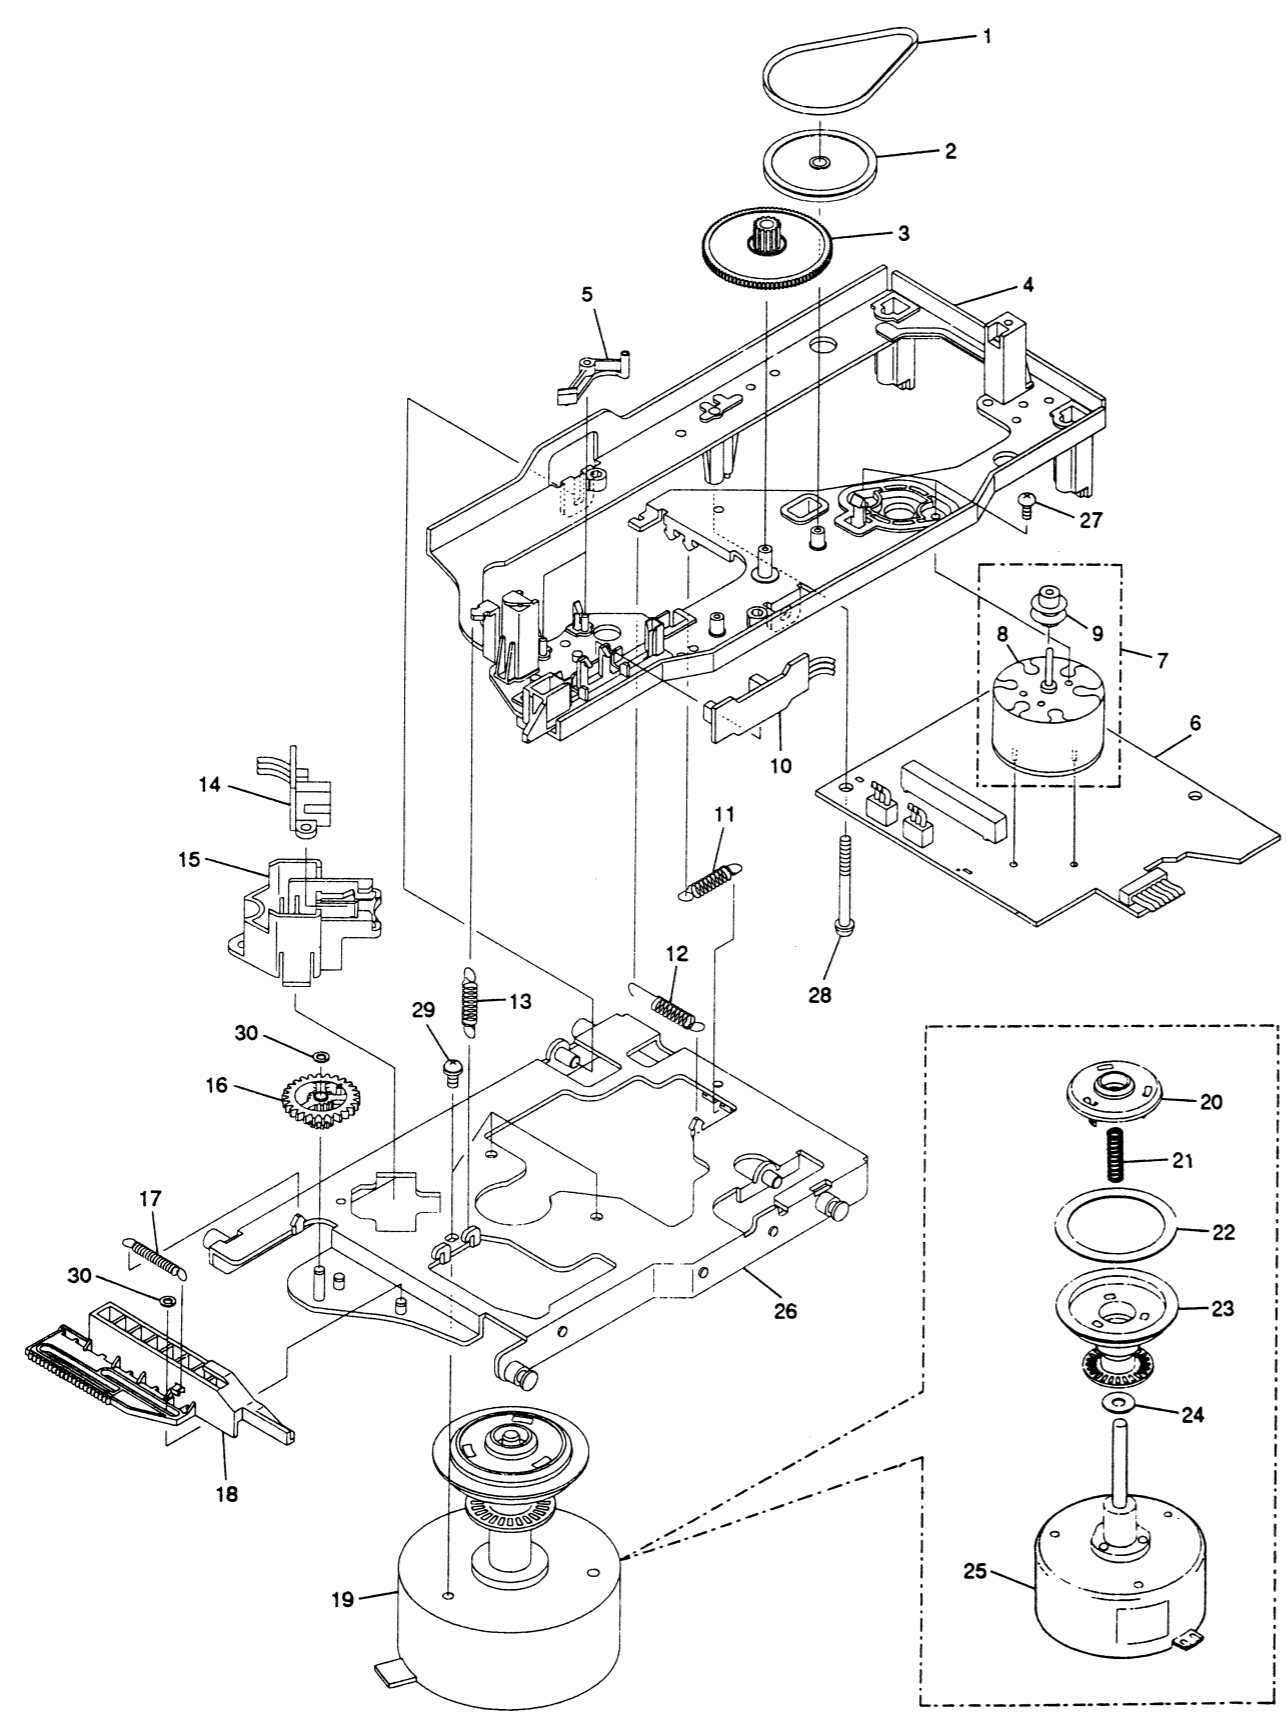

(7) RACK ASS'Y

Parts List

Mark	No.	Description	Part No.
NSP	1	Sensor stay	VBK1036
NSP	2	Tilt sensor	SG-302
NSP	3	Pick up ASS'Y	VWY1030
	4	Rack	VNL1495
	5	Tan. base	VNL1494
	6	Screw	PBB26P080FMC
	7	Screw	PMA20P060FMC
	8	Screw	PMA20P080FMC
	9	Screw	PMH20P040FMC
	10	Screw	SMZ20H120FZK

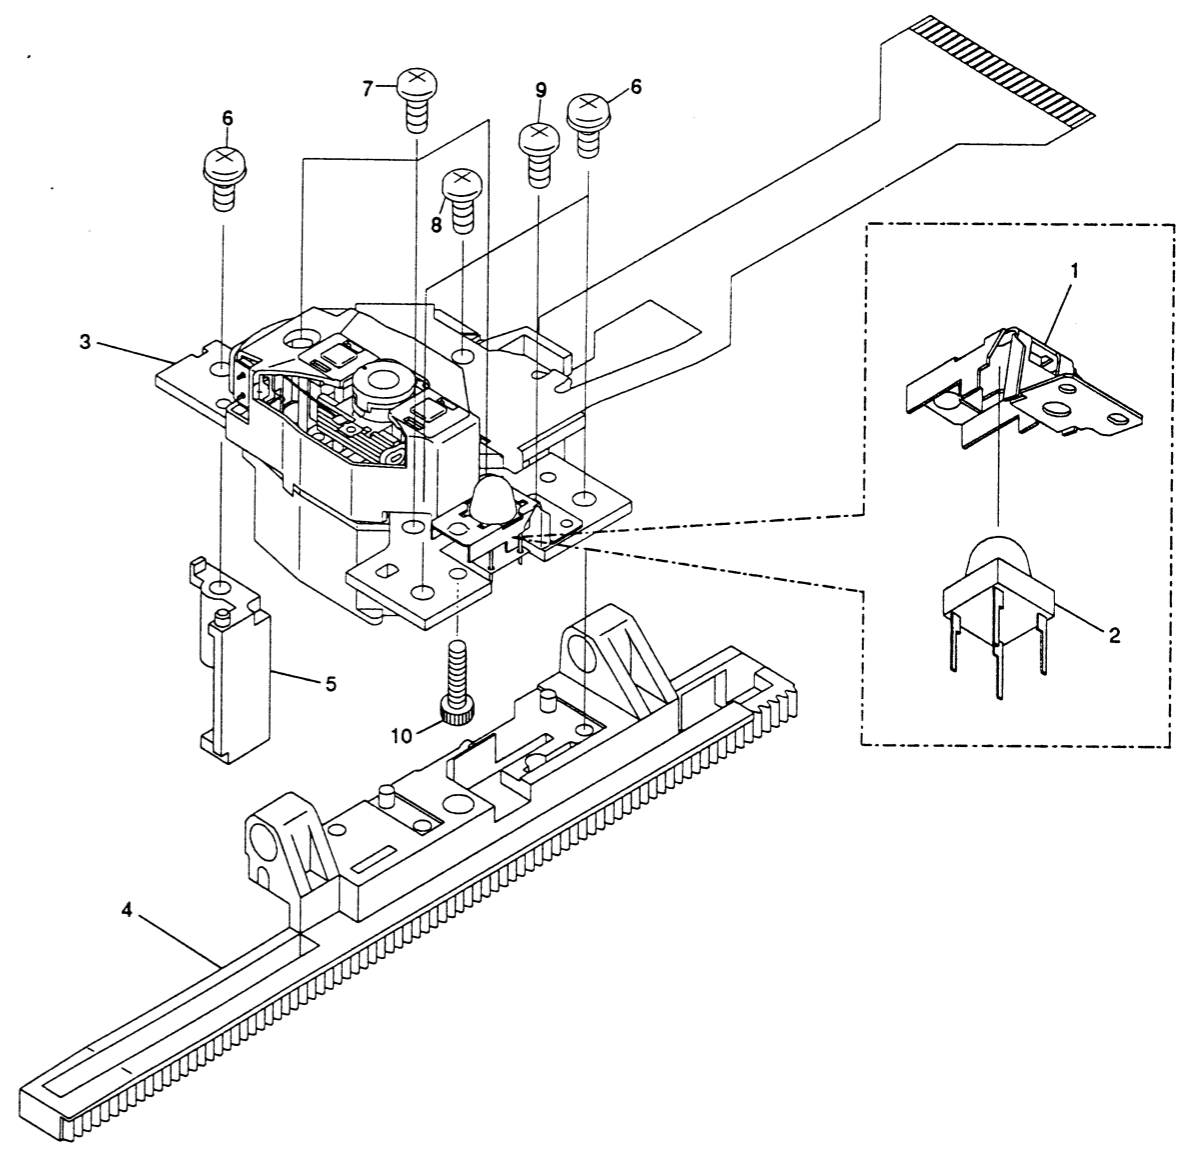

(8) P

Parts

Mark

NSP

NSP
NSP

NSP

1

2

3

4


5

6

(7) RACK ASS'Y

Parts List


Mark No.	Description	Part No.
NSP 1	Sensor stay	VBK1036
NSP 2	Tilt sensor	SG-302
NSP 3	Pick up ASS'Y	VWY1030
4	Rack	VNL1495
5	Tan. base	VNL1494
6	Screw	PBB26P080FMC
7	Screw	PMA20P060FMC
8	Screw	PMA20P080FMC
9	Screw	PMH20P040FMC
10	Screw	SMZ20H120FZK

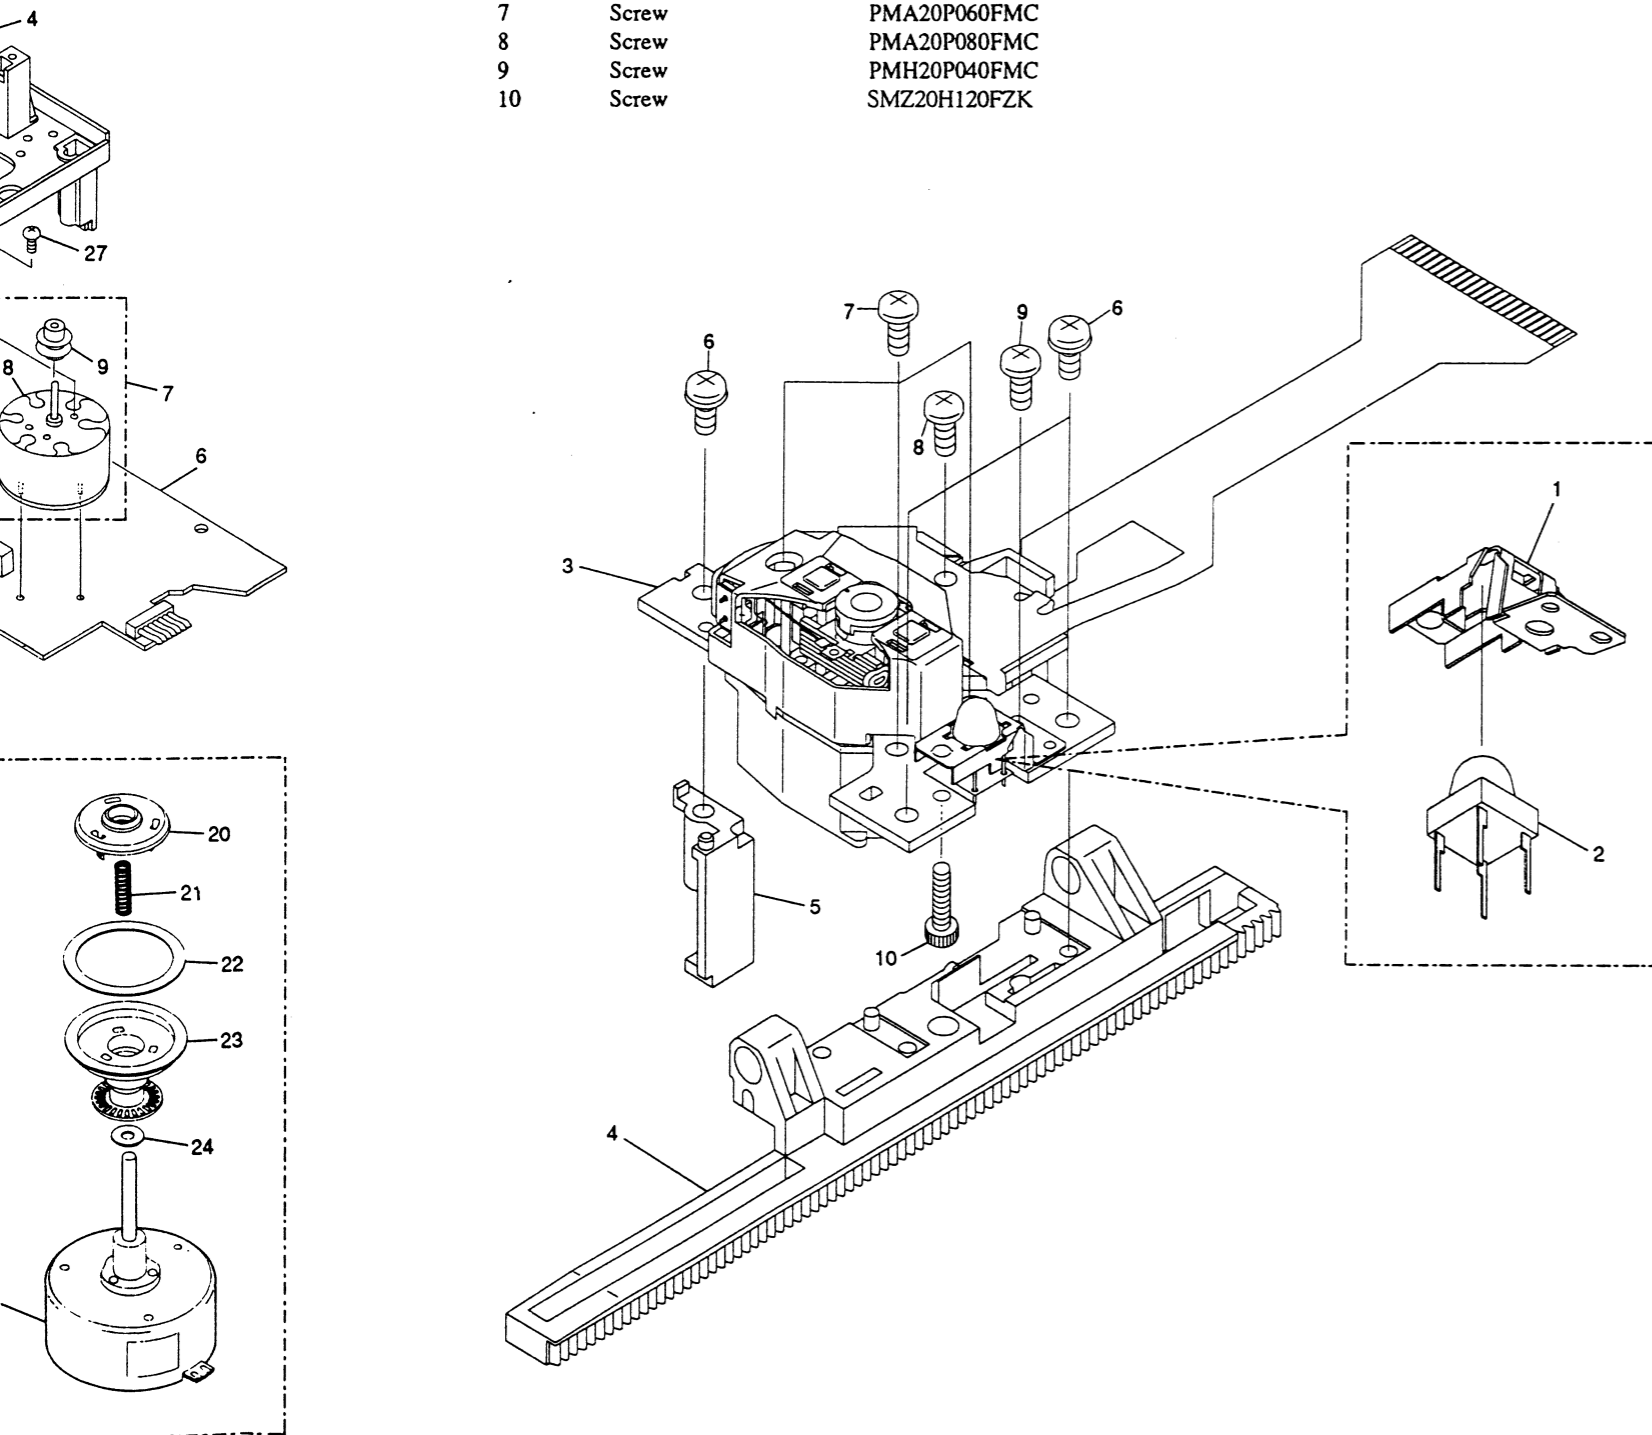

(8) PACKING

Parts List

Mark No.	Description	Part No.	Mark No.	Description	Part No.
NSP 1	Warranty card	ARW-088	NSP 9	Caution card (UC)	VRM1039
2	Connection cord	VDE-055	NSP 10	Caution card	VRR1009
3	Euro scart cable (21P)	VDE1027	11	Remote control unit (CU-CLD077)	VXX1758
NSP 4	Battery (R03, AAA)	VEM-022	12	Battery cover	VNK1293
NSP 5	Polyethylene bag	VHL-014			
6	Operating instructions (English/French/German/Italian)	VRE1010	NSP 13	Polyethylene bag	Z21-029
7	Operating instructions (Dutch/Swedish/Spanish/Portuguese)	VRF1017	14	Pad (F)	VHA1105
NSP 8	Caution card (EW)	VRM1027	15	Pad (R)	VHA1106
			16	Packing case	VHG1228
			17	Mirror mat	VHL1006

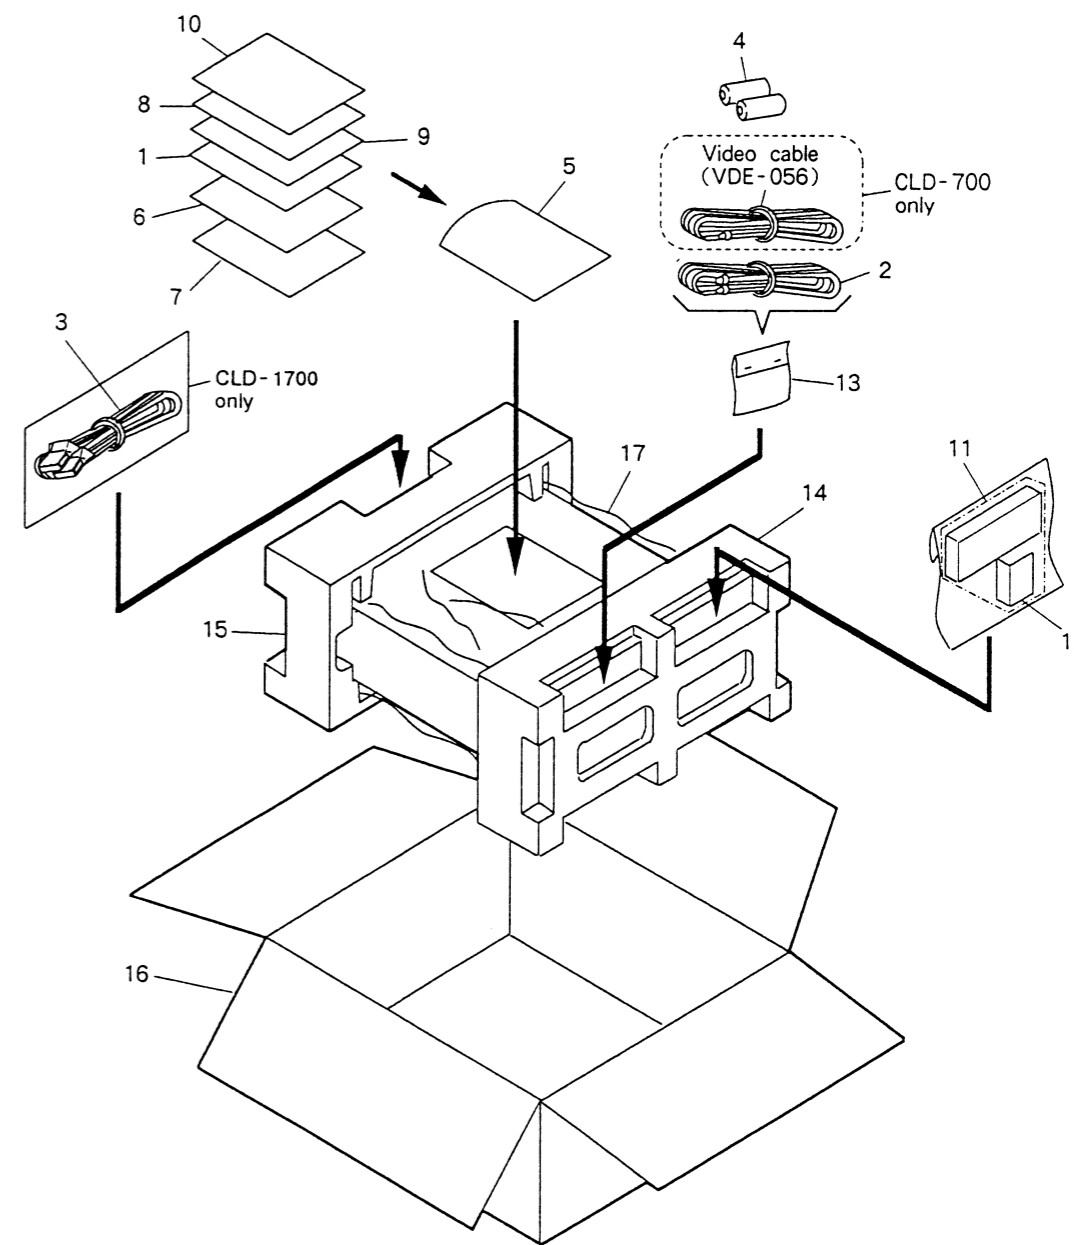

3. SCHEMATIC AND PCB CONNECTIONS DIAGRAMS

3.1 FLKY, PSWB, HEPB, SYPS, CAMB, LOSB, LOMB, FG, PKSB, PICKUP ASSEMBLIES AND OVERALL WIRING DIAGRAM

FLKB ASSEMBLY (VWM1278 : CLD-1700) (VWM1277 : CLD-700)

A



B

C

D

E

F

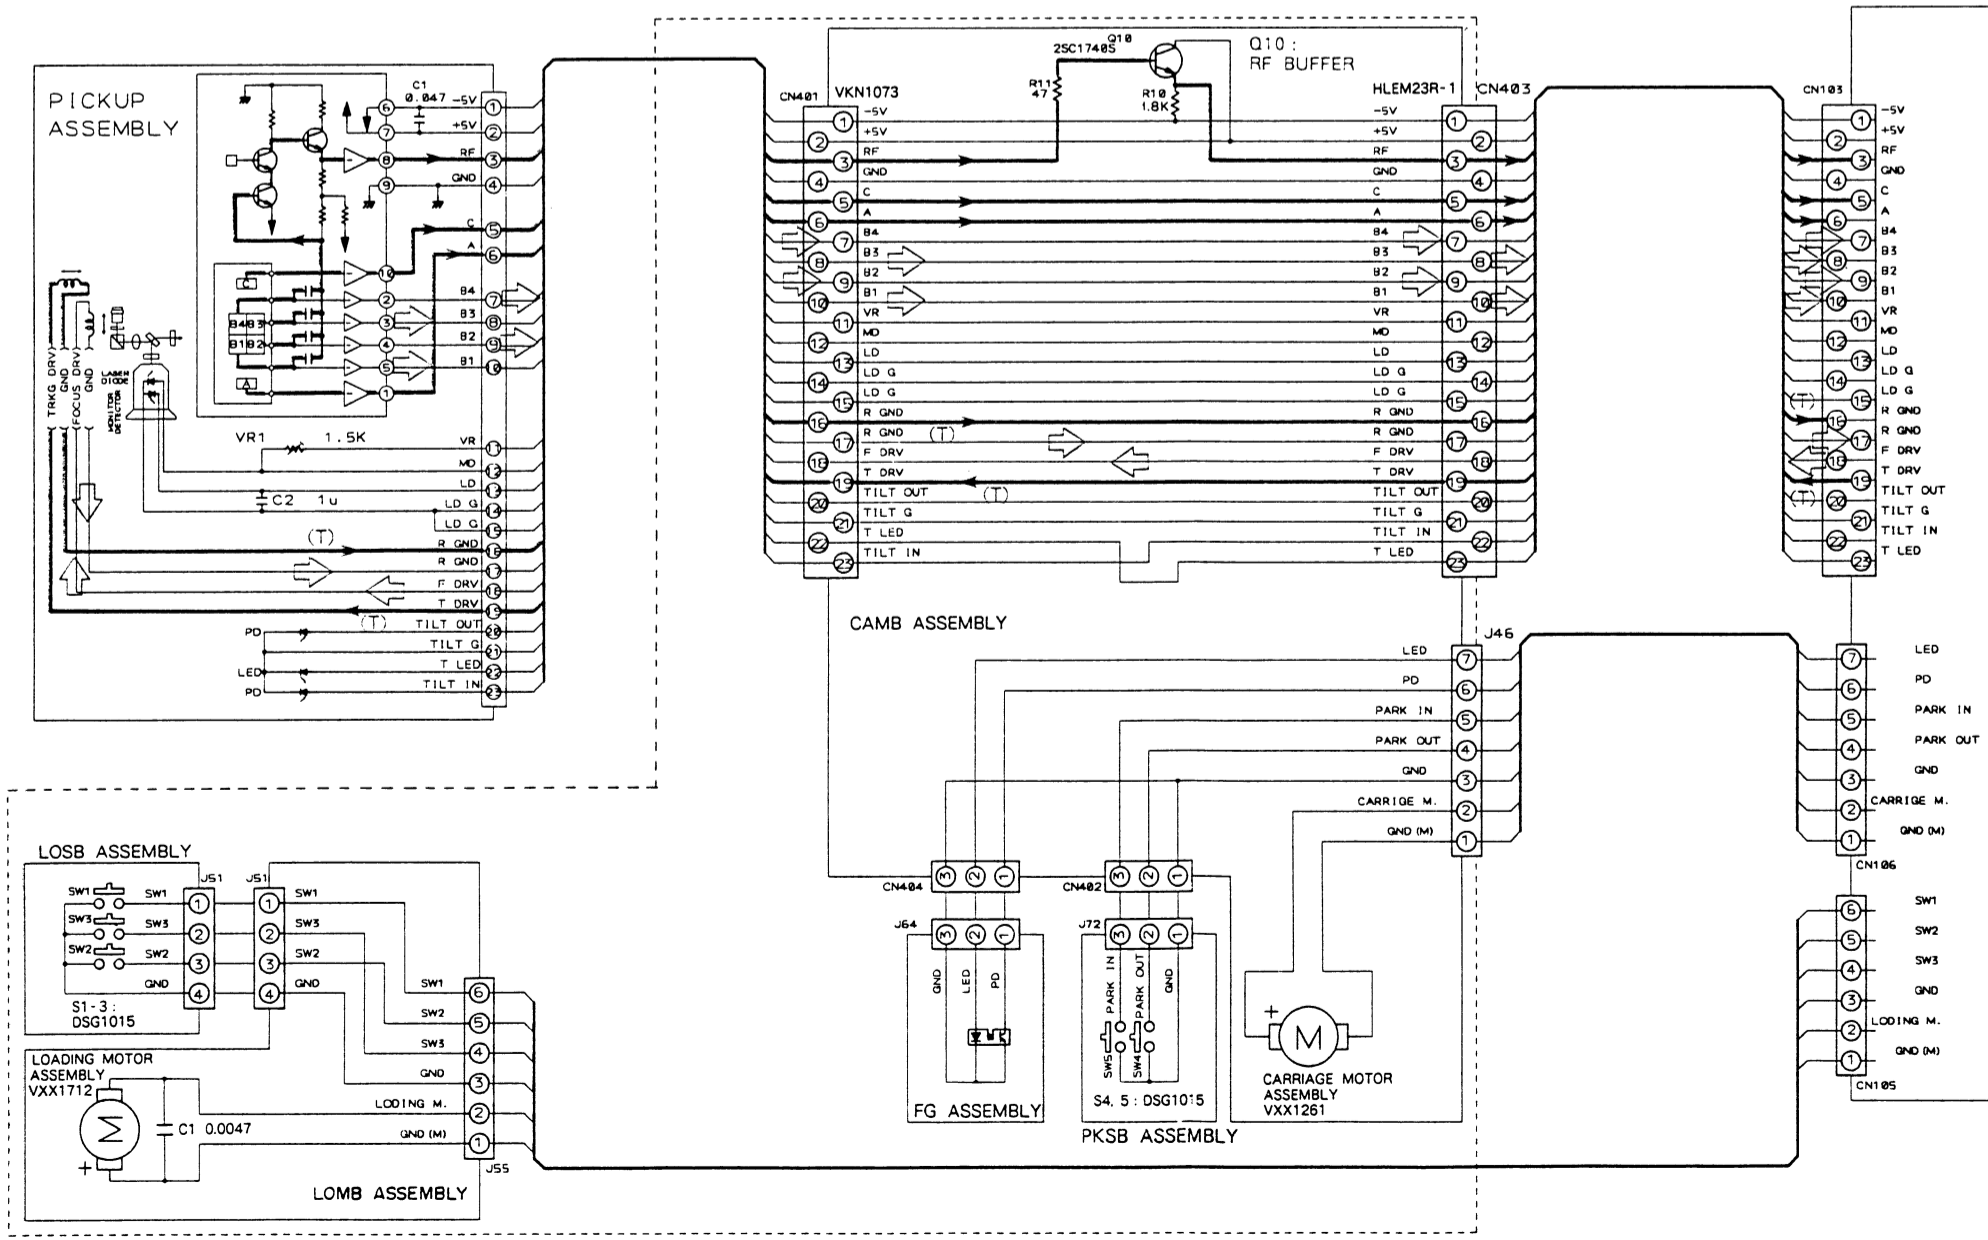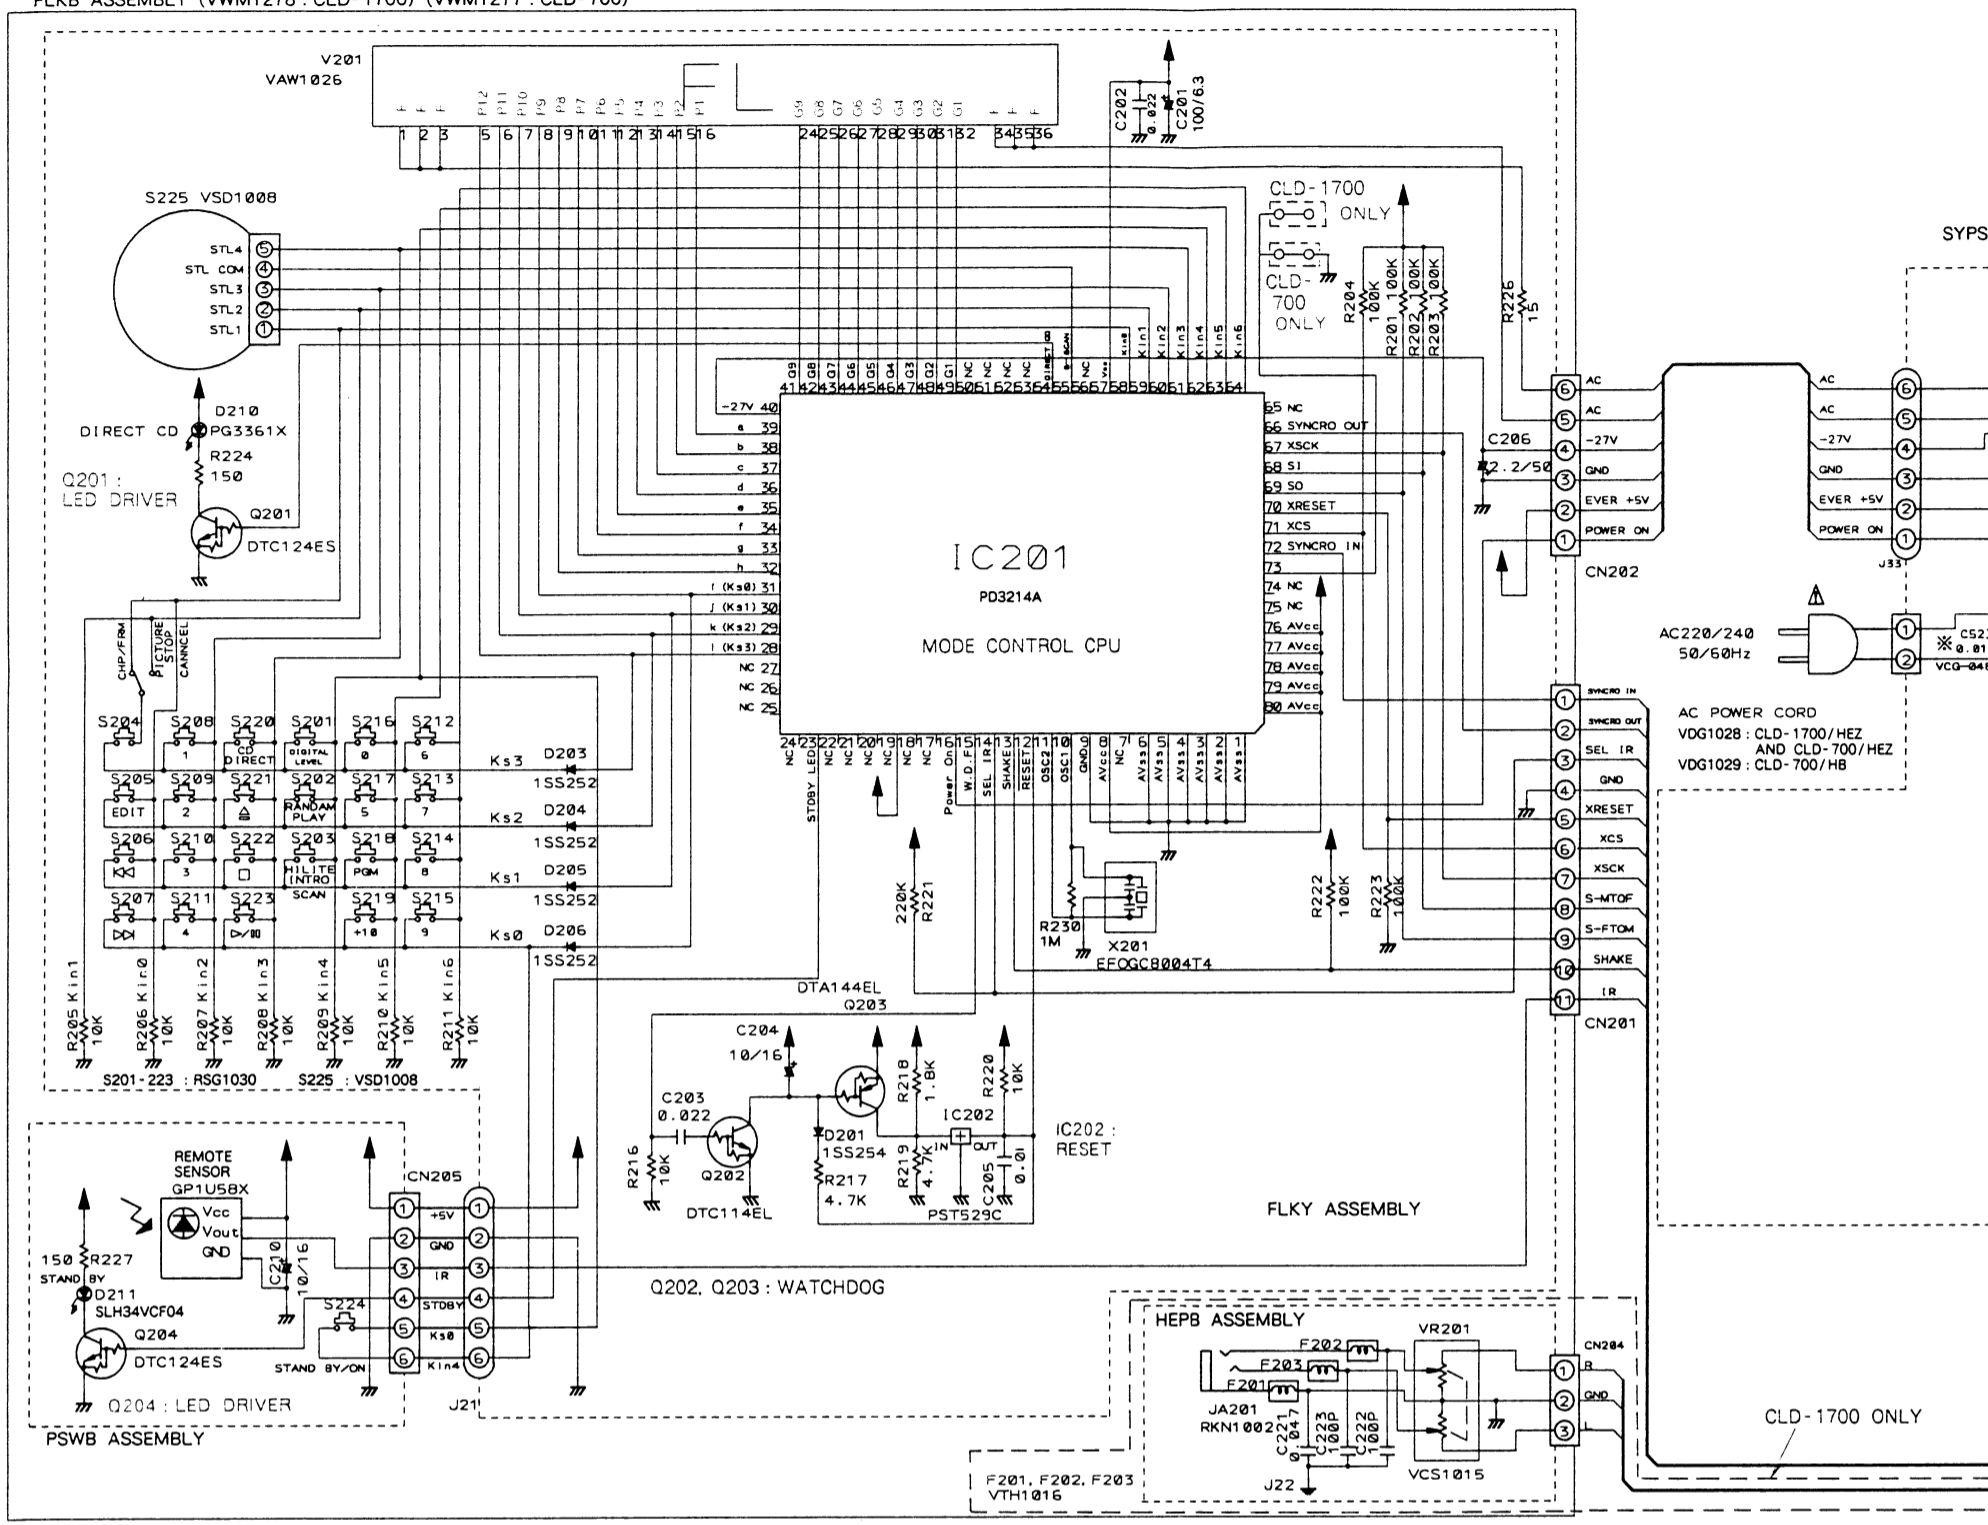

MACB ASSEMBLY (VWM1250)

_____ : RF Signal Line
 (S) _____ : SPDL Servo Loop Line
 (T) _____ : TRKG Servo Loop Line
 ◀ _____ : FOCUS Servo Loop Line

- Note: (Type 4)
- When ordering service parts, be sure to refer to "PARTS LIST of EXPLODED VIEWS" or "PCB PARTS LIST".
 - Since these are basic circuits, some parts of them or the values of some components may be changed for improvement.
 - RESISTORS:**
Unit: k:kΩ, M:MΩ, or Ω unless otherwise noted.
Rated power: 1/4W, 1/6W, 1/8W, 1/10W unless otherwise noted.
Tolerance:(F): ±1%, (G): ±2%, (K): ±10%, (M): ±20% or ±5% unless otherwise noted.
 - CAPACITORS:**
Unit: p:pF or μ:μF unless otherwise noted.
Ratings: capacitor (μF) / voltage (V) unless otherwise noted.
Rated voltage: 50V except for electrolytic capacitors.
 - COILS:**
Unit: m:mH or μ:μH unless otherwise noted.
 - VOLTAGE AND CURRENT:**
□ : DC voltage (V) in PLAY mode unless otherwise noted.
⇐ mA or ⇐ mA: DC current in PLAY mode unless otherwise noted.
Value in () is DC current in STOP mode.
 - OTHERS**
● : Signal route.
⊙ : Adjustment point.
▼ (Red) : Measurement point.
• The Δ mark found on some component parts indicates the importance of the safety factor of the parts. Therefore, when replacing, be sure to use parts of identical designation.
 - SWITCHES** (Underline indicates switch position):
PKSB ASSEMBLY
S224 : POWER (STANDBY/ON)


PKSB ASSEMBLY
S4 : PARK OUT
S5 : PARK IN

LOSB ASSEMBLY
S1 : TILT LOADING 1
S2 : TILT LOADING 2
S3 : TILT LOADING 3



FLKY ASSEMBLY
S201 : LANGUAGE
S202 : RANDOM PLAY
S203 : HILITE/INTRO SCAN
S204 : CHP/TIME
S205 : PGM EDIT
S206 : SKIP(◀◀)
S207 : SKIP(▶▶)
S208 : 1
S209 : 2
S210 : 3
S211 : 4
S212 : 6
S213 : 7
S214 : 8
S215 : 9
S216 : 0
S217 : 5
S218 : PGM
S219 : +10
S220 : DIRECT CD (CD)
S221 : OPEN/CLOSE (▲)
S222 : STOP (■)
S223 : PLAY/PAUSE (▶/||)
S225 : ROTARY ENCODER

SYPS ASSEMBLY (VWR1146 : CLD-1700/HEZ AND CLD-700/HEZ)
(VWR1147 : CLD-700/HB)


IC41 : +12V REGULATOR


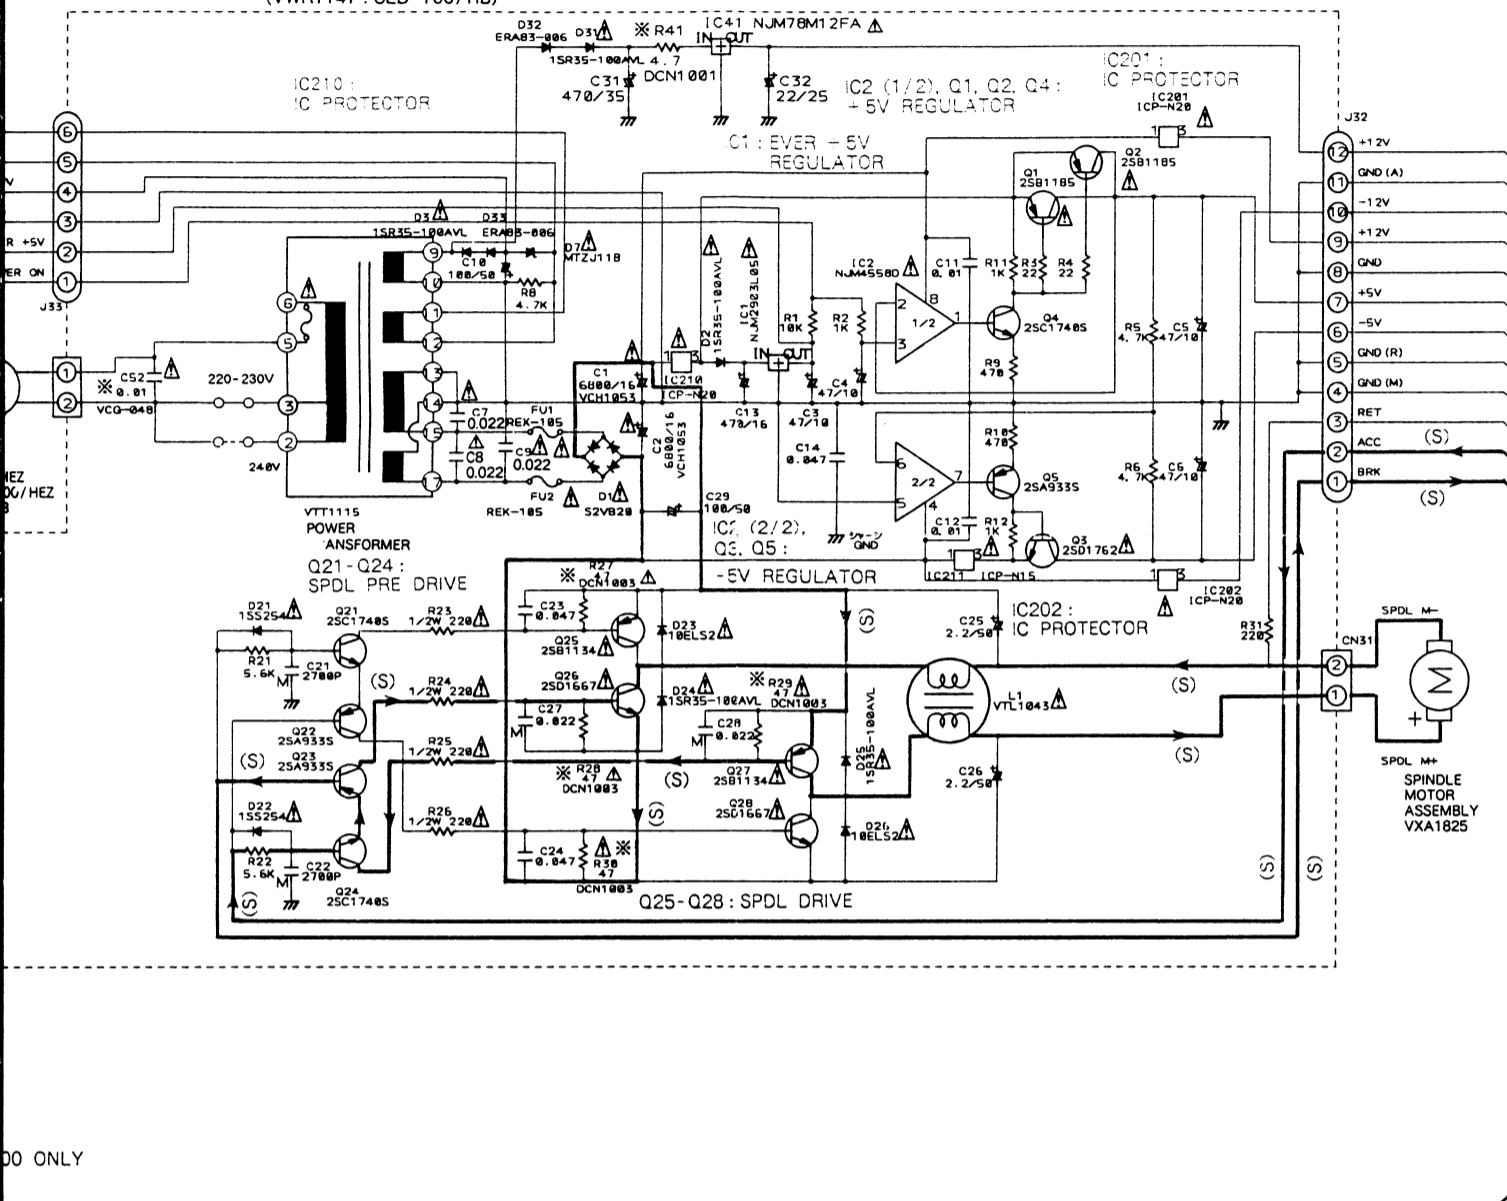


00 ONLY

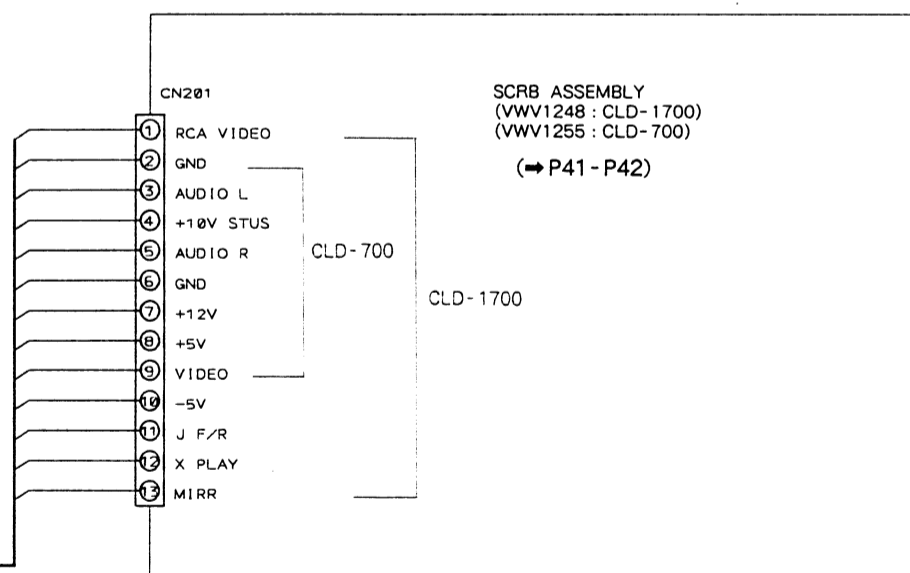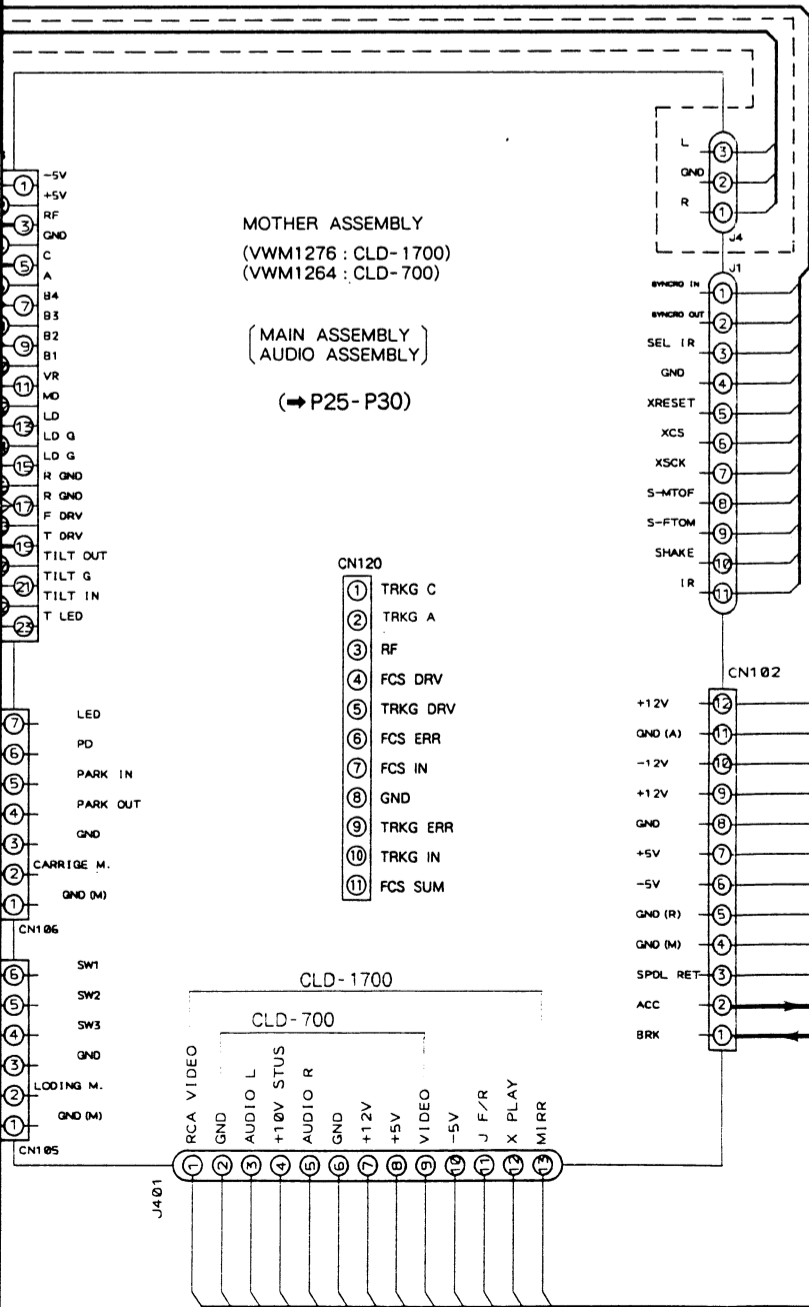

FL Display (V201 : VAW 1026)

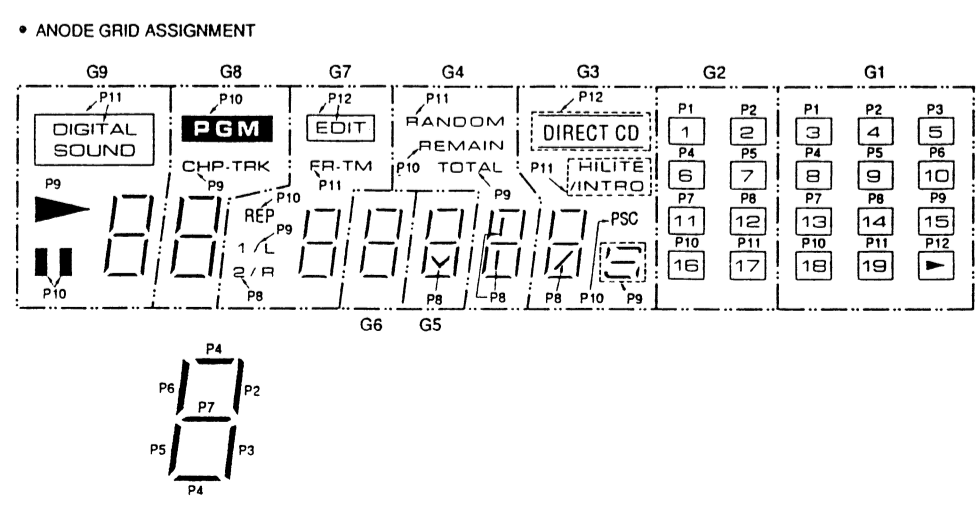

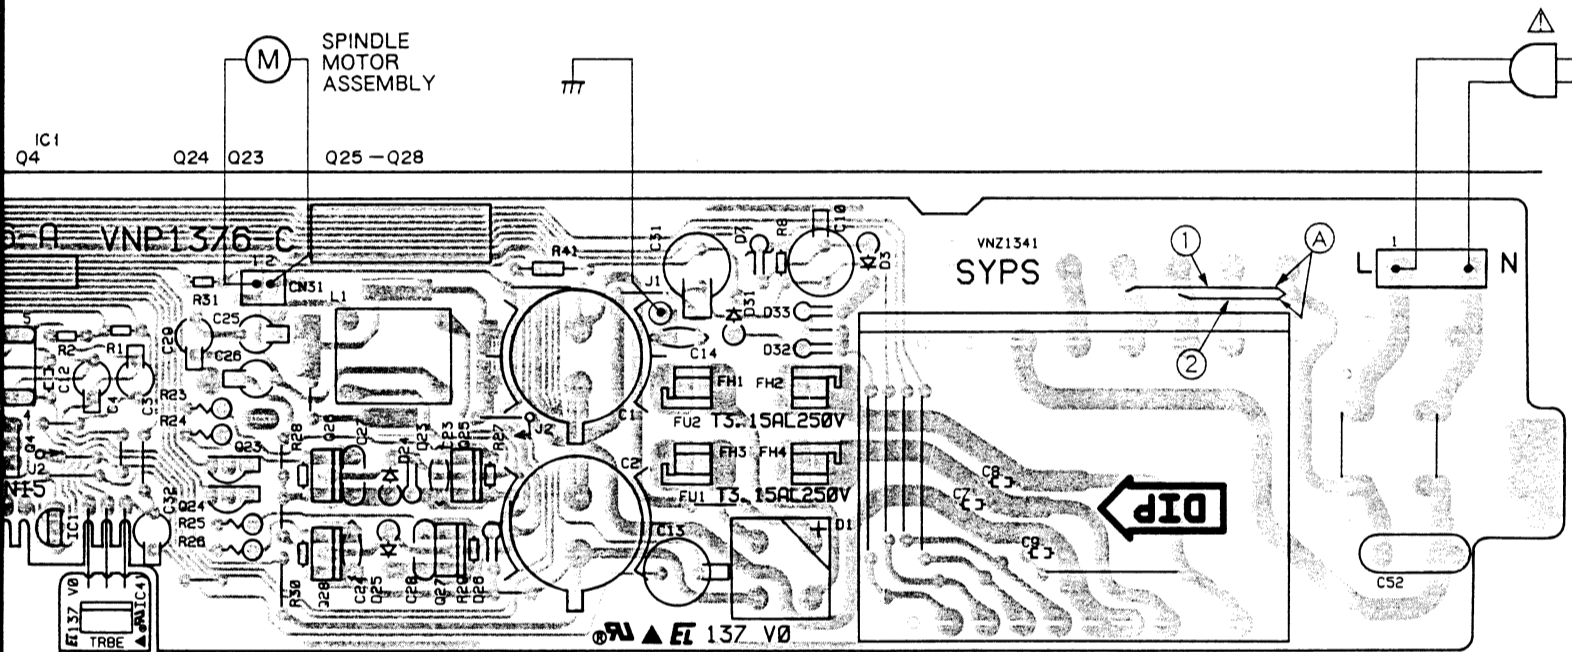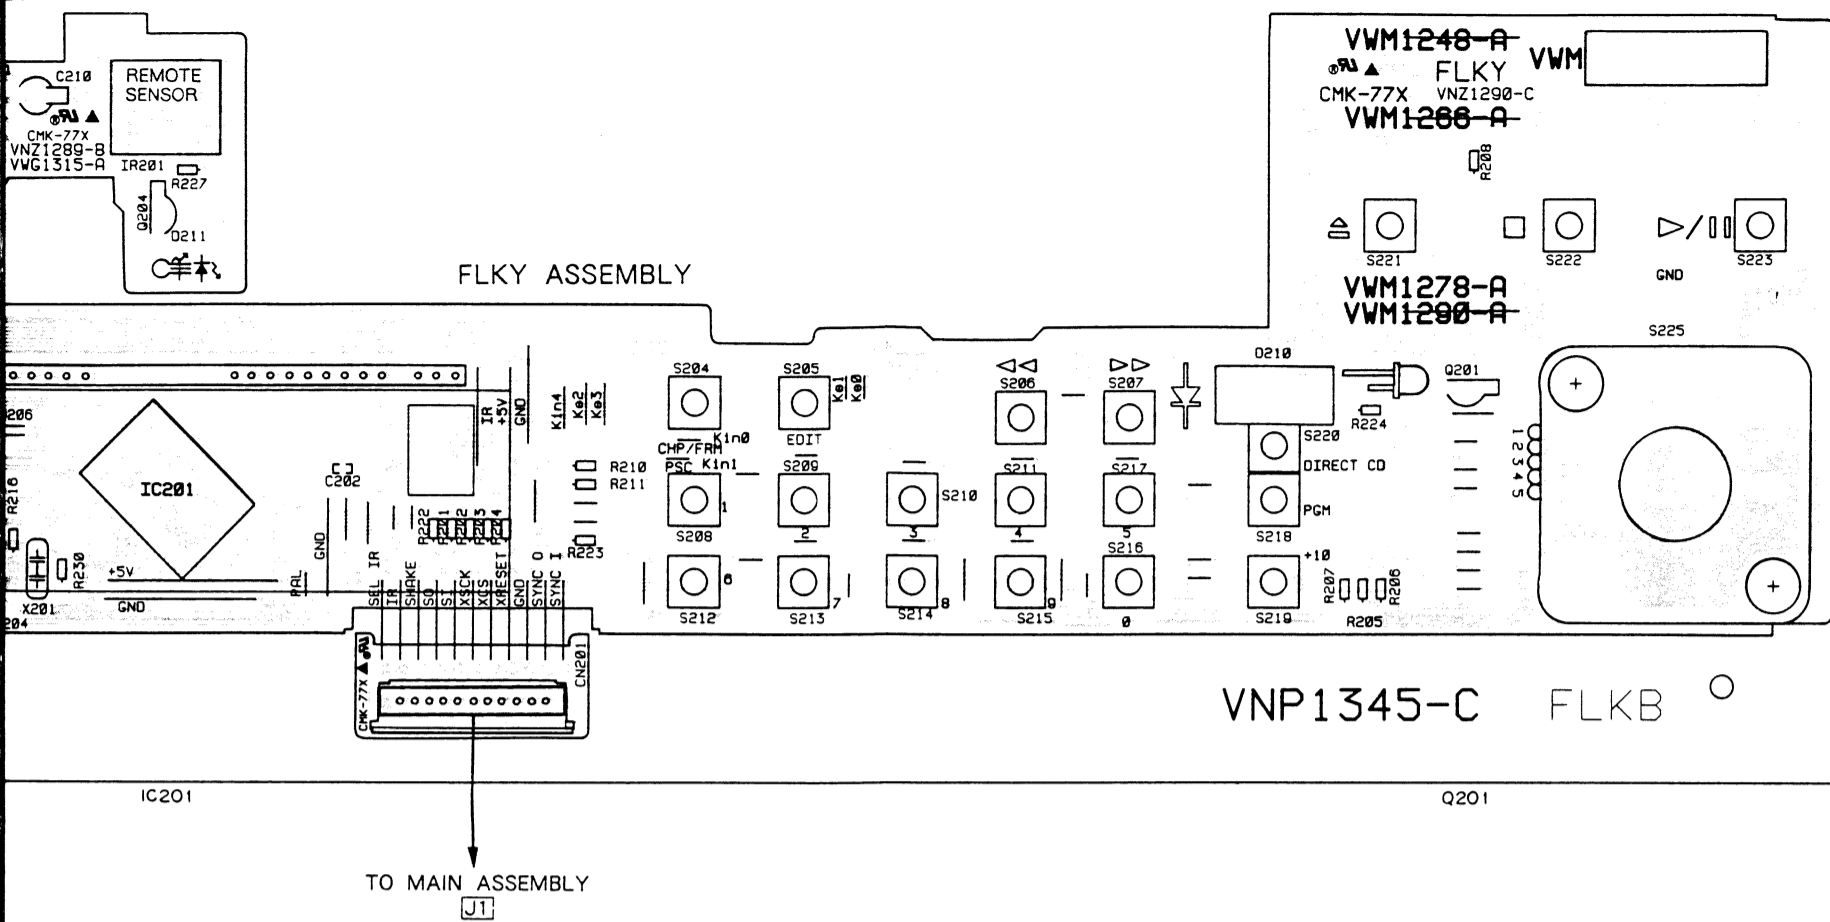



Line voltage selection

1. Disconnect the AC power cord.
2. Remove the cover.
3. Change the position of the jumper wire Ⓐ as follows.



Voltage	jumper wire Ⓐ position
220V - 230V	①
240V	②

4. Stick the line voltage label on the rear panel.

Part No.	Description
AAX-193	220V label
AAX-192	240V label

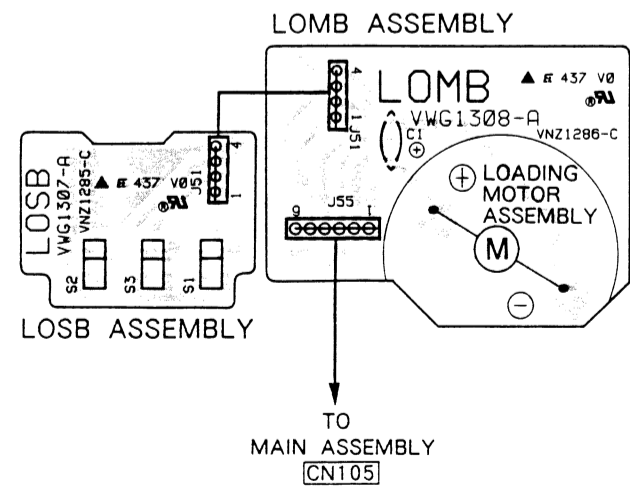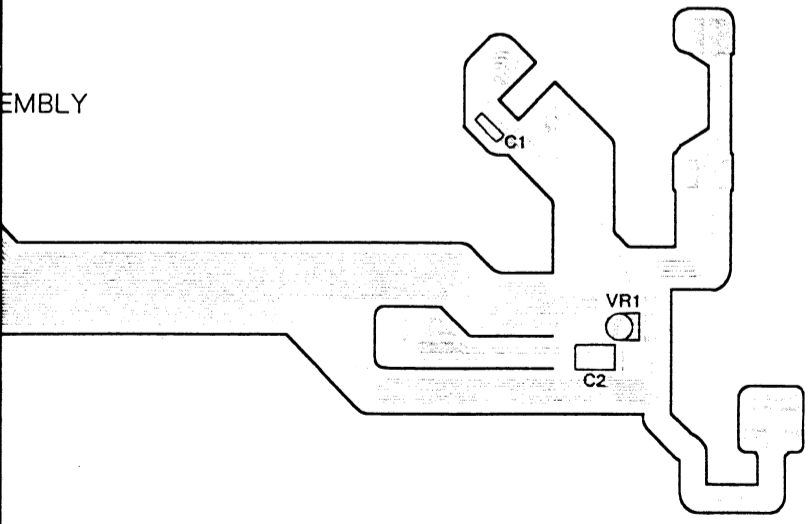

A
B
C
D
E
F

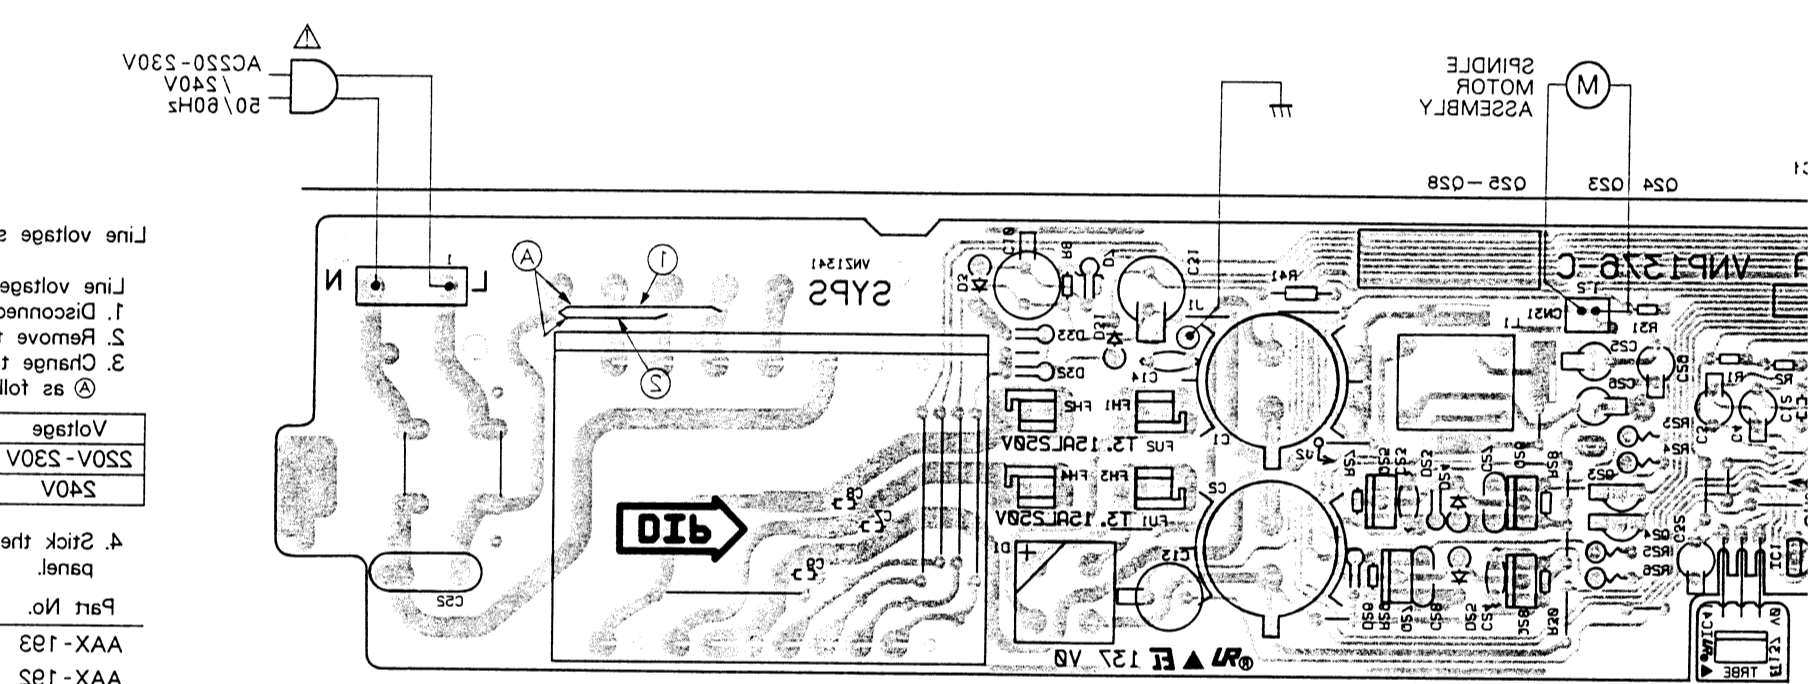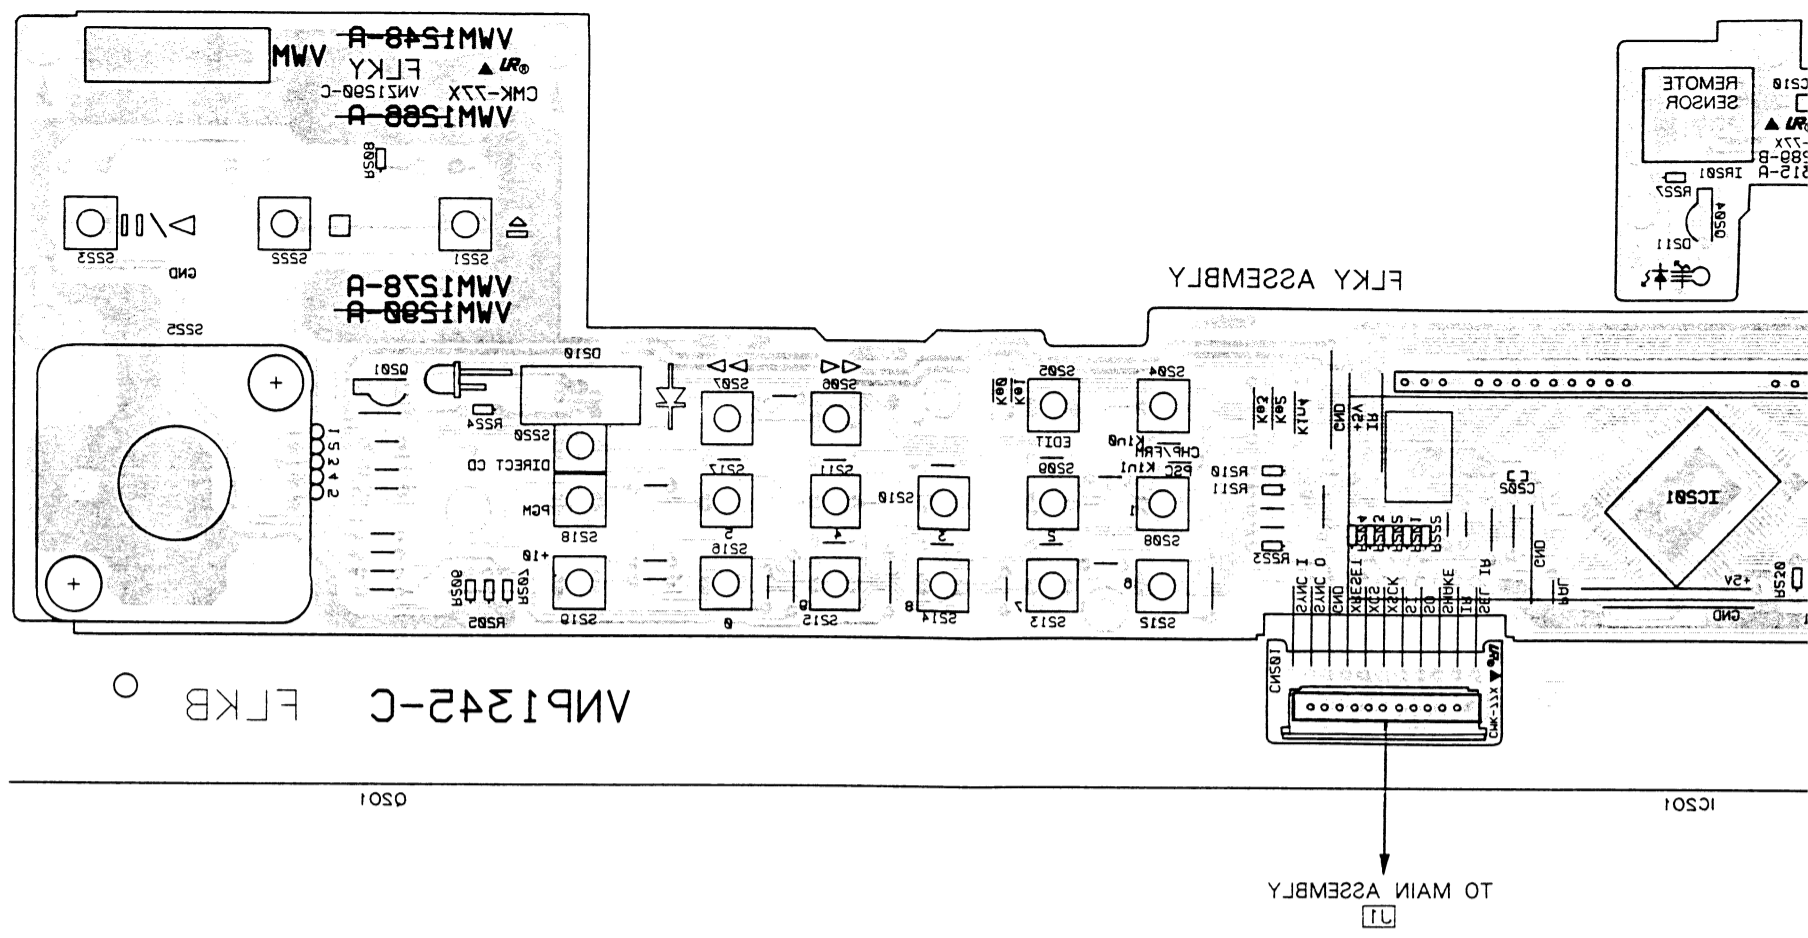

Line voltage selection



Line voltage can be changed as follows:

1. Disconnect the AC power cord.
2. Remove the cover.
3. Change the position of the jumper wire as follows.


Voltage	Jumper wire (A) position
220V-230V	①
240V	②

4. Stick the line voltage label on the rear panel.

Part No.	Description
AAX-193	220V label
AAX-192	240V label

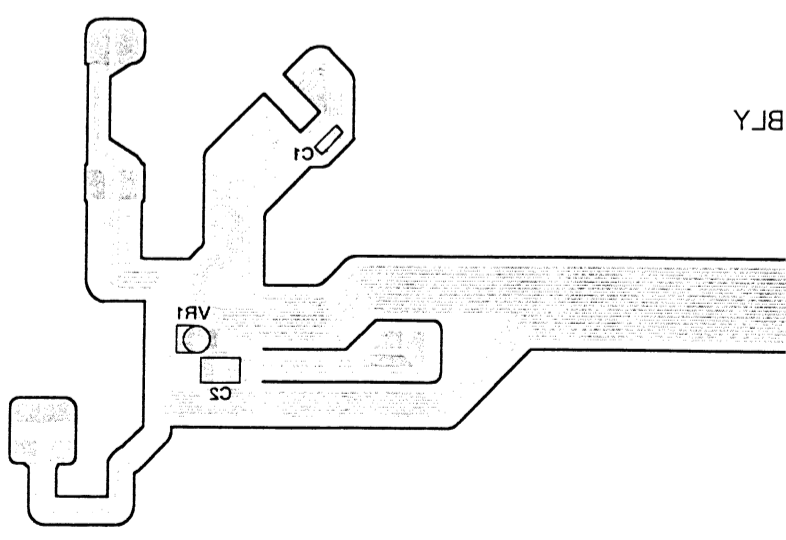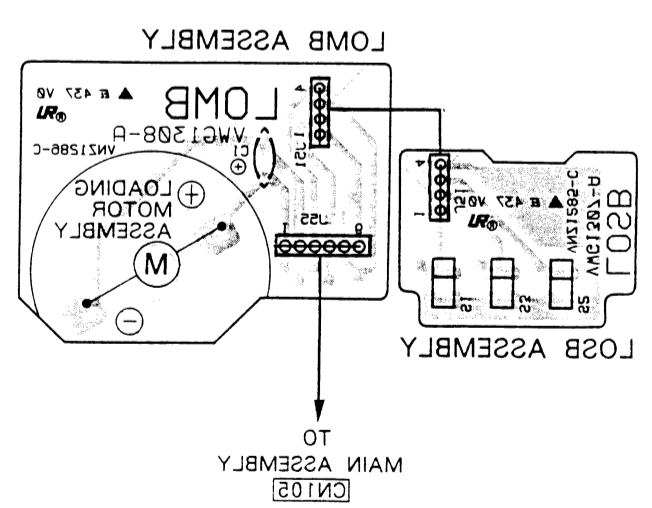


This P.C.B. connection diagram is viewed from the foil side.

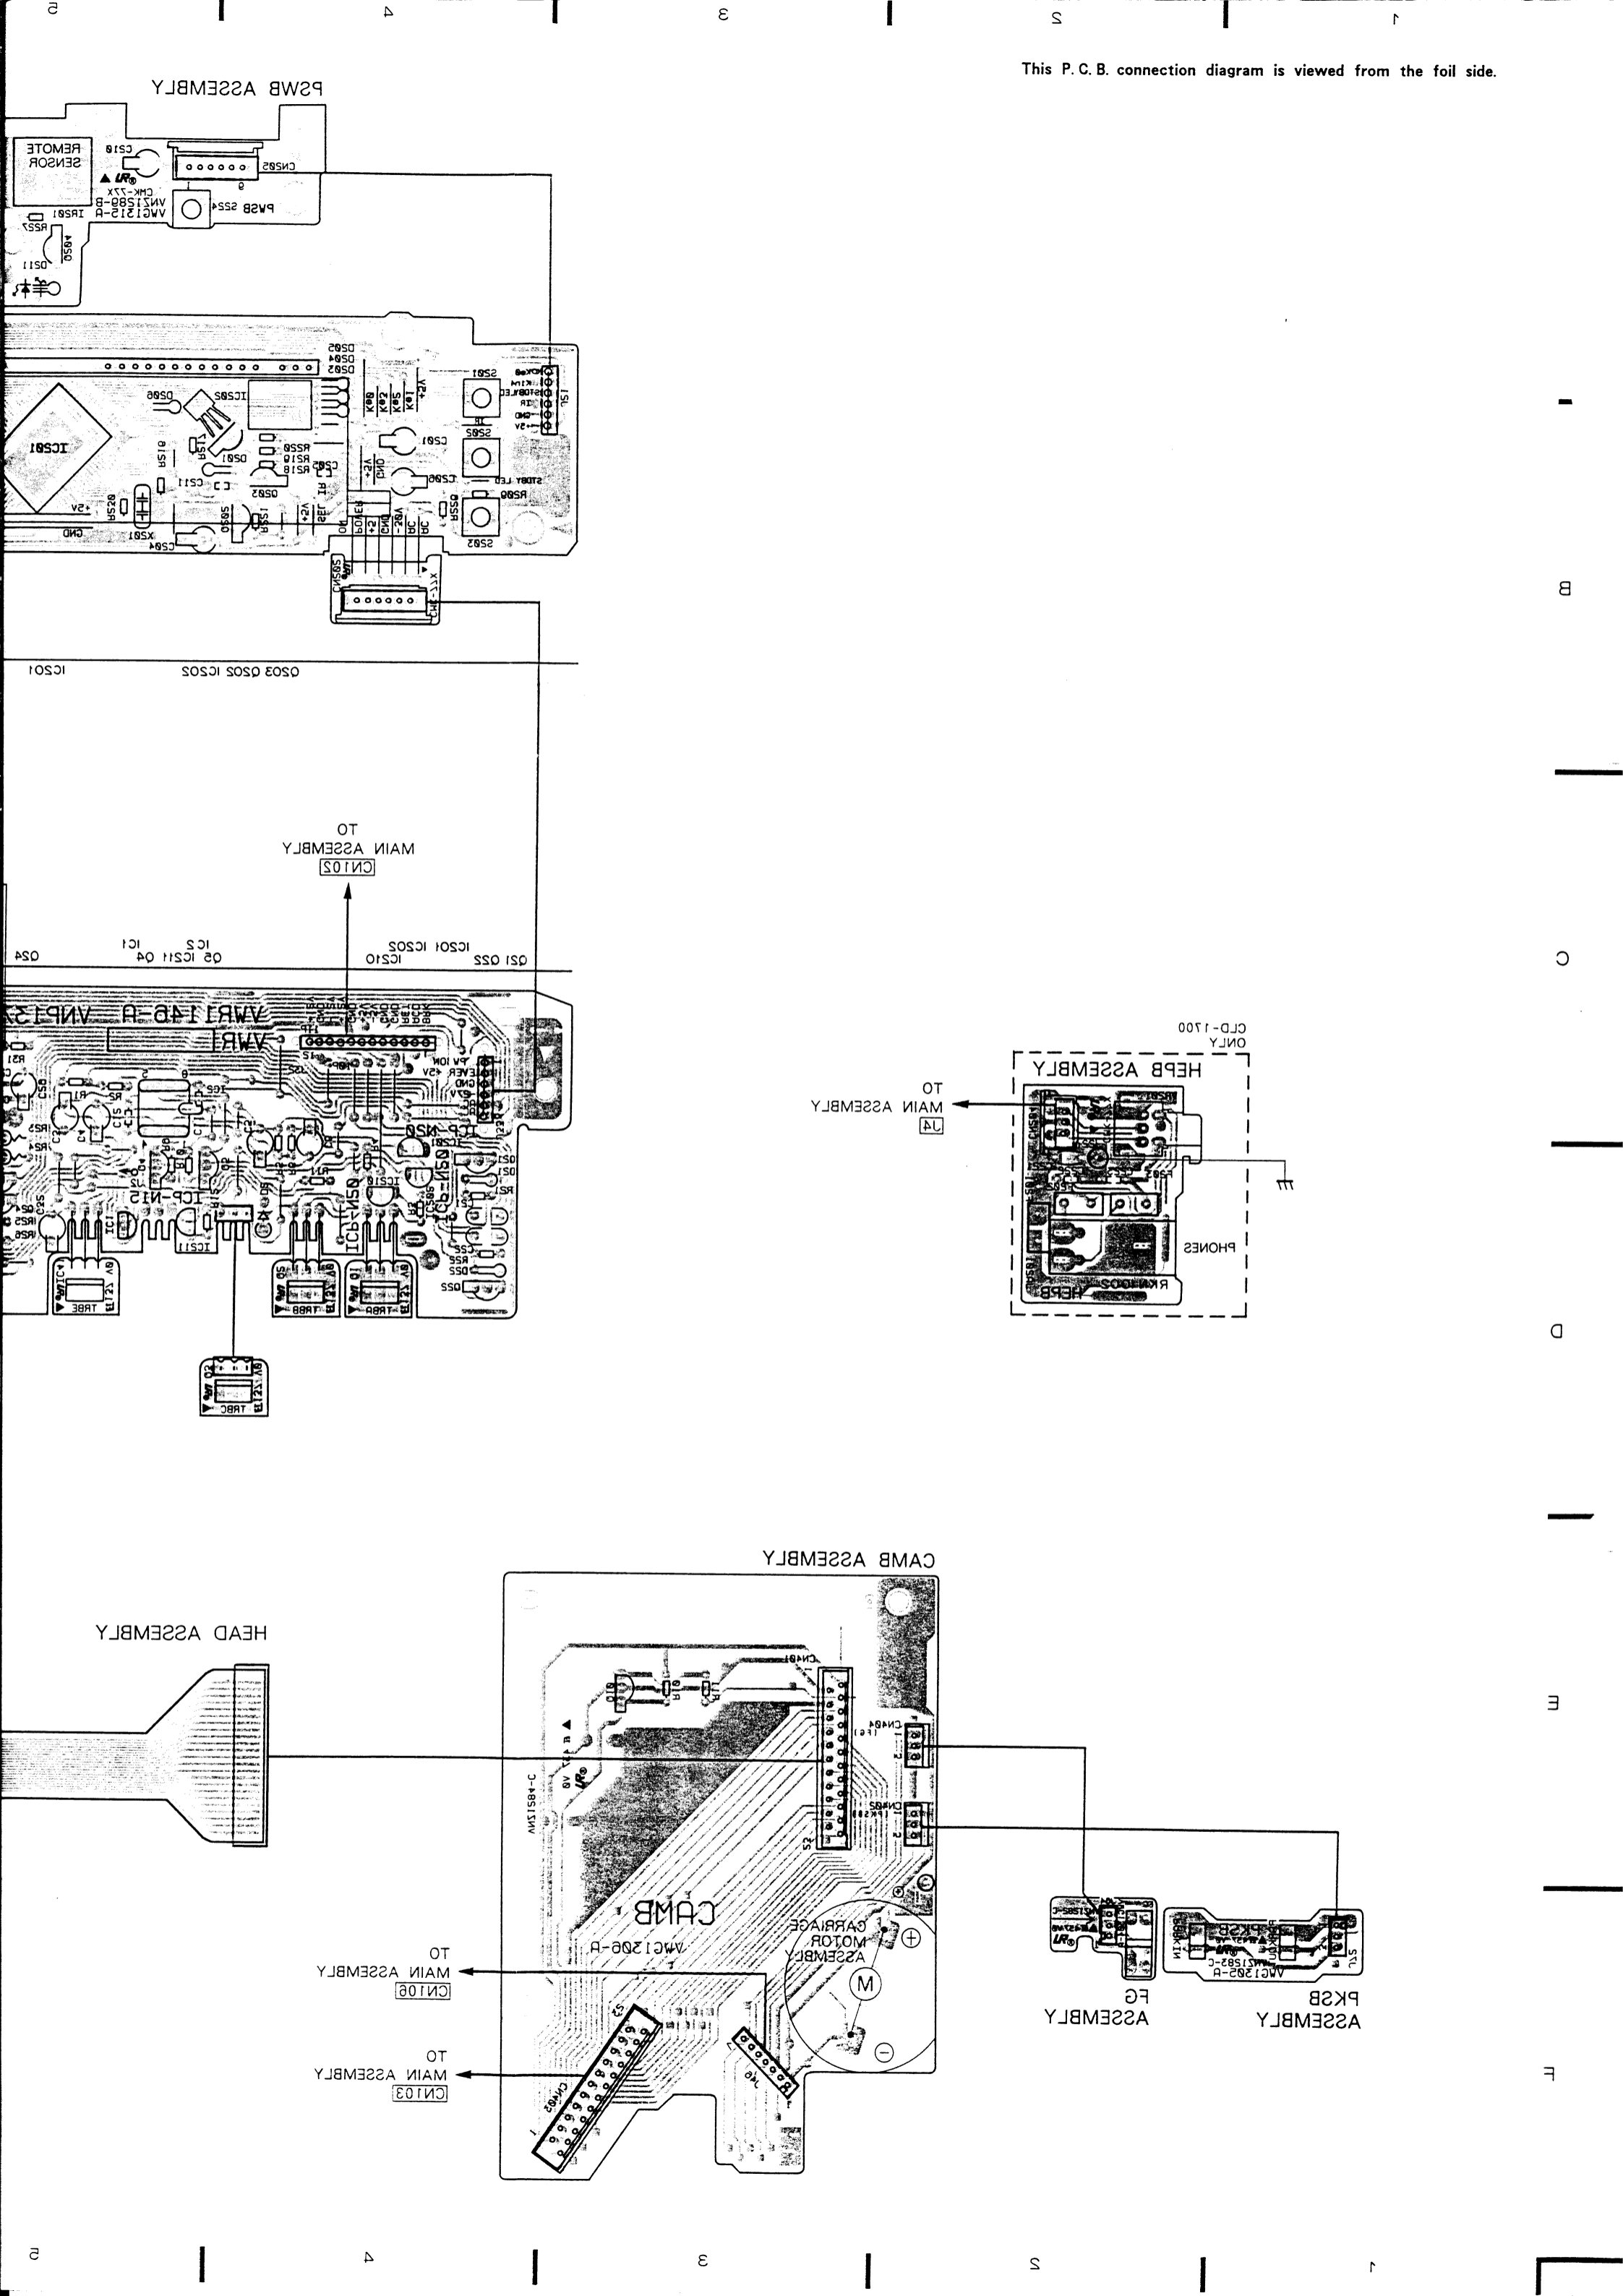

B
C
D
E
F

3.2 MAIN ASSEMBLY (1/2)


MAIN ASSEMBLY
• VIDEO AND TB

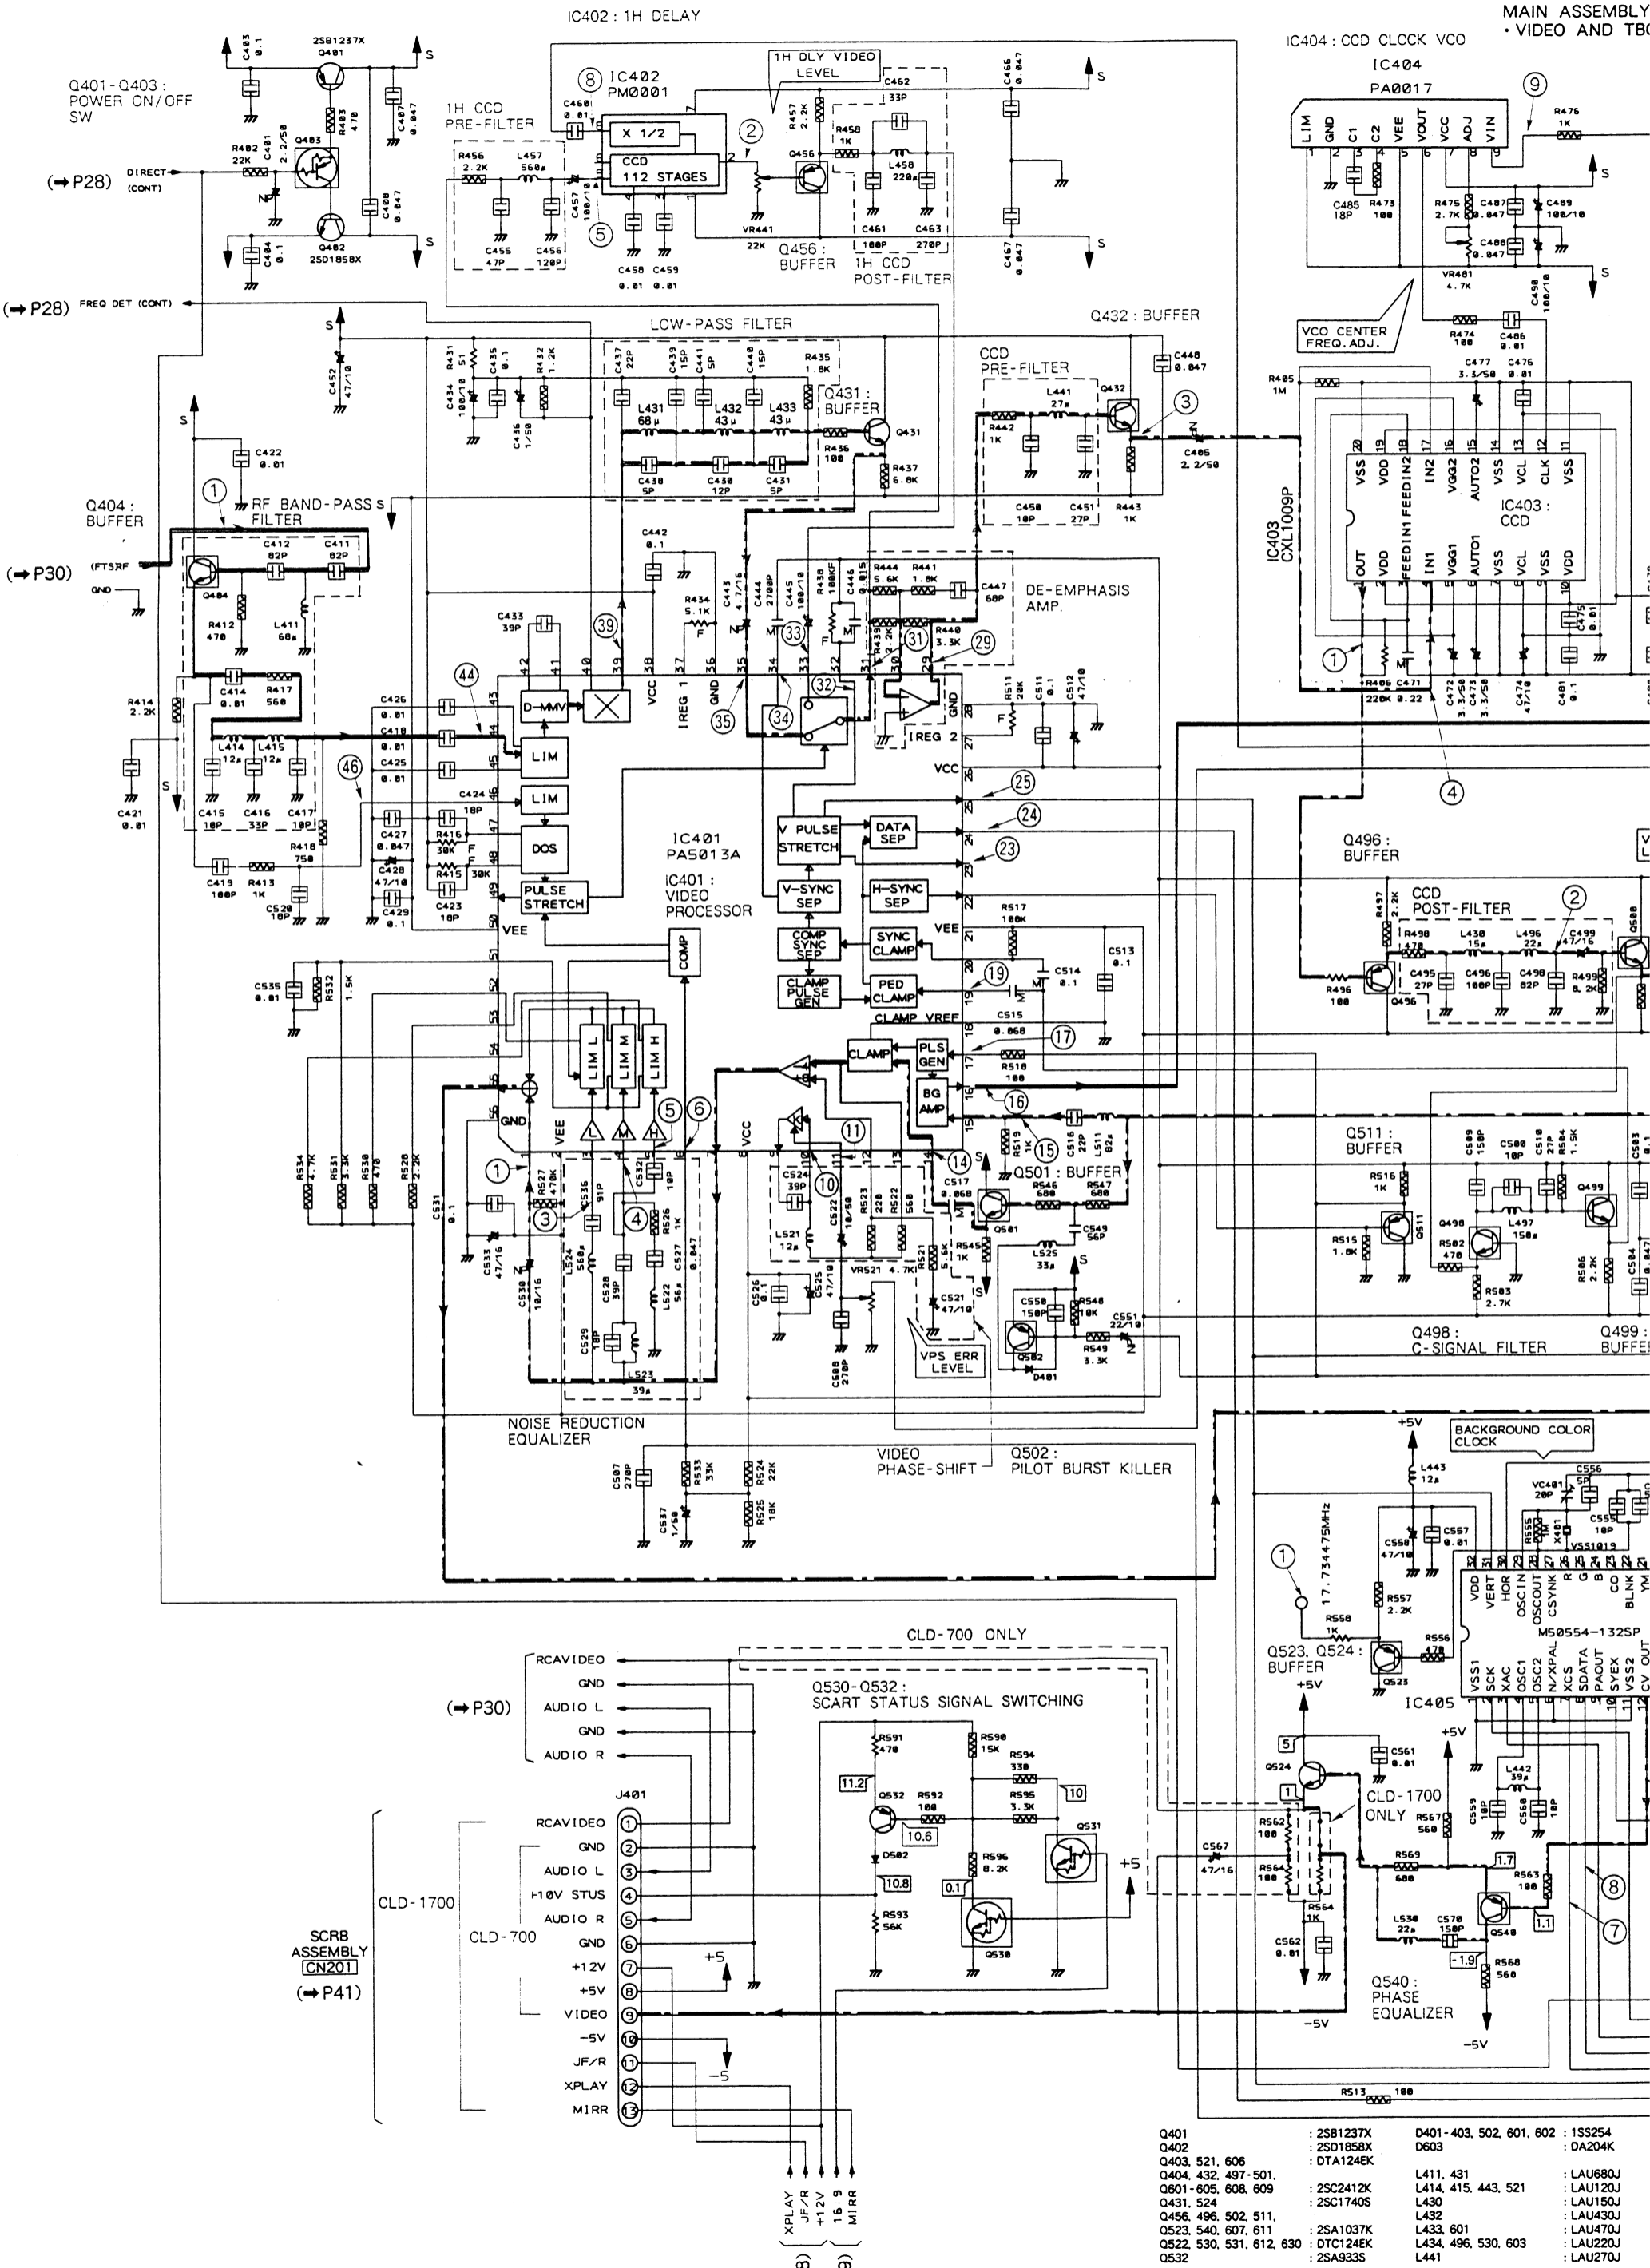

Q401	: 2SB1237X	D401-403, 502, 601, 602	: 1SS254
Q402	: 2SD1858X	D603	: DA204K
Q403, 521, 606	: DTA124EK		
Q404, 432, 497-501,		L411, 431	: LAU680J
Q601-605, 608, 609	: 2SC2412X	L414, 415, 443, 521	: LAU120J
Q431, 524	: 2SC1740S	L430	: LAU150J
Q456, 496, 502, 511,		L432	: LAU430J
Q523, 540, 607, 611	: 2SA1037K	L433, 601	: LAU470J
Q522, 530, 531, 612, 630	: DTC124EK	L434, 496, 530, 603	: LAU220J
Q532	: 2SA933S	L441	: LAU270J

B
C
D
E
F

MAIN ASSEMBLY (1/2)
• VIDEO AND TBC SECTION

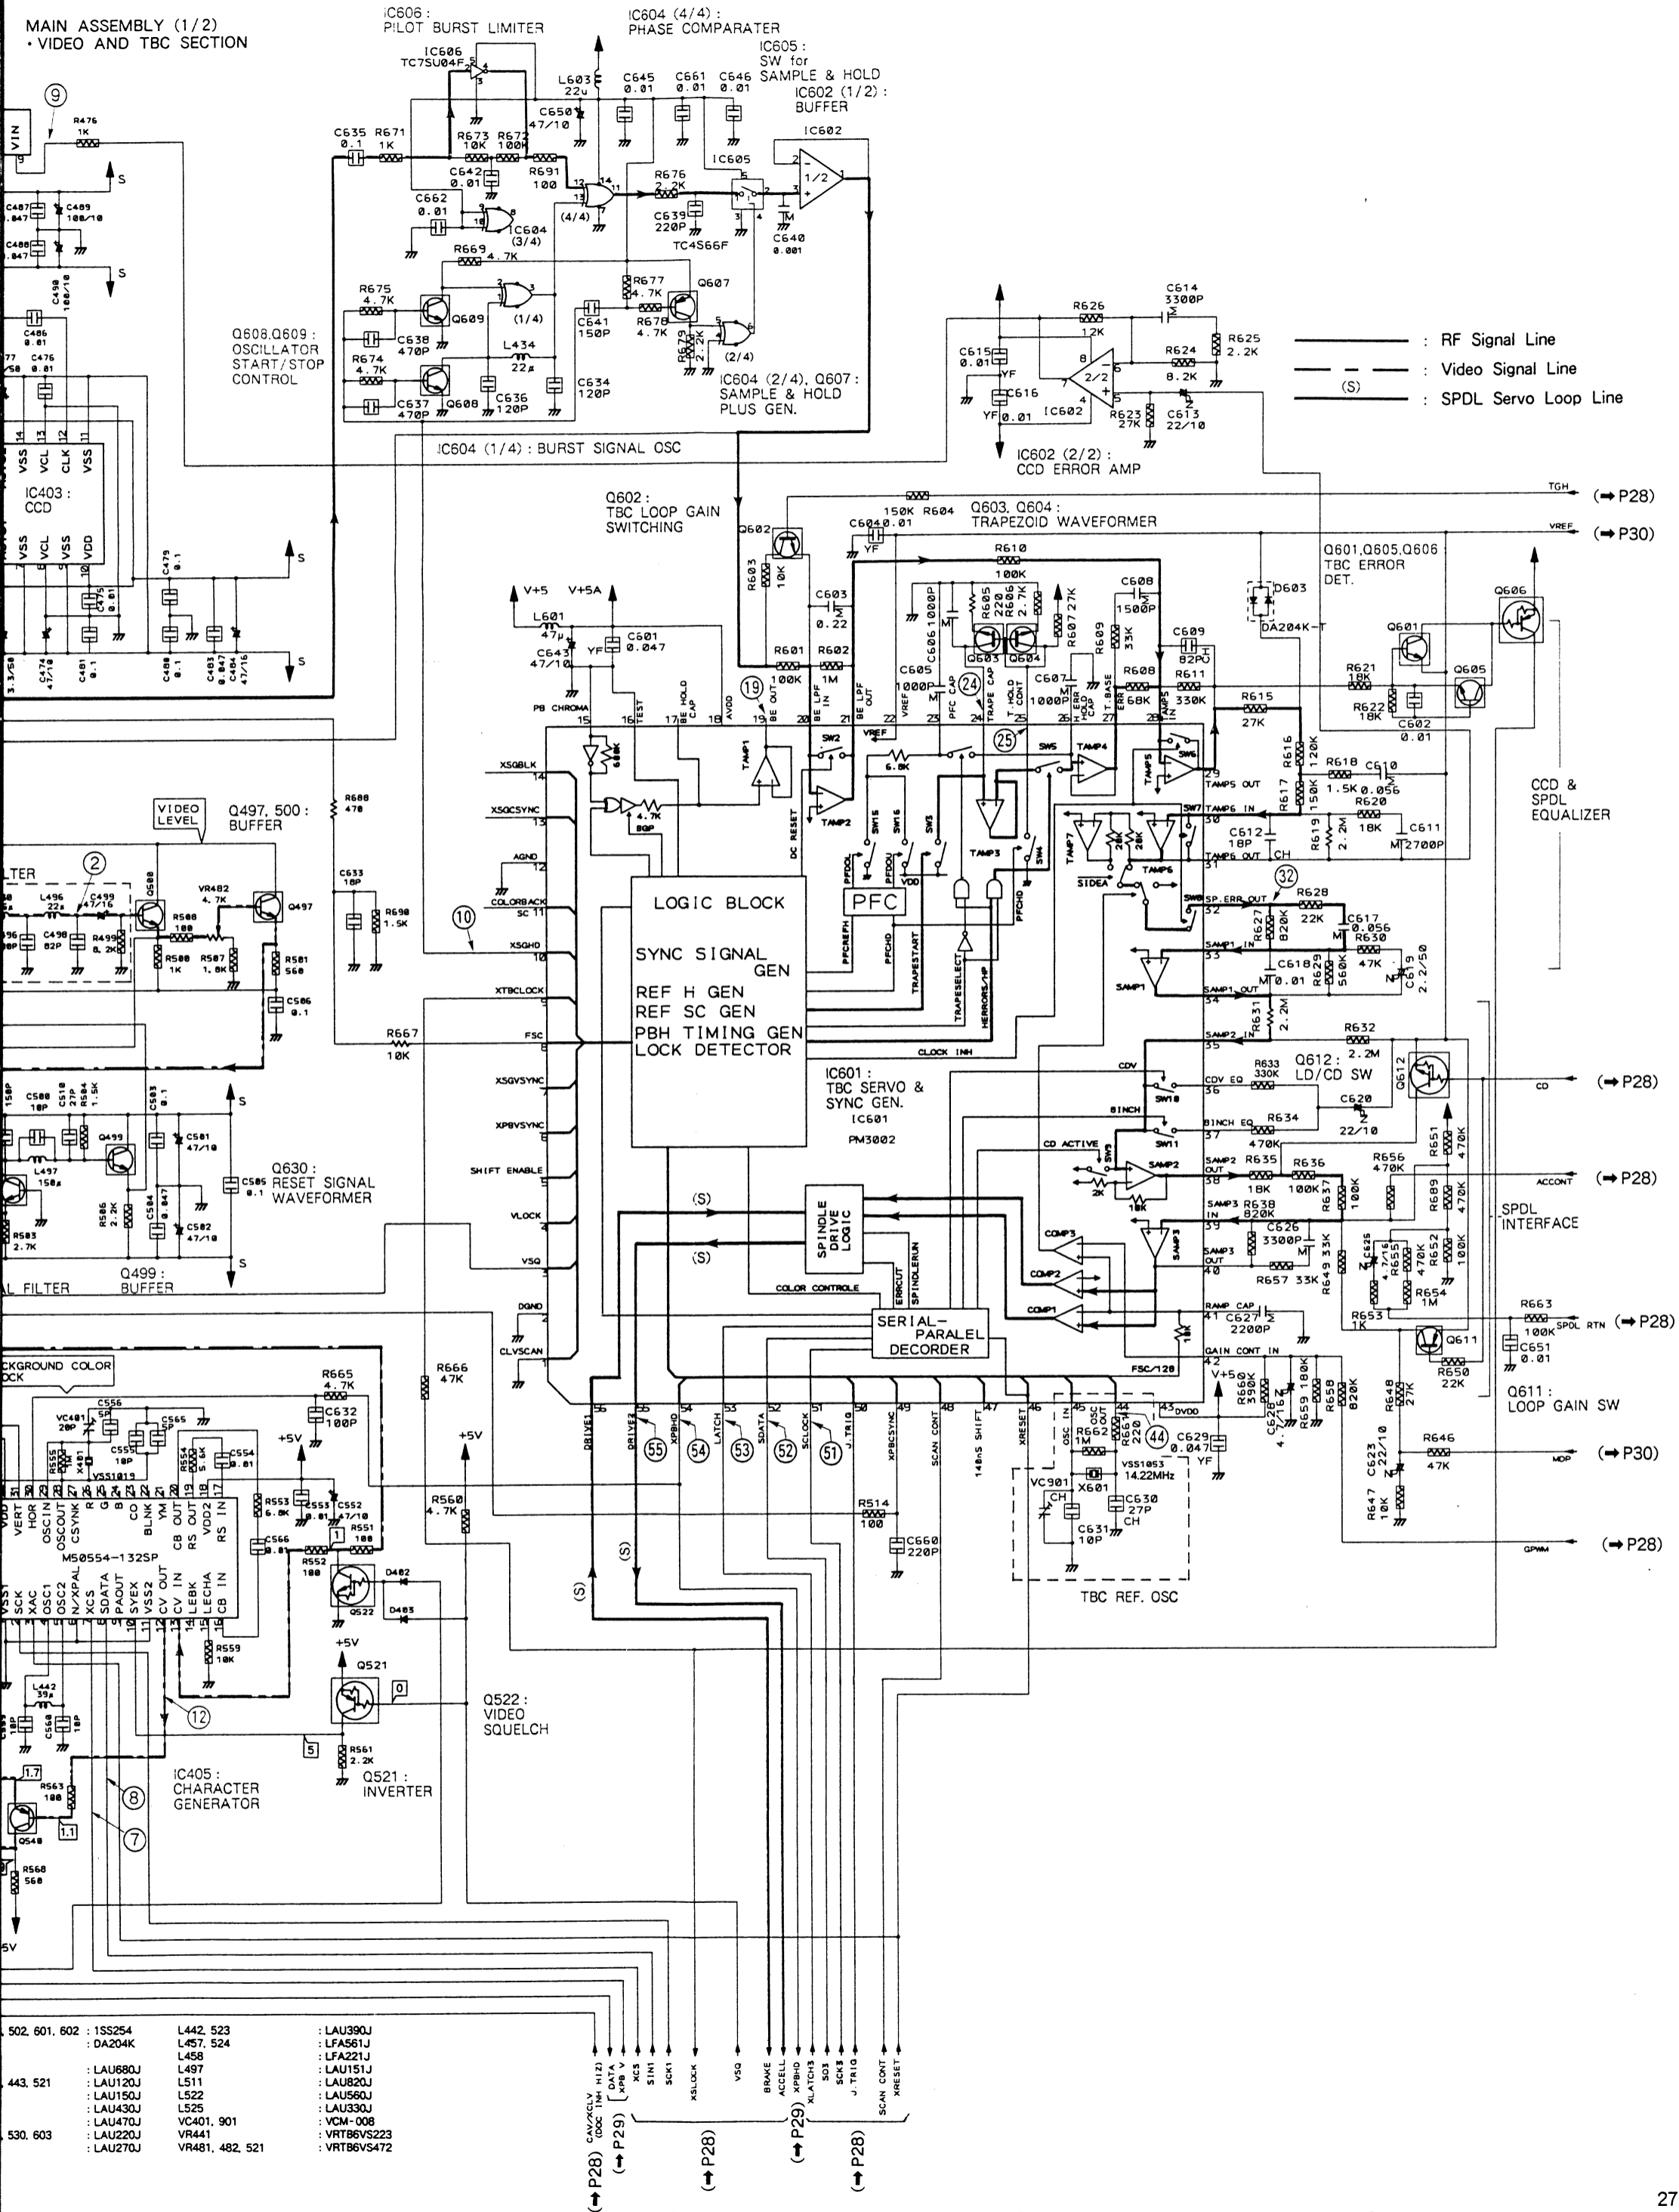

- 502, 601, 602 : 1S254
- : DA204K
- 443, 521 : LAU680J
- : LAU120J
- : LAU150J
- : LAU430J
- : LAU470J
- 530, 603 : LAU220J
- : LAU270J
- : LA442, 523
- : LA457, 524
- : LA458
- : LA497
- : L511
- : L522
- : LAU560J
- : LAU330J
- : VCM-008
- : VRT86VS223
- : VRT86VS472
- : LAU390J
- : LFA561J
- : LFA221J
- : LAU151J
- : LAU820J
- : LAU560J
- : VCM-008
- : VRT86VS223
- : VRT86VS472


- (P28) CAN/CVLY (LOC TH) HI Z
- (P29) DATA
- (P29) XPB V
- XCS
- SIN1
- SOA1
- XSLOCK
- VSQ
- BRAKE
- ACCCELL
- XPBID
- XLATCHS
- SO3
- SCK3
- J-TRIG
- SCAN CONT
- XRESET

3.3 MAIN ASSEMBLY (2/2) AND AUDIO ASSEMBLY


MAIN ASSEMBLY (2/2)
• FTS SECTION

AUDIO ASSEMBLY

CLD-1700 ONLY

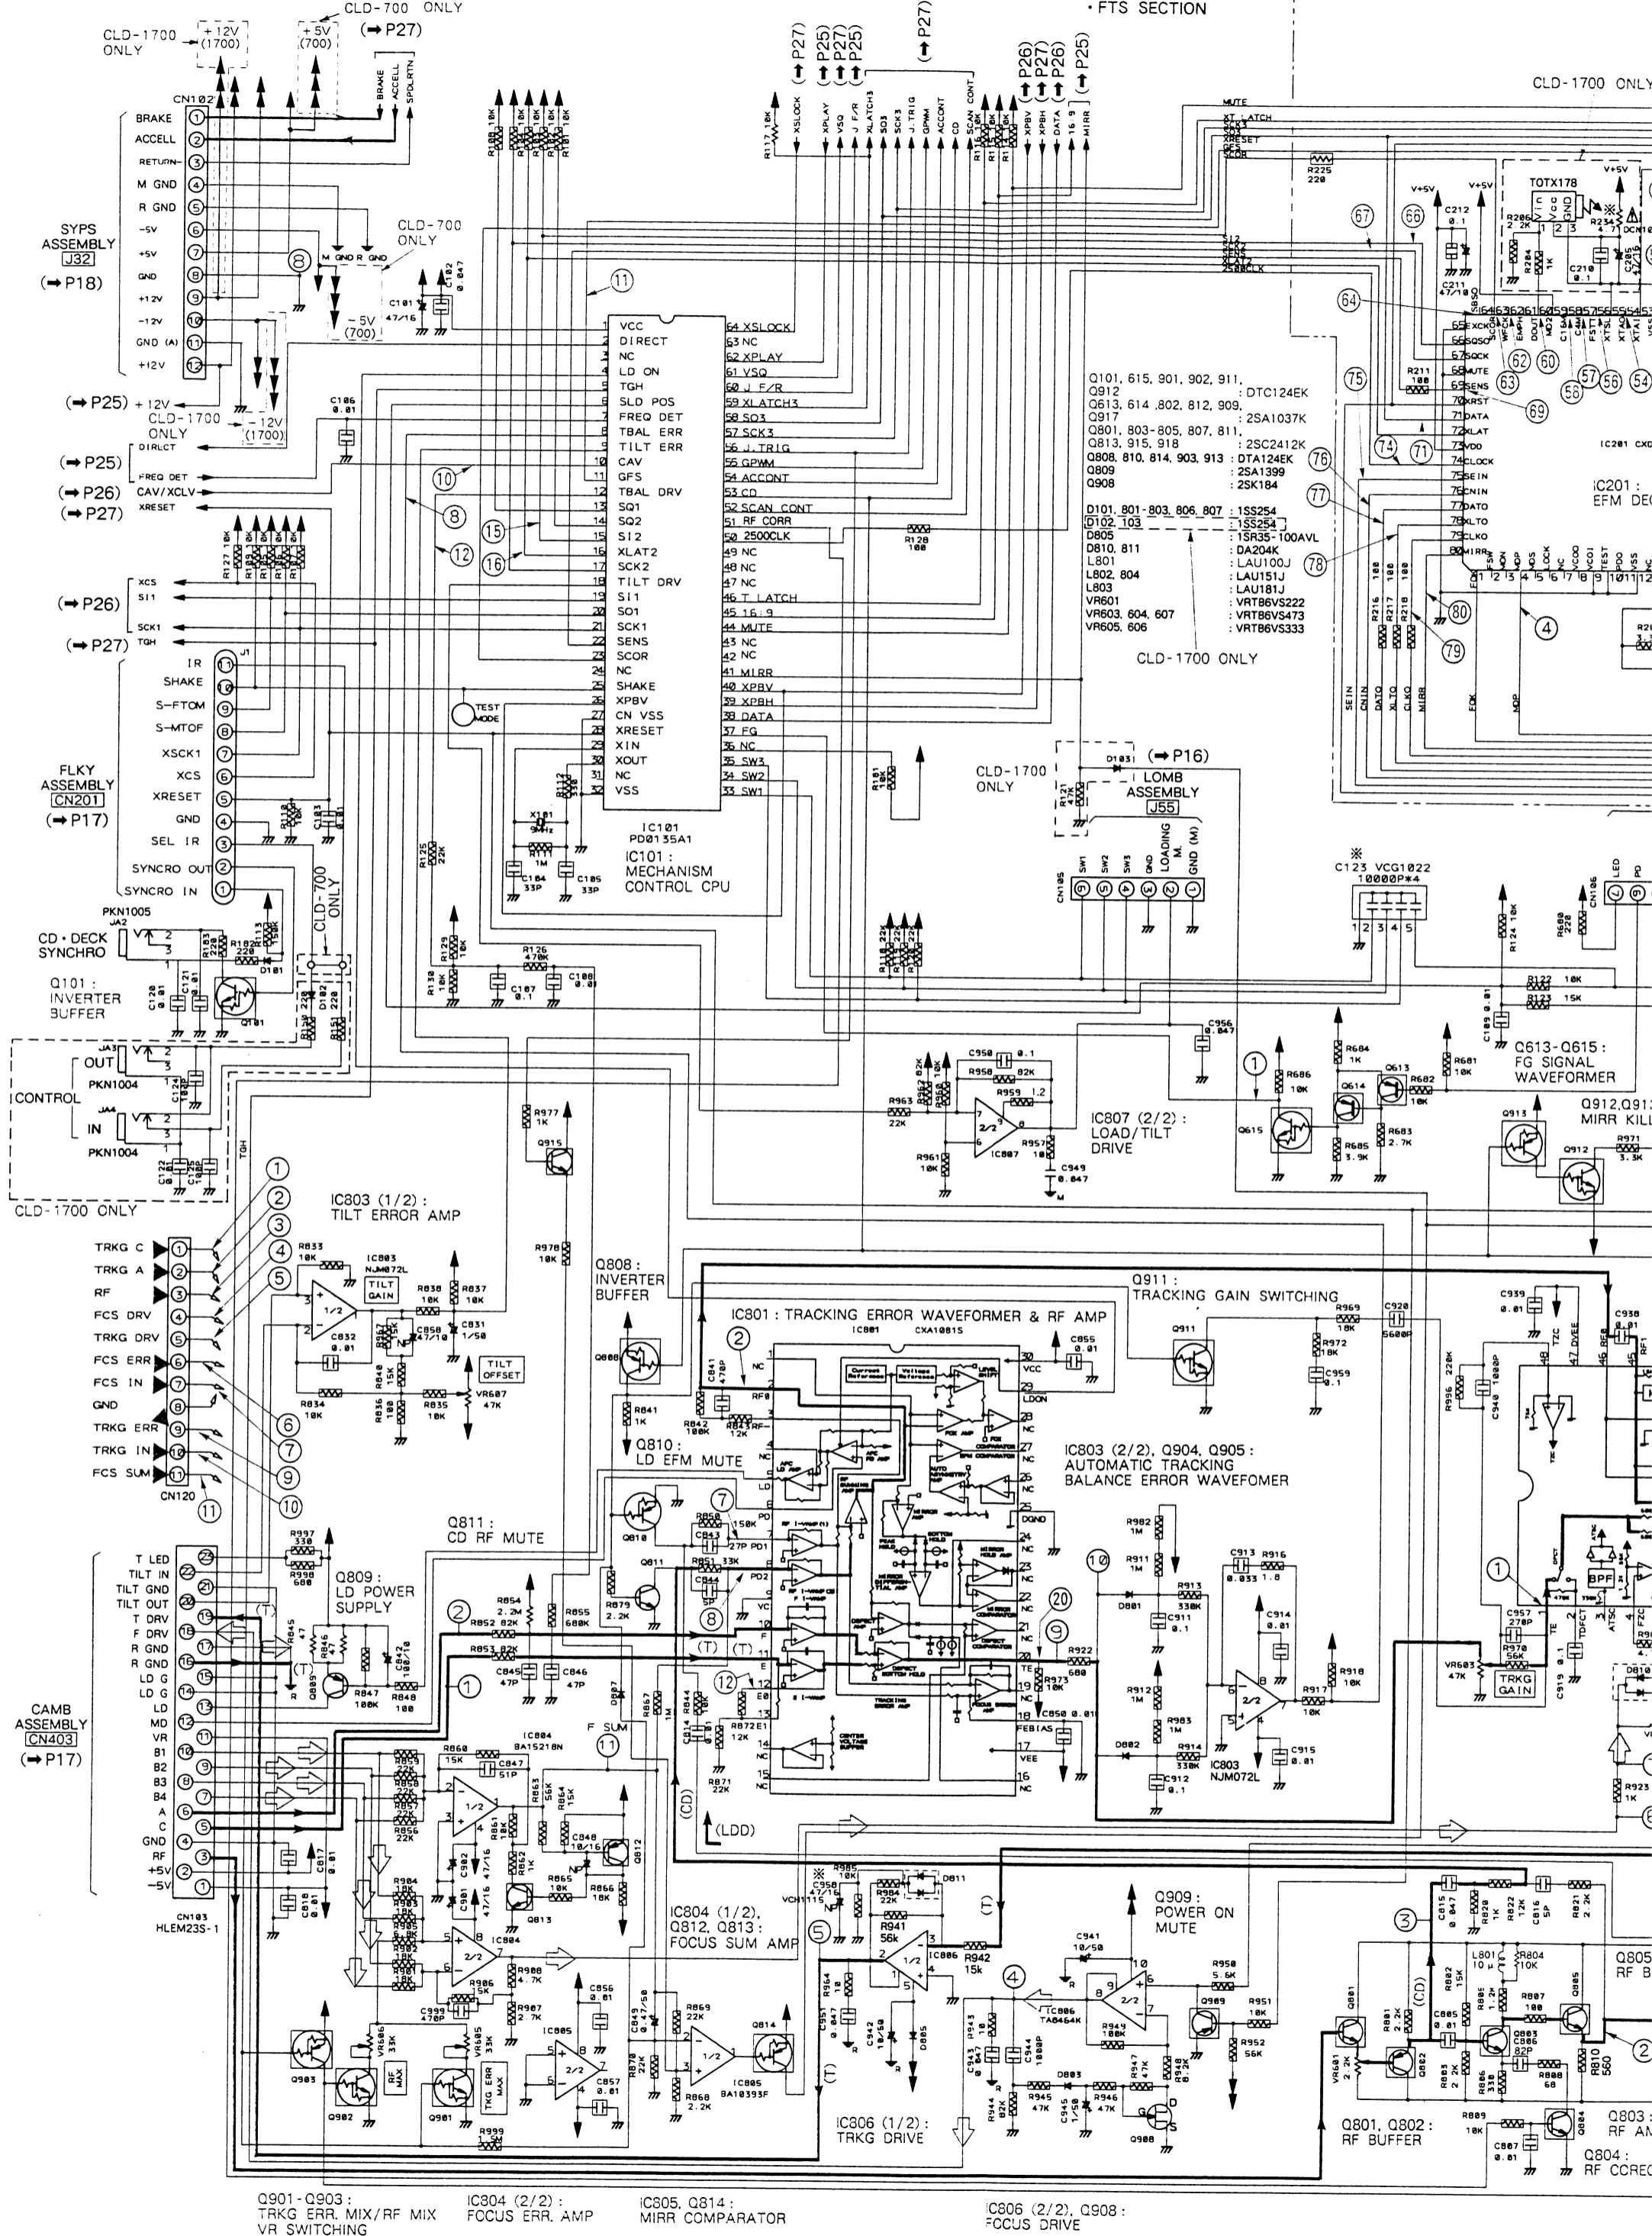

Q901-Q903 : TRKG ERR. MIX/RF MIX VR SWITCHING
 IC804 (2/2) : FOCUS ERR. AMP
 IC805, Q814 : MIRR COMPARATOR
 IC806 (2/2), Q908 : FOCUS DRIVE

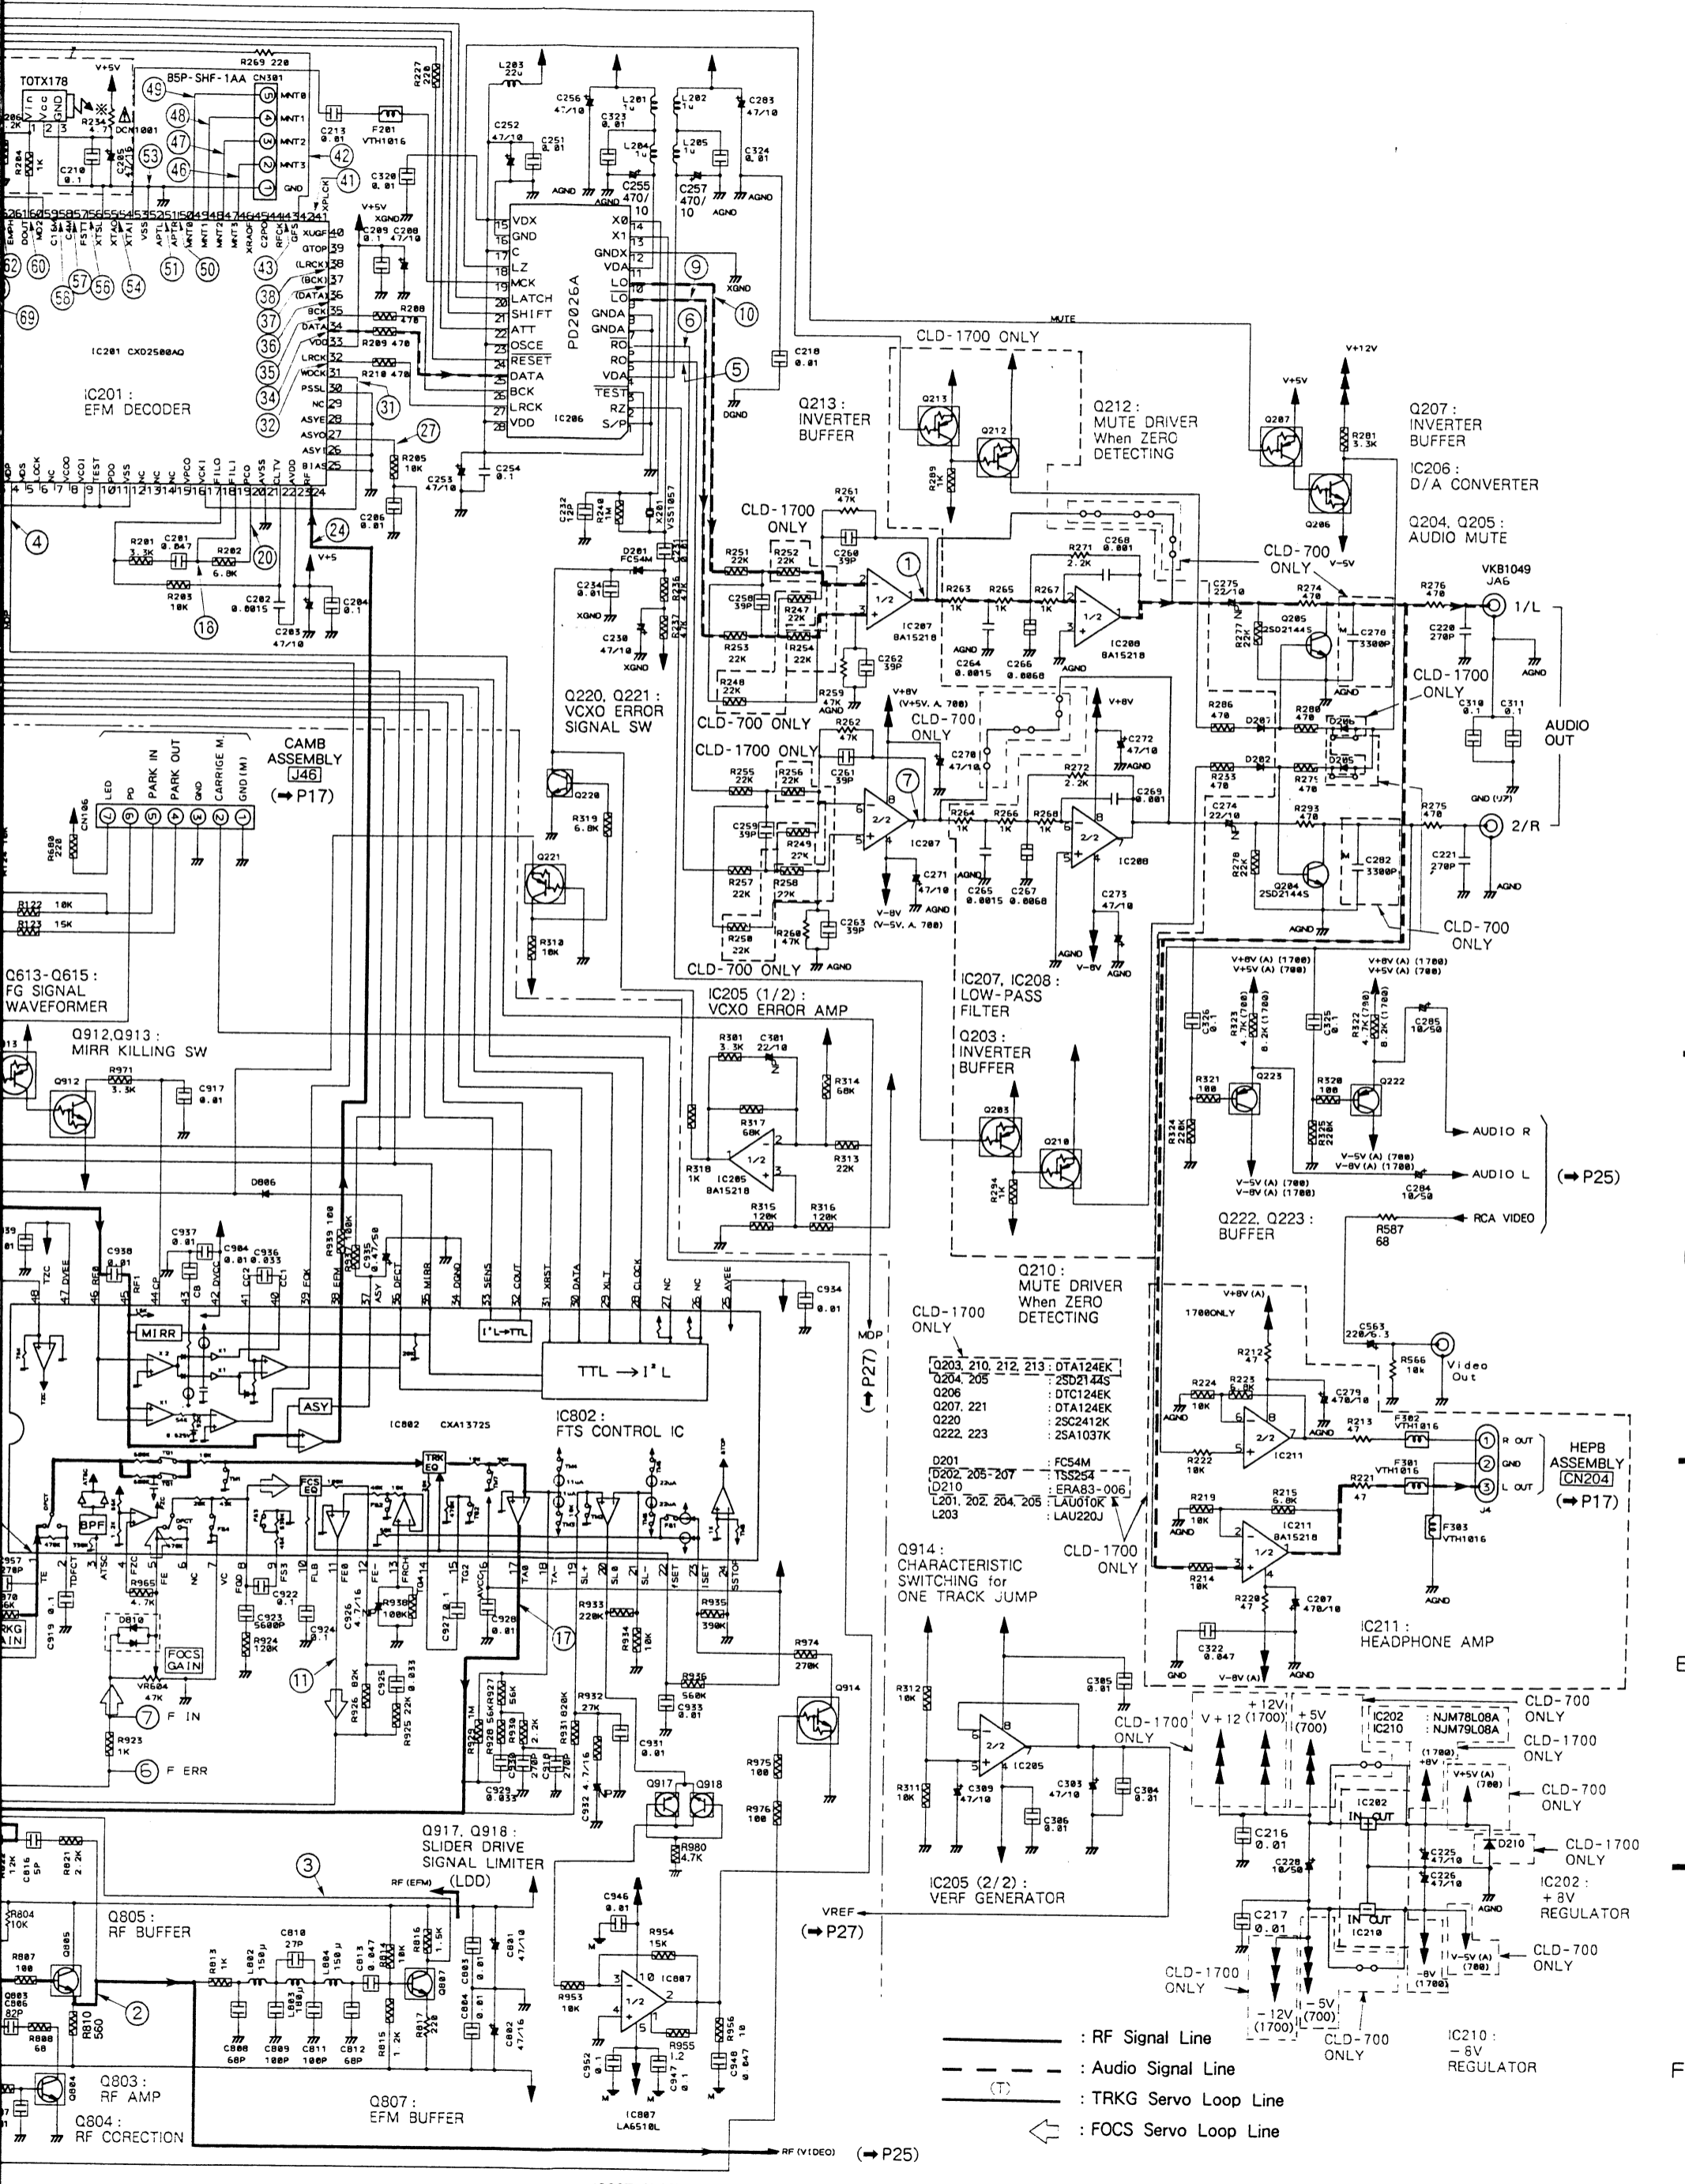

- Q203, 210, 212, 213 : 0TA124EK
- Q204, 205 : 2SD2144S
- Q206 : DTC124EK
- Q207, 221 : 0TA124EK
- Q220 : 2SC2412K
- Q222, 223 : 2SA1037K

- D201 : FC54M
- D202, 205-207 : TSS254
- L210 : ERA83-006
- L201, 202, 204, 205 : LAU010K
- L203 : LAU220J


- IC205 (2/2) : VERF GENERATOR
- IC210 : -8V REGULATOR
- IC202 : +8V REGULATOR

- : RF Signal Line
- - - : Audio Signal Line
- · - : TRKG Servo Loop Line
- △ - : FOCUS Servo Loop Line

B
C
D
E
F

**WAVEFORMS AND VOLTAGES
VIDEO AND TBC SECTION**

Note: (No.) in the table correspond to the pin number.

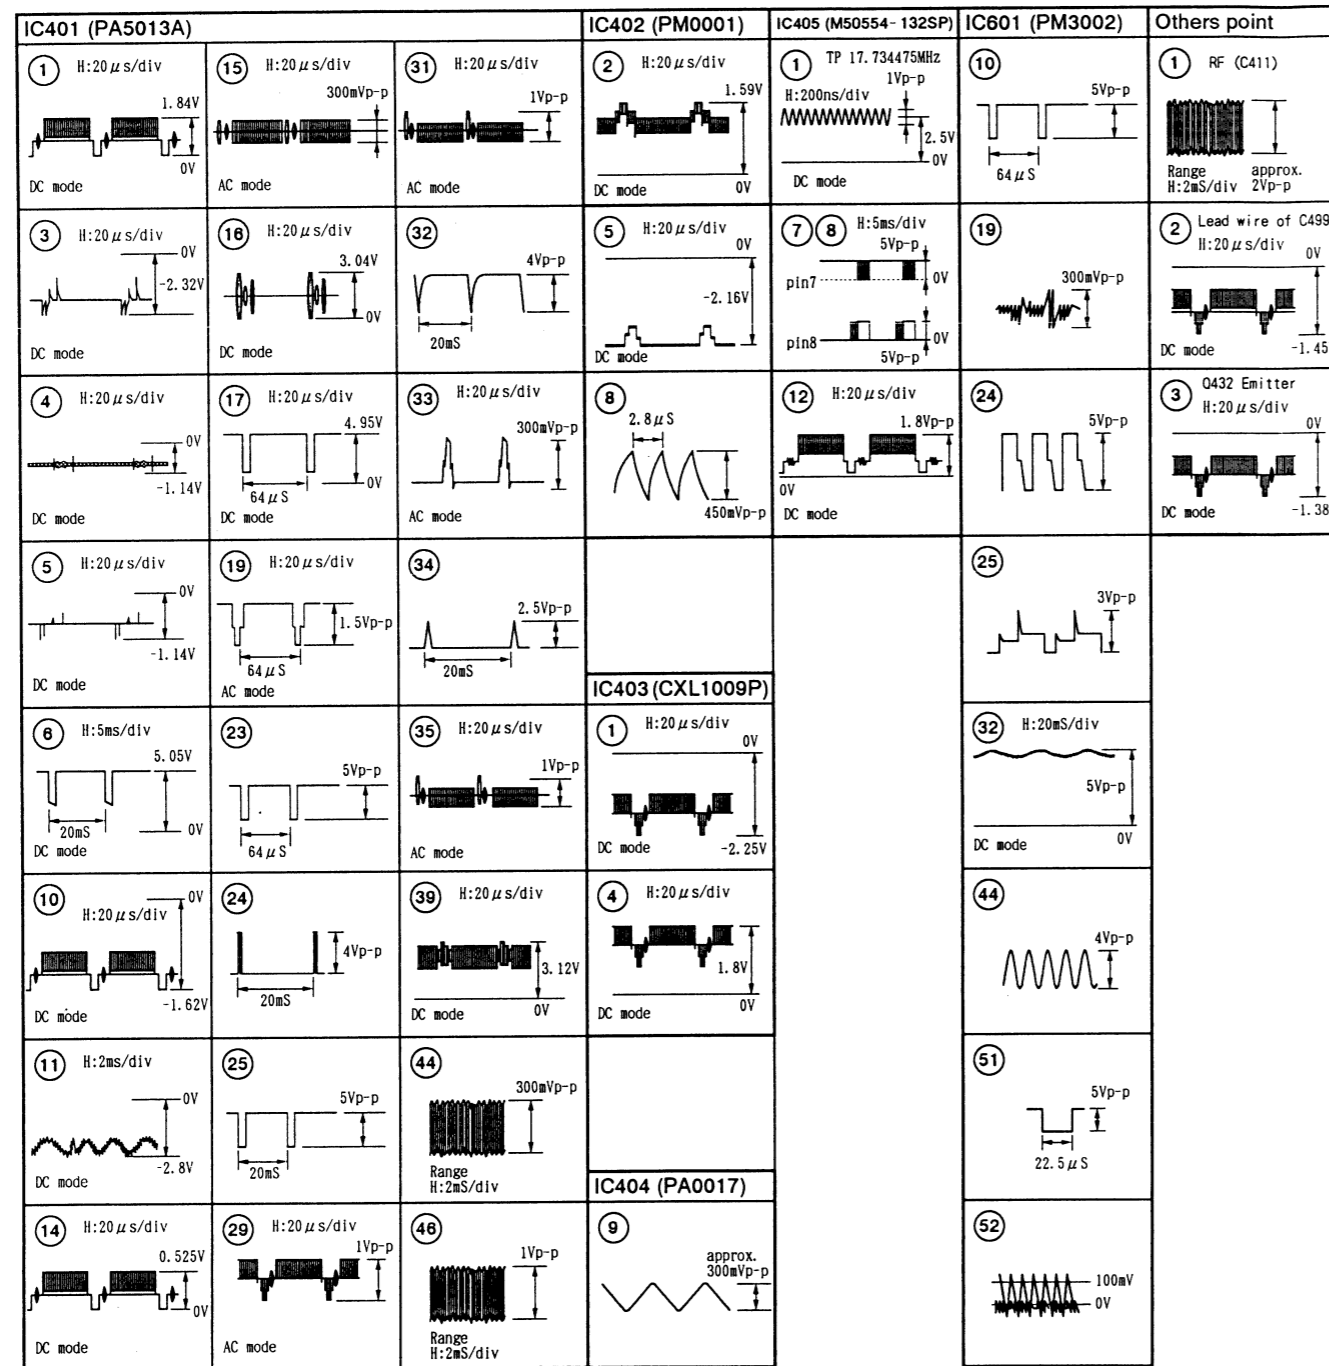


Note : Waveforms and voltages are at the PLAY mode.

IC405 (M50554 - 132SP)


Pin No.	Voltage	Pin No.	Voltage	Pin No.	Voltage	Pin No.	Voltage
1	0	9	-	17	0.8	25	-
2	5	10	5	18	-	26	-
3	5	11	0	19	0	27	-
4	2.4	12	1.1	20	0	28	2.3
5	2.4	13	1.1	21	-	29	2.3
6	0	14	-	22	-	30	-
7	5	15	1.8	23	-	31	4.8
8	0.4	16	0.6	24	-	32	-

FTS AND AUDIO SECTION

Note: (No.) in the table correspond to the pin number.

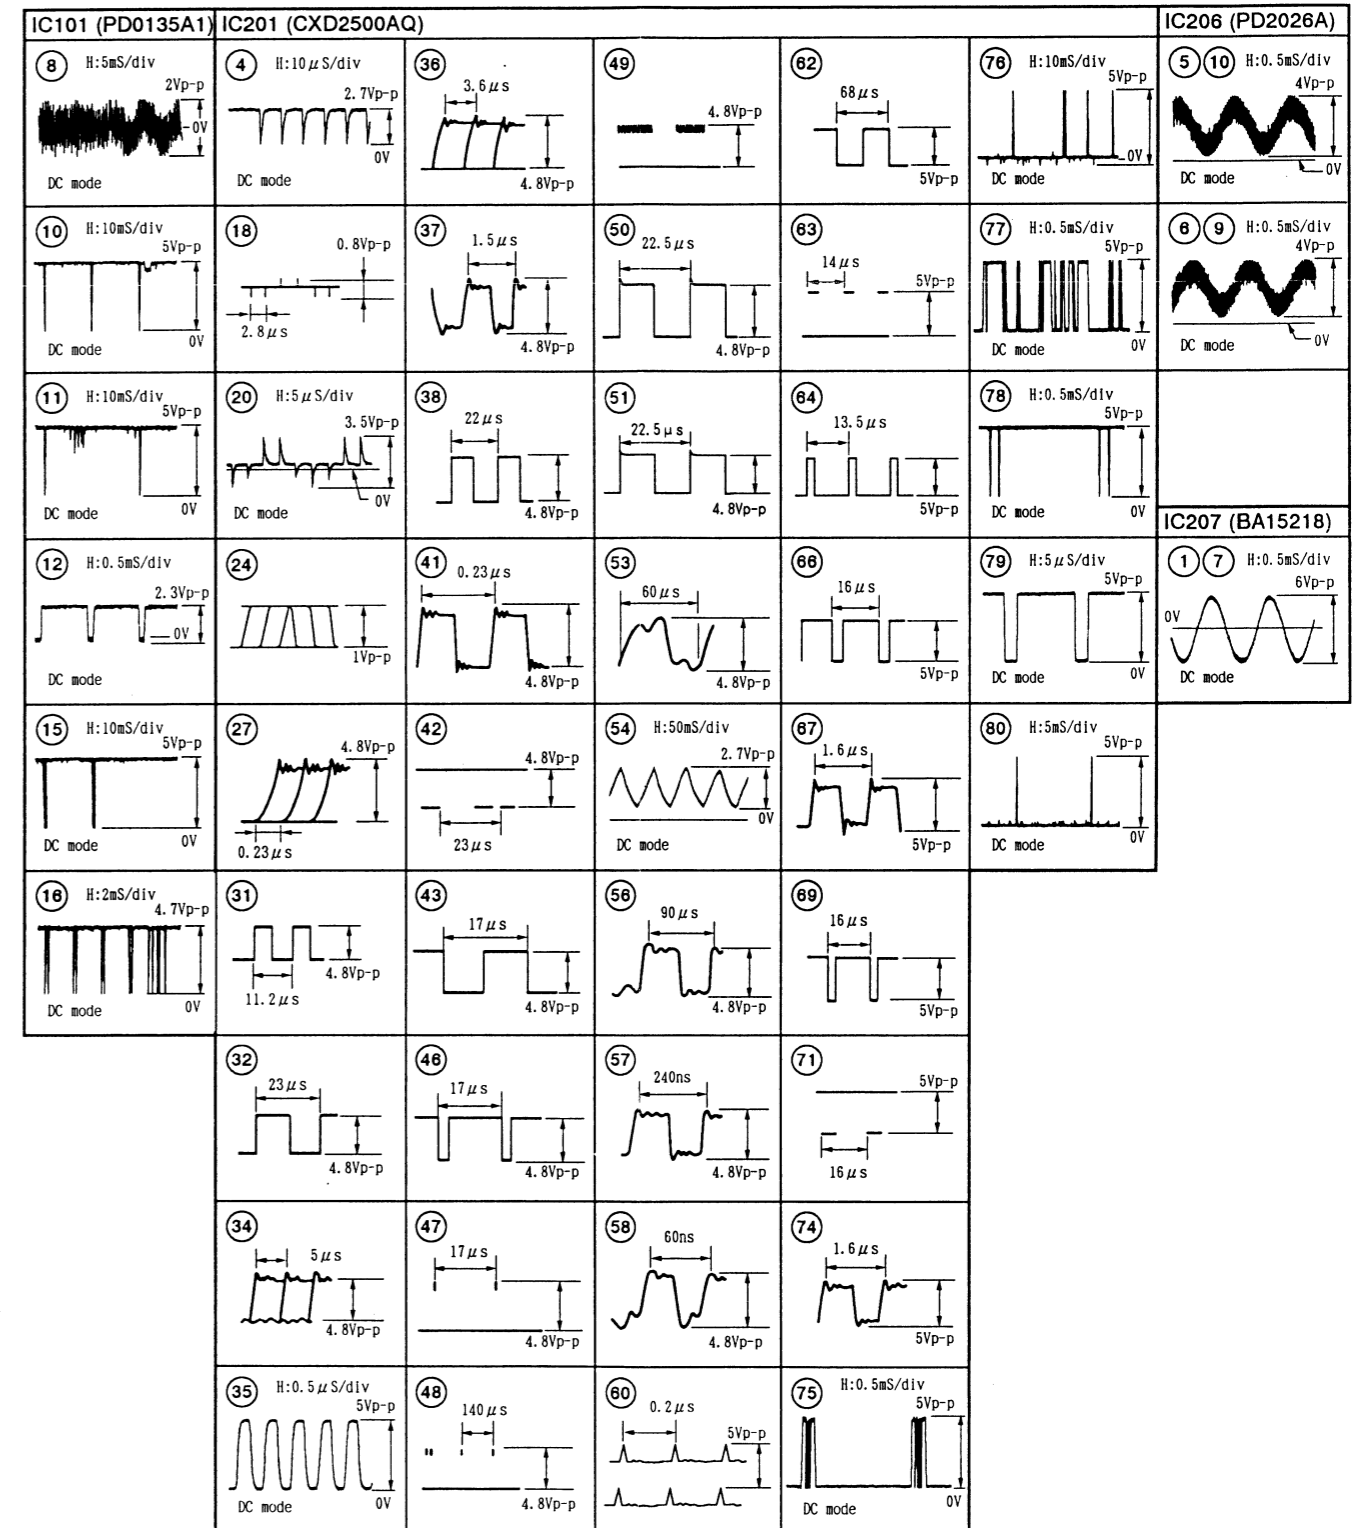

Note: (No.) in the table correspond to the pin number.

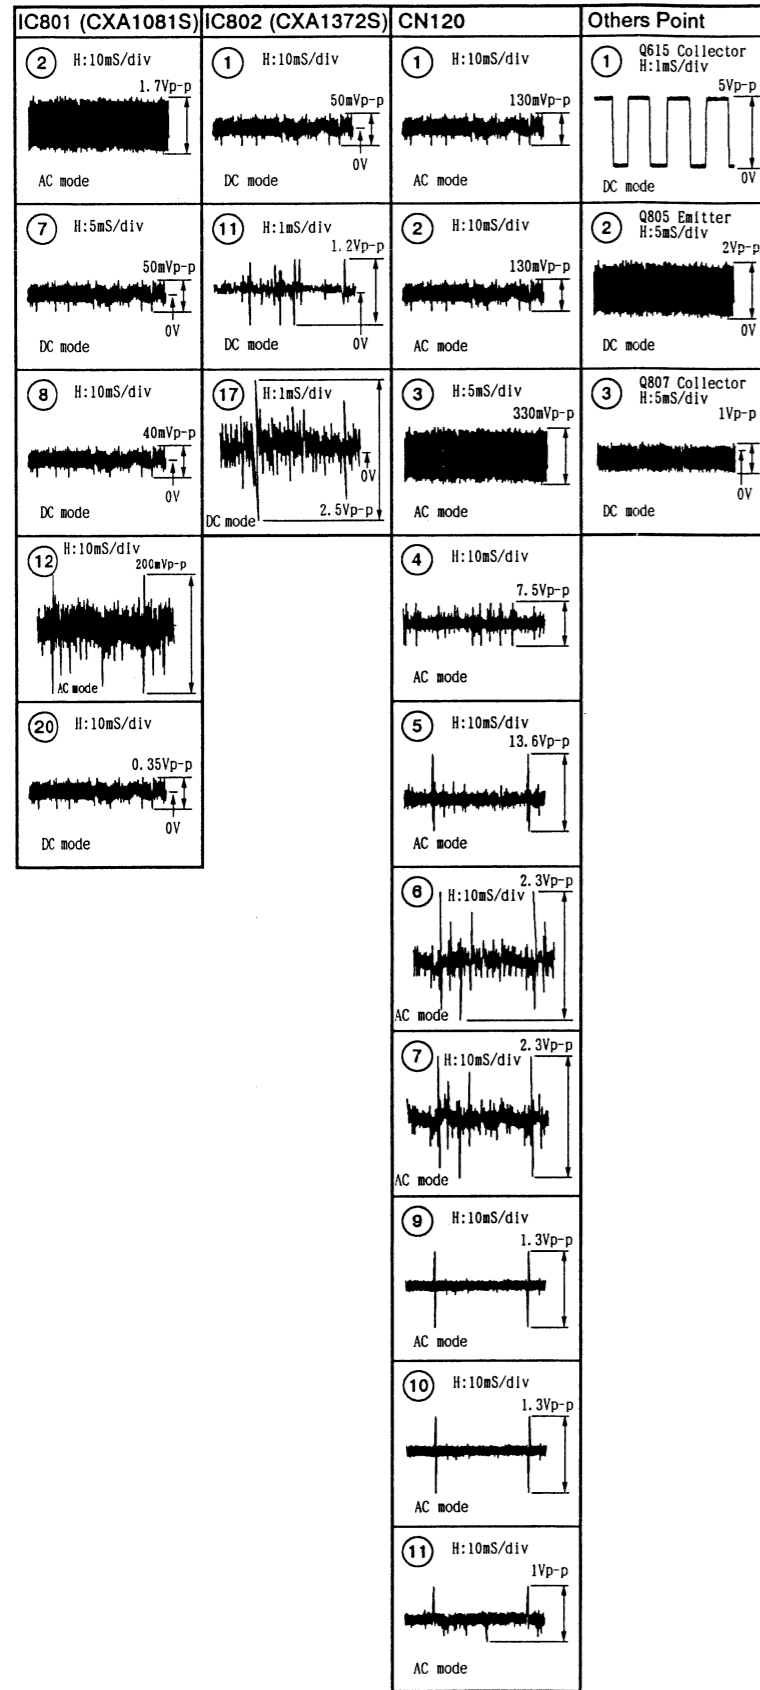


Note : Waveforms and voltages are at the PLAY mode.


IC201 (CXD2500AQ)

Pin No.	Voltage	Pin No.	Voltage	Pin No.	Voltage	Pin No.	Voltage	Pin No.	Voltage
1	4.8	17	0	33	4.8	49	*	65	0
2	0	18	*	34	*	50	*	66	*
3	0	19	2.4	35	*	51	*	67	*
4	*	20	*	36	*	52	0	68	0
5	0	21	0	37	*	53	*	69	*
6	4.8	22	2.3	38	*	54	*	70	5
7	-	23	4.8	39	0	55	0	71	*
8	4.8	24	*	40	4.8	56	*	72	5
9	0	25	0	41	*	57	*	73	5
10	0	26	0	42	*	58	*	74	*
11	0	27	*	43	*	59	5	75	*
12	0	28	0	44	0	60	*	76	*
13	0	29	0	45	4.8	61	5	77	*
14	0	30	0	46	*	62	*	78	*
15	0	31	*	47	*	63	*	79	*
16	4.8	32	*	48	*	64	*	80	*


* : Refer to waveform

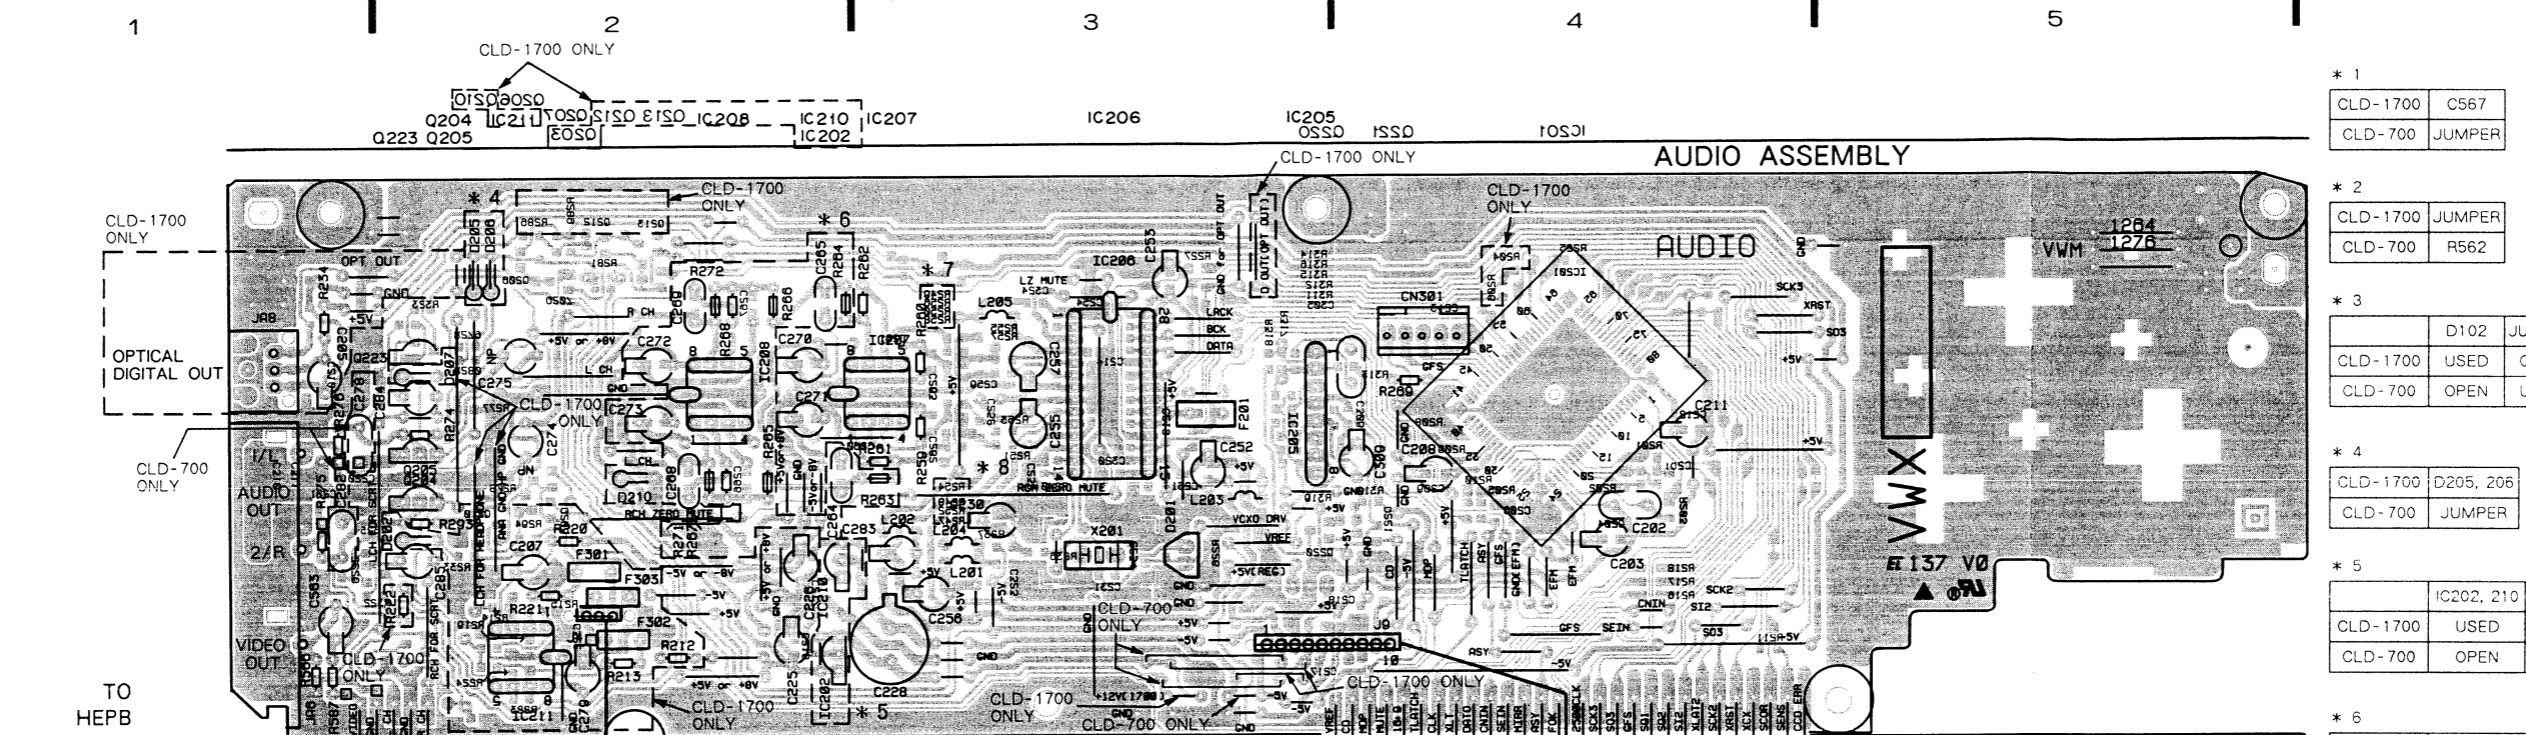

* 1	CLD-1700	C567	
	CLD-700	JUMPER	
* 2	CLD-1700	JUMPER	
	CLD-700	R562	
* 3	CLD-1700	D102	JUMPER
	CLD-1700	USED	OPEN
	CLD-700	OPEN	USED
* 4	CLD-1700	D205, 206	
	CLD-700	JUMPER	
* 5	CLD-1700	IC202, 210	JUMPER
	CLD-1700	USED	OPEN
	CLD-700	OPEN	USED

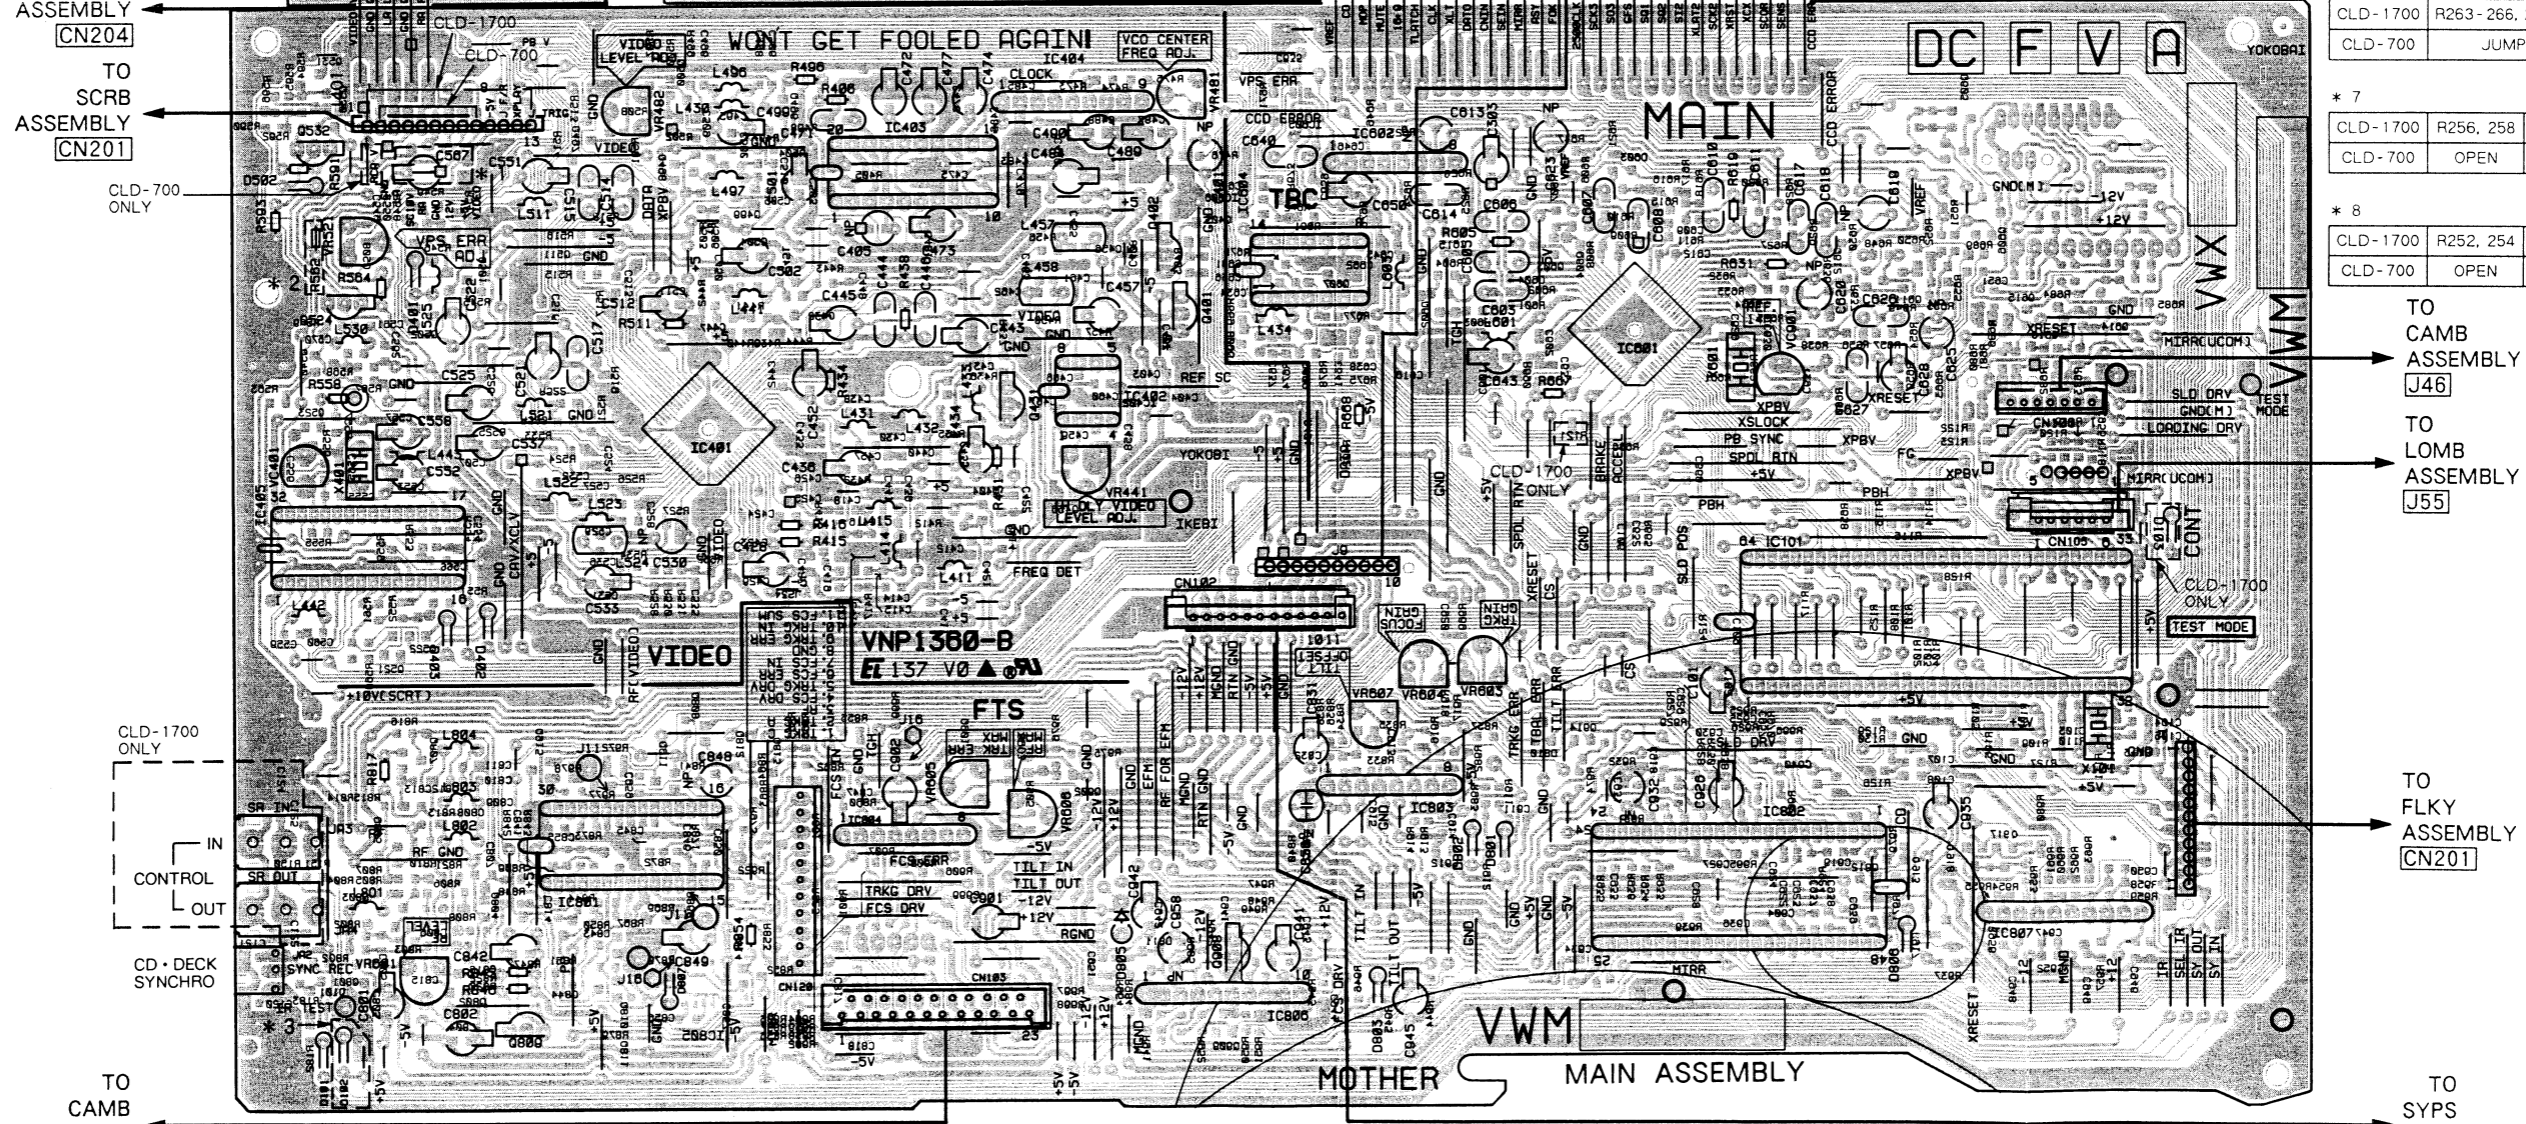


* 6	CLD-1700	R263-266, 271, 272	OTHER PARTS
	CLD-700	JUMPER	OPEN
* 7	CLD-1700	R256, 258	OPEN
	CLD-700	OPEN	R249, 250
* 8	CLD-1700	R252, 254	OPEN
	CLD-700	OPEN	R247, 248

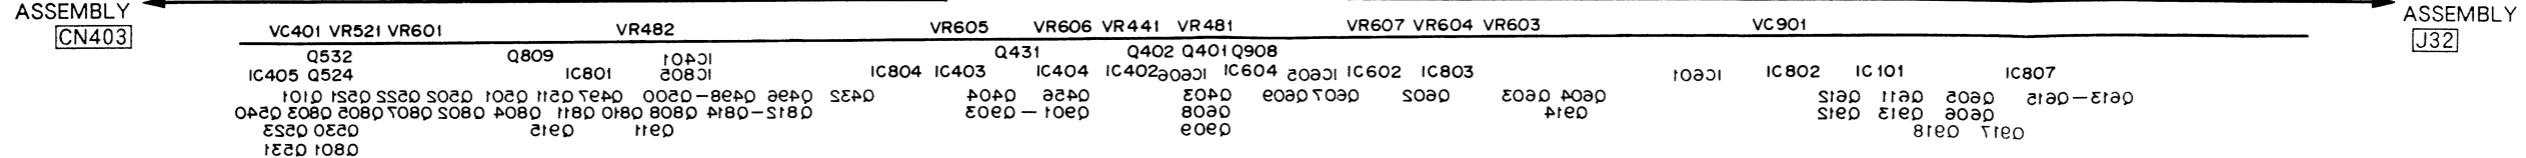

3.4 SCRB ASSEMBLY

This P. C. B. connection diagram is viewed from the foil side.

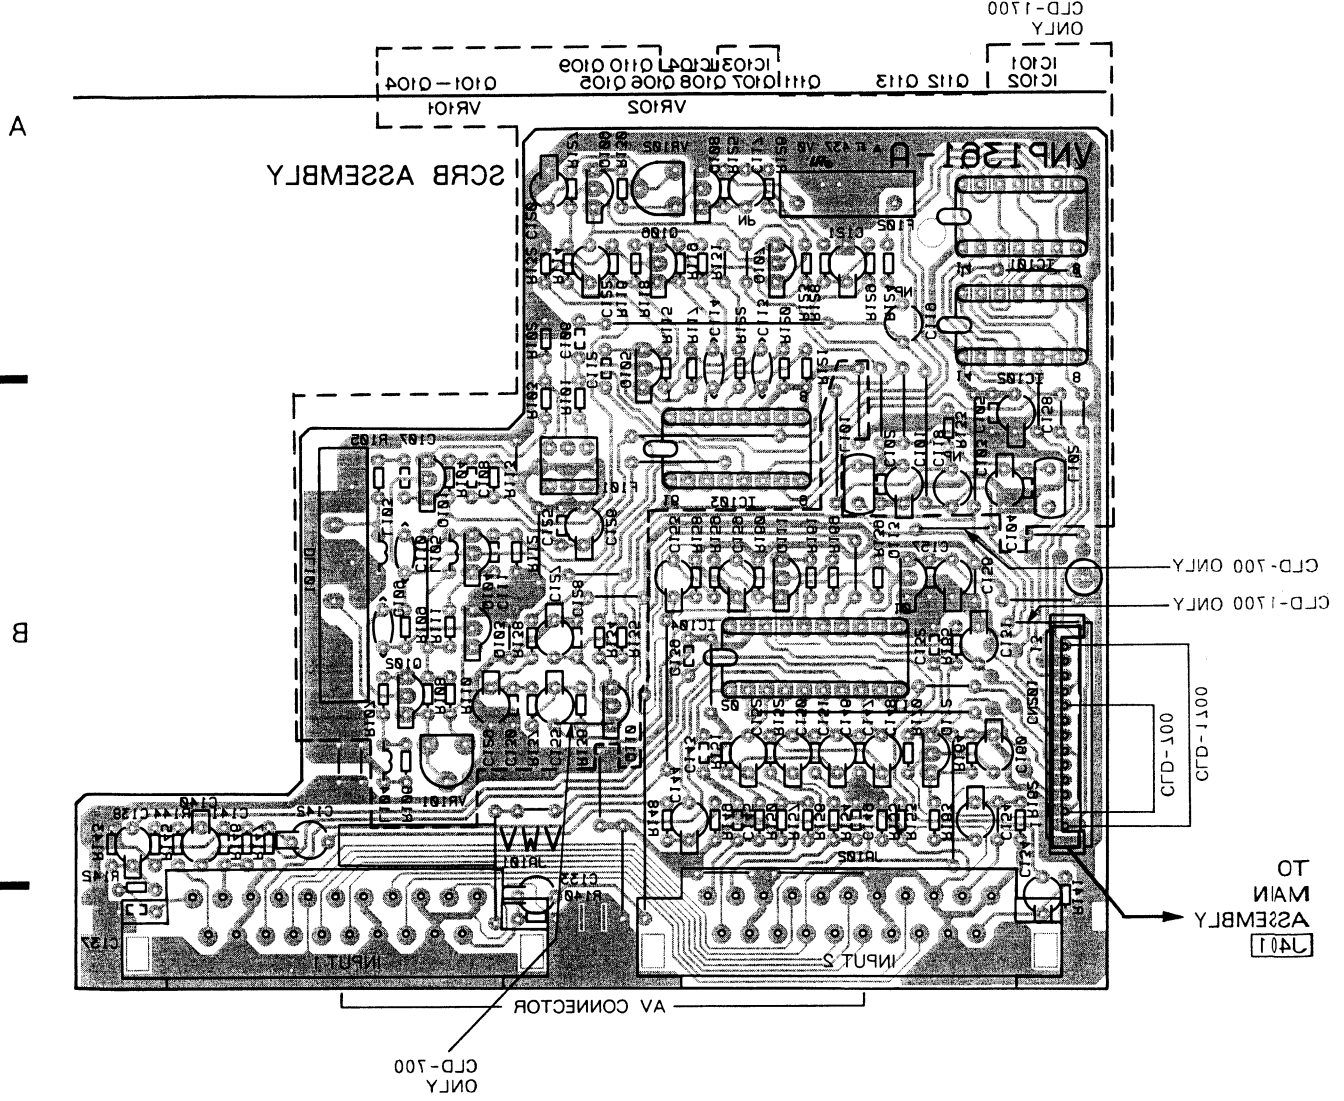


SCRB ASSEMBLY

Note : (No) in the table correspond to the pin number.

Others Point		IC103 (BU4038B)	
① 0101 Emitter H: 50% 2/div 380Vp-p	⑧ 0108 Emitter 1.4Vp-p DC mode H: 50% 2/div	③ H: 2mV/div 380mVp-p pins 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100, 101, 102, 103, 104, 105, 106, 107, 108, 109, 110, 111, 112, 113, 114, 115, 116, 117, 118, 119, 120, 121, 122, 123, 124, 125, 126, 127, 128, 129, 130, 131, 132, 133, 134, 135, 136, 137, 138, 139, 140, 141, 142, 143, 144, 145, 146, 147, 148, 149, 150, 151, 152, 153, 154, 155, 156, 157, 158, 159, 160, 161, 162, 163, 164, 165, 166, 167, 168, 169, 170, 171, 172, 173, 174, 175, 176, 177, 178, 179, 180, 181, 182, 183, 184, 185, 186, 187, 188, 189, 190, 191, 192, 193, 194, 195, 196, 197, 198, 199, 200	⑬ H: 2mV/div 380mVp-p pins 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100, 101, 102, 103, 104, 105, 106, 107, 108, 109, 110, 111, 112, 113, 114, 115, 116, 117, 118, 119, 120, 121, 122, 123, 124, 125, 126, 127, 128, 129, 130, 131, 132, 133, 134, 135, 136, 137, 138, 139, 140, 141, 142, 143, 144, 145, 146, 147, 148, 149, 150, 151, 152, 153, 154, 155, 156, 157, 158, 159, 160, 161, 162, 163, 164, 165, 166, 167, 168, 169, 170, 171, 172, 173, 174, 175, 176, 177, 178, 179, 180, 181, 182, 183, 184, 185, 186, 187, 188, 189, 190, 191, 192, 193, 194, 195, 196, 197, 198, 199, 200

CLD-1700 ONLY

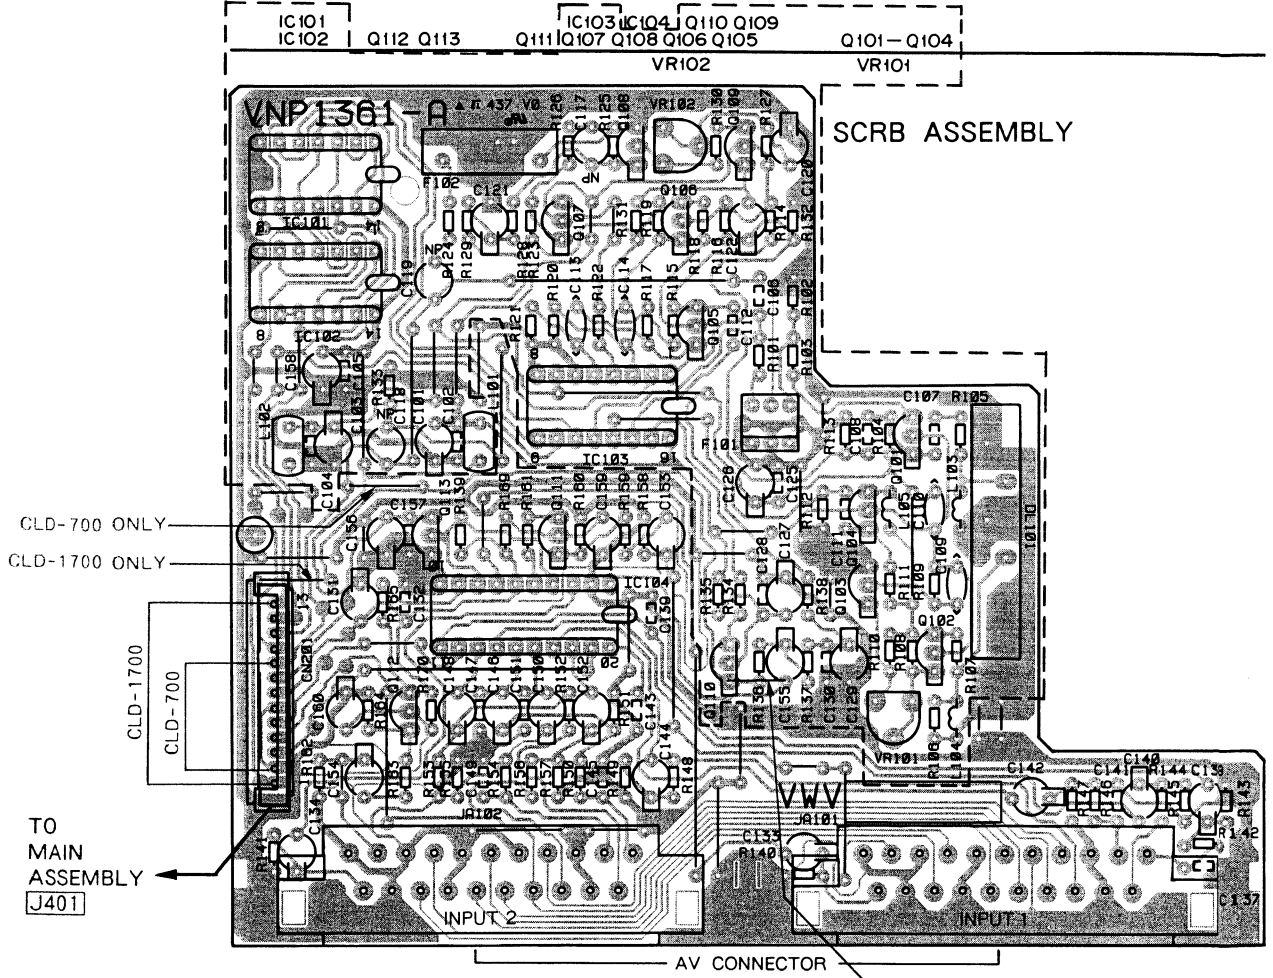

SCRIB ASSEMBLY

Note: (No.) in the table correspond to the pin number.

IC103 (BU4053B)		Others Point	
<p>(3) (5) H:5mS/div 320mVp-p</p> <p>pin3 </p> <p>pin5 </p> <p>DC mode 280mVp-p</p>	<p>(12) (13) H:5mS/div 280mVp-p</p> <p>pin12 </p> <p>pin13 </p> <p>DC mode 450mVp-p</p>	<p>(6) Q109 Emitter 1.4Vp-p</p> <p></p> <p>DC mode H:20μS/div</p>	<p>(7) Q101 Emitter H:20μS/div</p> <p></p> <p>DC mode</p>

SCRB ASSEMBLY (VWV1248 : CLD-1700)
(VWV1255 : CLD-700)

IC104
• Truth table

CONTROL 1 PIN4	CONTROL 2 PIN8	MUTE IN PIN10	VIDEO OUT		AUDIO OUT	
			1	2	1	2
L	L	L	IN1	IN1	IN1	IN1
L	H	L	IN1	IN3	IN1	IN3
H	L	L	IN2	IN2	IN2	IN2
H	H	L	IN2	IN3	IN2	IN3
L	L	H	IN1	IN1	IN1	
L	H	H	IN1	IN3	IN1	
H	L	H	IN2	IN2	IN2	
H	H	H	IN2	IN3	IN2	

(L, R)

IC104:
AUDIO & VIDEO
SIGNAL SWITCHING

- IC101 : TC74HC74AP
- IC102 : TC74HC00AP
- IC103 : BU4053B
- IC104 : LA7955

- Q101-Q110 : 2SC1740S
- Q111, Q112 : 2SC1740S
- Q113 : DTC124ES

- L101, L102 : LFA120J
- L103, L104 : LAU8R2J
- L105 : LAU330J
- F101 : VTF1034
- F102 : VTF1034
- VR101 : VRT B6VS471
- VR102 : VRT B6VS472
- DL101 : DTF1033

Q110:
VOLTAGE DIVIDING
BUFFER




CLD-1700
ONLY

Note : Waveforms and voltages are at the PLAY

IC104 (LA7955)

Pin No.	Voltage	Pin No.	Voltage
1	4.7	11	3.1
2	0	12	5
3	4.7	13	5
4	0	14	5
5	6.8	15	3.1
6	12	16	3.1
7	4.7	17	5
8	0	18	5
9	6.8	19	5
10	0	20	3.1

--- : Video Signal Line
--- : C-Signal Line

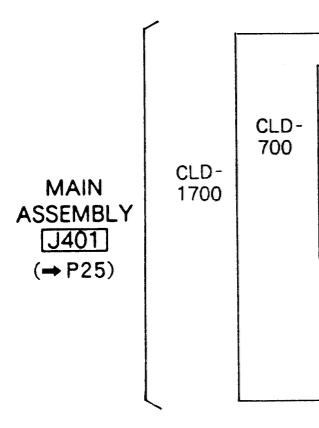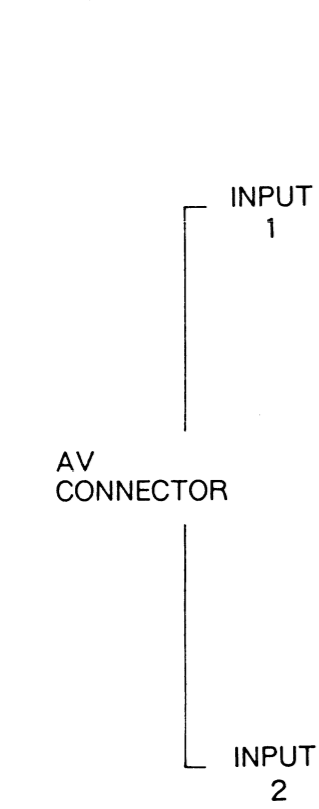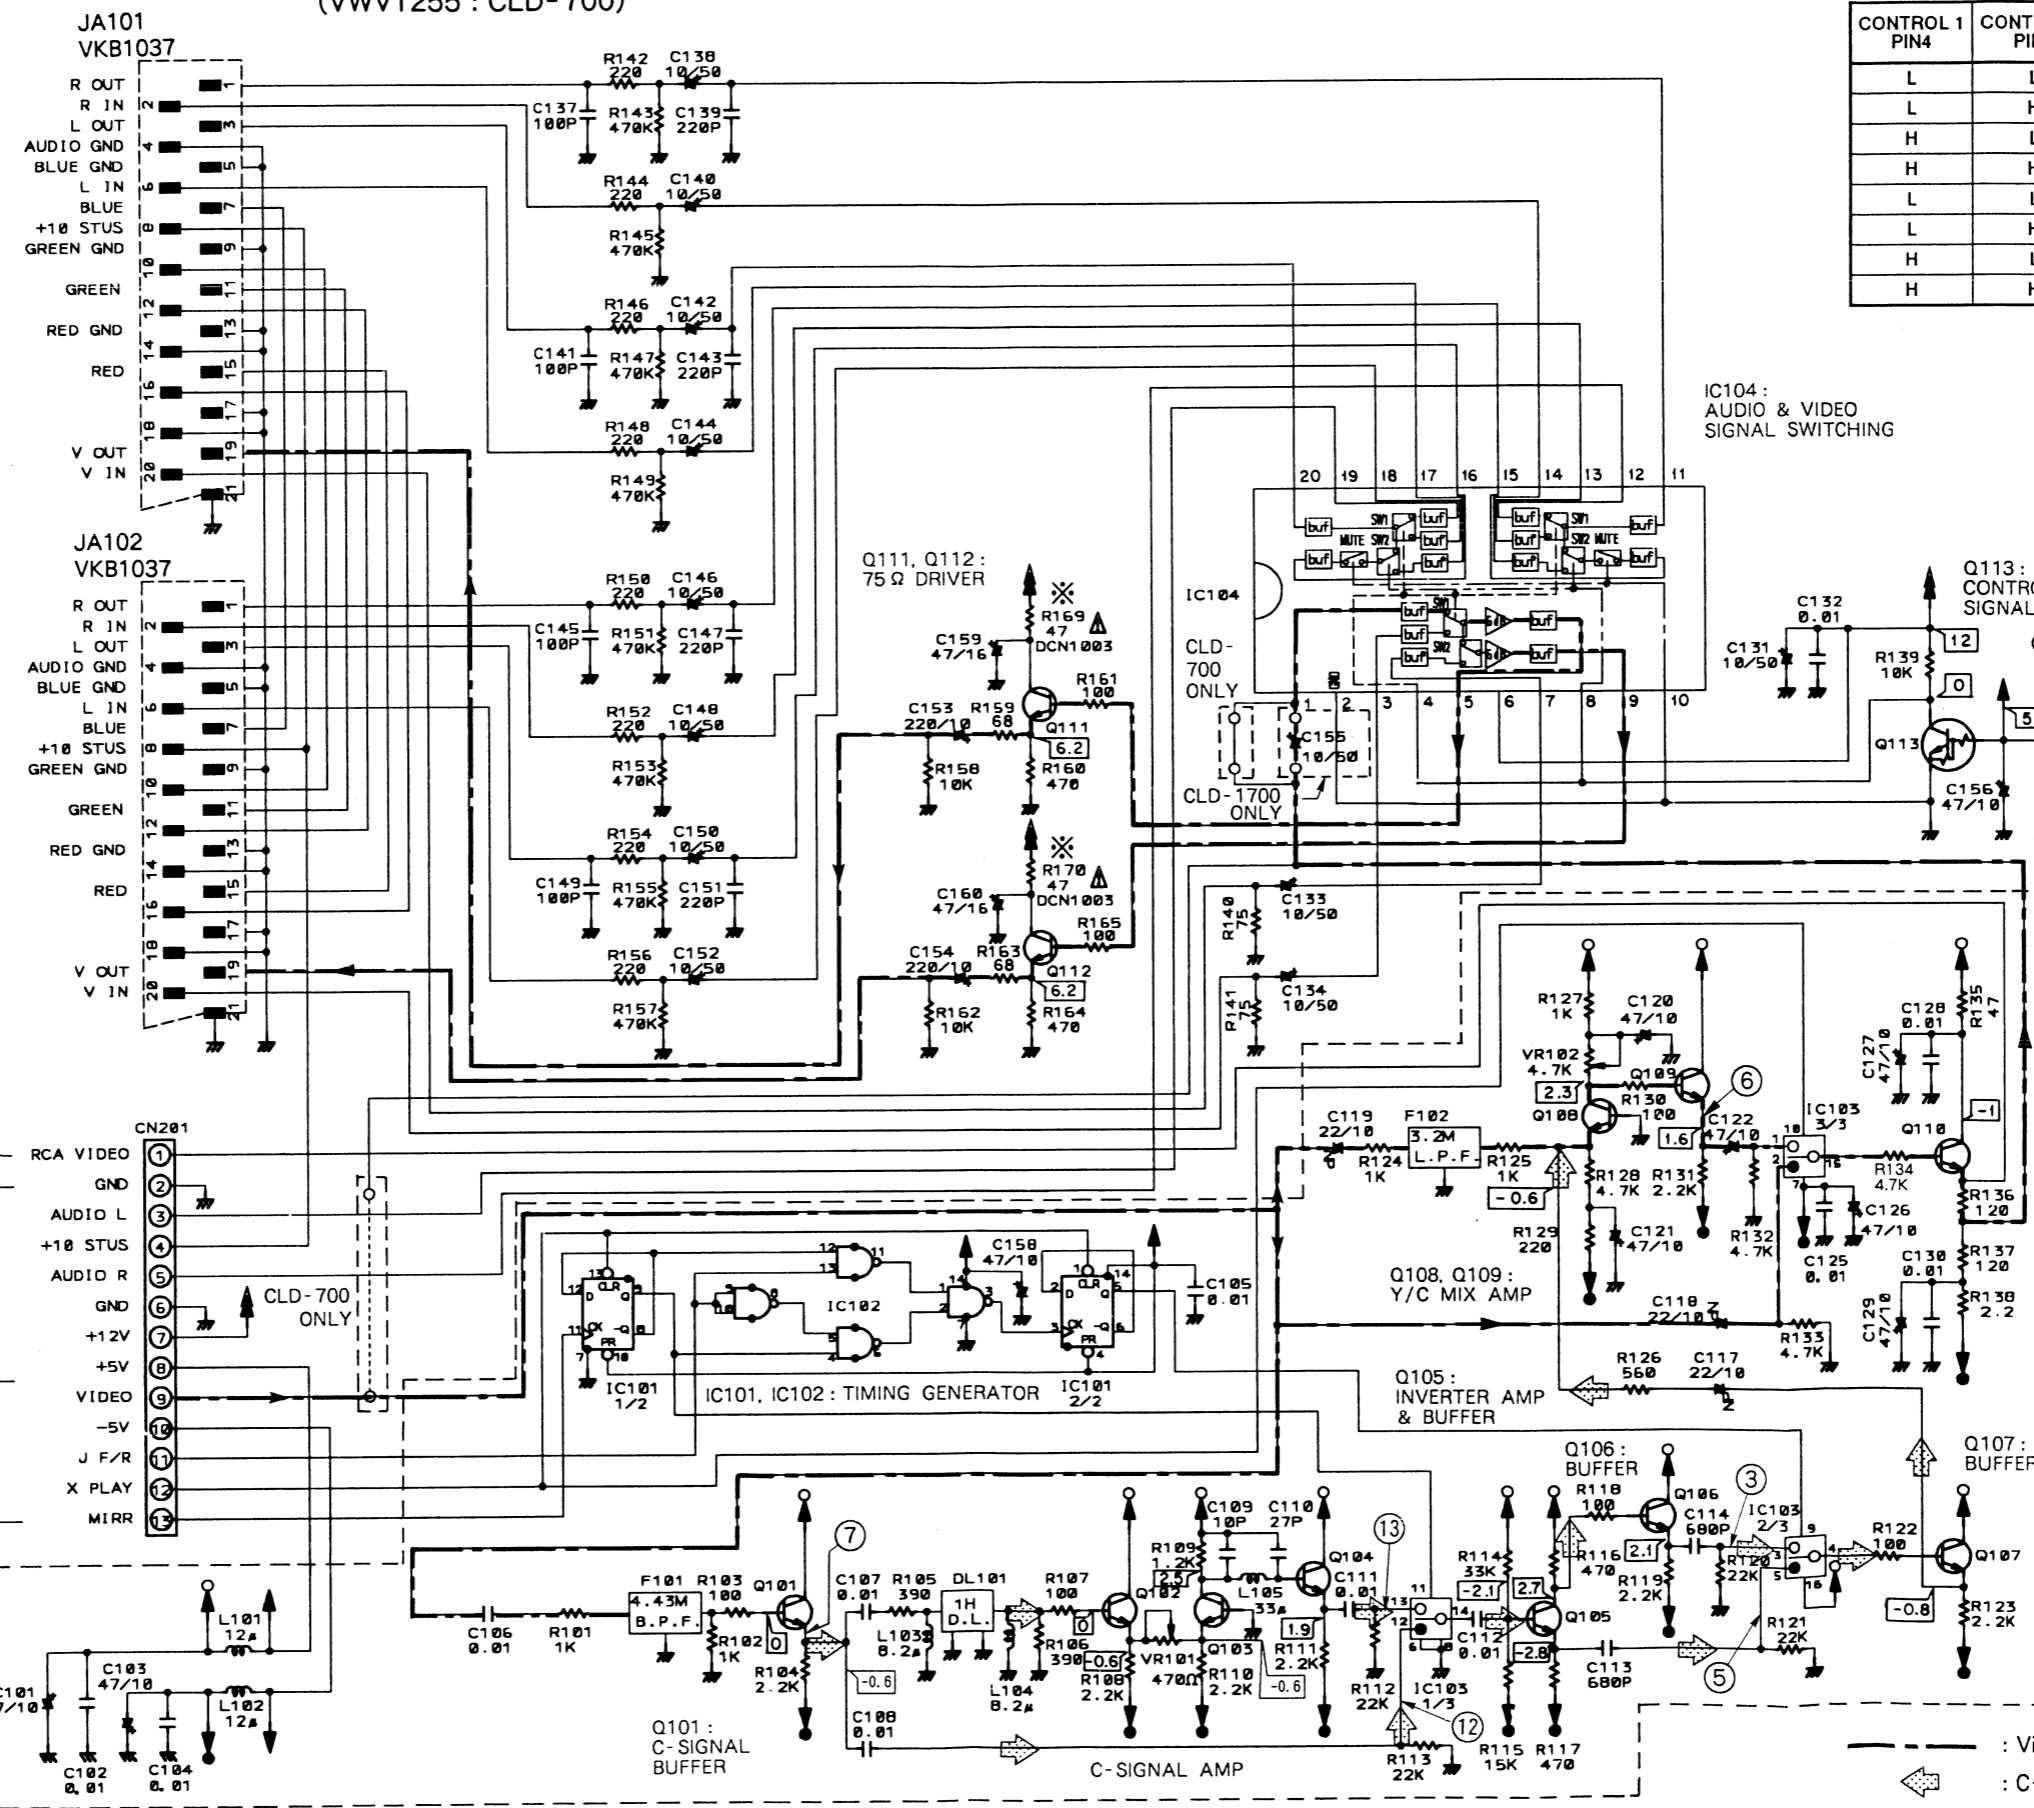

4. PCB PARTS LIST

NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "©" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.
 Ex.1 When there are 2 effective digits(any digit apart from 0), such as 560 ohm and 47k ohm(tolerance is shown by J=5%, and K=10%).
 $560 \Omega \rightarrow 56 \times 10^1 \rightarrow 561 \dots\dots\dots RD1/8PM \boxed{5}\boxed{6}\boxed{1}J$
 $47k \Omega \rightarrow 47 \times 10^3 \rightarrow 473 \dots\dots\dots RD1/4PS \boxed{4}\boxed{7}\boxed{3}J$
 $0.5 \Omega \rightarrow 0R5 \dots\dots\dots RN2H \boxed{0}\boxed{R}\boxed{5}K$
 $1 \Omega \rightarrow 010 \dots\dots\dots RS1P \boxed{0}\boxed{1}\boxed{0}K$
 Ex.2 When there are 3 effective digits(such as in high precision metal film resistors).
 $5.62k \Omega \rightarrow 562 \times 10^1 \rightarrow 5621 \dots\dots\dots RN1/4PC \boxed{5}\boxed{6}\boxed{2}\boxed{1}F$

Mark	No.	Description	Part No.
LIST OF ASSEMBLIES			
©		MOTHER ASSEMBLY	VWM1276
NSP		├ MAIN ASSEMBLY	VWX1123
NSP		└ AUDIO ASSEMBLY	VWX1124
©		FLKB ASSEMBLY	VWM1278
NSP		├ PSWB ASSEMBLY	VWG1315
NSP		├ FLKY ASSEMBLY	VWG1336
NSP		└ HEPB ASSEMBLY	VWV1254
©		SYPS ASSEMBLY	VWR1146
©		SCRB ASSEMBLY	VWV1248
©		MACB ASSEMBLY	VWM1250
NSP		├ FG ASSEMBLY	VWG1304
NSP		├ PKSB ASSEMBLY	VWG1305
NSP		├ CAMB ASSEMBLY	VWG1306
NSP		├ LOSB ASSEMBLY	VWG1307
NSP		└ LOMB ASSEMBLY	VWG1308
FG ASSEMBLY			
SEMICONDUCTOR			
	D1		GP1S51
PKSB ASSEMBLY			
SWITCHES			
	S4, 5	PUSH SWITCH	DSG1015
LOSB ASSEMBLY			
SWITCHES			
	S1-3	PUSH SWITCH	DSG1015

Mark	No.	Description	Part No.
CAMB ASSEMBLY			
SEMICONDUCTORS			
	Q10	TRANSISTOR	2SC1740S
RESISTORS			
	R10	CARBON FILM RESISTOR	RD1/6PM182J
	R11	CARBON FILM RESISTOR	RD1/6PM470J
OTHERS			
	CN401	CONNECTOR (23P)	VKN1073
	CN403	CONNECTOR (23P)	HLEM23R-1
LOMB ASSEMBLY			
CAPACITOR			
	C1	CERAMIC CAPACITOR	CGCYX473M25
PSWB ASSEMBLY			
SEMICONDUCTORS			
	Q204	TRANSISTOR	DTC124ES
	D211	LED	SLH34VCF04
SWITCH			
	S224	SWITCH	RSG1030
CAPACITOR			
	C210	ELECT. CAPACITOR	CEAS100M16
RESISTOR			
	R227	CARBON FILM RESISTOR	RD1/6PM151J
OTHERS			
		REMOTE CONTROL SENSOR UNIT	GP1U58X

Mark	No.	Description	Part No.
FLKY ASSEMBLY			
SEMICONDUCTORS			
	IC201	MODE CONTROL MCU	PD3214A
	IC202	RESET IC	PST529C
	Q201	TRANSISTOR	DTC124ES
	Q202	TRANSISTOR	DTC114EL
	Q203	TRANSISTOR	DTA144EL
	D201, 203	DIODE	1SS252
	D204-206	DIODE	1SS252
	D210	LED	PG3361X
SWITCHES			
	S201-223	SWITCH	RSG1030
	S225	ROTARY ENCODER	VSD1008
CAPACITORS			
	C201	ELECTR. CAPACITOR	CEAL101M6R3
	C202	CERAMIC CAPACITOR	CKPUYF223Z25
	C204	ELECTR. CAPACITOR	CEAL100M16
	C205	CERAMIC CAPACITOR	CKPUYF103Z25
	C206	ELECTR. CAPACITOR	CEAL2R2M50
	C211	CERAMIC CAPACITOR	CKPUYF223Z25
RESISTORS			
	ALL RESISTORS		RD1/6PM□□□J
OTHERS			
		FL SPACER	VEB1125
		LED HOLDER	VNL1522
	V201	FL TUBE	VAW1026
	X201	CERAMIC RESONATOR	EFOGC8004T4
SYPS ASSEMBLY			
SEMICONDUCTORS			
Δ	IC1	REGULATOR IC	NJM2930L05
Δ	IC2	LINEAR IC	NJM4558D
Δ	IC201, 202	IC PROTECTOR	ICP-N20
Δ	IC210	IC PROTECTOR	ICP-N20
Δ	IC211	IC PROTECTOR	ICP-N15
Δ	IC41	REGULATOR IC	NJM78M12FA
Δ	Q1, 2	TRANSISTOR	2SB1185
	Q21	TRANSISTOR	2SC1740S
	Q22, 23	TRANSISTOR	2SA933S
	Q24	TRANSISTOR	2SC1740S
Δ	Q25	TRANSISTOR	2SB1134
Δ	Q26	TRANSISTOR	2SD1667
Δ	Q27	TRANSISTOR	2SB1134
Δ	Q28	TRANSISTOR	2SD1667
Δ	Q3	TRANSISTOR	2SD1762
	Q4	TRANSISTOR	2SC1740S
	Q5	TRANSISTOR	2SA933S
Δ	D1		S2VB20-F1
Δ	D2	DIODE	1SR35-100AVL
Δ	D21, 22	DIODE	1SS254

Mark	No.	Description	Part No.
Δ	D23	DIODE	10ELS2
Δ	D24, 25	DIODE	1SR35-100AVL
Δ	D26	DIODE	10ELS2
Δ	D3, 31	DIODE	1SR35-100AVL
	D32, 33	SCHOTTKY DIODE	ERA83-006
Δ	D7	ZENER DIODE	MTZJ11B
COIL			
Δ	L1	SPDL CHORK COIL	VTL1043
CAPACITORS			
Δ	C1	ELECTR. CAPACITOR (6800/16)	VCH1053
	C10	ELECT. CAPACITOR	CEAS101M50
	C11, 12	CERAMIC CAPACITOR	CKPUYF103Z25
	C13	ELECT. CAPACITOR	CEAS471M16
	C14	CERAMIC CAPACITOR	CGCYX473M25
Δ	C2	ELECTR. CAPACITOR (6800/16)	VCH1053
	C21, 22	MYLAR FILM CAPACITOR	CQMA272J50
	C23, 24	CERAMIC CAPACITOR	CGCYX473M25
	C25, 26	ELECT. CAPACITOR	CEAS2R2M50
	C27, 28	MYLAR FILM CAPACITOR	CQMA223J50
	C29	ELECT. CAPACITOR	CEAS101M50
	C3	ELECT. CAPACITOR	CEAS470M10
	C31	ELECT. CAPACITOR	CEAS471M35
	C32	ELECT. CAPACITOR	CEAS220M25
	C4, 5	ELECT. CAPACITOR	CEAS470M10
Δ	C52	CAPACITOR (CERAMIC) (0.01)	VCG-048
	C6	ELECT. CAPACITOR	CEAS470M10
Δ	C7-9	CERAMIC CAPACITOR	CKPUYF223Z25
RESISTORS			
Δ	R23-26	CARBON FILM RESISTOR	RD1/2VM221J
Δ	R27-30	RESISTOR(27 Ω)	DCN1003
	R41	RESISTOR(4.7 Ω)	DCN1001
	OTHER RESISTORS		RD1/6PM□□□J
SCRB ASSEMBLY			
SEMICONDUCTORS			
	IC101	LOGIC IC	TC74HC74AP
	IC102	LOGIC IC	TC74HC00AP
	IC103	LOGIC IC	BU4053B
	IC104	IC	LA7955
	Q101-112	TRANSISTOR	2SC1740S
	Q113	TRANSISTOR	DTC124ES
COILS AND FILTERS			
	L101, 102	RADIAL INDUCTOR	LFA120K
	L103, 104	AXIAL INDUCTOR	LAU8R2J
	L105	AXIAL INDUCTOR	LAU330J
	F101	FILTER(4.43MHz)	VTF1034
	F102	FILTER(3.2MHz)	VTF1011
CAPACITORS			
	C101	ELECT. CAPACITOR	CEAS470M10
	C102	CERAMIC CAPACITOR	CKPUY103N16
	C103	ELECT. CAPACITOR	CEAS470M10
	C104-108	CERAMIC CAPACITOR	CKPUY103N16
	C109	CERAMIC CAPACITOR	CCCCH100D50

Mark	No.	Description	Part No.
	C110	CERAMIC CAPACITOR	CCCCH270J50
	C111, 112	CERAMIC CAPACITOR	CKPUYY103N16
	C113, 114	CERAMIC CAPACITOR	CKCYB681K50
	C117-119	ELECT. CAPACITOR	CEANP220M10
	C120-122	ELECT. CAPACITOR	CEAS470M10
	C125	CERAMIC CAPACITOR	CKPUYY103N16
	C126, 127	ELECT. CAPACITOR	CEAS470M10
	C128	CERAMIC CAPACITOR	CKPUYY103N16
	C129	ELECT. CAPACITOR	CEAS470M10
	C130	CERAMIC CAPACITOR	CKPUYY103N16
	C131	ELECT. CAPACITOR	CEAS100M50
	C132	CERAMIC CAPACITOR	CKPUYY103N16
	C133, 134	ELECT. CAPACITOR	CEAS100M50
	C137	AXIAL CAPACITOR	CKPUYB101K50
	C138	ELECT. CAPACITOR	CEAS100M50
	C139	AXIAL CAPACITOR	CKPUYB221K50
	C140	ELECT. CAPACITOR	CEAS100M50
	C141	AXIAL CAPACITOR	CKPUYB101K50
	C142	ELECT. CAPACITOR	CEAS100M50
	C143	AXIAL CAPACITOR	CKPUYB221K50
	C144	ELECT. CAPACITOR	CEAS100M50
	C145	AXIAL CAPACITOR	CKPUYB101K50
	C146	ELECT. CAPACITOR	CEAS100M50
	C147	AXIAL CAPACITOR	CKPUYB221K50
	C148	ELECT. CAPACITOR	CEAS100M50
	C149	AXIAL CAPACITOR	CKPUYB101K50
	C150	ELECT. CAPACITOR	CEAS100M50
	C151	AXIAL CAPACITOR	CKPUYB221K50
	C152	ELECT. CAPACITOR	CEAS100M50
	C153, 154	ELECT. CAPACITOR	CEAS221M10
	C155	ELECT. CAPACITOR	CEAS100M50
	C156	ELECT. CAPACITOR	CEAS470M10
	C157	CERAMIC CAPACITOR	CKPUYY103N16
	C158	ELECT. CAPACITOR	CEAS470M10
	C159, 160	ELECT. CAPACITOR	CEAS470M16

RESISTORS

	VR101	SEMI-FIXED VR (470Ω)	VRTB6VS471
	VR102	SEMI-FIXED VR (4.7kΩ)	VRTB6VS472
△	R169, 170	RESISTOR (27Ω)	DCN1003
		OTHER RESISTORS	RD1/6PM□□□J

OTHERS

	DL101	DELAY LINE	DTF1033
	JA101, 102	CONNECTOR	VKB1037

HEPB ASSEMBLY

FILTERS

	F201-203	COIL	VTH1016
--	----------	------	---------

CAPACITORS

	C221	CERAMIC CAPACITOR	CGCYF473Z25
	C222, 223	AXIAL CAPACITOR	CKPUYB101K50

RESISTOR

	VR201	VR	VCS1015
--	-------	----	---------

Mark	No.	Description	Part No.
OTHERS			
	JA201	JACK (PHONES)	RKN1002

MAIN ASSEMBLY

SEMICONDUCTORS

	IC101	MECHANISM CONT. MCU	PD0135A1
	IC401	VIDEO IC	PA5013A
	IC402	CDD DELAY LINE	PM0001
	IC403	IC	CXL1009P
	IC404	IC	PA0017
	IC405	CHARACTER IC	M50554-132SP
	IC601	TBC IC	PM3002
	IC602	IC	BA15218N
	IC604	LOGIC IC	TC74HC86AP
	IC605	LOGIC IC	TC4S66F
	IC606	LOGIC IC	TC7SU04F
	IC801	PRE AMP IC	CXA1081S
	IC802	SERVO IC	CXA1372S
	IC803	OP-AMP IC	NJM072L
	IC804	IC	BA15218N
	IC805	COMPARATOR	BA10393F
	IC806	OP AMP	TA8464K
	IC807	POWER OP AMP	LA6510L
	Q101	DIGITAL TRANSISTOR	DTQ24EK
	Q401	TRANSISTOR	2SA1237K
	Q402	TRANSISTOR	2SD1858X
	Q403	DIGITAL TRANSISTOR	DTA124EK
	Q404	CHIP TRANSISTOR	2SC2412K
	Q431	TRANSISTOR	2SC1740S
	Q432	CHIP TRANSISTOR	2SC2412K
	Q456, 496	CHIP TRANSISTOR	2SA1037K
	Q497-501	CHIP TRANSISTOR	2SC2412K
	Q502, 511	CHIP TRANSISTOR	2SA1037K
	Q521	DIGITAL TRANSISTOR	DTA124EK
	Q522	DIGITAL TRANSISTOR	DTQ24EK
	Q523	CHIP TRANSISTOR	2SA1037K
	Q524	TRANSISTOR	2SC1740S
	Q530, 531	DIGITAL TRANSISTOR	DTQ24EK
	Q532	TRANSISTOR	2SA333S
	Q540	CHIP TRANSISTOR	2SA1037K
	Q601-605	CHIP TRANSISTOR	2SC2412K
	Q606	DIGITAL TRANSISTOR	DTA124EK
	Q607	CHIP TRANSISTOR	2SA1037K
	Q608, 609	CHIP TRANSISTOR	2SC2412K
	Q611	CHIP TRANSISTOR	2SA1037K
	Q612	DIGITAL TRANSISTOR	DTQ24EK
	Q613, 614	CHIP TRANSISTOR	2SA1037K
	Q615	DIGITAL TRANSISTOR	DTQ24EK
	Q801	CHIP TRANSISTOR	2SC2412K
	Q802	CHIP TRANSISTOR	2SA1037K
	Q803-805	CHIP TRANSISTOR	2SC2412K
	Q807	CHIP TRANSISTOR	2SC2412K
	Q808	DIGITAL TRANSISTOR	DTA124EK
	Q809	TRANSISTOR	2SA399
	Q810	DIGITAL TRANSISTOR	DTA124EK

Mark	No.	Description	Part No.
Q811		CHIP TRANSISTOR	2SC2412K
Q812		CHIP TRANSISTOR	2SA1037K
Q813		CHIP TRANSISTOR	2SC2412K
Q814		DIGITAL TRANSISTOR	DTA124EK
Q901, 902		DIGITAL TRANSISTOR	DTC124EK
Q903		DIGITAL TRANSISTOR	DTA124EK
Q908		N-FET	2SK184
Q909		CHIP TRANSISTOR	2SA1037K
Q911, 912		DIGITAL TRANSISTOR	DTC124EK
Q913		DIGITAL TRANSISTOR	DTA124EK
Q914		DIGITAL TRANSISTOR	DTC124EK
Q915		CHIP TRANSISTOR	2SC2412K
Q917		CHIP TRANSISTOR	2SA1037K
Q918		CHIP TRANSISTOR	2SC2412K
D101-103		DIODE	1SS254
D401-403		DIODE	1SS254
D502		DIODE	1SS254
D603		DIODE	DA204K
D801-803		DIODE	1SS254
D805		DIODE	1SR35-100AVL
D806, 807		DIODE	1SS254
D810, 811		DIODE	DA204K

COILS

L411		AXIAL INDUCTOR	LAU680J
L414, 415		AXIAL INDUCTOR	LAU120J
L430		AXIAL INDUCTOR	LAU150J
L431		AXIAL INDUCTOR	LAU680J
L432		AXIAL INDUCTOR	LAU430J
L433		AXIAL INDUCTOR	LAU470J
L434		AXIAL INDUCTOR	LAU220J
L441		AXIAL INDUCTOR	LAU270J
L442		AXIAL INDUCTOR	LAU390J
L443		AXIAL INDUCTOR	LAU120J
L457		RADIAL INDUCTOR	LFA561J
L458		RADIAL INDUCTOR	LFA221J
L496		AXIAL INDUCTOR	LAU220J
L497		AXIAL INDUCTOR	LAU151J
L511		AXIAL INDUCTOR	LAU820J
L521		AXIAL INDUCTOR	LAU120J
L522		AXIAL INDUCTOR	LAU560J
L523		AXIAL INDUCTOR	LAU390J
L524		RADIAL INDUCTOR	LFA561J
L525		AXIAL INDUCTOR	LAU330J
L530		AXIAL INDUCTOR	LAU220J
L601		AXIAL INDUCTOR	LAU470J
L603		AXIAL INDUCTOR	LAU220J
L801		AXIAL INDUCTOR	LAU100J
L802		AXIAL INDUCTOR	LAU151J
L803		AXIAL INDUCTOR	LAU181J
L804		AXIAL INDUCTOR	LAU151J

CAPACITORS

VC401, 901		VARIABLE CAPACITOR(20P)	VCM-008
C101		ELECT. CAPACITOR	CEAS470M16
C102		CERAMIC CAPACITOR	CKSQYF473Z25
C103		CHIP CAPACITOR	CKSQYF103Z50
C104, 105		CHIP CAPACITOR	CCSQCH330J50

Mark	No.	Description	Part No.
C106		CHIP CAPACITOR	CKSQYF103Z50
C107		CERAMIC CAPACITOR	CKSQYF104Z25
C108, 109		CHIP CAPACITOR	CKSQYF103Z50
C120-122		CHIP CAPACITOR	CKSQYF103Z50
C123		CAPACITOR ARRAY (100P×4)	VCG1022
C124, 125		CHIP CAPACITOR	CCSQCH101J50
C401		ELECT. CAPACITOR	CEANP2R2M50
C403, 404		CERAMIC CAPACITOR	CKSQYF104Z25
C405		ELECT. CAPACITOR	CEANP2R2M50
C407, 408		CERAMIC CAPACITOR	CKSQYF473Z25
C411, 412		CHIP CAPACITOR	CCSQCH820J50
C414		CHIP CAPACITOR	CKSQYF103Z50
C415		CHIP CAPACITOR	CCSQCH100D50
C416		CHIP CAPACITOR	CCSQCH330J50
C417		CHIP CAPACITOR	CCSQCH100D50
C418		CHIP CAPACITOR	CKSQYF103Z50
C419		CHIP CAPACITOR	CCSQCH101J50
C421, 422		CHIP CAPACITOR	CKSQYF103Z50
C423, 424		CHIP CAPACITOR	CCSQCH180J50
C425, 426		CHIP CAPACITOR	CKSQYF103Z50
C427		CERAMIC CAPACITOR	CKSQYF473Z25
C428		ELECT. CAPACITOR	CEAS470M10
C429		CERAMIC CAPACITOR	CKSQYF104Z25
C430		CHIP CAPACITOR	CCSQCH120J50
C431		CHIP CAPACITOR	CCSQCH050C50
C433		CHIP CAPACITOR	CCSQCH390J50
C434		ELECT. CAPACITOR	CEAS101M10
C435		CERAMIC CAPACITOR	CKSQYF104Z25
C436		ELECT. CAPACITOR	CEAS010M50
C437		CHIP CERAMIC C.	CCSQCH220J50
C438		CHIP CAPACITOR	CCSQCH050C50
C439, 440		CHIP CERAMIC C.	CCSQCH150J50
C441		CHIP CAPACITOR	CCSQCH050C50
C442		CERAMIC CAPACITOR	CKSQYF104Z25
C443		ELECT. CAPACITOR	CEJANP4R7M16
C444		MYLAR FILM CAPACITOR	QMA272J50
C445		ELECT. CAPACITOR	CEAS101M10
C446		MYLAR FILM CAPACITOR	QMA153J50
C447		CHIP CAPACITOR	CCSQCH680J50
C448		CERAMIC CAPACITOR	CKSQYF473Z25
C450		CHIP CAPACITOR	CCSQCH100D50
C451		CHIP CAPACITOR	CCSQCH270J50
C452		ELECT. CAPACITOR	CEAS470M10
C455		CHIP CAPACITOR	CCSQCH470J50
C456		CHIP CAPACITOR	CCSQCH121J50
C457		ELECT. CAPACITOR	CEAS101M10
C458-460		CHIP CAPACITOR	CKSQYF103Z50
C461		CHIP CAPACITOR	CCSQCH101J50
C462		CHIP CAPACITOR	CCSQCH330J50
C463		CHIP CERAMIC C.	CCSQCH271J50
C466, 467		CERAMIC CAPACITOR	CKSQYF473Z25
C471		AUDIO FILM CAPACITOR	CFTXA224J50
C472, 473		ELECT. CAPACITOR	CEAS3R3M50
C474		ELECT. CAPACITOR	CEAS470M10
C475, 476		CHIP CAPACITOR	CKSQYF103Z50

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	C477	ELECT. CAPACITOR	CEAS3R3M50		C566	CHIP CAPACITOR	CKSQYF103Z50
	C479-481	CERAMIC CAPACITOR	CKSQYF104Z25		C570	CHIP CAPACITOR	CCSQCH151J50
	C483	CERAMIC CAPACITOR	CKSQYF473Z25		C601	CERAMIC CAPACITOR	CKSQYF473Z25
	C484	ELECT. CAPACITOR	CEAS470M16		C602	CHIP CAPACITOR	CKSQYF103Z50
	C485	CHIP CERAMIC C.	CCSQCH180J50		C603	AUDIO FILM CAPACITOR	CFTXA224J50
	C486	CHIP CAPACITOR	CKSQYF103Z50		C604	CHIP CAPACITOR	CKSQYF103Z50
	C487, 488	CERAMIC CAPACITOR	CKSQYF473Z25		C605-607	AUDIO FILM CAPACITOR	CFTXA102J50
	C489, 490	ELECT. CAPACITOR	CEAS101M10		C608	AUDIO FILM CAPACITOR	CFTXA152J50
	C495	CHIP CAPACITOR	CCSQCH270J50		C609	CHIP CAPACITOR	CCSQCH820J50
	C496	CHIP CAPACITOR	CCSQCH101J50		C610	AUDIO FILM CAPACITOR	CFTXA563J50
	C498	CHIP CAPACITOR	CCSQCH820J50		C611	MYLAR FILM CAPACITOR	CQMA272J50
	C499	ELECT. CAPACITOR	CEAS470M16		C612	CHIP CAPACITOR	CCSQCH180J50
	C500	CHIP CAPACITOR	CCSQCH100D50		C613	ELECT. CAPACITOR	CEANP220M10
	C501, 502	ELECT. CAPACITOR	CEAS470M10		C614	AUDIO FILM CAPACITOR	CFTXA332J50
	C503	CERAMIC CAPACITOR	CKSQYF104Z25		C615, 616	CHIP CAPACITOR	CKSQYF103Z50
	C504	CERAMIC CAPACITOR	CKSQYF473Z25		C617	AUDIO FILM CAPACITOR	CFTXA563J50
	C505, 506	CERAMIC CAPACITOR	CKSQYF104Z25		C618	MYLAR FILM CAPACITOR	CQMA103J50
	C507, 508	CHIP CERAMIC C.	CCSQCH271J50		C619	ELECT. CAPACITOR	CEANP2R2M50
	C509	CHIP CAPACITOR	CCSQCH151J50		C620, 623	ELECT. CAPACITOR	CEANP220M10
	C510	CHIP CAPACITOR	CCSQCH270J50		C625	ELECT. CAPACITOR	CEJANP4R7M16
	C511	CERAMIC CAPACITOR	CKSQYF104Z25		C626	AUDIO FILM CAPACITOR	CFTXA332J50
	C512	ELECT. CAPACITOR	CEAS470M10		C627	MYLAR FILM CAPACITOR	CQMA222J50
	C513	CERAMIC CAPACITOR	CKSQYF104Z25		C628	ELECT. CAPACITOR	CEJANP4R7M16
	C514	AUDIO FILM CAPACITOR	CFTXA104J50		C629	CERAMIC CAPACITOR	CKSQYF473Z25
	C515	AUDIO FILM CAPACITOR	CFTXA683J50		C630	CHIP CAPACITOR	CCSQCH270J50
	C516	CHIP CERAMIC C.	CCSQCH220J50		C631	CHIP CAPACITOR	CCSQCH100D50
	C517	AUDIO FILM CAPACITOR	CFTXA683J50		C632	CHIP CAPACITOR	CCSQCH101J50
	C520	CHIP CAPACITOR	CCSQCH180J50		C633	CHIP CAPACITOR	CCSQCH180J50
	C521	ELECT. CAPACITOR	CEAS470M10		C634	CHIP CAPACITOR	CCSQCH121J50
	C522	ELECT. CAPACITOR	CEAS100M50		C635	CERAMIC CAPACITOR	CKSQYF104Z25
	C524	CHIP CAPACITOR	CCSQCH390J50		C636	CHIP CAPACITOR	CCSQCH121J50
	C525	ELECT. CAPACITOR	CEAS470M10		C637, 638	CHIP CAPACITOR	CCSQSL471J50
	C526	CERAMIC CAPACITOR	CKSQYF104Z25		C639	CHIP CERAMIC C.	CCSQCH221J50
	C527	CERAMIC CAPACITOR	CKSQYF473Z25		C640	AUDIO FILM CAPACITOR	CFTXA102J50
	C528	CHIP CAPACITOR	CCSQCH390J50		C641	CHIP CAPACITOR	CCSQCH151J50
	C529	CHIP CAPACITOR	CCSQCH180J50		C642	CHIP CAPACITOR	CKSQYF103Z50
	C530	ELECT. CAPACITOR	CEANP100M16		C643	ELECT. CAPACITOR	CEAS470M10
	C531	CERAMIC CAPACITOR	CKSQYF104Z25		C645, 646	CHIP CAPACITOR	CKSQYF103Z50
	C532	CHIP CAPACITOR	CCSQCH100D50		C650	ELECT. CAPACITOR	CEAS470M10
	C533	ELECT. CAPACITOR	CEAS470M16		C651	CHIP CAPACITOR	CKSQYF103Z50
	C535	CHIP CAPACITOR	CKSQYF103Z50		C660	CHIP CERAMIC C.	CCSQCH221J50
	C536	CHIP CAPACITOR	CCSQCH910J50		C661, 662	CHIP CAPACITOR	CKSQYF103Z50
	C537	ELECT. CAPACITOR	CEAS010M50		C801	ELECT. CAPACITOR	CEAS470M10
	C549	CERAMIC CAPACITOR	CCSQCH560J50		C802	ELECT. CAPACITOR	CEAS470M16
	C550	CHIP CAPACITOR	CCSQCH151J50		C803-805	CHIP CAPACITOR	CKSQYF103Z50
	C551	ELECT. CAPACITOR	CEANP220M10		C806	CHIP CAPACITOR	CCSQCH820J50
	C552	ELECT. CAPACITOR	CEAS470M10		C807	CHIP CAPACITOR	CKSQYF103Z50
	C553, 554	CHIP CAPACITOR	CKSQYF103Z50		C808	CHIP CAPACITOR	CCSQCH680J50
	C555	CHIP CAPACITOR	CCSQCH100D50		C809	CHIP CAPACITOR	CCSQCH101J50
	C556	CHIP CAPACITOR	CCSQCH050C50		C810	CHIP CAPACITOR	CCSQCH270J50
	C557	CHIP CAPACITOR	CKSQYF103Z50		C811	CHIP CAPACITOR	CCSQCH101J50
	C558	ELECT. CAPACITOR	CEAS470M10		C812	CHIP CAPACITOR	CCSQCH680J50
	C559, 560	CHIP CAPACITOR	CCSQCH100D50		C813	CERAMIC CAPACITOR	CKSQYF473Z25
	C561, 562	CHIP CAPACITOR	CKSQYF103Z50		C814	CHIP CAPACITOR	CKSQYF103Z50
	C565	CHIP CAPACITOR	CCSQCH050C50		C815	CERAMIC CAPACITOR	CKSQYF473Z25

Mark	No.	Description	Part No.
C816		CHIP CAPACITOR	CCSQCH050C50
C817, 818		CHIP CAPACITOR	CKSQYF103Z50
C831		ELECT. CAPACITOR	CEAS010M50
C832		CHIP CAPACITOR	CKSQYF103Z50
C841		CHIP CERAMIC C.	CCSQCH471J50
C842		ELECT. CAPACITOR	CEAS101M10
C843		CHIP CAPACITOR	CCSQCH270J50
C844		CHIP CAPACITOR	CCSQCH050C50
C845, 846		CHIP CAPACITOR	CCSQCH470J50
C847		CERAMIC CAPACITOR	CCSQCH510J50
C848		ELECT. CAPACITOR	CEANP100M16
C849		ELECT. CAPACITOR	CEJAR47M50
C850, 855		CHIP CAPACITOR	CKSQYF103Z50
C856, 857		CHIP CAPACITOR	CKSQYF103Z50
C858		ELECT. CAPACITOR	CEANP470M10
C901, 902		ELECT. CAPACITOR	CEAS470M16
C904		CHIP CAPACITOR	CKSQYF103Z50
C911, 912		CERAMIC CAPACITOR	CKSQYF104Z25
C913		CERAMIC CAPACITOR	CKSQYB333K25
C914, 915		CHIP CAPACITOR	CKSQYF103Z50
C917		CHIP CAPACITOR	CKSQYF103Z50
C918		CHIP CERAMIC C.	CCSQCH271J50
C919		CERAMIC CAPACITOR	CKSQYF104Z25
C920		CERAMIC CAPACITOR	CKSQYB562K50
C922		CERAMIC CAPACITOR	CKSQYF104Z25
C923		CERAMIC CAPACITOR	CKSQYB562K50
C924		CERAMIC CAPACITOR	CKSQYF104Z25
C925		CERAMIC CAPACITOR	CKSQYB333K25
C926		ELECT. CAPACITOR	CEJANP4R7M16
C927		CERAMIC CAPACITOR	CKSQYF104Z25
C928		CHIP CAPACITOR	CKSQYF103Z50
C929		CERAMIC CAPACITOR	CKSQYB333K25
C930		CHIP CERAMIC C.	CCSQCH271J50
C931		CHIP CAPACITOR	CKSQYF103Z50
C932		ELECT. CAPACITOR	CEJANP4R7M16
C933, 934		CHIP CAPACITOR	CKSQYF103Z50
C935		ELECT. CAPACITOR	CEJAR47M50
C936		CERAMIC CAPACITOR	CKSQYB333K25
C937-939		CHIP CAPACITOR	CKSQYF103Z50
C940		CHIP CAPACITOR	CKSQYB102K50
C941, 942		ELECT. CAPACITOR	CEHAQ100M50
C943		CERAMIC CAPACITOR	CKSQYF473Z25
C944		CHIP CAPACITOR	CKSQYB102K50
C945		ELECT. CAPACITOR	CEAS010M50
C946		CHIP CAPACITOR	CKSQYF103Z50
C947		CERAMIC CAPACITOR	CKSQYF104Z25
C948, 949		CERAMIC CAPACITOR	CKSQYF473Z25
C950		CERAMIC CAPACITOR	CKSQYF104Z25
C951		CERAMIC CAPACITOR	CKSQYF473Z25
C952		CERAMIC CAPACITOR	CKSQYF104Z25
C956		CERAMIC CAPACITOR	CKSQYF473Z25
C957		CHIP CERAMIC C.	CCSQCH271J50
C958		CAPACITOR (ALUMINUM) (47 μ /16V)	VCH1115
C959		CERAMIC CAPACITOR	CKSQYF104Z25
C999		CHIP CERAMIC C.	CCSQCH471J50

Mark	No.	Description	Part No.
RESISTORS			
VR441		SEMI-FIXED VR(22k Ω)	VRTB6VS223
VR481, 482		SEMI-FIXED VR(4.7k Ω)	VRTB6VS472
VR521		SEMI-FIXED VR(4.7k Ω)	VRTB6VS472
VR601		SEMI-FIXED VR(2.2k Ω)	VRTB6VS222
VR603, 604		SEMI-FIXED VR(47k Ω)	VRTB6VS473
VR605, 606		SEMI-FIXED VR(33k Ω)	VRTB6VS333
VR607		SEMI-FIXED VR(47k Ω)	VRTB6VS473
R406		CARBON FILM RESISTOR	RD1/6PM224J
R415, 416		METALFILM RESISTOR	RN1/6PQ3002F
R431		CARBON FILM RESISTOR	RD1/6PM510J
R434, 438		METALFILM RESISTOR	RN1/6PQ□□□□F
R496		CARBON FILM RESISTOR	RD1/6PM101J
R511		METALFILM RESISTOR	RN1/6PQ2002F
R558, 564		CARBON FILM RESISTOR	RD1/6PM102J
R591, 593		CARBON FILM RESISTOR	RD1/6PM□□□J
R605, 619		CARBON FILM RESISTOR	RD1/6PM□□□J
R631, 667		CARBON FILM RESISTOR	RD1/6PM□□□J
R668, 817		CARBON FILM RESISTOR	RD1/6PM□□□J
R845, 846		CARBON FILM RESISTOR	RD1/6PM470J
R854		CARBON FILM RESISTOR	RD1/6PM225J
OTHER RESISTORS			RS1/10S□□□J

OTHERS

	TERMINAL	VNE1841
CN103	CONNECTOR (23P)	HLEM23S-1
JA2	JACK	PKN1005
JA3, 4	JACK/12V	PKN1004
X101	CERAMIC RESONATOR (9MHz)	VSS1040
X401	CRYSTAL RESONATOR (17.734MHz)	VSS1019
X601	CRYSTAL RESONATOR (14.22MHz)	VSS1053

AUDIO ASSEMBLY

SEMICONDUCTORS

IC201	EFM DEMODULATION IC	CXD2500AQ
IC202	REGULATOR IC	NJM78L08A
IC205	IC	BA15218N
IC206	D/A CONVERTER IC	PD2026A
IC207, 208	OP-AMP IC	BA15218
IC210	REGULATOR IC	NJM79L08A
IC211	OP-AMP IC	BA15218
Q203	DIGITAL TRANSISTOR	DTA124EK
Q204, 205	TRANSISTOR	2SD2144S
Q206	DIGITAL TRANSISTOR	DTC124EK
Q207, 210	DIGITAL TRANSISTOR	DTA124EK
Q212, 213	DIGITAL TRANSISTOR	DTA124EK
Q220	CHIP TRANSISTOR	2SC2412K
Q221	DIGITAL TRANSISTOR	DTA124EK
Q222, 223	CHIP TRANSISTOR	2SA1037K
D201	VARI-CAP	FC54M
D202, 205	DIODE	1SS254
D206, 207	DIODE	1SS254
D210	SCHOTTKY DIODE	ERA83-006

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
COILS AND FILTERS				RESISTORS			
	L201, 202	AXIAL INDUCTOR	LAU010K		R212, 213	CARBON FILM RESISTOR	RD1/6PM470J
	L203	AXIAL INDUCTOR	LAU220J		R220-222	CARBON FILM RESISTOR	RD1/6PM□□□J
	L204, 205	AXIAL INDUCTOR	LAU010K	△	R234	RESISTOR (4.7Ω)	DCN1001
	F201, 301	COIL	VTH1016		R259-269	CARBON FILM RESISTOR	RD1/6PM□□□J
	F302, 303	COIL	VTH1016		R271, 272	CARBON FILM RESISTOR	RD1/6PM222J
CAPACITORS					R274-276	CARBON FILM RESISTOR	RD1/6PM471J
	C201	CERAMIC CAPACITOR	CKSQYF473Z25		R293	CARBON FILM RESISTOR	RD1/6PM471J
	C202	AUDIO FILM CAPACITOR	CFTXA152J50		R566, 587	CARBON FILM RESISTOR	RD1/6PM□□□J
	C203	ELECT. CAPACITOR	CEAS470M10	OTHERS			
	C204	CERAMIC CAPACITOR	CKSQYF104Z25		TERMINAL		VNE1841
	C205	ELECT. CAPACITOR	CEAS470M16		CN301	5P TOP POST (NH)	B5P-SHF-1AA
	C206	CHIP CAPACITOR	CKSQYF103Z50		JA6	JACK (3P)	VKB1049
	C207	ELECT. CAPACITOR	CEAS471M10		JA8	OPTICAL OUTPUT JACK	TOTX178
	C208	ELECT. CAPACITOR	CEAS470M10		X201	CRYSTAL RESONATOR(16MHz)	VSS1057
	C209, 210	CERAMIC CAPACITOR	CKSQYF104Z25				
	C211	ELECT. CAPACITOR	CEAS470M10				
	C212	CERAMIC CAPACITOR	CKSQYF104Z25				
	C213, 216	CHIP CAPACITOR	CKSQYF103Z50				
	C217, 218	CHIP CAPACITOR	CKSQYF103Z50				
	C219	CERAMIC CAPACITOR	CKSQYF104Z25				
	C220, 221	CHIP CERAMIC C.	CCSQCH271J50				
	C225, 226	ELECT. CAPACITOR	CEAS470M10				
	C228	ELECT. CAPACITOR	CEAS100M50				
	C230	ELECT. CAPACITOR	CEAS470M10				
	C231	CHIP CAPACITOR	CKSQYF103Z50				
	C232	CHIP CAPACITOR	CCSQCH120J50				
	C234, 251	CHIP CAPACITOR	CKSQYF103Z50				
	C252, 253	ELECT. CAPACITOR	CEAS470M10				
	C254	CERAMIC CAPACITOR	CKSQYF104Z25				
	C255	ELECT. CAPACITOR	CEAS471M10				
	C256	ELECT. CAPACITOR	CEAS470M10				
	C257	ELECT. CAPACITOR	CEAS471M10				
	C258-263	CHIP CAPACITOR	CCSQCH390J50				
	C264, 265	AUDIO FILM CAPACITOR	CFTXA152J50				
	C266, 267	CHIP CAPACITOR	CKSQYB682K50				
	C268, 269	AUDIO FILM CAPACITOR	CFTXA102J50				
	C270-273	ELECT. CAPACITOR	CEAS470M10				
	C274, 275	ELECT. CAPACITOR	CEANP220M10				
	C279	ELECT. CAPACITOR	CEAS471M10				
	C283	ELECT. CAPACITOR	CEAS470M10				
	C284, 285	ELECT. CAPACITOR	CEAS100M50				
	C301	ELECT. CAPACITOR	CEANP220M10				
	C303	ELECT. CAPACITOR	CEAS470M10				
	C304-306	CHIP CAPACITOR	CKSQYF103Z50				
	C309	ELECT. CAPACITOR	CEAS470M10				
	C310, 311	CERAMIC CAPACITOR	CKSQYF104Z25				
	C320	CHIP CAPACITOR	CKSQYF103Z50				
	C322	CERAMIC CAPACITOR	CKSQYF473Z25				
	C323, 324	CHIP CAPACITOR	CKSQYF103Z50				
	C325, 326	CERAMIC CAPACITOR	CKSQYF104Z25				
	C563	ELECT. CAPACITOR	CEAS221M6R3				


5. ADJUSTMENTS

5.1 PRELIMINARIES

• Jigs for Adjustment

- CD test disc (STD - 901 or STD - 902)
- LD test disc (GGV1003 and GGV1007)
- (-) screwdriver (medium)
- (-) screwdriver (small)
- Hexagonal wrench driver (straight type, size: 3mm)
- Resistors (10kΩ × 2, 47kΩ)
- Dual - trace oscilloscope (with delay)
- AF oscillator
- Frequency counter
- TV monitor
- Low-pass filter

Use the low-pass filters below in the coarse centering adjustment 2. and fine centering adjustment 6. when the S/N of the waveform is hard to observe.

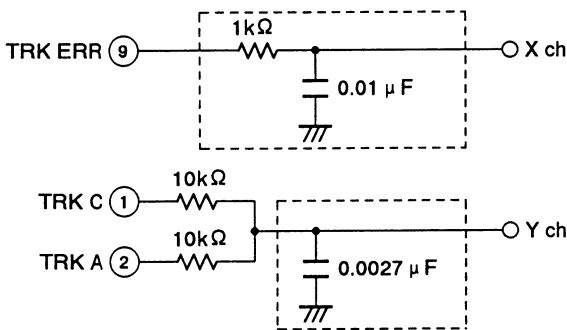

• Rack Assembly During Centering Adjustment

The S - IN position (without hitting the mechanism stopper) of the rack assembly during centering adjustment is indicated below.

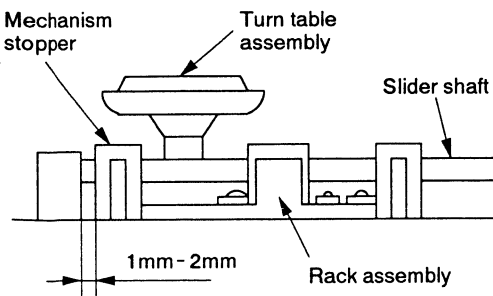


Fig. 1 Right side view

• Adjustment Locations


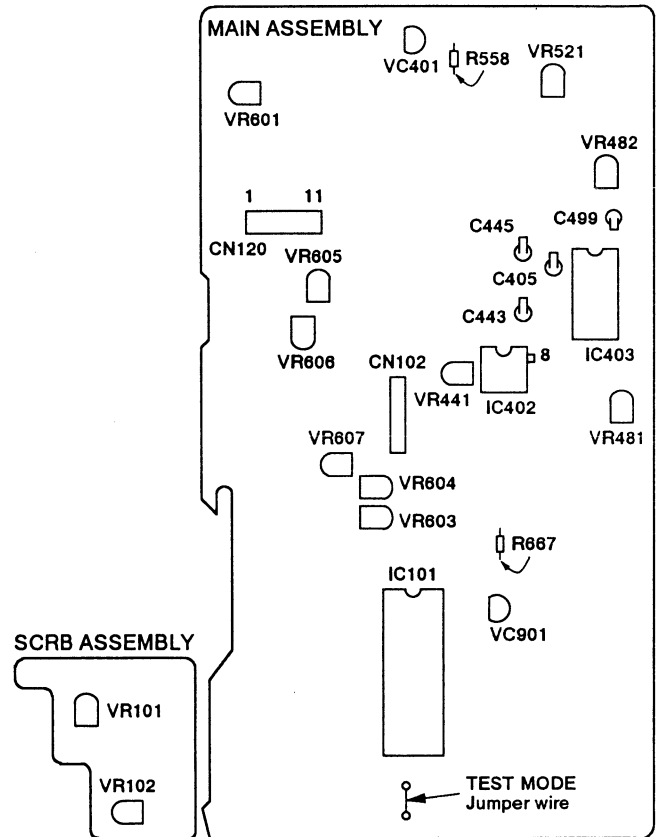


Fig. 2 MAIN and SCRIB assemblies section

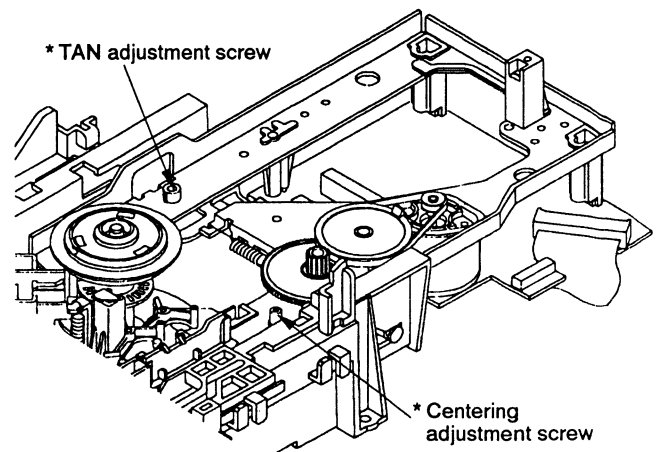

* : As the adjustment range of both the TAN and centering adjustment screws is only ± 90° from the center, do not turn the screws beyond this range.

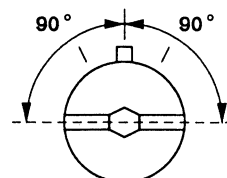


Fig. 3 TILT base section

● Test Mode

- 1) Activating the Test Mode
 1. While power is ON, connect the Test mode jumper wire (Fig. 2) to the GND for about one second.
 2. After checking whether the FL display device is fully lit, disconnect the Test mode jumper wire from GND.
- 2) Canceling the Test Mode
 1. Turn the power OFF.

● Key operation in the Test mode

Player Status	Key Operation	Function	Remarks
Tray Open	◀◀/▶▶ SKIP (Refer to Note 1)	◀◀: Shifts the tray in the closed direction and also raises the turn table while it is held down. ▶▶: Shifts the tray in the open direction and also lowers the turn table while it is held down.	
Tray Open	▶ Play	Clamps	
Clamp	▶ Play	Turns the disc through TRK Servo Open	TRK - OFF
TRK Servo Open	▶ Play	TRK Servo Close	TRK - ON
TILT Neutral	+MULTI - SPEED	TILT Servo Close	T-□:ON
TILT ON	- MULTI - SPEED	TILT Neutral	T-□:N
TILT Neutral or ON	◀◀/▶▶ SKIP	Setting TILT Servo to OFF, can force TILT to move.	T - 1 to T - E
Clamp	◀◀/▶▶ SCAN	Can force the slider to move	S - LD S - CDV S - CD S - IN
Play	PAUSE	Still	
Play	■ STOP	Stop	
Stop	▲ OPEN	Open	
Play	<div style="text-align: center;"> +10 ↓ 0 to 9 ↓ ▶ PLAY </div>	Set to SEARCH lead address input mode. Designates the SEARCH lead address through keys 0 to 9. Press the CLEAR C key if the designated address is incorrect. Searches the designated address upon pressing the PLAY key.	


Note 1: Press SKIP (|◀◀/▶▶|) keys after the tray is set to open state by pressing OPEN (▲) key.
 In tray open state, pressing PLAY (▶) key causes is to TILT control state and SKIP keys cannot function properly.

● **Player Operation in the Test Mode**

Operate the player by selecting a test mode function with the keys on the player or on the remote control unit.

• **CD PLAYBACK**

- ① Place the CD disc on the turn table.

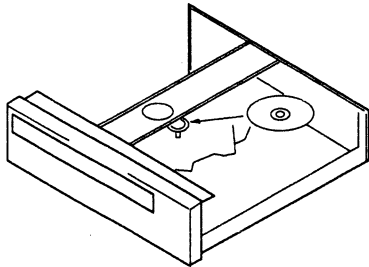

- ② Press the PLAY (▶) key once.
(Twin gear starts to move.)
- ③ Push the cam plate (Fig. 4) in the direction of the arrow and wait until the CD disc is clamped.


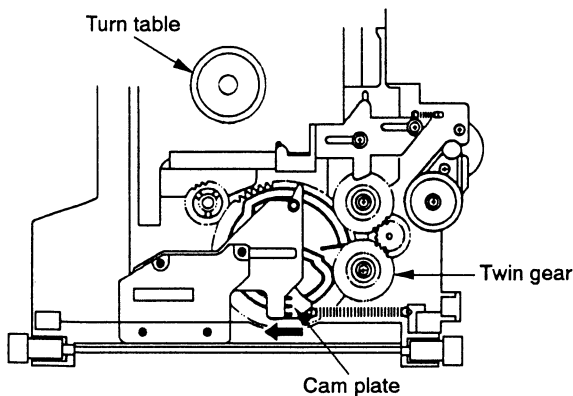


Fig. 4


- ④ Press the ◀◀ or ▶▶ keys to appear "S - CD" on the TV screen display.

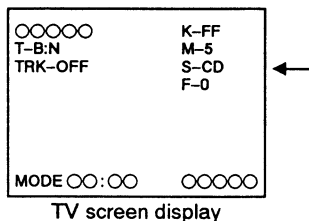


- ⑤ Press the PLAY (▶) key twice, disc will be normally playbacked.

• **LD PLAYBACK**

- ① Place the LD disc on the turn table.

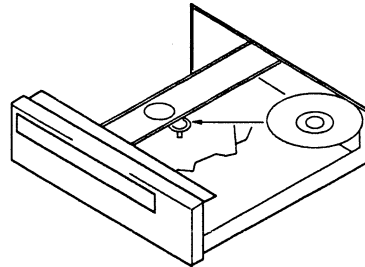

- ② Press the PLAY (▶) key once. (Twin gear starts to move.)
- ③ Press the SKIP REV (◀◀) key to raise the turn table (spindle motor section) while pressing the cam plate (Fig. 4) in the direction of the arrow. Raise it to the position where the LD disc can be easily placed on the turn table. If the turn table is raised too high, lower it with the SKIP FWD (▶▶) key.
- ④ Place the LD disc on the turn table and press the PLAY (▶) key once to clamp the disc.
- ⑤ Press the ◀◀ or ▶▶ keys to appear "S - LD" on the TV screen display.

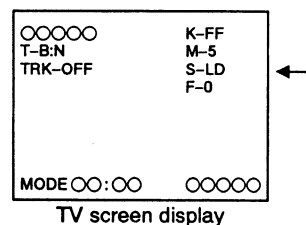

- ⑥ Press the PLAY (▶) key twice, disc will be normally playbacked.

5.2 ADJUSTMENT TABLE

Adjustment name	Adjustment point	Measuring equipment and jigs	Measurement point	Player condition	Adjustment procedure	Waveform and connection diagram
1 Tilt Offset Check and Adjustment	VR607	• TV monitor	Tilt indication on Test mode screen	• Power ON • Test mode • Disc not installed	1. Check if the tilt indication on the Test mode screen is at T-6 to T-8. 2. If the tilt indication is not at T-6 to T-8, adjust VR607 until the tilt indication reaches T-6 to T-8.	
2 Coarse centering adjustment	Tilt base centering adjustment screw	• Oscilloscope • STD-901 or STD-902 • MIX resistor 	CN120 X: ⑨ Pin (TRK ERR) Y: ①+② Pin (TRK SUM)	• Test mode TRK Servo Open Tilt Servo ON • Innermost track of STD-901 or STD-902 which does not come in contact with the mechanical stopper.	1. Move the slider until it does not come in contact with the mechanical stopper at the slider position indication S-IN. 2. Observe TRK ERR (Xch) and TRK SUM (Ych) at the X-Y mode during TRK Servo Open. 3. Turn the centering adjustment screw until the Lissajous figure is horizontal.	
3 FCS balance adjustment (1) TRK ERR MAX	VR605	• Oscilloscope • STD-901 or STD-902	CN120 ⑨ Pin (TRK ERR)	• Test mode TRK Servo Open Tilt Servo ON • Inner track of STD-901 or STD-902	1. Observe TRK ERR at CH1 of the oscilloscope during TRK Servo Open. 2. Adjust VR605 until the amplitude of the waveform reaches its maximum.	
4 FCS balance adjustment (2) RF MAX	VR606	• Oscilloscope • STD-901 or STD-902	CN120 ③ Pin (RF)	• Test mode TRK Servo Close Tilt Servo ON • Inner track of STD-901 or STD-902	1. Close the TRK Servo and observe RF at CH1 of the oscilloscope. 2. Adjust VR606 until the amplitude of the waveform reaches its maximum and the envelope is very clear.	
5 Tangential direction angle adjustment	Tilt base TAN adjustment screw	• Oscilloscope • STD-901 or STD-902	CN120 ③ Pin (RF)	• Test mode TRK Servo Close Tilt Servo ON • Inner track of STD-901 or STD-902	1. Observe RF at CH1 of the oscilloscope during TRK Servo Close. 2. Adjust the TAN adjustment screw until the amplitude of the waveform reaches its maximum and the envelope is very clear.	
6 Fine centering adjustment	Tilt base Centering adjustment screw	• Oscilloscope • STD-901 or STD-902	CN120 X: ⑨ Pin (TRK ERR) Y: ①+② Pin (TRK SUM)	• Test mode TRK Servo Open Tilt Servo ON • Innermost track of STD-901 or STD-902 which does not come in contact with the mechanical stopper.	Perform fine centering adjustment by following the same procedure as in "(2) Coarse centering adjustment".	
Crosstalk check and Tilt offset adjustment	VR607	• TV monitor • GGV1003	Crosstalk check screen	• Test mode TRK Servo Close Tilt Servo ON • GGV1003 #115 STILL	1. Search for address 115 of GGV1003 and still the address. 2. Check the crosstalk . If the crosstalk is pronounced, adjust VR607 until the crosstalk is not noticeable.	
7	When the crosstalk is still noticeable in spite of the adjustment in (7), use a hexagonal wrench driver (straight type, size: 3 mm) to adjust the TAN adjustment screw on the bottom side of the player through the GGV1003 #115 STILL screen. Afterwards, perform the adjustment procedures from (6).					

Adjustment name	Adjustment point	Measuring equipment and jigs	Measurement point	Player condition	Adjustment procedure	Waveform and connection diagram
8 FCS Servo loop gain adjustment	VR604	<ul style="list-style-type: none"> Oscilloscope GGV1003 AF Oscillator Resistor (47kΩ) 	CN120 X: ⑦ Pin (FCS IN) Y: ⑥ Pin (FCS ERR)	<ul style="list-style-type: none"> Test mode TRK Servo Close Tilt Servo ON GGV1003 #15,000 STILL 	<ol style="list-style-type: none"> Search for address 15,000 of GGV1003 and still the address. Xch: Connect the resistor (47kΩ) to the channel and connect to FCS IN. Ych: Connect to FCS ERR. Connect the AF oscillator between Xch and the 47kΩ resistor, and adjust VR604 until the Lissajous figure is symmetrical. 	<p>X:200mV/div Y:20mV/div DC mode</p> <p>Adjust until the Lissajous figure is symmetrical.</p>
9 TRK Servo loop gain adjustment	VR601	<ul style="list-style-type: none"> Oscilloscope GGV1003 AF Oscillator Resistor (47kΩ) 	CN120 X: ⑩ Pin (TRK IN) Y: ⑨ Pin (TRK ERR)	<ul style="list-style-type: none"> Test mode Stop mode or TRK Servo Close Tilt Servo ON GGV1003 #15,000 STILL 	<ol style="list-style-type: none"> Xch: Connect the 47kΩ resistor to channel and connect to TRK IN. Ych: Connect to TRK ERR. Connect the AF oscillator between Xch and the 47kΩ resistor and note the tilt angle against the horizon with the disc in the stopped state. Search for address 15,000 of GGV1003 and still the address. Set the disc PLAY mode (TRK servo closed, TILT on). Adjust VR603 so that the tilt angle of the waveform will be the same as the tilt angle noted in step 3. 	<p>X:200mV/div Y:10mV/div DC mode</p> <p>Adjust until the Lissajous figure is symmetrical.</p>
10 RF level adjustment	VR601	<ul style="list-style-type: none"> Oscilloscope GGV1003 	CN120 ③ Pin (RF)	<ul style="list-style-type: none"> Test mode TRK Servo Close Tilt Servo ON GGV1003 #15,000 STILL 	<ol style="list-style-type: none"> Search for address 15,000 of GGV1003 and still the address. Observe RF at CH1 of the oscilloscope. Adjust VR601 until the RF amplitude is 300mV ± 50mVp-p. 	<p>V:10mV/div H:2msec/div AC mode</p> <p>300mVp-p ± 50mV</p>
11 Synchronizing signal generator clock adjustment	VC401	<ul style="list-style-type: none"> Frequency counter 	R558 lead wire (No connection side)	<ul style="list-style-type: none"> Power ON Stop mode 	Adjust clock frequency (17.734475MHz) ± 100Hz.	<p>Frequency counter</p>
12 REF-H adjustment	VC901	<ul style="list-style-type: none"> Frequency counter 	R667 lead wire (IC601 (PM3002)) ⑧ Pin side	<ul style="list-style-type: none"> Power ON Stop mode 	Adjust FCS (3.5546875 MHz) ± 25Hz.	<p>Frequency counter</p>
13 VCO center frequency adjustment	VR481	<ul style="list-style-type: none"> Oscilloscope GGV1007 	CH1: C405 lead wire CH2: C499 lead wire	<ul style="list-style-type: none"> Normal mode GGV1007 #15,000 STILL 	Place a trigger in CH1 and adjust until the center of the CH2 video signal jitter is 75 μsec (1H + 11 μsec) ± 2 μsec compared to the CH1 video signal.	<p>V:20mV/div (CH1) 20mV/div (CH2) H:10 μsec/div (Trigger) AC mode</p> <p>Jitter due to the eccentricity 11 μs 75 μs</p>
14 Video level adjustment	VR482	<ul style="list-style-type: none"> TV monitor Oscilloscope GGV1007 	Video output terminal	<ul style="list-style-type: none"> Normal mode GGV1007 #5,251 to #6,000 PLAY 	Connect a 75Ω resistor to the VIDEO output terminal (possibly by connecting to the monitor) and adjust until the sync tip to 100% white level is 1Vp-p ± 5% at the white (100%) signal.	<p>Video level 1.0Vp-p ± 5%</p> <p>Oscilloscope range V:20mV/div 10 μsec/div (Trigger) AC mode</p>

	Adjustment name	Adjustment point	Measuring equipment and jigs	Measurement point	Player condition	Adjustment procedure	Waveform and connection diagram
15	1H DLY video level adjustment	VR441	<ul style="list-style-type: none"> Oscilloscope GGV1007 	CH1: C443 lead wire CH2: C445 lead wire	<ul style="list-style-type: none"> Normal mode GGV1007 #5,300 STILL 	Adjust until the sync tip to 100% white level at the white (100%) signal is the same as in CH1 and CH2.	<p>V:20mV/div (CH1) 20mV/div (CH2) H:10 μsec/div (Trigger) AC mode</p> <p>CH1 CH2</p> <p>Main video signal 1H delay video signal</p>
16	VPS error level adjustment	VR521	<ul style="list-style-type: none"> TV monitor GGV1007 	TV monitor	<ul style="list-style-type: none"> Normal mode GGV1007 #6,001 to #6,750 PLAY (Magenta screen) 	Adjust until the color irregularity on the magenta screen is minimized.	<p>Color irregularity on the magenta screen is minimized.</p>
17	MOD video level adjustment	VR102	<ul style="list-style-type: none"> Oscilloscope GGV1007 	CH1: C118 lead wire CH2: C122 lead wire	<ul style="list-style-type: none"> Normal mode GGV1007 #5,300 STILL 	Adjust until the sync tip to 100% white level at the white (100%) signal is the same as in CH1 and CH2.	<p>V:20mV/div (CH1) 20mV/div (CH2) H:10 μsec/div AC mode</p> <p>CH1 CH2</p>
18	1H delay sub carrier adjustment	VR101	<ul style="list-style-type: none"> Oscilloscope GGV1007 	CH1: C118 lead wire CH2: C122 lead wire	<ul style="list-style-type: none"> Normal mode GGV1007 #5,100 STILL 	Adjust until the chroma signal level at the magenta signal is the same as in CH1 and CH2.	<p>V:20mV/div (CH1) 20mV/div (CH2) H:10 μsec/div (Trigger) AC mode</p> <p>CH1 CH2</p>


5. REGLAGES

5.1 PREPARATIFS

● Instruments Pour Reglage

- Disque d'essai pour CD (STD - 901 ou STD - 902)
- Disque d'essai pour LD (GGV1003 ou GGV1007)
- (-) Tournevis à tête plate (taille moyenne)
- (-) Tournevis à tête plate (petit)
- Clé hexagonale (type droit, taille: 3mm)
- Résistances (10kΩ × 2, 47 kΩ)
- Oscilloscope à double traces (avec retard)
- Oscillateur audiofréquence (AF)
- Compteur de fréquence
- Moniteur TV
- Filtre passe-bas

Utiliser les filtres passe-bas ci - dessous pour le réglage approximatif de centrage 2 et le réglage fin de centrage 6 si la forme d'onde du S/B est difficile à observer.

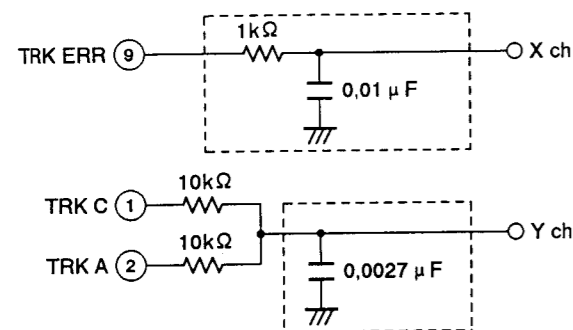

● Ensemble de Rack Pour le Reglage de Centrage

La position S - IN (la position où la butée de mécanisme n'est pas cognée) du rack pour le réglage de centrage est indiquée ci - dessous.

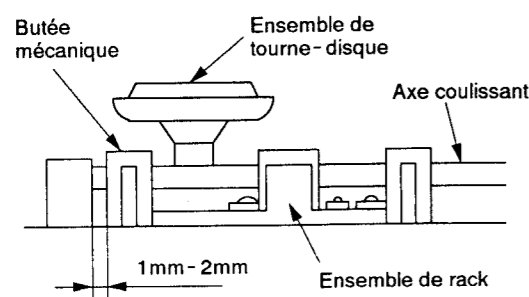


Fig. 1 Vue de la côté droite

● Points de Regrave


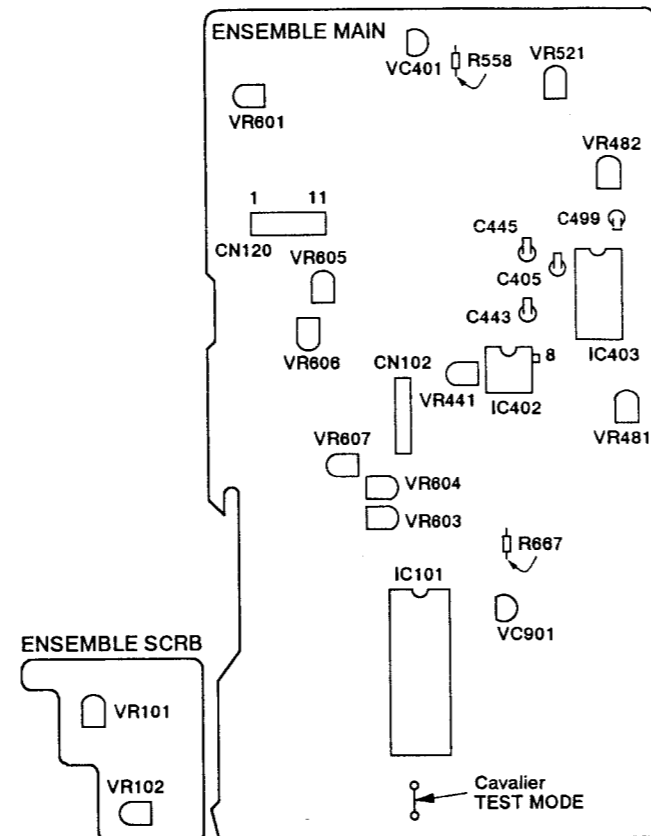


Fig. 2 Ensembles MAIN et SCRB

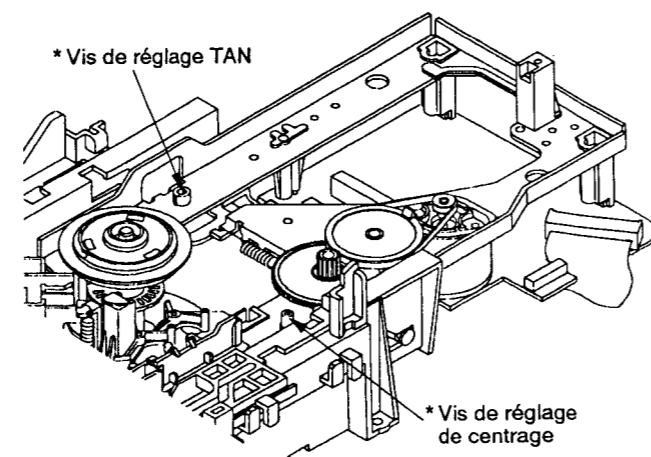

* : Ne pas tourner les vis de réglage TAN et de centrage au - delà de la gamme de réglage, c'est - à - dire, ± 90° du centre.

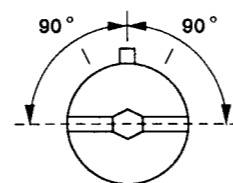


Fig. 3 Base TILT

● Mode D'essai

1) Lancement du mode d'essai

1. Après la mise en marche de l'appareil, connecter le cavalier du mode d'essai (Fig. 2) à GND pendant environ une seconde.
2. Après avoir confirmé que l'affichage FL est allumé à fond, débrancher le cavalier du mode d'essai de GND.

2) Annulation du mode d'essai

1. Mettre l'appareil hors tension.

● Fonction des touches en mode d'essai

Etat de lecteur	Touche à déclencher	Fonction	Remarques
Plateau ouvert	◀◀/▶▶ SKIP (Se reporter à la Remarque 1.)	◀◀: Déplace le plateau à la direction de fermeture et élève le tourne - disque pendant que la touche est enfoncée. ▶▶: Déplace le plateau à la direction de ouverture et baisse le tourne - disque pendant que la touche est enfoncée.	
Plateau ouvert	▶ Play	Verrouille.	
Verrouillé	▶ Play	Tourner le disque par la commande TRK SERVO OPEN.	TRK - OFF
Asservissement TRK ouvert	▶ Play	Asservissement TRK fermé.	TRK - ON
TILT en neutre	+MULTI - SPEED	Asservissement TILT fermé.	T-□:ON
TILT ON	- MULTI - SPEED	TILT en neutre	T-□:N
TILT en neutre ou ON	◀◀/▶▶ SKIP	En plaçant l'asservissement TILT sur OFF, il est possible de mouvoir TILT.	T - 1 à T - E
Verrouillé	◀◀/▶▶ SCAN	Il est possible de faire le coulisseau déplacer.	S - LD S - CDV S - CD S - IN
Lecture	PAUSE	Arrêt sur image	
Lecture	■ STOP	Arrête	
Arrêt	▲ OPEN	Ouvrir	
Lecture	+10 ↓ [0] à [9] ↓ ▶ PLAY	Placer sur le mode entrée de recherche d'adresse d'amorçage. Designier l'adresse d'amorçage à rechercher avec les touches 0 à 9. Appuyer sur la touche CLEAR [C] si l'adresse désignée est incorrecte. L'appareil commence à rechercher l'adresse désignée quand la touche PLAY est appuyée.	


Remarque 1: Appuyer sur les touche SKIP (|◀◀/▶▶|) après que le plateau est placé en mode ouverture par la touche OPEN (▲).
En état ouverture de plateau, une poussée sur la touche PLAY (▶) rend l'appareil en état d'inclinaison et les touches SKIP ne fonctionnent pas correctement.

● **Fonctionnement du Lecteur en Mode D'essai**

Manipuler le lecteur en choisissant le mode d'essai avec les touches du lecteur ou celles de la télécommande.

• **LECTURE DE CD**

- ① Placer le disque CD sur le tourne - disque.

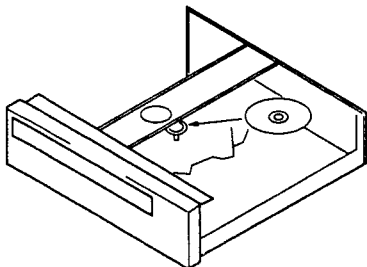

- ② Appuyer une fois sur la touche PLAY (▶).
- (Une paire d'engrenage commence à mouvoir.)
- ③ Enfoncer la came à plaque (Fig. 4) dans la direction de la flèche, et attendre que le disque CD soit verrouillé.


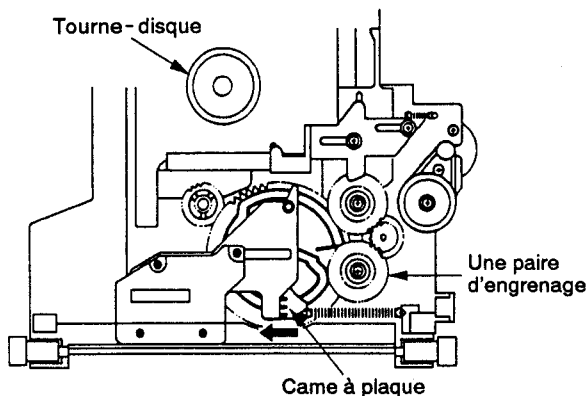


Fig. 4


- ④ Appuyer sur la touche ◀◀ ou ▶▶ pour faire apparaître "S - CD" sur l'écran du moniteur TV.

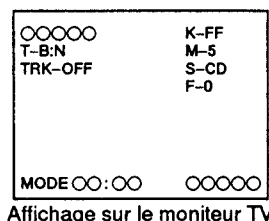


- ⑤ Appuyer deux fois sur la touche PLAY (▶). Le disque sera reproduit normalement.

• **LECTURE DE LD**

- ① Placer le disque LD sur le tourne - disque.

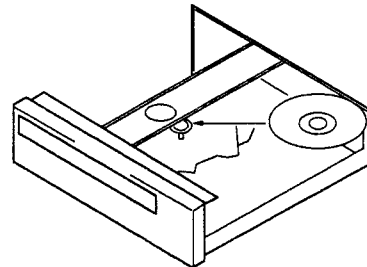










- ② Appuyer une fois sur la touche PLAY (▶).
- (Une paire d'engrenage commence à mouvoir.)
- ③ Appuyer sur la touche SKIP REV (◀◀) tout en appuyant sur la came à plaque (Fig. 4) dans la direction de la flèche pour faire élever le tourne - disque (section moteur de broche). Elever le tourne - disque de sorte que le disque LD peut être placé facilement sur le tourne - disque. Si le tourne - disque est trop élevé, l'abaisser avec la touche SKP FWD (▶▶).
- ④ Placer le disque LD sur le tourne - disque et appuyer une fois sur la touche PLAY (▶) pour verrouiller le disque.
- ⑤ Appuyer sur la touche ◀◀ ou ▶▶ pour faire apparaître "S - LD" sur l'écran du moniteur TV.

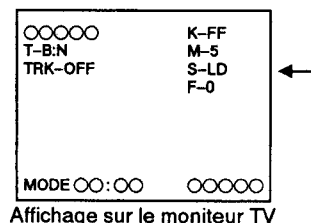

- ⑥ Appuyer deux fois sur la touche PLAY (▶). Le disque sera reproduit normalement.

5.2 SOMMAIRE DES REGLAGE







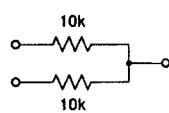
	Réglage	Point de réglage	Equipement de mesure et calibre	Point de mesure	Etat du lecteur
1	Vérification et réglage de correction d'inclinaison	VR607	<ul style="list-style-type: none"> • Moniteur TV 	Indication d'inclinaison sur l'écran du mode d'essai	<ul style="list-style-type: none"> • Alimentation sur ON • Mode d'essai • Pas de disque installé
2	Réglage approximatif de centrage	Vis de réglage de centrage sur la base d'inclinaison	<ul style="list-style-type: none"> • Oscilloscope • STD-901 ou STD-902 • Resistance MIX 	CN120 X: Broche ⑨ (TRK ERR) Y: Broche ① + ② (TRK SUM)	<ul style="list-style-type: none"> • Mode d'essai Asservissement d'alignement ouvert Asservissement d'inclinaison ON • La piste la plus intérieure de STD-901 ou STD-902, qui n'est pas en contact avec la butée mécanique.
3	Réglage de balance de mise au point (1) TRK ERR MAX	VR605	<ul style="list-style-type: none"> • Oscilloscope • STD-901 ou STD-902 	CN120 Broche ⑨ (TRK ERR)	<ul style="list-style-type: none"> • Mode d'essai Asservissement d'alignement ouvert Asservissement d'inclinaison ON • La piste intérieure de STD-901 ou STD-902
4	Réglage de balance de mise au point (2) RF MAX	VR606	<ul style="list-style-type: none"> • Oscilloscope • STD-901 ou STD-902 	CN120 Broche ③ (RF)	<ul style="list-style-type: none"> • Mode d'essai Asservissement d'alignement fermé Asservissement d'inclinaison ON • La piste intérieure de STD-901 ou STD-902
5	Réglage d'angle de direction tangentielle	Vis de réglage TAN sur la base d'inclinaison	<ul style="list-style-type: none"> • Oscilloscope • STD-901 ou STD-902 	CN120 Broche ③ (RF)	<ul style="list-style-type: none"> • Mode d'essai Asservissement d'alignement fermé Asservissement d'inclinaison ON • La piste intérieure de STD-901 ou STD-902
6	Réglage fin de centrage	Vis de réglage de centrage sur la base d'inclinaison	<ul style="list-style-type: none"> • Oscilloscope • STD-901 ou STD-902 	CN120 X: Broche ⑨ (TRK ERR) Y: Broche ① + ② (TRK SUM)	<ul style="list-style-type: none"> • Mode d'essai Asservissement d'alignement ouvert Asservissement d'inclinaison ON • La piste la plus intérieure de STD-901 ou STD-902, qui n'est pas en contact avec la butée mécanique.
	Vérification de diaphonie et réglage de correction d'inclinaison	VR607	<ul style="list-style-type: none"> • Moniteur TV • GGV1003 	Ecran de vérification de diaphonie	<ul style="list-style-type: none"> • Mode d'essai Asservissement d'alignement fermé Asservissement d'inclinaison ON • GGV1003 #115 STILL
7	<p>Si la diaphonie est encore apparente après le réglage indiqué dans (7), régler la vis de réglage TAN situé sur le fond de la lecteur à l'aide de la clé hexagonale (type droit, taille: 3 mm) en observant l'arrêt sur image du GGV1003#115 sur l'écran. Ensuite, procédez au réglage dans (6).</p>				

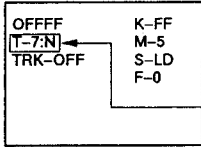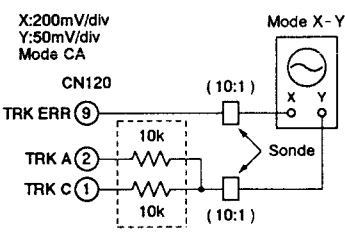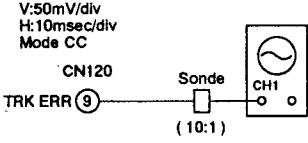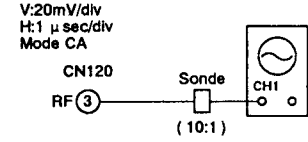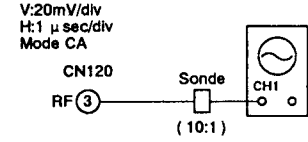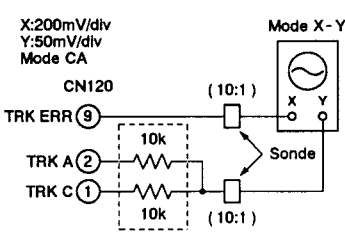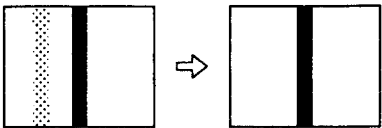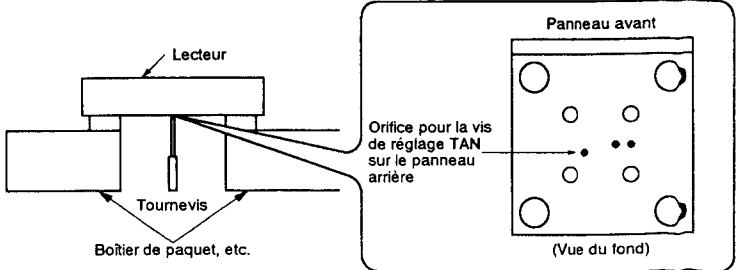Procédure de réglage	Forme d'onde et schéma de connexion
<ol style="list-style-type: none"> Vérifier que l'indication d'inclinaison sur l'écran du mode d'essai est entre T-6 et T-8. Si l'indication d'inclinaison n'est pas entre T-6 et T-8, Régler VR607 jusqu'à ce que l'indication soit entre T-6 et T-8. 	 <p>Régler VR607 tout en observant la figure sur l'écran du mode d'essai.</p>
<ol style="list-style-type: none"> Faire glisser le coulisseau pour qu'il n'est pas en contact avec la butée mécanique située sur la position de l'indication S-IN pour le clisseau. Observer TRK ERR (Xch) et TRK SUM (Ych) en mode X-Y avec l'asservissement TRK ouvert. Tourner la vis de réglage de centrage jusqu'à ce que la figure de Lissajous soit horizontale. 	 <p>Régler de manière que la figure Lissajous soit horizontale.</p>
<ol style="list-style-type: none"> Observer TRK ERR du CH1 sur l'oscilloscope avec l'asservissement TRK ouvert. Régler VR605 jusqu'à ce que l'amplitude de la forme d'onde soit maximum. 	 <p>Régler de manière que l'amplitude soit maximum.</p>
<ol style="list-style-type: none"> Fermer l'asservissement TRK et observer RF du CH1 sur l'oscilloscope. Régler VR606 jusqu'à ce que l'amplitude de la forme d'onde soit maximum et que l'enveloppe soit très claire. 	 <p>Régler de manière que l'amplitude soit maximum et que l'enveloppe soit très claire.</p>
<ol style="list-style-type: none"> Observer RF du CH1 sur l'oscilloscope avec l'asservissement TRK fermé. Régler la vis de réglage TAN jusqu'à ce que l'amplitude de la forme d'onde soit maximum et que l'enveloppe soit très claire. 	 <p>Régler de manière que l'amplitude soit maximum et que l'enveloppe soit très claire.</p>
<p>Effectuer les réglage fin de centrage en suivant la même procédure que dans "(2) Réglage approximatif de centrage".</p>	 <p>Régler de manière que la figure Lissajous soit horizontale.</p>
<ol style="list-style-type: none"> Rechercher l'adresse 115 de GGV1003 et geler l'image. Vérifier la diaphonie. Si la diaphonie apparaît, régler VR607 jusqu'à ce que la diaphonie soit peut apparent. 	 <p>Si la diaphonie apparaît, régler jusqu'à ce que la diaphonie soit peut apparente.</p>
 <p>Panneau avant</p> <p>Lecteur</p> <p>Tournevis</p> <p>Boîtier de paquet, etc.</p> <p>Orifice pour la vis de réglage TAN sur le panneau arrière</p> <p>(Vue du fond)</p>	

	Réglage	Point de réglage	Equipement de mesure et calibre	Point de mesure	Etat du lecteur
8	Réglage de gain de boucle d'asservissement de mise au point	VR604	<ul style="list-style-type: none"> Oscilloscope GGV1003 Oscillateur AF Resistance (47kΩ) 	CN120 X: Broche ⑦ (FCS IN) Y: Broche ⑥ (FCS ERR)	<ul style="list-style-type: none"> Mode d'essai Asservissement TRK fermé Asservissement d'inclinaison ON GGV1003 #15,000 STILL
9	Réglage de gain de boucle d'asservissement d'alignement	VR601	<ul style="list-style-type: none"> Oscilloscope GGV1003 Oscillateur AF Resistance (47kΩ) 	CN120 X: Broche ⑩ (TRK IN) Y: Broche ⑨ (TRK ERR)	<ul style="list-style-type: none"> Mode d'essai Mode arrêt ou l'asservissement TRK fermé Asservissement d'inclinaison ON GGV1003 #15,000 STILL
10	Réglage de niveau RF	VR601	<ul style="list-style-type: none"> Oscilloscope GGV1003 	CN120 Broche ③ (RF)	<ul style="list-style-type: none"> Mode d'essai Asservissement TRK fermé Asservissement d'inclinaison ON GGV1003 #15,000 STILL
11	Réglage de rythmeur de générateur synchronisation	VC401	<ul style="list-style-type: none"> Compteur de fréquence 	Câble R558 (Pas de côté de connexion)	<ul style="list-style-type: none"> Alimentation ON Mode arrêt
12	Réglage de REF-H	VC901	<ul style="list-style-type: none"> Compteur de fréquence 	Câble R667 (IC601 (PM3002), côté de la broche ⑧)	<ul style="list-style-type: none"> Alimentation ON Mode arrêt
13	Réglage de fréquence central VCO	VR481	<ul style="list-style-type: none"> Oscilloscope GGV1007 	CH1: Câble C405 CH2: Câble C499	<ul style="list-style-type: none"> Mode normal GGV1007 #15,000 STILL
14	Réglage de niveau vidéo	VR482	<ul style="list-style-type: none"> Moniteur TV Oscilloscope GGV1007 	Borne de sortie vidéo	<ul style="list-style-type: none"> Mode normal GGV1007 #5,251 à #6,000 PLAY

Procédure de réglage	Forme d'onde et schéma de connexion
<ol style="list-style-type: none"> 1. Rechercher l'adresse 15,000 de GGV1003 et geler l'image. 2. Xch: Connecter la résistance (47 kΩ) au canal et FCS IN. Ych: Connecter à FCS ERR. 3. Connecter l'oscillateur AF entre Xch et la résistance de 47 kΩ, et régler VR604 pour que la figure Lissajous soit symétrique. 	<p>X:200mV/div Y:20mV/div Mode CC</p> <p>Mode X-Y</p> <p>Régler de façon que la figure Lissajous soit symétrique.</p>
<ol style="list-style-type: none"> 1. Xch: Connecter la résistance de 47 kΩ au canal et TRK IN. 2. Connecter l'oscillateur AF entre Xch et la résistance de 47 kΩ. Noter l'angle d'inclinaison par rapport à la ligne horizontale avec le disque en mode arrêt. 3. Rechercher l'adresse 15,000 de GGV1003 et geler l'image. 4. Placer en mode de lecture (avec l'asservissement TRK fermé, l'inclinaison ON). Régler VR603 de pour que l'angle d'inclinaison de la forme d'onde soit la même que l'angle notée à l'étape 3. 	<p>X:200mV/div Y:10mV/div Mode CC</p> <p>Mode X-Y</p> <p>Régler de façon que la figure Lissajous soit symétrique.</p>
<ol style="list-style-type: none"> 1. Rechercher l'adresse 15,000 de GGV1003 et geler l'image. Observer RF du CH1 sur l'oscilloscope. 2. Régler VR601 pour que l'amplitude RF soit 300mV \pm 50mVc-c. 	<p>V:10mV/div H:2msec/div Mode CA</p> <p>300mVp-p \pm 50mV</p>
<p>Régler la fréquence de l'horloge (17,734475 MHz) \pm 100Hz.</p>	<p>Compteur de fréquence</p>
<p>Régler la mise au point sur 3,5546875 MHz \pm 25Hz.</p>	<p>Compteur de fréquence</p>
<p>Placer la détente dans le CH1 et régler de façon que le centre d'instabilité (jitter) de signal vidéo du CH2 soit 75 μsec (1H + 11 μsec) \pm 2 μsec par rapport au signal vidéo du CH2.</p>	<p>V:20mV/div (CH1) 20mV/div (CH2) H:10 μsec/div (Détente) Mode CA</p> <p>Instabilité causée par l'excentricité 11 μS 75 μS</p>
<p>Connecter la résistance de 75 Ω à la borne de sortie vidéo (peut-être en connectant au moniteur) et régler de façon que la pointe de synchronization du niveau du signal blanc de 100% soit 1Vc-c \pm 5%.</p>	<p>Sortie vidéo</p> <p>Niveau vidéo</p> <p>1,0Vp-p \pm 5%</p> <p>Moniteur TV</p> <p>Oscilloscope</p> <p>Gamme de l'oscilloscope V:20mV/div 10 μsec/div (Détente) Mode CA</p>

	Réglage	Point de réglage	Equipement de mesure et calibre	Point de mesure	Etat du lecteur
15	Réglage du niveau vidéo avec retard 1H	VR441	<ul style="list-style-type: none"> • Oscilloscope • GGV1007 	CH1: Câble C443 CH2: Câble C445	<ul style="list-style-type: none"> • Mode normal • GGV1007 • #5,300 STILL
16	Réglage du niveau d'erreur VPS	VR521	<ul style="list-style-type: none"> • Moniteur TV • GGV1007 	Moniteur TV	<ul style="list-style-type: none"> • Mode normal • GGV1007 • #6,100 à #6,750 PLAY (Ecran magenta)
17	Réglage du niveau vidéo MOD	VR102	<ul style="list-style-type: none"> • Oscilloscope • GGV1007 	CH1: Câble C118 CH2: Câble C122	<ul style="list-style-type: none"> • Mode normal • GGV1007 • #5,300 STILL
18	Réglage du sous-porteuse avec retard 1H	VR101	<ul style="list-style-type: none"> • Oscilloscope • GGV1007 	CH1: Câble C118 CH2: Câble C122	<ul style="list-style-type: none"> • Mode normal • GGV1007 • #5,100 STILL

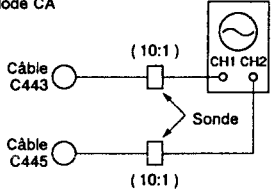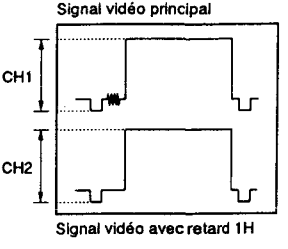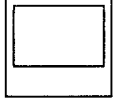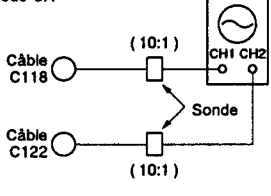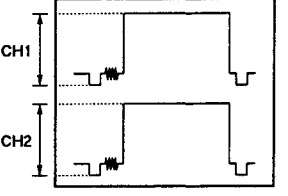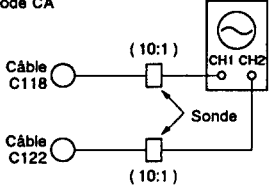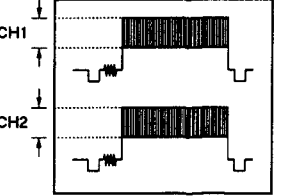Procédure de réglage	Forme d'onde et schéma de connexion
<p>Régler de façon que les niveaux de la pointe de synchronisation du niveau du signal blanc (100%) pour les CH1 et CH2 soient les mêmes.</p>	<p>V:20mV/div (CH1) 20mV/div (CH2) H:10 μsec/div (Trigger) Mode CA</p>  
<p>Régler de façon que l'irrégularité sur l'écran magenta soit minimisée.</p>	 <p>L'irrégularité sur l'écran magenta est minimisée.</p>
<p>Régler de façon que les niveaux de la pointe de synchronisation du signal de blanc (100%) pour les CH1 et CH2 soient les mêmes.</p>	<p>V:20mV/div (CH1) 20mV/div (CH2) H:10 μsec/div Mode CA</p>  
<p>Régler de façon que les niveaux du signal chroma du signal magenta pour les CH1 et CH2 soient les mêmes.</p>	<p>V:20mV/div (CH1) 20mV/div (CH2) H:10 μsec/div (Défente) Mode CA</p>  


5. AJUSTES

5.1 PRELIMINARIOS

● Instrumentos de Los Ajustes

- Disco de prueba de CD (STD - 901 o STD - 902)
- Disco de prueba de LD (GGV1003 o GGV1007)
- Destornillador con la cabeza de (-) (medio)
- Destornillador con la cabeza de (-) (pequeño)
- Llave inglesa hexagonal (tipo recto, tamaño: 3mm)
- Resistores ($10k\Omega \times 2$, $47k\Omega$)
- Osciloscopio de traza doble (con retraso)
- Oscilador de AF
- Contador de frecuencia
- Monitor de TV
- Filtro de paso bajo

Use los filtros de paso bajo como se ven abajo en el procedimiento de ajuste aproximado del centrado 2., y en el procedimiento de ajuste fino del centrado 6., cuando es difícil observar la forma de onda del señal y ruido.

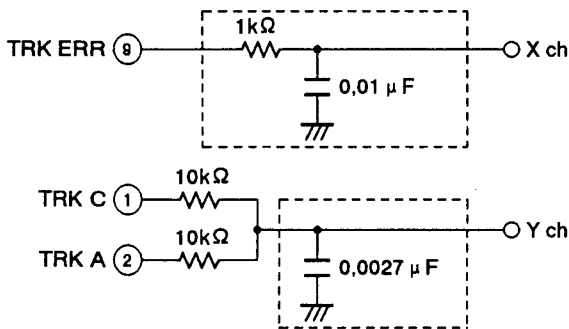

● Montaje de Armario Durante el Ajuste del Centrado

La posición de S - IN (sin golpear el taponador) del montaje de armario durante el ajuste del centrado se ilustra abajo.

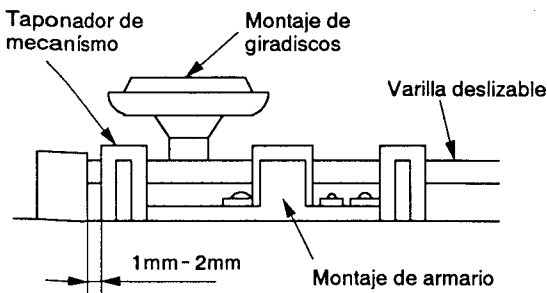


Fig. 1 Vista desde el lado derecho

● Puntos de Ajuste


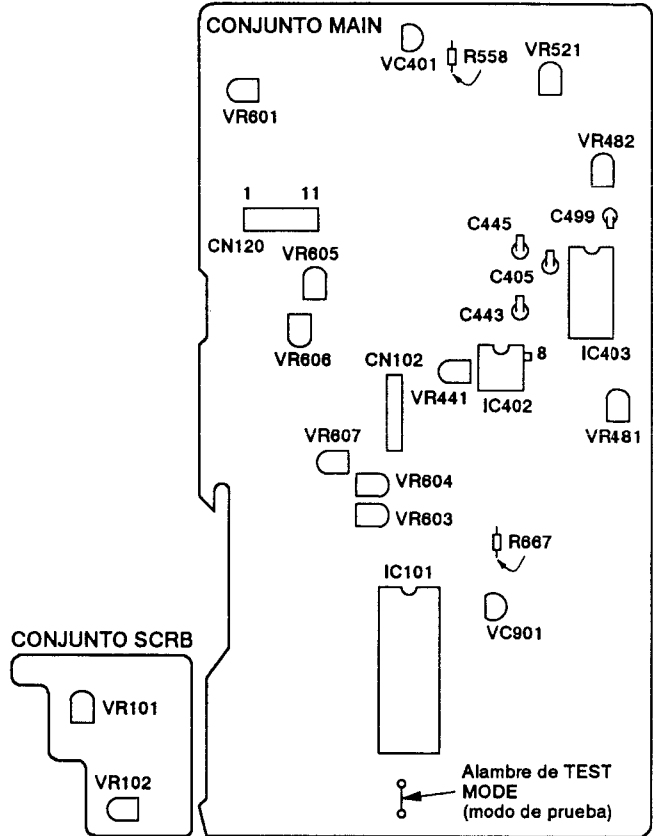


Fig. 2 Sección de los conjuntos MAIN y SCRB

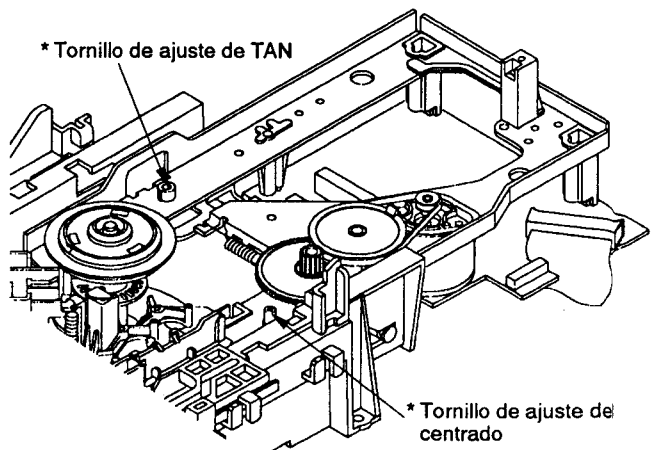

* : Porque la gama de ajuste de los tornillos de TAN y del centrado es solamente ± 90 grados. No haga girar los tornillos más allá de esta gama desde el centro.

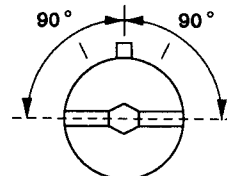


Fig. 3 Sección de la base de inclinación

● Modo de Prueba

1) Para activar el modo de prueba

1. Mientras que se alimenta, conecte el alambre (Figura 2) a GND por aproximadamente 1 segundo.
2. Después de comprobar que la pantalla está completamente encendida, desconecte el alambre desde GND.

2) Para cancelar el modo de prueba

1. Desconecte la alimentación.

● Operaciones de las teclas en el modo de prueba

Condición del reproductor	Operación de las teclas	Funcionamiento	Notas
La bandeja abierta	◀◀/▶▶ SKIP (Refiérase a nota 1.)	◀◀: Mueve la bandeja en la dirección cerrada y levanta el giradiscos cuando está bajado. ▶▶: Mueve la bandeja en la dirección abierta y baja el giradiscos cuando está bajado.	
La bandeja abierta	▶ Avance	Sujetador	
Sujetador	▶ Avance	Haga girar el disco a través del servo TRK Abierto	TRK - OFF
El servo de TRK abierto	▶ Avance	Servo TRK Cerrado	TRK - ON
La inclinación neutral	+MULTI - SPEED	Servo TILT Cerrado	T-□:ON
TILT ON	- MULTI - SPEED	Neutral TILT	T-□:N
TILT Neutral u ON	◀◀/▶▶ SKIP	Ponga el servo TILT en OFF, y se moverá TILT.	T - 1 a T - E
Sujetador	◀◀/▶▶ SCAN	Puede forzar el sujetador a mover.	S - LD S - CDV S - CD S - IN
Avance	PAUSE	Pausa	
Avance	■ STOP	Parada	
Parada	▲ OPEN	Abierto	
Avance	<div style="text-align: center;"> +10 ↓ 0 a 9 ↓ ▶ PLAY </div>	Ponga en el modo de entrada de domicilio de SEARCH. Indique el alambre de domicilio de SEARCH con las teclas 0 a 9. Presione la tecla C CLEAR si es incorrecto el domicilio designado. Busca el domicilio designado al presionar la tecla PLAY.	


Nota 1: Presione las teclas SKIP (|◀◀/▶▶|) después de que la bandeja esté en el estado abierto por presionando la tecla OPEN (▲). En el estado abierto de la bandeja, si se presiona la tecla PLAY (▶) se cambia en el estado del control de TILT y las teclas SKIP no funcionan correctamente.

● Operacion del Reproductor en el Modo de Prueba

Después de seleccionar el modo de prueba, maneje las teclas sobre el reproductor o sobre la unidad de control remoto.

• REPRODUCCION DE UN DISCO COMPACTO

- ① Ponga un disco compacto sobre el giradiscos.

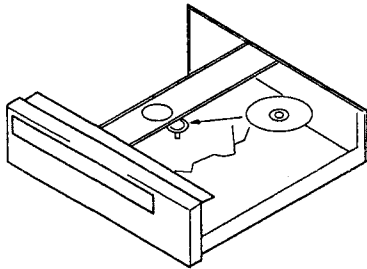

- ② Presione la tecla PLAY (▶) una vez.
(El piñon gemelo se pone en marcha.)
- ③ Empuje el plato de leva en la dirección de la flecha y espere hasta que se enganche el disco compacto.


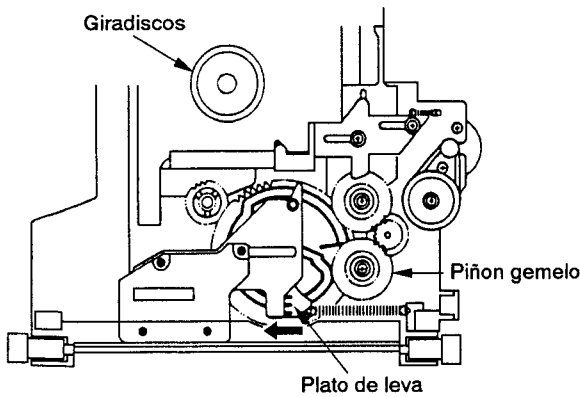


Fig. 4


- ④ Presione la tecla ◀◀ o ▶▶ hasta que se muestre la visualización "S - CD" en la pantalla.
- ⑤ Presione la tecla PLAY (▶) y el disco se reproducirá normalmente.

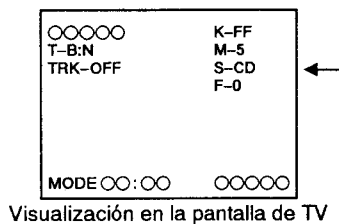


Visualización en la pantalla de TV

• REPRODUCCION DE UN DISCO LASERICO

- ① Ponga un disco lasérico sobre el giradiscos.

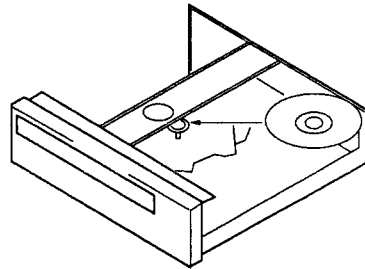






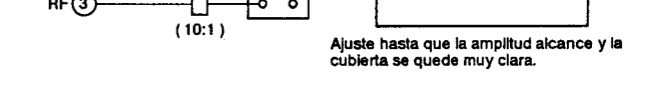
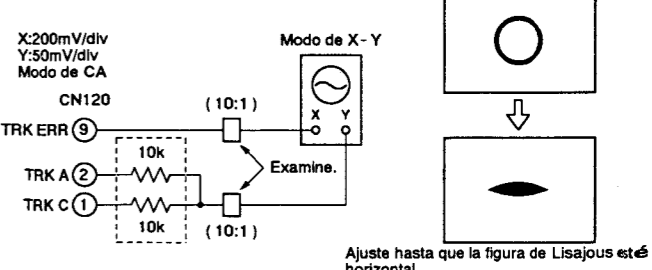

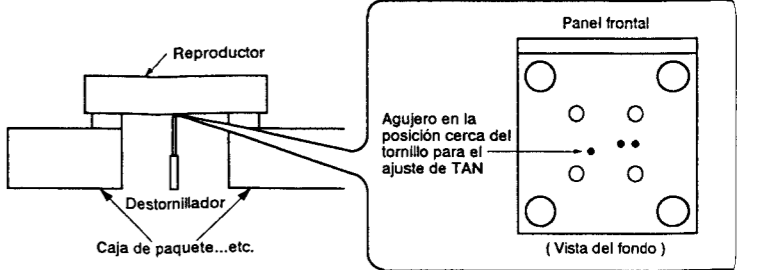
- ② Presione la tecla PLAY (▶) una vez.
(El piñon gemelo se pone en marcha.)
- ③ Presione la tecla SKIP REV (◀◀) para levantar el giradiscos (sección del motor de eje) mientras que presiona el plato de leva (Fig. 4) en la dirección de la flecha. Levántelo en la posición en la que se pone el disco fácilmente sobre el giradiscos.
Si se pone el giradiscos demasiado arriba, rebájelo con la tecla SKIP FWD (▶▶).
- ④ Ponga el disco lasérico sobre el giradiscos y presione la tecla PLAY (▶) una vez para enganchar el disco.
- ⑤ Presione la tecla ◀◀ o ▶▶ hasta que la visualización "S - LD" se muestre en la pantalla.

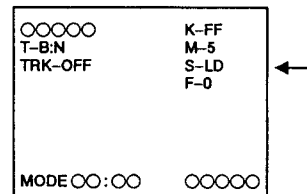

Visualización en la pantalla de TV

- ⑥ Presione la tecla PLAY (▶) dos veces, y el disco se reproducirá normalmente.

5.2 TABLA DE LOS AJUSTES

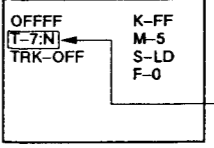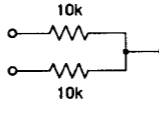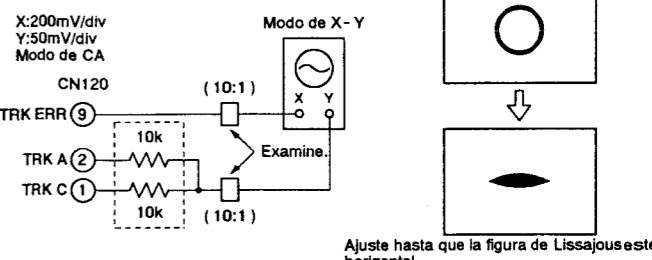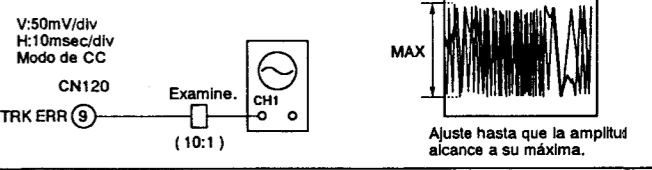	Nombre de ajuste	Punto de ajuste	Equipo y instrumento de medida	Punto de medida	Estado del giradiscos	Procedimiento de ajuste	Forma de onda y diagrama de conexión
1	Comprobación y ajuste de desviación de inclinación	VR607	• Monitor de TV	Indicación de inclinación en la pantalla del modo de prueba	• Alimentación ON • Modo de prueba • No se instala el disco.	<ol style="list-style-type: none"> 1. Compruebe que la indicación sobre la pantalla del modo de prueba está en T-6 a T-8. 2. Si la indicación no se quede en T-6 a T-8, ajuste VR607 hasta que la indicación de inclinación alcance a T-6 a T-8. 	
2	Ajuste aproximado del centrado	Tornillo de ajuste del centrado de base de inclinación	<ul style="list-style-type: none"> • Osciloscopio • STD-901 o STD-902 • Resistor de MIX 	CN120 X: ③ Clavija (TRK ERR) Y: ① + ② Clavija (TRK SUM)	<ul style="list-style-type: none"> • Modo de comprobación Servo de TRK: Abierto Servo de inclinación: ON • Pista más interior de STD-901 o STD-902 que no se toca al taponador 	<ol style="list-style-type: none"> 1. Mueva el deslizador hasta que no toque al taponador mecánico en la posición indicada como S-IN. 2. Observe TRK ERR (canal X) y TRK SUM (canal Y) en el modo de X-Y mientras que está abierto el servo de TRK. 3. Haga girar el tornillo para el ajuste del centrado hasta que la figura de Lissajous esté horizontal. 	
3	Ajuste de equilibrio de foco (1) TRK ERR MAX	VR605	<ul style="list-style-type: none"> • Osciloscopio • STD-901 o STD-902 	CN120 ③ Clavija (TRK ERR)	<ul style="list-style-type: none"> • Modo de prueba Servo de TRK: Abierto Servo de inclinación: ON • Pista más interior de STD-901 o STD-902 	<ol style="list-style-type: none"> 1. Observe TRK ERR en CH1 del osciloscopio mientras que está abierto el servo de TRK. 2. Ajuste VR605 hasta que la forma de onda de la amplitud alcance a su máxima. 	
4	Ajuste de equilibrio de foco (2) RF MAX	VR606	<ul style="list-style-type: none"> • Osciloscopio • STD-901 o STD-902 	CN120 ③ Clavija (RF)	<ul style="list-style-type: none"> • Modo de prueba Servo de TRK: Cerrado Servo de inclinación: ON • Pista más interior de STD-901 o STD-902 	<ol style="list-style-type: none"> 1. Cierre el servo de TRK y observe RF en CH1 del osciloscopio. 2. Ajuste VR606 hasta que la forma de onda de la amplitud alcance a su máxima y se quede muy clara la cubierta. 	
5	Ajuste del ángulo del sentido tangencial	Tornillo de ajuste de TAN de la base de inclinación	<ul style="list-style-type: none"> • Osciloscopio • STD-901 o STD-902 	CN120 ③ Clavija (RF)	<ul style="list-style-type: none"> • Modo de prueba Servo de TRK: Cerrado Servo de inclinación: ON • Pista más interior de STD-901 o STD-902 	<ol style="list-style-type: none"> 1. Observe RF en CH1 del osciloscopio mientras que está cerrado el servo de TRK. 2. Ajuste el tornillo para el ajuste de TAN hasta que la forma de onda de la amplitud alcance a su máxima y se quede muy clara la cubierta. 	
6	Ajuste fino del centrado	Tornillo de ajuste del centrado de base de inclinación	<ul style="list-style-type: none"> • Osciloscopio • STD-901 o STD-902 	CN120 X: ③ Clavija (TRK ERR) Y: ① + ② Clavija (TRK SUM)	<ul style="list-style-type: none"> • Modo de prueba Servo de TRK: Abierto Servo de inclinación: ON • Pista más interior de STD-901 o STD-902 que no toca al taponador 	Haga el ajuste fino del centrado siguiendo el procedimiento mismo que se explica en la sección "(2) Ajuste aproximado del centrado".	
7	Comprobación de diafonía y ajuste de desviación de inclinación	VR607	<ul style="list-style-type: none"> • Monitor de TV • GGV1003 	Pantalla de comprobación de diafonía	<ul style="list-style-type: none"> • Modo de prueba Servo de TRK: Cerrado Servo de inclinación: ON • GGV1003 Número 115 STILL 	<ol style="list-style-type: none"> 1. Busque el domicilio 115 de GGV1003 y establézcalo. 2. Compruebe la diafonía. Si la diafonía está pronunciada, ajuste VR607 hasta que la diafonía no esté notable. 	
7	Cuando la diafonía todavía está notable aun después del ajuste en (7), use una llave inglesa hexagonal (tipo recto, tamaño: 3mm) para ajustar el tornillo para el ajuste de TAN situado en el fondo del reproductor observando la pantalla de GGV1003 número 115 STILL. Después, haga los procedimientos desde (6).						

	Nombre de ajuste	Punto de ajuste	Equipo y instrumento de medida	Punto de medida	Estado del giradiscos	Procedimiento de ajuste	Forma de onda y diagrama de conexión
8	Ajuste de la ganancia del bucle de servo de foco	VR604	<ul style="list-style-type: none"> Osciloscopio GGV1003 Oscilador de AF Resistor (47kΩ) 	CN120 X: ⑦ Clavija (FCS IN) Y: ⑥ Clavija (FCS ERR)	<ul style="list-style-type: none"> Modo de prueba Servo de TRK: Cerrado Servo de inclinación: ON GGV1003 Número 15000 STILL 	<ol style="list-style-type: none"> Busque el domicilio 15000 de GGV1003 y establézcalo. Canal X: Conecte el resistor (47 kΩ) al canal y a FCS IN. Canal Y: Conecte a FCS ERR. Conecte el oscilador AF entre el canal X y el resistor de 47 kΩ, y ajuste VR604 hasta que la figura de Lissajous esté simétrica. 	<p>X:200mV/div Y:20mV/div Modo de CC</p> <p>Modo de X-Y</p> <p>Ajuste hasta que la figura de Lissajous esté simétrica.</p>
9	Ajuste de la ganancia del bucle de servo de seguimiento	VR601	<ul style="list-style-type: none"> Osciloscopio GGV1003 Oscilador de AF Resistor (47kΩ) 	CN120 X: ⑩ Clavija (TRK IN) Y: ⑨ Clavija (TRK ERR)	<ul style="list-style-type: none"> Modo de prueba Modo de parada o Servo de TRK: Cerrado Servo de inclinación: ON GGV1003 Número 15000 STILL 	<ol style="list-style-type: none"> Canal X: Conecte el resistor de 47 kΩ y a TRK IN. Canal Y: Conecte a TRK ERR. Conecte el oscilador de AF entre el canal X y el resistor de 47 kΩ y anote el ángulo de inclinación hasta la línea horizontal en el estado de parada. Busque el domicilio 15000 de GGV1003 y establézcalo. Ponga en el modo de PLAY (Servo de TRK cerrado, y TILT ON.) Ajuste VR603 para que el ángulo de inclinación de la forma de onda esté mismo que el ángulo de inclinación anotado en el procedimiento 3. 	<p>X:200mV/div Y:10mV/div Modo de CC</p> <p>Modo de X-Y</p> <p>Ajuste hasta que la figura de Lissajous esté simétrica.</p>
10	Ajuste del nivel de RF	VR601	<ul style="list-style-type: none"> Osciloscopio GGV1003 	CN120 ③ Clavija (RF)	<ul style="list-style-type: none"> Modo de prueba Servo de TRK: Cerrado Servo de inclinación: ON GGV1003 Número 15000 STILL 	<ol style="list-style-type: none"> Busque el domicilio 15000 de GGV1003 y establézcalo. Observe RF en CH1 del osciloscopio. Ajuste VR601 hasta que la amplitud de RF esté 300 mV ± 50mVp-p. 	<p>V:10mV/div H:2msec/div Modo de CA</p> <p>300mVp-p ± 50mV</p>
11	Ajuste del reloj degenerador para la señal sincrónica	VC401	<ul style="list-style-type: none"> Contador de frecuencia 	R558 Alambre de conducción (No el lado de conexión)	<ul style="list-style-type: none"> Alimentación ON Modo de parada 	Ajuste la frecuencia del reloj (17.734475MHz) ± 100Hz.	<p>Contador de frecuencia</p>
12	Ajuste de REF-H	VC901	<ul style="list-style-type: none"> Contador de frecuencia 	R667 Alambre de conducción (IC601 (PM3002) ⑧ Lado de clavija)	<ul style="list-style-type: none"> Alimentación ON Modo de parada 	Ajuste FCS (3.5546875 MHz) ± 25 Hz.	<p>Contador de frecuencia</p>
13	Ajuste de frecuencia central de VCO	VR481	<ul style="list-style-type: none"> Osciloscopio GGV1007 	CH1: C405 Alambre de conducción CH2: C499 Alambre de conducción	<ul style="list-style-type: none"> Modo normal GGV1007 Número 15000 STILL 	Ponga un gatillo en el canal 1 y ajuste hasta que el centro de la fluctuación de la señal del canal 2 esté 75 μ segundo (1H + 11 ± segundo) ± 2 μ segundo comparado con la señal de video del canal 1.	<p>V:20mV/div (CH1) 20mV/div (CH2) H:10 μ sec/div (Gatillo) Modo de CA</p> <p>"Jitter" causado por excentricidad 11 μ S 75 μ S</p>
14	Ajuste del nivel de video	VR482	<ul style="list-style-type: none"> Monitor de TV Osciloscopio GGV1007 	Terminal de la salida de video	<ul style="list-style-type: none"> Modo normal GGV1007 Números 5251 a 6000 PLAY 	Conecte un resistor de 75 Ω al terminal de salida de VIDEO (posible por conectando al monitor) y ajuste hasta que la microplaqueta sincrónica al nivel blanco de 100 % esté 1 Vp-p 5 % a la señal blanca (100 %).	<p>Salida de video</p> <p>Nivel de video</p> <p>Osciloscopio</p> <p>1.0Vp-p ± 5%</p> <p>Gama de osciloscopio V:20mV/div 10 μ sec/div (Gatillo) Modo CA</p> <p>Visualización en la pantalla de TV</p>

	Nombre de ajuste	Punto de ajuste	Equipo y instrumento de medida	Punto de medida	Estado del giradiscos	Procedimiento de ajuste	Forma de onda y diagrama de conexión
15	Ajuste del nivel de video 1H DLY	VR441	<ul style="list-style-type: none"> Osciloscopio GGV1007 	CH1: C443 Alambre de conducción CH2: C445 Alambre de conducción	<ul style="list-style-type: none"> Modo normal GGV1007 Número 5300 STILL 	Ajuste hasta que la microplaqueta sincrónica al nivel blanco de 100 % en la señal blanca (100%) esté la misma que en CH1 y CH2.	<p>V:20mV/div (CH1) 20mV/div (CH2) H:10 μ sec/div (Gatillo) Modo de CA</p>
16	Ajuste del nivel de error de VPS	VR521	<ul style="list-style-type: none"> Monitor de TV GGV1007 	Monitor de TV	<ul style="list-style-type: none"> Modo normal GGV1007 Números 6001 a 6750 PLAY (Pantalla majenta) 	Ajuste hasta que la irregularidad en color en la pantalla majenta se disminuya.	<p>La irregularidad en color se disminuya.</p>
17	Ajuste del nivel de video de MOD	VR102	<ul style="list-style-type: none"> Osciloscopio GGV1007 	CH1: C118 Alambre de conducción CH2: C122 Alambre de conducción	<ul style="list-style-type: none"> Modo normal GGV1007 Número 5300 STILL 	Ajuste hasta que la microplaqueta sincrónica al nivel blanco de 100% en la señal blanca (100%) esté la misma que en CH1 y CH2.	<p>V:20mV/div (CH1) 20mV/div (CH2) H:10 μ sec/div Modo de CA</p>
18	Ajuste de sub portador con retraso de 1H (hora)	VR101	<ul style="list-style-type: none"> Osciloscopio GGV1007 	CH1: C118 Alambre de conducción CH2: C122 Alambre de conducción	<ul style="list-style-type: none"> Modo normal GGV1007 Número 5100 STILL 	Ajuste hasta que la señal de croma en la señal majenta esté misma en CH1 y CH2.	<p>V:20mV/div (CH1) 20mV/div (CH2) H:10 μ sec/div (Gatillo) Modo de CA</p>

6. IC INFORMATION

- The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.

6.1 PD0135A1 (IC101)

• Mechanism control IC

● Pin Function

No.	Pin Name	I/O	Function
1	VCC	—	Power supply connection pin. Set to 5V ± 10%.
2	DIRECT	O	CD DIRECT video system power OFF signal output pin "H"=video system power OFF, "L"=ON
3	N.C.	—	Not used.
4	LD ON	O	Laser video ON/OFF switching signal output H: ON, L: OFF
5	TGH	O	Tracking operation control signal output pin The control signal supports ON/OFF of the tracking servo - mechanism operation. "H"=OFF, "L"=ON
6	SLDR POS	I	Pickup position detection switch input pin (analog signal) Divides the resistance among the switches, reads the value of the A/D input, and detects the position.
7	FREQ DET	I	RF detection signal input pin (analog signal) Inputs the A/D conversion of the RF detection output and is used in the spindle luff servo - mechanism. Voltage and frequency are proportional.
8	TBAL ERR	I	Tracking balance error signal input pin (analog signal) Signal is A/D converted and is input as the tracking offset control.
9	TILT ERR	I	Tilt sensor output signal input pin (analog signal) Inputs (0 to 5V) the tilt sensor output amplified to a 40 to 50dB signal. The signal is A/D converted and is input as the tilt sensor control. Controls the tilt motor until the signal is 2.5V.
10	CAV	O	CAV/CLV switching signal output pin "H"=CAV, "L"=CLV Connected to pin 6 of PA5013A and used as a VIDEO NR switching signal.
11	GFS	I	CD (EFM signal) frame lock signal input pin Connected to pin 12 of the EFM decoder IC: CXD2500AQ. "H"=Lock, "L"=Unlock GFS is an abbreviation for Good Frame Sync.
12	TBAL DRV	O	Tracking offset control signal output pin Outputs the tracking offset after PWM and is used in auto tracking offset. Cycle: 910 μ sec; 3 - value control H, L, Z.
13	SQ2	O	Analog audio switching signal output pin 2/R Squelch: H
14	SQ1	O	Analog audio switching signal output pin 1/L Squelch: H When in digital audio mode, the signal is output through the control of the EFM decoder IC: CXD2500AQ.
15	SI2	I	EFM decoder IC: CXD2500AQ subcode input pin Reads the subcodes of SCK2 and the signal.
16	XLAT2	O	EFM decoder IC: CXD2500AQ control latch signal output pin Sends the control command using SO3 and 2500CLK.
17	SCK2	O	EFM decoder IC: CXD2500AQ subcode read clock signal output pin Sets the clock to 96 and reads the subcode.
18	TILT DRV	O	Tilt control signal output pin Outputs the tilt drive after PWM and is used in tilt servo - mechanism.
19	S-FTOM	I	Input pin of data from the mode control IC Serial Used with the data signal to the carriage generating IC.
20	S-MTOM	O	Serial data output to the mode control IC Serial



No.	Pin Name	I/O	Function
21	SCK1	I/O	Clock for serial communication with the mode control IC In the input mode except during serial communication with the mode control IC Used with the clock signal to the carriage generating IC
22	SENS	I	SENS signal input pin All of the following signals from 2500 are switched and are output to the signal: SEIN, FZC, A.S, TZC, XBUSY, FOK, GFS, COMP, COUT and OV64.
23	SCOR	I	Subcode SYNC signal input pin Inputs the subcode signal from the EFM decoder IC: CXD2500AQ when the signal is "H". Supervises the disc playback depending on the presence of the signal.
24	N.C.	—	Not used.
25	SHAKE	I/O	Pin of hand shake signal for data communication with the mode control IC This pin is a bi - directional data path which sends the data transfer timing through the I/O mode switching of the respective microcomputers.
26	XPBV	I	LD/CDV playback V - SYNC signal input pin IC basically operates in sync hronization (rising and leading edges) with the signal. Setting the signal as standard in the special CAV playback mode, generates jump timing. "L"=V - SYNC ongoing
27	CN VSS	—	GND for A/D conversion
28	XRESET	I	Reset signal input pin "L"=Reset, "H"=Cancel reset
29	XTAL IN	I	9MHz clock generation input pin
30	XTAL OUT	O	9MHz clock generation output pin
31	FTS CLK	O	φ external clock output pin Outputs a clock which is one - fourth of the master clock (9MHz) used in the FTS IC: PM3003. 2.25MHz Does not output when using an FTS IC other than PM3003
32	VSS	—	GND
33	SW1	I	Loading/tilt position detection switch input pin
34	SW2	I	Loading/tilt position detection switch input pin
35	SW3	I	Loading/tilt position detection switch input pin
36	N.C.	I	Not used Processing needed when used for input
37	FG	I	Spindle motor - FG signal input pin 24 pulses per signal Divided into thirds and used inside the microcomputer.
38	DATA	I	Input pin for Phillips code decoder in the mechanism controller
39	XPBH	I	Playback H - SYNC input for Phillips code decoder
40	XPBV	I	Playback V - SYNC input for Phillips code decoder
41	GI. MIRR	O	False MIRR signal output pin to jump 1 track for LD.
42	N.C.	—	Not used
43	N.C.	—	Not used
44	MUTE	O	Audio system audio mute control output pin "H"=MUTE ON, "L"=MUTE OFF
45	16:9	O	16:9 switching signal output pin 16:9 "H", 4.3 (Nomal) "L"
46	T LATCH	O	DAC & Digital PD2026 serial control latch signal output pin
47	N.C.	—	Not used
48	N.C.	—	Not used
49	N.C.	—	Not used
50	2500CLK	O	2500 command clock signal output pin The commands for 2500 are the following: 2500CLK; SO3 and XLAT2.
51	RFCORR	O	RF correction switching signal output pin "H"=gain up. Increases gain (# 8000 to # 8100) within the CAV.

No.	Pin Name	I/O	Function
52	SCAN CONT	O	TBC control signal output pin H: multi-track jump ongoing, L: others
53	CD	O	CD/LD switching signal output pin H: CD, CDV-A, L: LD, CDV-V
54	ACC CONT	O	Spindle acceleration signal output pin H=acceleration, L=deceleration, Z=CD, stop and play
55	GPWM	O	Spindle gain switching duty pulse signal output pin CLV inner circumference: L, outer circumference: H, CAV: L, CDV: H
56	J. TRIG	O	Track jump signal output pin Used for single track jump H: start of track, L: others, Width of "H": approx. 20 μ sec
57	SCK3	O	Serial 3 clock signal output pin Reads the leading edge "H"=within 2 μ sec, "L"=within 20 μ sec
58	SO3	O	Serial 3 data signal output pin With the serial signal as the common signal, divides the signals into three types of latch signals (XLAT3, XLAT2 and T LATCH). LSB first
59	XLATCH3	O	Spindle servo-mechanism IC latch signal output pin
60	J F/R	O	CLV V-SYNC scan mode signal output pin
61	VSQ	O	Video output switching signal output pin "H"=squelch, "L"=playback video
62	XPLAY	I	Usually, held "L" in PLAY mode.
63	N.C.	-	Not used.
64	XSPLOCK	I	Spindle lock signal input pin L: lock, H: unlock

6.2 PD3214A (IC201)

• Mode control IC

● Pin Function

No.	Pin Name	Signal name	I/O	Function
1	PO4/AN4	N.C.	I	Not used
2	PO5/AN5	N.C.	I	Not used
3	PO6/AN6	N.C.	I	Not used
4	PO7/AN7	N.C.	I	Not used
5	AVss	AVss	-	Connected to standard power supply (Vss) for A/D conversion
6	TEST	TEST	I	Test pin Connected to Vss
7	X2	X2	O	Subclock Release
8	X1	X1	I	Subclock Connected to Vcc
9	Vss	Vss	-	Ground
10	OSC1	OSC1	I	System clock Connects 8MHz ceramic lock
11	OSC2	OSC2	I	System clock Connects 8MHz ceramic lock
12	RESET	RESET	I	Reset
13	P10/IRQ0	SHAKE	I/O	Communication timing clock with mechanism control
14	P11/IRP1	SEL IR	I	Remote control signal (including SR)
15	P12/IRQ2	W.D.F	O	For watchdog timer pulse output 
16	P13/IRQ3	POWER On	O	Power ON  Power OFF
17	P14/IRQ4	N.C.	O	Not used
18	P15/IRQ5	N.C.	O	Not used
19	P16/EVENT	N.C.	I	Not used
20	P33/FS27	N.C.	O	Not used
21	P32/FS26	N.C.	O	Not used
22	P31/FS25	N.C.	O	Not used
23	P30/FS24	STANDBY LED	O	Standby LED drive output
24	P47/FS23	N.C.	O	Not used
25	P46/FS22	N.C.	O	Not used
26	P45/FS21	N.C.	O	Not used
27	P44/FS20	N.C.	O	Not used
28	P43/FS19	seg l/KS3	O	FL segment l output and key scan 3 output
29	P42/FS18	seg k/KS2	O	FL segment k output and key scan 2 output
30	P41/FS17	seg j/KS1	O	FL segment j output and key scan 1 output
31	P40/FS16	seg i/KS0	O	FL segment i output and key scan 0 output
32	P50/FS15	seg h	O	FL segment h output
33	P51/FS14	seg g	O	FL segment g output
34	P52/FS13	seg f	O	FL segment f output
35	P53/FS12	seg e	O	FL segment e output

No.	Pin Name	Signal name	I/O	Function
36	P54/FS11	seg d	O	FL segment d output
37	P55/FS10	seg c	O	FL segment c output
38	P56/FS9	seg b	O	FL segment b output
39	P57/FS8	seg a	O	FL segment a output
40	P17/Vdisp	-30V	-	FL drive power supply
41	P60/FD0/FS7	G9	O	FL grid 9 output
42	P61/FD1/FS6	G8	O	FL grid 8 output
43	P62/FD2/FS5	G7	O	FL grid 7 output
44	P63/FD3/FS4	G6	O	FL grid 6 output
45	P64/FD4/FS3	G5	O	FL grid 5 output
46	P65/FD5/FS2	G4	O	FL grid 4 output
47	P66/FD6/FS1	G3	O	FL grid 3 output
48	P67/FD7/FS0	G2	O	FL grid 2 output
49	P70/FD8	G1	O	FL grid 1 output
50	P71/FD9	N.C.	O	Not used
51	P72/FD10	N.C.	O	Not used
52	P73/FD11	N.C.	O	Not used
53	P74/FD12	N.C.	O	Not used
54	P75/FD13	D.CD LED	O	DIRECT CD LED drive output
55	P76/FD14	S-SCAN	I/O	SHUTTER SCAN output
56	P77/FS15	N.C.	O	Not used
57	Vcc	Vcc	-	Power supply
58	P80	KIN0	I	Key input 0
59	P81	KIN1	I	Key input 1
60	P82	KIN2	I	Key input 2
61	P83	KIN3	I	Key input 3
62	P84	KIN4	I	Key input 4
63	P85	KIN5	I	Key input 5
64	P86	KIN6	I	Key input 6
65	P87	N.C.	-	Not used
66	P90/PWM	SYNCHRO OUT	O	SYNCHRO REC output
67	P91/SCK1	XSCK	I/O	Communication clock with mechanism control/OSD
68	P92/SI1	SI	I	Receive data from mechanism control
69	P93/SO1	SO	O	Send data to mechanism control/OSD
70	P94/SCK2	XRESET	O	RESET output from other than mechanism control/OSD
71	P95/S12/CS	XSC	O	OSD chip select
72	P96/SO2	SYNCHRO IN	I	SYNCHRO REC input
73	P97/UD	1700/700	I	Switching input for 1700/700 H: 1700, L: 700
74	PA0	N.C.	O	Not used
75	PA1	N.C.	O	Not used
76	AVcc	AVcc	-	Connection to Vcc of standard power supply for A/D conversion
77	P00/AN0	N.C.	O	Not used
78	P01/AN1	N.C.	O	Not used
79	P02//AN2	N.C.	O	Not used
80	P03/AN3	N.C.	O	Not used

7. FOR CLD - 700 / HEZ AND HB

NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

CONTRAST OF MISCELLANEOUS PARTS

CLD - 700 / HEZ, HB and CLD - 1700 / HEZ have the same construction except for the following:

Mark	Symbol & Description	Part No.			Remarks
		CLD - 1700 / HEZ	CLD - 700 / HEZ	CLD - 700 / HB	
⊙	MOTHER assembly	VWM1276	VWM1264	VWM1264	
NSP	MAIN assembly	VWX1123	VWX1116	VWX1116	
NSP	AUDIO assembly	VWX1124	VWX1117	VWX1117	
⊙	FLKB assembly	VWM1278	VWM1277	VWM1277	
NSP	FLKY assembly	VWG1336	VWG1335	VWG1335	
NSP	HEPB assembly	VWV1254	
⊙	SYPS assembly	VWR1146	VWR1146	VWR1147	
⊙	SCRB assembly	VWV1248	VWV1255	VWV1255	
Δ	AC power cord	VDG1028	VDG1028	VDG1029	
	Euro scart cable	VDE1027	
	Video cable	VDE-056	VDE-056	
NSP	Packing case	VHG1228	VHG1226	VHG1226	
	Rear panel	VNA1278	VNA1276	VNA1277	
	Snap plate	VNE1102	
	Jack holder	VNE1811	
	Volume knob	VNK2003	
	Operating instructions (English / French / German / Italian)	VRE1010	VRE1011	
	Operating instructions (Dutch / Swedish / Spanish / Portuguese)	VRF1017	VRF1018	
	Operating instructions (English)	VRB1071	
	Front panel assembly	VXA1867	VXA1866	VXA1866	
	Remote control unit (CU-CLD077)	VXX1758	
	Remote control unit (CU-CLD072)	VXX1751	VXX1751	
	Battery cover	VNK1293	PZN1010	PZN1010	
NSP	Caution card (UC)	VRM1026	
NSP	Caution card (EW)	VRM1027	VRM1027	

LIST OF ASSEMBLIES (FOR CLD-700/HEZ AND HB)

- FLKB assembly
 - └ PSWB assembly
 - └ FLKY assembly

MAIN assembly

VWX1116 and VWX1123 have the same construction except for the following:

Mark	Symbol & Description	Part No.		Remarks
		VWX1123	VWX1116	
	D102, D103 C122 C124, C125 C567 R121 R150, R151 R562 R564 JA3, JA4 (JACK/12V)	1SS254 CKSQYF103Z50 CCSQCH101J50 RS1/10S473J RS1/10S221J RD1/6PM102J PKN1004 CEAS470M16 RD1/6PM101J RD1/6PM101J	

AUDIO assembly

VWX1117 and VWX1124 have the same construction except for the following:

Mark	Symbol & Description	Part No.		Remarks
		VWX1124	VWX1117	
	IC202 IC208, IC211 IC210 Q203, Q210, Q212, Q213 D202, D205- D207 D210 F301- F303 C205 C207, C279 C210 C264, C265 C266, C267 C268, C269 C272, C273 C278, C282 C322 R204, R289, R294 R206 R212, R213, R220, R221 R214, R219, R224 R215, R223 R222 R233, R286 R234 (4.7 Ω) R247- R250 R252, R254, R256, R258 R263- R268 R271, R272 R322, R323 JA8 (OPTICAL OUTPUT JACK)	NJM78L08A BA15218 NJM79L08A DTA124EK 1SS254 ERA83- 006 VTH1016 CEAS470M16 CEAS471M10 CKSQYF104Z25 CFTXA152J50 CKSQYB682K50 CFTXA102J50 CEAS470M10 CKSQYF473Z25 RS1/10S102J RS1/10S222J RD1/6PM470J RS1/10S103J RS1/10S682J RD1/6PM103J RS1/10S471J DCN1001 RS1/10S223J RD1/6PM102J RD1/6PM222J RS1/10S822J TOTX178	

SCRB assembly

VW1255 and VW1248 have the same construction except for the following:

Mark	Symbol & Description	Part No.		Remarks
		VW1248	VW1255	
	IC101	TC74HC74AP	
	IC102	TC74HC00AP	
	IC103	BU4053B	
	Q101-Q110	2SC1740S	
	L101, L102	LFA120K	
	L103, L104	LAU8R2J	
	L105	LAU330J	
	F101	VTF1034	
	F102	VTF1011	
	C101, C103, C120-C123, C126, C127, C129, C158	CEAS470M10	
	C102, C104-C108, C111, C112, C125, C128, C130	CKPUYY103N16	
	C109	CCCCH100D50	
	C110	CCCCH270J50	
	C113, C114	CKCYB681K50	
	C117-C119	CEANP220M10	
	C155	CEAS100M50	
	VR101	VRTB6VS471	
	VR102	VRTB6VS472	
	R101, R102, R124, R125, R127	RD1/6PM102J	
	R103, R107, R118, R122, R130	RD1/6PM101J	
	R104, R108, R110, R111, R119, R123, R131	RD1/6PM222J	
	R105, R106	RD1/6PM391J	
	R109	RD1/6PM122J	
	R112, R113, R120, R121	RD1/6PM223J	
	R114	RD1/6PM333J	
	R115	RD1/6PM153J	
	R116, R117	RD1/6PM471J	
	R126	RD1/6PM561J	
	R128, R132-R134	RD1/6PM472J	
	R129	RD1/6PM221J	
	R135	RD1/6PM470J	
	R136, R137	RD1/6PM121J	
	R138	RD1/6PM2R2J	
	DL101	DTF1033	

FLKY assembly


Although VWG1335 and VWG1336 are different in part number, they consist of the same components.

SYPS assembly

Although VWR1147 and VWR1146 are different in part number, they consist of the same components.


8. CONNECTIONS

USING TELEVISION WITH AUDIO AND VIDEO JACKS

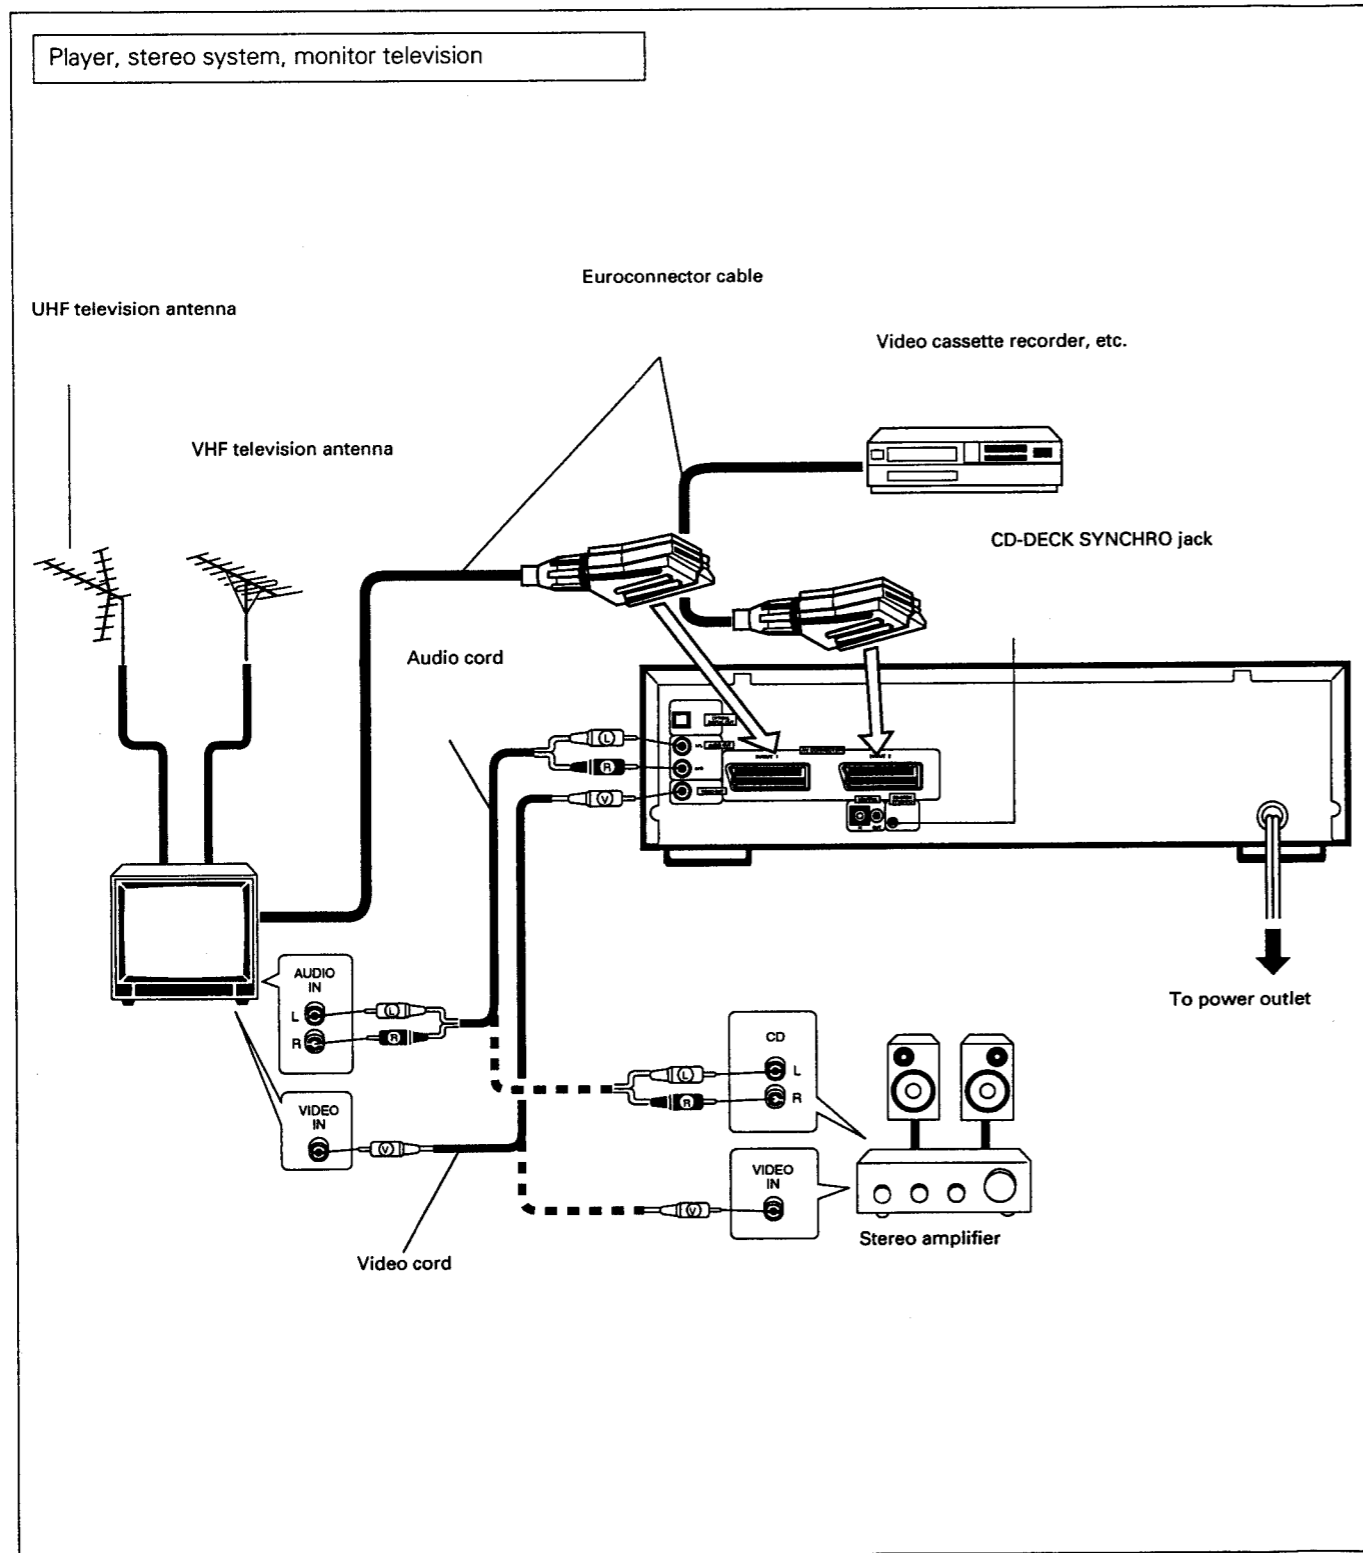


- Connect the VIDEO OUT jack of the player to the video input jack of the monitor television.
- Connect the AUDIO OUT jacks to the stereo amplifier AUX, CD, LD, VDP or other jacks, except the PHONO input jacks. The television speakers can also be used by connecting the television audio input jacks and the player AUDIO OUT jacks, however connection to a stereo amplifier is recommended to obtain superior audio playback quality for Compact Discs and LaserVision Discs. Do not change the television antenna connections.
- When using a video TV monitor (or TV) with AV CONNECTOR terminal, connect the AV CONNECTOR terminal to the AV CONNECTOR IN/OUT terminal of the player. Use supplied Euroconnector cable.
- Connect the power cord to an AC wall outlet.
- Combined system control is possible when a Pioneer television and audio/video stereo receiver are connected. Refer to page 28 for an explanation of the connection procedure.
- When making connections to stereo amplifier equipped with a built-in D/A converter and an optical digital jack, refer to the connection instructions.
- When using a video cassette recorder with AV CONNECTOR terminal, connect the AV CONNECTOR terminal to the AV CONNECTOR IN/OUT terminal of the player. When a TV has been connected to the player using the AV CONNECTOR terminal and the power cord is plugged to an AC outlet, signals from the video cassette recorder are fed to the TV set via the player while the player is turned off.
- When using wide aspect type TV (16:9), be sure to connect the AV CONNECTOR terminal to the AV CONNECTOR IN/OUT terminal of the player.

9. PANEL FACILITIES

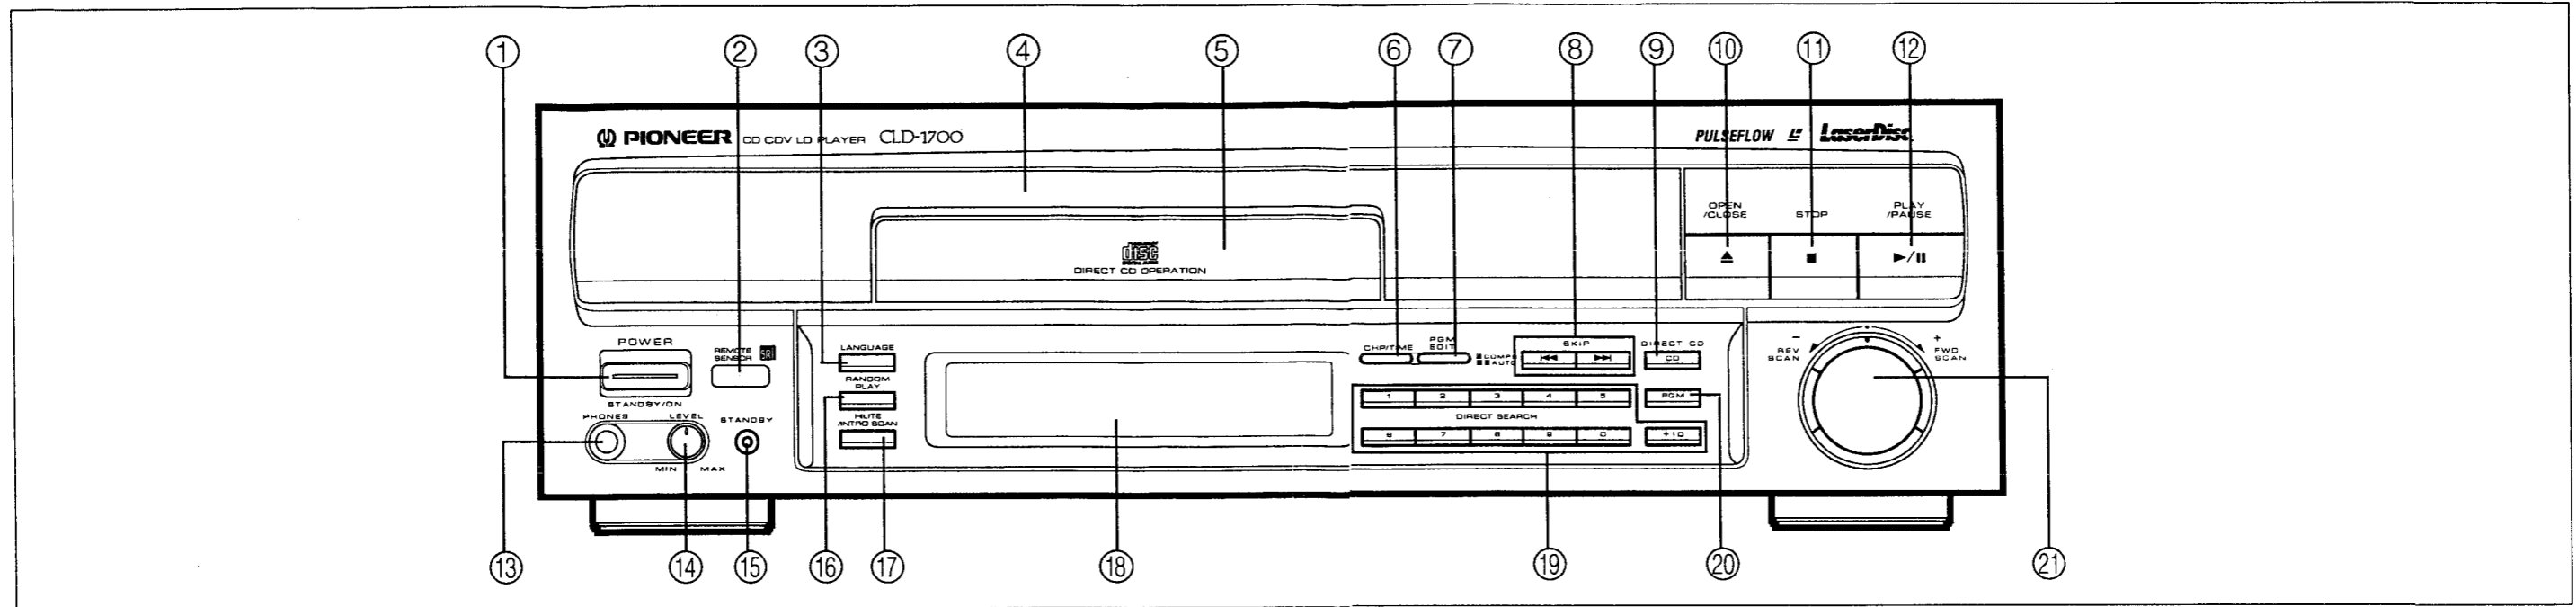


- ① **POWER STANDBY/ON switch**
Press to turn the power on and off.
- ② **REMOTE SENSOR**
- ③ **LANGUAGE button**
- ④ **Disc table**
- ⑤ **CD disc table**
- ⑥ **CHP/TIME button**
- ⑦ **PGM EDIT button**
- ⑧ **SKIP buttons**
- ⑨ **DIRECT CD button**
- ⑩ **OPEN/CLOSE button**
- ⑪ **STOP button**
- ⑫ **PLAY/PAUSE button**
- ⑬ **PHONES jack**
- ⑭ **PHONES LEVEL control**
Turn this control in the "MAX" direction to increase the output level from the PHONES jack. Turn this control in the "MIN" direction to decrease the output level from the PHONES jack.
- ⑮ **STANDBY indicator**
- ⑯ **RANDOM PLAY button**
- ⑰ **HILITE/INTRO SCAN button**
- ⑱ **Display window**
- ⑲ **DIRECT SEARCH/Digit buttons**
- ⑳ **PGM (program) button**
- ㉑ **SCAN control**

Display window

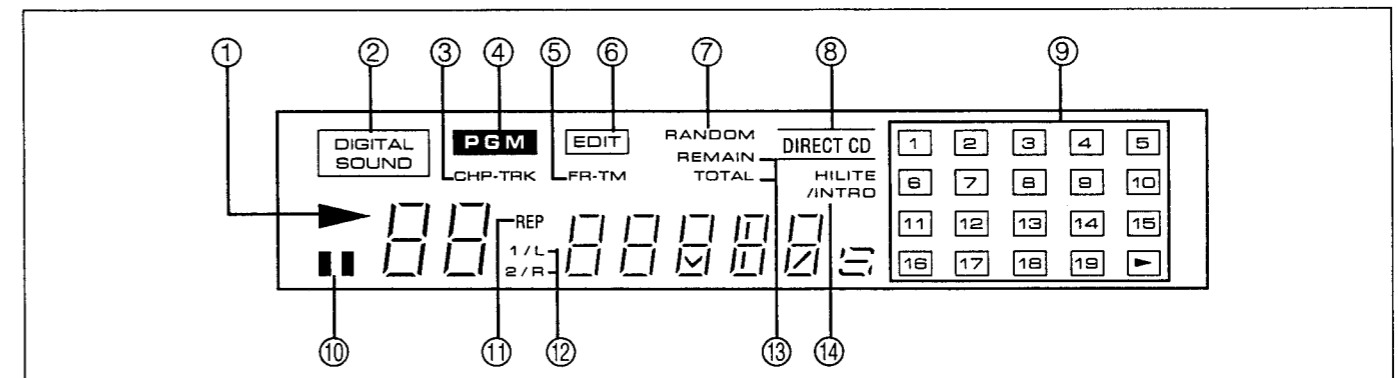

- ① **▶ play indicator**
Lights during play. Blinks during search.
- ② **DIGITAL SOUND indicator**
Lights when the power is turned on. When an analog audio disc is played back, the indicator goes out.
- ③ **CHP-TRK indicator**
Indicates the CHP (chapter) number or TRK (track) number.
- ④ **PGM indicator**
Lights during program play and programming.
- ⑤ **FR-TM indicator**
Indicates the FR (frame) number or TM (time).
- ⑥ **EDIT indicator**
Lights when editing is performed.
- ⑦ **RANDOM indicator**
Lights during random play.
- ⑧ **DIRECT CD indicator**
- ⑨ **Visual calendar**
When a disc is loaded, all of the chapter/track numbers recorded on the disc light up on the display. If the disc contains more than 19 chapters/tracks, the ▶ indicator lights.
During program play, only the programmed chapter/track numbers light. When a disc without a TOC section is played, only the selection number being played lights. When a CDV disc is loaded, the track numbers of the video part light followed by the track numbers of the audio part. After a chapter/track is finished playing, the corresponding number goes out.
- ⑩ **|| pause indicator**
Lights when the player is in pause mode.
- ⑪ **REP indicator**
Lights during repeat play.
- ⑫ **1/L, 2/R indicator**
Indicates the audio output channel.
- ⑬ **REMAIN/TOTAL indicator**
Indicates the REMAIN TIME (remaining play time) or TOTAL TIME (total play time).
- ⑭ **HILITE/INTRO indicator**
Lights during Hi-Lite Scan or Intro Scan mode.

Remote control buttons with the same names or marks as buttons on the front panel of the player control the same operations as the corresponding front panel buttons.

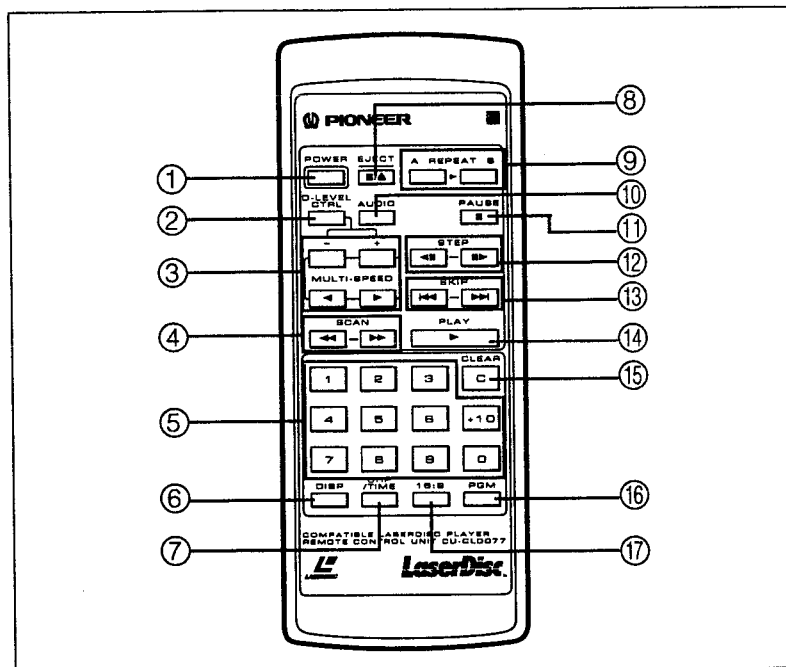

- ① **POWER button**
Press to turn the power on and off.
- ② **D-LEVEL CTRL button**
- ③ **MULTI-SPEED buttons**
- ④ **SCAN buttons**
- ⑤ **Direct search/Digit buttons**
- ⑥ **DISP button**
- ⑦ **CHP/TIME button**
- ⑧ **EJECT button**
- ⑨ **REPEAT A/B buttons**
- ⑩ **AUDIO button**
- ⑪ **PAUSE button**
- ⑫ **STEP buttons**
- ⑬ **SKIP buttons**
- ⑭ **PLAY button**
- ⑮ **CLEAR button**
Used to clear the repeat mode, program mode, random play mode or hi-lite scan/intro scan mode. This button is also for use in correcting input digits.
- ⑯ **PGM (program) button**
- ⑰ **16:9 button**

10. SPECIFICATIONS

1. General

System LaserVision Disc system and
 Compact Disc digital audio system
 Laser Semiconductor laser wavelength 780 nm
 Power requirements AC 220 - 230 V, 50/60 Hz
 Power consumption 42 W
 Weight 7.4 kg
 Dimensions 420 (W) x 390 (D) x 122 (H) mm
 Operating temperature +5°C ~ +35°C
 (41°F - 95°F)
 Operating humidity 5% ~ 90%
 (There should be no condensation of moisture.)

2. Disc

LaserVision Discs

PAL disc

*Maximum playing times
 30 cm active play disc 72 min/both sides
 30 cm long play disc 2 hours/both sides
 20 cm active play disc 28 min/both sides
 14 min/one side
 20 cm long play disc 40 min/both sides
 20 min/one side

Spindle motor speed

Active play disc 1,500 rpm
 Long play disc 1,500 rpm (inner circumference)
 to 570 rpm (outer circumference)
 (For a 30 cm disc)

Compact Discs

DISC Diameter: 12 cm, 8 cm, Thickness: 1.2 mm
 Rotation direction (pickup side)
 Counterclockwise
 Linear speed 1.2 ~ 1.4m/sec
 * Maximum playing time 74 min. 12 cm discs
 20 min. 8 cm discs
 (For stereo playback)

Compact Discs with Video

Disc Diameter: 12 cm, Thickness: 1.2 mm
 Rotation direction (pickup side)
 Counterclockwise
 Linear speed Audio portion: 1.2 ~ 1.4m/sec
 Video portion: 11 ~ 12m/sec
 * Maximum playing time Video portion: 5 min. (CLV)
 Audio portion: 20 min. (Digital)

* Actual playback time differs for each disc.

3. Video characteristics

Format PAL specifications
 Video output
 Level 1 Vp-p nominal, sync. negative, terminated
 Impedance 75 Ω unbalanced
 Jack RCA jack

4. Audio characteristics

Output level 200 mVrms
 (1 kHz, -20 dB)
 Jacks Both RCA jacks
 Number of channels 2


Digital Audio Characteristics

Frequency response	4 Hz - 20 kHz
SN ratio	105 dB (EIAJ)
Dynamic range	97 dB (EIAJ)
Total harmonic distortion	0.003% (EIAJ)
Wow and flutter	Limit of measurement (±0.001 % W.PEAK) (EIAJ)

5. Other Terminals

Control input/output Both miniature jacks
 CD-DECK synchro Miniature jack
 Optical digital output Optical digital jack
 AV connector input/output 21-pin connector
 This connector provides the video and audio signals for connection to a colour video TV monitor (or TV set) which has a "AV CONNECTOR" terminal.

PIN assignment

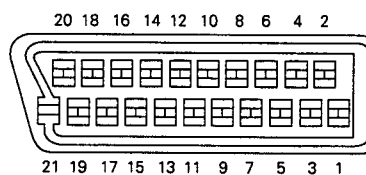

PIN no.	1 Audio 2/R out	17 GND
	3 Audio 1/L out	19 Video out
	4 GND	21 GND
	8 Status	

6. Accessories

Remote control unit (CU-CLD077) 1
 Size "AAA" (IEC R03) dry cell batteries 2
 Euroconnector cable 1
 Audio cord 1
 Operating instructions 1
 Warranty card 1

7. Functions

Remote control unit operations (CU-CLD077)

	Function	Active play Disc (CAV)	Long play Disc (CLV)	Compact Disc with Video	Compact Disc
Basic Functions	Single-side play	YES	YES	YES	YES
	Pause	YES	YES	YES	YES
	Stop	YES	YES	YES	YES
Search	Fast forward (forward and reverse)	YES	YES	YES	YES
	Chapter/Track skip	YES	YES	YES	YES
	Direct chapter/Track number search	YES	YES	YES	YES
	Frame number search	YES	NO	NO	NO
	Time number search	NO	YES	YES	YES
	Absolute time search	NO	NO	NO	YES
Program	Chapter/Track program play	YES	YES	YES	YES
	Program correction	YES	YES	YES	YES
Repeat	Repeat between 2 points	YES	YES	YES	YES
	Memory repeat	YES	YES	YES	YES
	Chapter/Track repeat	YES	YES	YES	YES
	One-side repeat	YES	YES	YES	YES
	Program repeat	YES	YES	YES	YES
	Random repeat	YES*1	YES*1	YES	YES
	Program random repeat	YES	YES	YES	YES
Trick play	Still/Step	YES	NO	NO	NO
	Multi-speed (Forward/reverse 9-level variable)	YES	NO	NO	NO
Time display	Elapsed time display	NO	YES	YES	YES
	Absolute time display	YES*1	NO	NO	YES
	Remaining track time display	NO	NO	YES	YES
	Remaining total time display	YES*1	YES*1	YES	YES
	Total number of selections, total time display	YES*1	YES*1	YES	YES
Others	Compu program/Auto program edit	YES*1	YES*1	YES	YES
	Hi-Lite scan	NO	NO	YES*3	YES
	Intro scan	YES	YES	YES*4	NO
	Digital level control	YES*2	YES*2	YES	YES
	Audio channel selection (Stereo, 1/L, 2/R)	YES	YES	YES	YES

*1 Only discs with TOC

*2 Can only be used with discs with digital audio signal tracks.

*3 Audio part only

*4 Video part only

NOTE:

The specifications and design of this product are subject to change without notice, due to improvement.

PLAYER FUNCTIONS

- Display, Visual Calendar Display
- Intro Scan, Hi-Lite Scan, Direct CD, Digital Level Control, Random Playback, Program Random Playback and Compu Program/Auto Program Edit
- Digital Audio Signal for LaserVision Discs
- Last Memory