


End Cap Replacement / Adjustment

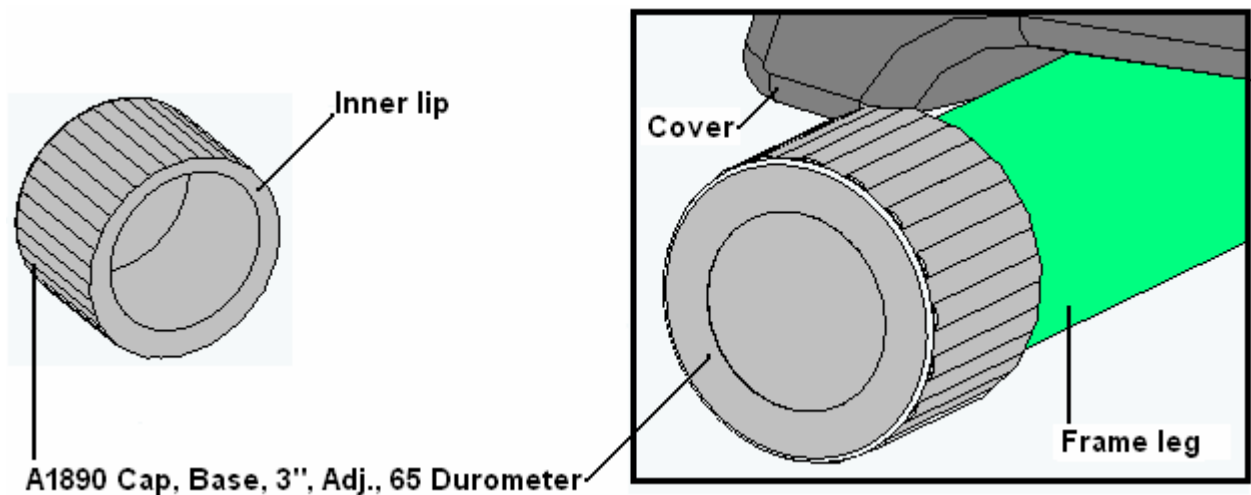

1. Position an object under the frame leg to elevate the end cap (A1890).
2. Pull the rubber end cap off the end of the frame leg. For older versions with plastic end caps, a plastic or rubber mallet may be needed to tap on the inner lip of the end cap until it comes off the frame leg.
3. Replace end cap or make necessary adjustment to the existing end cap.
4. The mounting hole in the end cap is offset to allow leveling the machine. On legs that do not always contact the floor, rotate the end cap so a thicker section of the cap is next to the floor. Do this until the machine is level.