

IntelliControl<sup>®</sup>ICS  
INTEGRATED CONTROL SOLUTIONS


USER GUIDE

---

iREMOTE<sup>®</sup>

---

2-WAY WIRELESS RF  
SYSTEM CONTROL REMOTE  
WITH LCD DISPLAY

ENGINEERED BY  NILES<sup>®</sup>

# CONGRATULATIONS!

Introducing the iRemote, the worlds first two-way wireless RF remote control with LCD display that lets you **See and Control** your iPod®, XM® Satellite Radio, Sirius® Satellite Radio and AM/FM tuner, right in the palm of your hand, from anywhere in your home. Niles manufactures the industry's most complete line of custom installation components and accessories for audio/video systems. To see the complete Niles product assortment, visit us on the Internet at [www.nilesaudio.com](http://www.nilesaudio.com).

## KEY FEATURES

- **Control any Zone**, from anywhere in your home
- **"One Touch to Music"** via 8 custom-labeled, backlit, Master Keys
- **High resolution 2" backlit LCD** displays iPod, XM, Sirius and AM/FM information (Station name/number, artist, album, song and menus)
- **Alphanumeric keys** allow direct access to artists, albums, songs and playlists when using an IM-iPOD card. Navigating your iPod has never been easier
- **20 Favorite Stations** list for XM, Sirius, AM/FM, cable and satellite tuners
- **Party Mode** turns on all your favorite party zones, to the same music, with a simple press and hold of any master key
- **Global Off** turns off the entire system from anywhere in your home
- **Ergonomic design** feels comfortable and balanced in your hand
- **Treble, Bass and Balance** adjustments for every zone
- **Default Turn On Volume** setting for every zone
- **Sleep Timer** for every zone
- **Alarm Clock** for every zone
- **Page and Doorbell** can play through the speakers in any zone
- **Two-way wireless RF** communication (Zigbee 2.4 GHz)
- **Electroluminescent backlighting** for all keys

## Master Keys

8 backlit buttons provide "One Touch to Music"

## Soft Keys

3 backlit buttons that change function depending upon the source selected

## VOL+/VOL-

2 backlit buttons adjust volume up or down

## Cursor and SELECT Keys

5 backlit buttons provide navigation of menus, playlists and favorites

## Zone Key

Brings up Zone Selection screen

## OFF

Backlit button turns zone or system off



## Battery Indicator

## Display

Backlit LCD displays system information from iPod, XM, SIRIUS and AM/FM and functions associated with "Soft Keys"

## PREV/NEXT

2 backlit buttons move to Next or Previous/Track or Channel

## Alphanumeric Keys

Provide direct access tuning, numeric selection of track and alphabetic search for iPod

## MUTE

Backlit button mutes/un-mutes audio output to zone

## Niles System Settings

Provides access to system settings: audio (bass, treble, balance), sleep timer, alarm clock, etc.

## 12V DC Power Supply



## Charging Base

# USING YOUR iREMOTE®

## CHARGING THE BATTERY

Your new iRemote comes equipped with a rechargeable battery, charging base and power supply. After every use, place your iRemote into the charging base cradle. The charging base's front panel light changes from light blue to bright blue when the remote is seated correctly. When the battery is charging, the LCD display reads **[Charging]**,<sup>1</sup> and when charging is complete the display reads **[Charging Complete]**. The iRemote operates approximately 8 hours on a full charge.<sup>2</sup>

## SETTING THE iREMOTE TO CONTROL YOUR ZONE

Press the **Zone Key**, a list of zone names appear. Use the up or down **Cursor Keys** to scroll to a zone name, then press the **SELECT Key**.

## TURNING ON THE SYSTEM

Press any of the eight custom-labeled **Master Keys** and music begins playing.

## SELECTING A SOURCE

Simply press the **Master Key** that corresponds to the source you wish to control.

## PARTY MODE

Press and hold any of the eight **Master Keys** for 2 seconds. All your favorite zones enabled for Party Mode turn on to the same source.

## SETTING A FAVORITE STATION (XM, SIRIUS OR AM/FM)

Tune to the station you would like to add to your favorites list. Press the **Soft Key** labeled **[Favs]**. A list of your favorite stations appear. Scroll to the end of the list and select **[Add to Favorites]**. 20 Favorite stations can be stored for each tuner.

## REPLACING A FAVORITE STATION

Tune to the station you would like to add to your favorites list. Press the **Soft Key** labeled **[Favs]**. Scroll to the favorite you would like to replace. Press and hold the **SELECT Key** for 2 seconds. A new screen appears, **[Replace]** is highlighted. Select **[Replace]**. Your tuned station replaces the existing favorite from the list.

## DELETING A FAVORITE STATION

Press the **Soft Key** labeled **[Favs]**. Scroll to the favorite you would like to delete. Press and hold the **SELECT Key** for 2 seconds. A new screen appears, select **[Delete]**. The favorite is deleted from the list.

## USING YOUR iREMOTE®

### ALPHABETIC SEARCH ON YOUR IPOD

Press the **Soft Key** labeled [**Menu**], select [**Artists**]. Press the **Alphanumeric Key** that represents the letter corresponding to the name of the artist (i.e., press “2 ABC” key three times for a list of Artists starting with the letter “C”).

### TURNING OFF THE ZONE YOU’RE CONTROLLING

Press the **OFF Key** to turn off the zone you’re controlling.

### TURNING OFF ALL ZONES

Press and hold the **OFF Key** for 2 seconds to turn off all zones.

### SETTING TREBLE, BASS AND BALANCE

Press the **Niles System Settings Key**, a list of settings appear. Select [**Audio Settings**]. Use the left or right **Cursor Keys** to change the level. Use the up or down **Cursor Keys** to move from Treble to Bass to Balance.

### SETTING TURN ON VOLUME

Press the **Niles System Settings Key** and select [**Turn On Volume**]. Select [**Last Used Volume**] or [**Default Turn On Volume**]. Use the left or right **Cursor Keys** to set the default Turn On Level.

### SETTING THE CLOCK

Press the **Niles System Settings Key** and select [**Clock Setting**]. Use the left or right **Cursor Keys** to change the time. Use the up or down **Cursor Keys** to move from Hours to Minutes to AM/PM.

### SETTING THE SLEEP TIMER

Press the **Niles System Settings Key** and select [**Sleep Timer**]. Use the left or right **Cursor Keys** to turn the sleep timer on, set the time and select [**This Zone**] or [**All Zones**].

### SETTING THE ALARM CLOCK

Press the **Niles System Settings Key** and select [**Alarm Clock**]. Use the left or right **Cursor Keys** to turn the [**Alarm Clock**] on, set the [**Wake Up Time**] and choose the [**Source**] you would like to wake up to.

### SETTING THE PAGE/DOORBELL

Press the **Niles System Settings Key** and select [**Paging/Doorbell**]. Use the left or right **Cursor Keys** to select [**Always In This Zone**], [**Only If Zone Is On**] or [**Never In This Zone**].

<sup>1</sup> [ ] Brackets correspond to LCD display selection or function.

<sup>2</sup> You will need to charge your iRemote fully before first use.

# CUSTOMER SERVICE AND TECHNICAL SUPPORT

## BY PHONE

**800-BUY-HIFI (289-4434)**

## CUSTOMER SERVICE HOURS

**8:00 AM to 5:30 PM EST**

## TECHNICAL SUPPORT HOURS

**8:00 AM to 7:00 PM EST**

## ON THE WEB

**[www.nilesaudio.com](http://www.nilesaudio.com)**

## EMAIL TECHNICAL SUPPORT

**[techsupport@nilesaudio.com](mailto:techsupport@nilesaudio.com)**

## EMAIL FOR PRODUCT SUGGESTIONS

**[productsuggestions@nilesaudio.com](mailto:productsuggestions@nilesaudio.com)**

©2006 Niles Audio Corporation 12331 S.W. 130 Street, Miami, FL 33186. All rights reserved. Niles, the Niles logos, IntelliControl, IntelliFile, and iRemote are registered trademarks of Niles Audio Corporation. All other trademarks are the property of their respective owners. Niles reserves the right to change specifications, descriptions and prices without notice. The technical and other information contained herein is not intended to set forth all technical and other specifications. Designed and engineered in the USA. DS00468ACN

E N G I N E E R E D B Y

