RaceWare[™] Firmware Update Version 1.2: Active Vehicle Control[™] (AVC[™])

Visit community.spektrumrc.com to download the latest RaceWare Firmware version.



ACTIVE VEHICLE CONTROL (AVC)

Options:

- ST Gain
- TH Gain
- Priority
- 1. Select AVC from the LIST menu.
- 2. Change the State field to ACT.

3. Adjust the ST Gain and/or TH Gain Sensitivity


The default value is 0% (ST Gain and TH Gain OFF). As the value increases, the AVC steering stability and throttle management increases.

Adjust the ST Gain until you reach the ideal amount of steering control. If the front wheels begin to shake, the ST Gain value is too high. Reduce the ST Gain value until the front wheels stop shaking. You can assign ST Gain and TH Gain to the same switch, enabling you to adjust both values at the same time.

4. Switch: Assigning ST Gain and TH Gain to a switch enables you to adjust the sensitivity without using the AVC menu. ST GAIN and TH GAIN can be assigned to the same switch to adjust both simultaneously.

5. Adjust the Steering Priority

The Priority default value is 0%, meaning **AVC** is active when the steering is close to center. As you turn the steering wheel away from center (neutral), the transmitter controls have priority over the AVC system. Increasing the Priority value decreases how active AVC is as the steering wheel is turned left and right. For example, if you increase Priority to 80%, you reduce the AVC steering control by 80% at full left or full right steering. Increasing the Steering Priority enables you to make tighter turns.

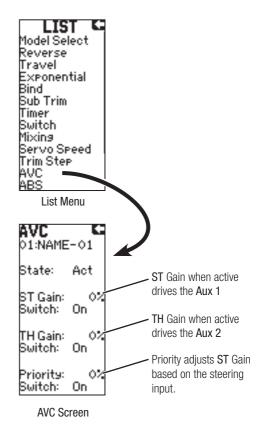

©2013 Horizon Hobby, Inc.

RaceWare, DSMR, Active Vehicle Control and AVC are trademarks of Horizon Hobby, Inc. The Spektrum trademark is used with permission of Bachmann Industries, Inc.

The SD Logo is a trademark of SD-3C, LLC.