

Note

You can mix manual and memory dialling as required, for example, you can dial the area code 020 8304 from the memory and then complete the number manually.

To delete stored numbers

Lift the handset.

Press the **STORE** button. The call indicator light will flash.

Press the memory location number (**0-9**) or (**M1, M2, M3**) under which you have stored the number you wish to delete.

Press the **STORE** button. You will hear a confirmation tone. Replace the handset.

Alternatively, any existing number stored in the Quickdial or One-Touch memories can be overwritten by entering a new number under the same memory location. Simply follow the instructions under the storing numbers sections previously shown.


Note

If any error occurs in the storing mode you will hear three short beeps, then the product will return to talk mode.


If you unplug your Decor 110 the numbers stored in the memory will be saved. However, the last number redial memory will be lost.

Wall mounting

1. Locate lugs and mount the plinth provided into the holes under the base unit as shown.
2. Swing the plinth down to clip into the top hole.

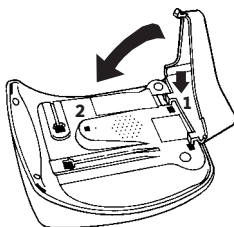

3. Drill 2 holes, 25mm deep using a 3mm drill, for the screws provided, using the template. Ensure that you do not drill into any hidden wiring or pipes. Insert the wall plugs provided and then insert a screw into each hole. Leave 2-3mm between the head of the screw and the wall.
4. Position the product onto the screws.
5. Drop down to secure.

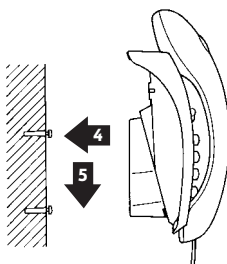

69mm

R&TTE Directive

Hereby, Suncorp Technologies Ltd, declares that this Decor 110 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

The Declaration of Conformance for the Decor 110 is published on the website
<http://www.suncorptech.com/bt>



General information

Guarantee

Your Decor 110 is guaranteed for a period of 12 months from the date of purchase.

Subject to the terms listed below the guarantee will provide for the repair of, or at BT's or its agent's discretion the option to replace the Decor 110, or any component thereof, which is identified as faulty or below standard, or fails as a result of inferior workmanship or materials. Products over 28 days old from the date of purchase may be replaced with a refurbished product.

The conditions of this guarantee are:

- The guarantee shall only apply to defects that occur within the 12 month guarantee period.
- Proof of purchase is provided.
- The equipment is returned to the point of purchase.
- This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, tampering with the equipment, or any attempt at adjustment or repair other than by approved agents.
- This guarantee does not affect your statutory rights.

Within the 12 month guarantee period:

In the unlikely event of a defect occurring, please return the product, with the receipt, to the place of purchase.

Outside of the 12 month guarantee period:

If your product needs repair after the guarantee period has ended, the repair must meet the approval requirements for connection to the telephone network. We recommend that you contact BT's approved repair agent, TecLogic on 01672 564444 or a local qualified repairer.

If you have to return your Decor 110

Pack the unit securely, preferably in the original packaging. All parts must be returned. We cannot take responsibility for goods damaged in transit.

Technical information**How many telephones can you have?**

All items of telephone equipment have a Ringer Equivalence Number (REN), which is used to calculate the number of items which may be connected to any one telephone line. Your Decor 110 has a REN of 1. A total REN of 4 is allowed, if the total REN of 4 is exceeded, the telephones may not ring. With different telephone types there is no guarantee of ringing, even when the REN is less than 4.

Switchboard compatibility

This product is intended for use within the UK for connection to the public telephone network and compatible switchboards, which support tone dialling and time break recall. If in doubt please consult your service provider.

**Offices worldwide**

The telecommunications services described in this publication are subject to availability and may be modified from time to time. Services and equipment are provided subject to British Telecommunications plc's respective standard conditions of contract. Nothing in this publication forms any part of any contract.

© British Telecommunications plc 2001.
Registered Office: 81 Newgate Street, London EC1A 7AJ.
Registered in England No. 1800000.
Decor 110 (5/01) 5
Designed by the Art & Design Partnership Limited.
Printed in China.



Decor 110

Corded Telephone

User Guide

This product is intended for connection to analogue public switched telephone networks and private switchboards in the United Kingdom.

At a glance

One-Touch memory buttons (M1, M2, M3)

Allows you to store and automatically dial up to three numbers at the touch of one button.

Quickdial button

Allows you to dial up to ten numbers stored in the Quickdial memory at the touch of two buttons.

Call indicator light

Flashes to indicate an incoming call. Also flashes when storing numbers, using secrecy or setting the ringer.

Store button

Use to store numbers in the memory and to change the ringer and pitch volume.

Recall button

For use with a switchboard/PBX and BT Select Services. Please contact your switchboard supplier for more information. For more information on BT's Select Services please call **Freephone 0800 800152**

Redial/Pause button

Redials the last number called. Also, press to enter a pause when storing a number in the memory.


Secrecy button

Lets you talk to someone in the same room without the person you are calling hearing you.

Handset hook

Keeps the handset in place when the Decor 110 is wall mounted. See back page for more information.

Revolve the handset catch on the base unit. The handset will now be able to rest on the hook when wall-mounted.

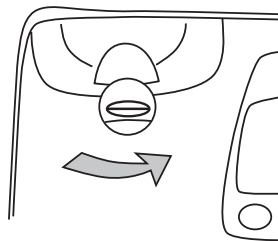

Safety information

General

Simply clean your Decor 110 with a damp (not wet) cloth, or an anti-static wipe. Never use household polish as this may damage the product. Never use a dry cloth as this may cause static shock. Do not open the Decor 110. This could expose you to high voltages or other risks.

Environmental

Do not expose to direct sunlight.

We recommend that you do not place the product on antique/veneered wood to avoid damage.

Do not stand your product on carpets or other surfaces which generate fibres, or place it in locations preventing free flow of air over its surfaces.

Do not submerge any part of your product in water and do not use it in damp or humid conditions, such as in bathrooms.

Do not expose your product to fire, explosive or other hazardous conditions.


Setting up

Plan the location of your Decor 110.

Situate your Decor 110 close enough to a phone socket so that the line cord will reach.

You can wall-mount your product, see back page.

1. Plug your Decor 110 into the telephone socket.

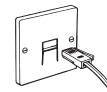

Your Decor 110 is now ready for use.

Using the telephone

Making and ending calls

To make a call

Lift the handset and wait for the dial tone.

Dial the telephone number.

To end a call

Replace the handset.

To receive a call

When the telephone rings the call indicator light will also flash to indicate that there is an incoming call. Simply pick up the handset.

To redial the last number called

Lift the handset.

Press the **REDIAL** button.

The last number called is dialled.

A redial number can be no longer than 32 digits.

Note

During all storing operations the call indicator light will flash.

Secrecy

When on a call you can talk to someone in the same room, without your caller hearing.

To switch secrecy on and off

During a call press *and release* the **SECRECY** button.

The call indicator light will flash to show that secrecy is on.

Your caller will be put on hold.

You can now talk to someone in the room without your caller hearing you.

Press *and release* the **SECRECY** button again to return to your caller.

To adjust the ringer volume

There are 3 volume settings to choose from: HIGH, LOW or OFF. The default setting is HIGH.

Lift the handset and press the **STORE** button. The call indicator light will flash.

Press the **★** button.

Press either, **1** for HIGH, **2** for LOW or **3** for OFF.

Press the **STORE** button.

You will hear a confirmation tone.

Replace the handset.

(If the ringer is set to OFF, the call indicator light will still flash to indicate someone is calling you.)

To set the ringer pitch

The ringer pitch can be set to High or Low. The default setting is High.

Lift the handset and press the **STORE** button. The call indicator light will flash.

Press the **#** button.

Press either, **1** for HIGH or **2** for LOW.

Press the **STORE** button.

You will hear a confirmation tone.

Replace the handset.

One-Touch memories

You can store your three most frequently used telephone numbers in the One-Touch memories (M1, M2 or M3). Please note that the number can be no longer than 18 digits.

To store a One-Touch number

Lift the handset.

Press the **STORE** button. The call indicator light will flash.

Press the memory location number, (M1, M2, M3), under which you want to store the number.

Enter the telephone number you want to store including the area code if applicable.

Press the **STORE** button.

You will hear a confirmation tone. Replace the handset.

Note

Whilst storing a number in the memory you can cancel the operation by replacing the handset on the cradle.

To dial a One-Touch number

Lift the handset and wait for the dial tone.

Press the memory location number, (M1, M2, M3), under which the number is stored.

The number is dialled automatically.

To insert a pause in a memory number

Sometimes you may need to enter a pause when storing a number, e.g. with an overseas number you may need to enter a pause after storing the international code.

Press the **REDIAL** button in the place where you want to enter a pause.

When you dial the number your Decor 110 will automatically insert the pause where you stored it.

Quickdial memories

You can store a further 10 telephone numbers in the Quickdial memories. Please note that the numbers can be no longer than 18 digits long.

To store a number in the Quickdial memory

Lift the handset.

Press the **STORE** button. The call indicator light will flash.

Press the memory location number between **0** and **9** under which you want to store the number.

Enter the telephone number you want to store including the area code if applicable.

Press the **STORE** button.

You will hear a confirmation tone. Replace the handset.

Note

There is a quickdial memory label on your telephone. Lift the plastic plate up and you can write on the label to keep a record of which memory location number you have used for each telephone number.

To dial a number in the Quickdial memory

Lift the handset and wait for the dial tone.

Press the **QUICKDIAL** button.

Press the memory location number between **0** and **9**, under which the number is stored.

The number is dialled automatically.