

You can read the recommendations in the user guide, the technical guide or the installation guide for PENTAX K20D. You'll find the answers to all your questions on the PENTAX K20D in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

> **User manual PENTAX K20D User guide PENTAX K20D Operating instructions PENTAX K20D Instructions for use PENTAX K20D Instruction manual PENTAX K20D**

PENTAX Corporation 2-36-9, Maeno-cho, itabashi-ku, Tokyo 174-8639, JAPAN (http://www.pentax.co.jp/)

PENTAX Europe GmbH Julius-Vosseler-Strasse, 104, 22527 Hamburg, (European Headquarters) GERMANY

(HO - http://www.pentaxeurope.com) (Germany - http://www.pentax.de) PENTAX House, Heron Drive, Langley, Slough, Berks SL3 8PN, U.K. PENTAX U.K. Limited

(http://www.pentax.co.uk) PENTAX France S.A.S.

112 Qual de Bezons, B.P. 204 95106 Argenteuil Cedex, FRANCE (http://www.pentax.fr) Via Dione Cassio 15, 20138 Milano, ITALY PENTAX Italia S.r.I.

(http://www.pentaxitalia.it)

PENTAX (Schweiz) AG

Widenholzstrasse 1, 8304 Wallisellen, Postfach 367, 8305 Dietlikon, SWITZERLAND (http://www.pentax.ch)

PENTAX Scandinavia AB P.O. Box 650, 75127 Uppsala, SWEDEN (http://www.pentax.se)

PENTAX Imaging Company A Division of PENTAX of America, Inc.

America, Inc.
(Headquarters)
600 12th Street, Suite 300 Golden, Colorado 80401, U.S.A.
(PENTAX Service Department)
12000 Zuni Street, Suite 100B
Westminster, Colorado 80234,
U.S.A. (http://www.pentaximaging.com)
1770 Arcentia Pand Micropauga, Ontario L SN 357

PENTAX Canada Inc. 1770 Argentia Road Mississauga, Ontario L5N 3S7, CANADA


(http://www.pentax.ca)

23D, Jun Yao International Plaza, 789 Zhaojiabang Road, Xu Hui District, Shanghai, 200032 China

http://www.pentax.co.jp/english

Specifications and external dimensions are subject to change without notice.

Copyright © PENTAX Corporation 2008 00-200712 Printed in Philippines

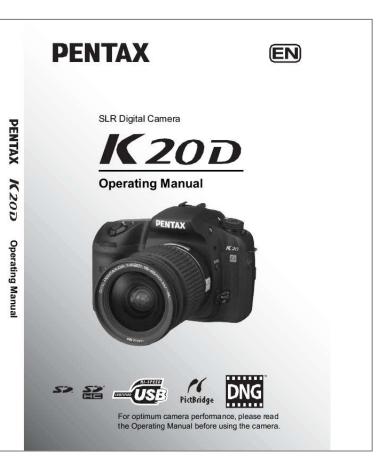



You're reading an excerpt. Click here to read official PENTAX K20D user guide

http://mypdfmanuals.com/dref/2342653

Manual abstract:

The PRINT Image Matching logo is a trademark of Seiko Epson Corporation. Regarding PictBridge PictBridge allows the user to connect the printer and digital camera directly, using the unified standard for the direct printout of images. You can print images directly from the camera through a few simple operations. There is a possibility that the illustrations and the display screen of the monitor in this manual are different from the actual product. Memo 1 FOR USING YOUR CAMERA SAFELY We have paid close attention to the safety of this product. When using this product, we request your special attention regarding items marked with the following symbols. Warning Caution This symbol indicates that violating this item could cause serious personal injuries. This symbol indicates that violating this item could cause minor or medium personal injuries, or material losses. ABOUT THE CAMERA Warning Do not disassemble or modify the camera. High voltage areas are present inside the camera, with the risk of electric shock.

· If the camera interior is exposed due to dropping or otherwise damaging the camera, never touch the exposed portion. There is the risk of electric shock. · To avoid the risk of it being swallowed by mistake, keep the SD Memory Card out of the reach of small children. Seek medical attention immediately if a memory card is accidentally swallowed. · Wrapping the strap around your neck is dangerous.

Take care that small children do not hang the strap over their necks. Do not look directly at the sun through the camera with a telephoto lens attached, as viewing the sun may damage your eyes. Viewing the sun directly with a telephoto lens may lead to a loss of eyesight. Be sure to store the battery out of the reach of children. Placing in mouth may cause an electrical shock.

· Always use the AC adapter exclusively developed for this product, with the specified power and voltage. Using an AC adapter not exclusive to this product, or using the exclusive AC adapter with an unspecified power or voltage can cause a fire, electric shock, or camera breakdown. · If any irregularities occur during use, such as smoke or a strange odor, stop use immediately, remove the battery or the AC adapter, and contact your nearest PENTAX Service Center. Continued use could cause a fire or electric shock. · During thunderstorms, unplug and discontinue use of the AC adapter. Continued use could cause equipment failure, a fire, or electric shock. · Caution · Do not short the battery or dispose of the battery in fire. Do not disassemble the battery. The battery could explode or catch fire. · Remove the battery from the camera immediately if they become hot or begin to smoke.

Be careful not to burn yourself during removal. · Some portions of the camera heat up during use. There is the risk of low temperature burns when holding such portions for long periods. · Do not place your finger over or cover the flash with clothing when discharging the flash. Fingers or clothing may be burned. · Depending on a user's physical condition, some users may experience itching, break out in a rash or suffer from eczema. If an abnormality occurs, immediately discontinue using the camera and seek medical attention. PRECAUTIONS FOR BATTERY USAGE · Only use the specified battery with this camera. Use of other batteries can cause a fire or explosion. · Keep wires, hairpins, and other metal objects away from the + and contacts of the battery. When storing a battery removed from the camera, be sure to attach the included protective cap to avoid shorting. · Do not disassemble the battery. Disassembling the battery can cause explosion or leakage. · If any leakage from the battery should come in contact with your eyes, do not rub them. Flush your eyes with clean water and get medical attention immediately.

· If any leakage from the battery should come in contact with skin or clothes, wash the affected areas thoroughly with water. · Do not disassemble or short circuit the battery case.



You're reading an excerpt. Click here to read official PENTAX K20D user guide

http://mypdfmanuals.com/dref/2342653

Do not dispose of the battery in a fire or leave the battery in a place with high temperatures. Doing so may cause the battery to become hot, catch fire or explode. Be sure to charge the battery with the specified battery charger.

· Remove the battery from the camera immediately if it becomes hot or begins to smoke..



You're reading an excerpt. Click here to read official PENTAX K20D user guide

http://mypdfmanuals.com/dref/2342653