



F177/F178/F201

Electronic Kitchen Scales

Operating Instructions

Setup

1. Position the appliance on a flat, stable surface.
2. Adjust the feet of the appliance to make it level, use a spirit level if necessary.



Note: It is important that the scales are level to ensure accurate measuring.

Operation



Press to turn ON.

Press whilst On to Tare.



Press to turn OFF.



Press to alternate between Metric (kilograms) and Imperial (pounds) readings.



Note: The scales turn off if left unused for longer than 8 minutes.

Cleaning, Care & Maintenance

- Clean the weighing tray in warm, soapy water.
- Dry thoroughly after washing.
- Do not immerse the scales in water.
- Remove the batteries (if fitted) if the scales are to be left unused for an extended period of time.
- Always unplug the adaptor when not in use to prevent over heating.

Technical Specifications

Model	Power	Weigh Pan Dimensions	Minimum Weight	Maximum Weight	Measuring Increments
F177	AC220V Adaptor or 2 x 1.5V Batteries (Type D)	235 x 178mm	20g (1oz)	3kg (6.5lb)	1g (0.05oz)
F178		235 x 178mm	100g (5oz)	15kg (33lb)	5g (0.25oz)
F201		180 x 145mm	10g (0.5oz)	3kg (6.5lb)	10g (0.5oz)

WEIGHSTATION Telephone Helpline: 0845 146 2887
WEIGHSTATION, Fourth Way, Avonmouth, United Kingdom, BS11 8TB