


MODEL: KM300

封低

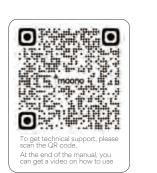

FCC Requirement Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

IC Caution: -English:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) This device may not cause interference, and

(2) This device must accept any interference, including interference that may cause undesired operation of The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
-French: Le présentappareilestconf orme aux CNR d' Industrie Canada applicables aux appareils radio exempts de

licence. L'exploitationestautorisée aux deux conditions suivantes:
(1) l'appareil ne doit pas produire de brouillage, et Le matériel a été évalué pour répondre aux exigences générales d'exposition aux radiofréguences. Le dispositif peut être utilisé dans des conditions d'exposition portables illimitées.

Technical Support: www.sudotack.com



SUDOTACK **MUSIC CAPSULE** MODEL: KM300



User Manual

1.Click once to increase volume 1. Adjusting Accompaniment volume;

Accompaniment volume+

by 1 level;
2.Press for 2s to increase volume by several levels, release when the

Accompaniment volume
1. Click once to decrease volume by 1 level;
2. Press for 2s to decrease volume

1. Adjusting Accompaniment volume;
2. Volume adjustment will be memorized.

Voice changer
Effect

Click the botton to switch effects cyclically;
Origin-Male-Female-Magic-Children;
3. The adjustment of voice changer will not be memorized.

Icon Button Functions Operation Instruction Note

by several levels, release when the

volume reaches highest level.

volume reaches lowest level.

Dear Users,

Thank you for choosing Music Capsule, a karaoke speaker with four microphone inputs, two wireless 2.4G microphones and two 6.35MM wired microphones respec-

Thank you letter

With four connection options of HDMI ARC/Coaxial/Bluetooth/Line IN, the karaoke speaker easily connects to the latest and old version TVs, which allows you to play backing tracks on your TV, transfer them to the speaker, and watch the lyrics on your TV at the same time. This product is a perfect solution to the problem of not being able to watch the lyrics while you are singing. In addition to this, the Music Capsule's two speakers are rated at up to 30W, which is

loud enough. It features a 20W 3.5-inch standalone bass/midrange unit and a 10W 2.5-inch tweeter unit, which produces clear and transparent accompaniment and vocals. To mellow the bass, we've added two passive radiators on the left and right sides of the speaker, which greatly multiply the bass effect of Music Capsule. Another highlight of the speaker is that it features up to 9 RGB lighting effects, with a variety of dynamic and static lights for an immersive visual experience during karaoke.

In addition, The Music Capsule is also equipped with practical features and configurations such as accompaniment pitch adjustment, microphone independent volume adjustment, rich scene sound effects, music only, bass enhancement, and up to 4.5 hours of ultra-long battery life, aiming to better meet your singing needs. We sincerely hope with the product, you can immerse yourself in beautiful melody.

CONTENTS

Important Safety Instructions...... 1 Frontal Panel Functions Introduction...... 3 Product Buttons Function Instruction...... 3 Microphone buttons instuction...... 7

HDMI ARC Connection.....10 Line IN/AUX Connection......11

Coaxial Connection.....14

This iPhone is discoverable as "Maono" while Bluetooth Settings is open.

Music Capsule

To pair an Apple Watch with your iPhone, go to the Apple Watch App.

Troubleshooting......16

Important Safety Instructions

1. Please read this manual carefully and comply with all instructions and terms of use, pay attention to all precautions. 2. The speaker is not equipped with a USB charger, you need to use the USB adapter in strict accordance with the SUDOTACK regulations, the speaker maximum support input voltage of 5V, the current up to 1.4A, if your adapter output voltage and current exceeds 5V, 1.4A, the speaker will be forced to shut down protection, can not continue to work and use, at this time you should replace the adapter to meet the requirements of the use of this provision, the forced use of more than this voltage and current, serious will cause the speaker burned out. Forced to use more than this voltage and current adapter, serious will cause the speaker burned; 3. The microphone is not equipped with a USB charger, you need to use the USB adapter in strict accordance with the

- SUDOTACK regulations, the microphone supports the highest input voltage of 5V, the current up to 1A, such as your adapter output voltage and current exceeds 5V, 1A, the microphone will be forced to shut down protection, can not continue to work, at this time, you should replace the adapter to comply with the provisions of the use. Forced use of adapters exceeding this voltage and current will seriously cause the microphone to burn out; 4. Do not drop or hit the speaker and microphone, it will damage the cavity structure and iron mesh, affecting the sound 5. Do not place the product in a narrow space for use, such as bookcases or built-in cabinets;
- 6. Do not use this product in water sources, humid and other environments, such as outdoor rainy days, or damp 7. Do not expose the product to liquid splashing, dripping areas, or place liquid-filled appliances on the product;
- 8. Do not use the product in heat sources, high temperatures and other environments, such as near fire sources, sun-exposed areas, next to radiators, heaters and other equipment; 9. Please try not to use the speakers and microphone in thunderstorms, and please unplug the USB charger to avoid high
- 10. When you go out or do not use this product for a long time, please unplug the USB charger to avoid fire; 11. Do not place this product near strong magnetic or strong interference devices, such as cable concentration area, Wifi router, high voltage power supply, etc., or it may produce abnormal noise;

12. Do not use any acidic/alkaline or corrosive cleaning agents to clean this product, which may cause irreversible damage


- to the appearance. When cleaning this product, it is recommended to gently wipe the body with a clean and soft cloth 13. Do not block any ventilation openings, please do not cover the product with newspapers, curtains, tablecloths, etc. to avoid blocking the ventilation openings resulting in overheating of the fuselage, burning the product, or even causing a
- 14. Please protect the USB charging cable to avoid being stepped on and the cable being twisted and torn off; 15. If you find the charger or body abnormalities, such as severe heat, odour and other problems, please immediately unplug the USB charger, cut off the power supply;
- 16. As far as possible to use the machine attached and specified connection cable, the machine comes with a 0.8m USB C charging cable, 1.5m 3.5mm audio connection cable; 17. Do not disassemble and repair the machine without authorisation, SUDOTACK will not be held responsible for any damage to the machine or fire.
- WARNING! The maximum supported input voltage of this speaker is 5V, input current is 1.4A; If you use other USB adapter over 5V 1.4A to charge this speaker by yourself without authorisation, it may cause the machine to burn and can't be switched on, SUDOTACK will not be responsible for the consequences.
- WARNING! The highest supported input voltage of this microphone is 5V, the input current is 1A; if you use other USB adapter over 5V 1A to charge this microphone by yourself without permission, it may cause the machine burned and can not be switched on, and the consequences will be borne by yourself.

What's in the box

KM300 Speaker x1


USB C Charging Cable x1

Shoulder Strap x1

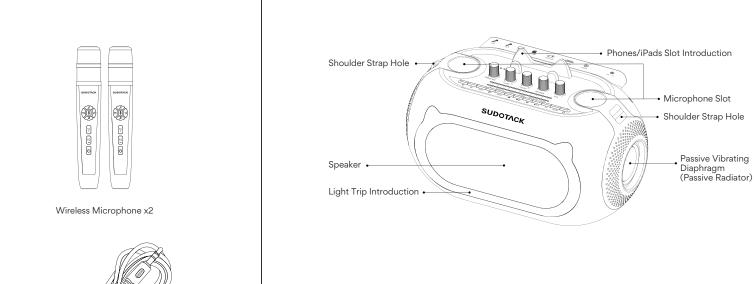

Product Buttons Function Instruction

Frontal Panel Functions Introduction

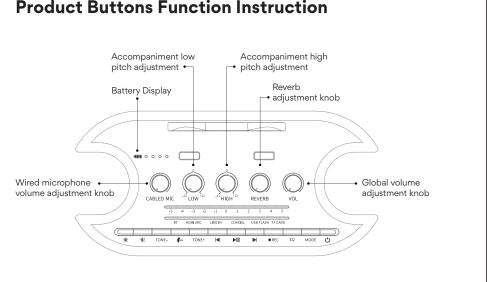

Passive Vibrating
Diaphragm
(Passive Radiator)

Previous song/ Fast Backward Next song/Fast Power ON/OFF button Light brightness adjustment

	М	usic only	button			ext song.	/ Fast			utton	FF
	TONE-	C op×	TONE+	■	▶II	▶ I	●REC	EQ	MODE	Ů	į
des nt		Accor	npanime	nt key+		F	Recording	button	İ		1
Acco	ompanim	ent key-			Play/Pau	se			Audio in modes		

1	Button Functions	Operation Instruction	Note
1	Battery Display		1.Four levels of white LED display, 25% per level; 2.In non-charging mode, when the battery is lower than 10%, red light blinks along with "low battery warning" voice prompt; 3. In non-charging mode, when the battery is lower than 10%, there will be a voice warning each time you turn the speaker on.
	Power ON/OFF button	1.Press 2s to turn the microphone on/off; 2.When the speaker freeze, press the button for a force shutdown.	For turning on/off.
	Global volume adjustment knob	Turn the knob clockwise for turning up volume, turn the knob counterclockwise for turning down volume.	For adjusting the global volume of the speaker.
	Wired microphone volume adjustment knob	Turn the knob clockwise for turning up volume, turn the knob counterclockwise for turning down volume.	For adjusting two 6.35mm wired microphone output volume.
	Reverb adjustment knob	Turn the knob clockwise to increase depth, turn the knob counterclockwise for turning down volume.	For adjusting wireless and wired microphone reverb depth.
-			

Accompaniment Turn the knob clockwise for turning up For adjusting high pitch of

Accompaniment low pitch adjustment adjustment adjustment adjustment Accompaniment low pitch adjustment adjustment Accompaniment low pitch adjustment Accompaniment low pitch adjustment Accompaniment low pitch solutions and provided in the formula of the formula


high pitch volume, turn the knob counterclockwise accompaniment. adjustment for turning down volume.

ons	Operation Instruction	Note		Icon	Button Functions	Operation Inst	
	1.Click to play previous song. 2.Press for 2s to start fast backward, release to stop fast backward and play audio automatically.	1.For playing previous song; 2. For the fast backward of audio and recording.		TONE-	Accompaniment	1.Audio fundam default; 2.Click to increa	
	1.Click to pay, click twice for a pause. 2.Press for 3s for a mandatory disconnection of Bluetooth.	1.For playing or pausing audio; 2.For control audio and recording.		10112	key-		
	1.Click to play next song. 2.Press for 2s to start fast forward, release to stop fast forward and play audio automatically.	1.For playing next song; 2. For the fast forward of audio and recording.		EQ	Scenes effect	1.Default: Origin 2.Click the butto effect cyclically:	
	1.Click to enter audio input loop switching mode. 2.Modes order: Bluetooth→HDMI	ode. modes; er: Bluetooth>HDMI 2.Print+white background LED:				3. Scenes Effect Room, Party, Re Concert hall, Ido	
	ARC→Line IN→Coaxial. 3.Line IN mode can be selected manually or automatically. 4. U disk or TF card will be recognized once plugged into	Coaxial; S.In Bluetooth mode, when not connected, Bluetooth LED light will flash each 0.3s. After		-@-	Light modes adjustment	Short press to a modes cyclically	
	speaker.	connected, the LED light will go off after 8s steady light; 4.In other modes,LED light will go off after 8s steady light.		- Ø-	Light brightness adjustment	Short click to ac brightness cycli	
	1. Press for 2s to enter recording mode, press for 2s to end recording. 2. During recording, short press	For recording vocals captured by microphones.					

Icon	Button Functions	Operation Instruction	Note
TONE-	Accompaniment key-	1.Audio fundamental key is by default; 2.Click to increase key, 5 levels.	1.For decreasing audio source accompaniment key; 2.Print logo+LED background light display. Key: -5 -4 -3 -2 -1 0 1 2 3 4 5; 3.Fundamental key is 0, light is in th middle; 4. Background LED light will go off if there is no operation within 8s after you click the button.
EQ	Scenes effect	1.Default: Original sound; 2.Click the button to switch 5 effect cyclically; 3. Scenes Effect Order: Origin, Room, Party, Recording studio, Concert hall, Idol concert.	1.For adjusting microphone scene effect; 2.English voice prompt: Origin, Room, Party, Recording studio, Concert hall, Idol concert.
	Light modes adjustment	Short press to adjust 9 light modes cyclically.	1.All light modes features memory function; 2.For adjusting light modes.
- i ¢-	Light brightness adjustment	Short click to adjust 3 level brightness cyclically.	For adjusting light brightness.



ON/OFF switch

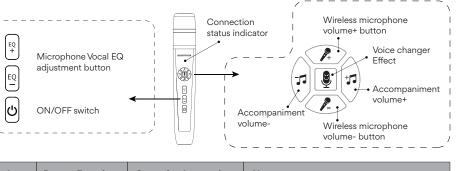

Icon Button Functions Operation Instruction Note 1. Press for 2s to turn on microphone;
2. Press for 2s to turn off microphone.

3. Under the discharge state, the power is higher than 20%, the white LED light is always on. If there is no operation for 8s, the light will microphone. on. If there is no operation for 8s, the light will go off, press any button to activate;

4. Under the discharge state, the power is higher than 10%-20%, the red LED light is always on. If there is no operation for 8s, the light will go off, press any button to activate;

5. Under the discharge state, the power is lower than 10%, the red LED light flashes per 0.3s. If there is no operation for 8s, the light will go off, ON/OFF switch press any button to activate;
6. Under the charging state, white light is always on until the microphone is fully charged. 1.Indicating speaker and microphone connection status;
Blue LED indication: if not successfully connected, blue LED will blink; 3.After the successful connection, blue LED wil light will go off, press any button to activate


Connection status indicator 1.Click once to increase volume by 1 level:

1.Adjusting microphone output volume;
2.Volume adjustment will be memorized. reaches highest level. Wireless
microphone
volume- button

1. Click once to decrease
volume by 1 level;
2. Press for 2s to decrease
volume by several levels,
release when the volume

reaches lowest level.


Speaker backside interface introduction 6.35MM Microphone 2 USB ==5V COMUNIAL HOMEARC USB FLASH TF CARD LINE IN MCZ MCC] USB IN HDMI ARC TF CARD 6.35MM Microphone 1 Coaxial USB Flash LINE IN

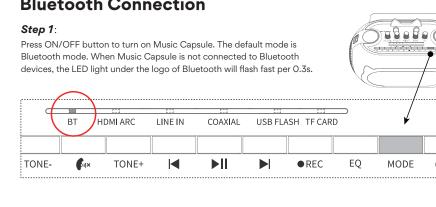


 3.The adjustment of voice changer will not be memorized. Step 3: In the case of LG TVS, EQ Microphone Vocal EQ 2.3-level EQ adjustment of 0, -1, adjustment button

1. Level 0 by default; 2.3-level EQ adjustment of 0, -1, 2. The lower level the vocal EQ is, the sound dimmer; 2. The adjustment of voice will be memorized. 1.The lower level the vocal EQ is, the voice remote control, and switch to the audio output mode details setting page. through the arrow keys.

of Bluetooth.

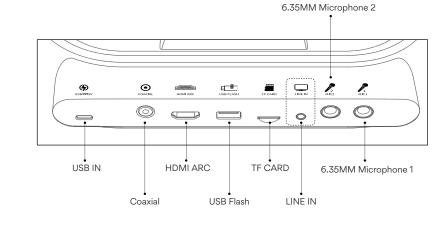


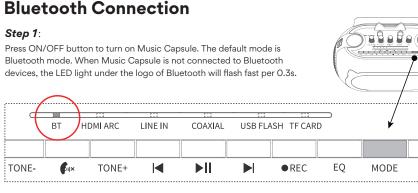


Long press and hold the scroll wheel in the middle of Turn on the TV, press the setting button of the LG the remote control for 3s to enter the Sound Out

Select the Device List button on the right side



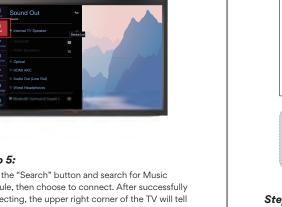

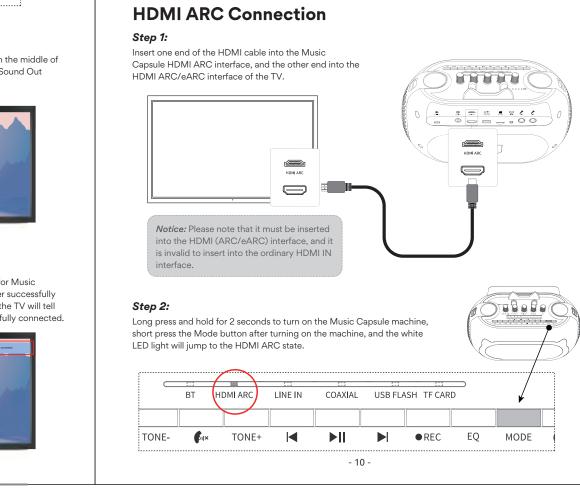

When the mobile phone is connected, turn on the Bluetooth of

the mobile phone, search for Music Capsule, and click to

Notice: Long press and hold the play/pause button on the

Music Capsule machine for 3s to forcibly disconnect the current

press the setting button of the LG TV remote control, and select the Sound Out output.

Capsule through the TV.

settings are different).

of the TV.

Line IN/AUX Connection

Insert one end of the 3.5mm audio cable into the Line IN

interface of the Music Capsule, and the other end into the


Line Out/AUX Out/Audio Out/Headphone Out interface

Line Out/AUX Out/ Audio Out/Headphone Out

interface/Upgrade interface, the connection is invalid.

Notice: Please note that the Line Out/AUX Out/Audio Out/Headphone


Out interfaces of the TV are all 3.5mm output interfaces, but the names are different. If it is a 3.5mm input interface and it is marked Debugging

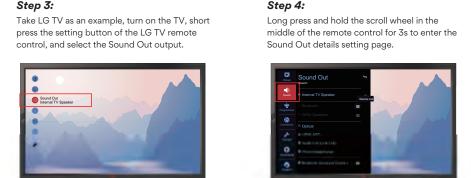




3.5mm




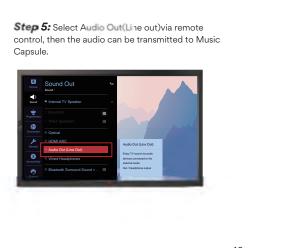

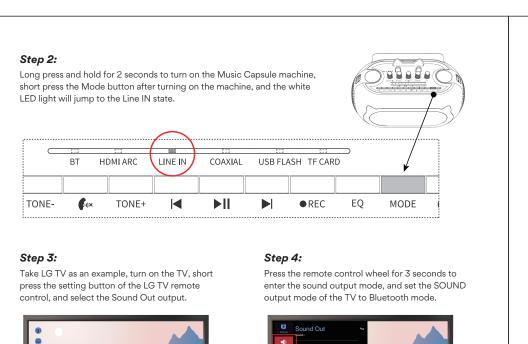



3.5mm Audio Cable x1

User Manual x1

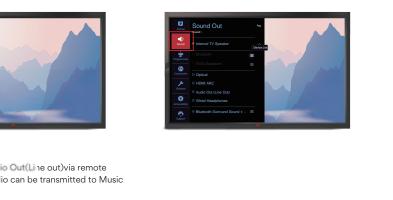



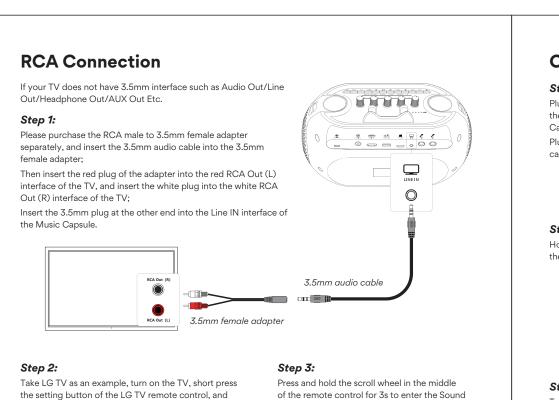

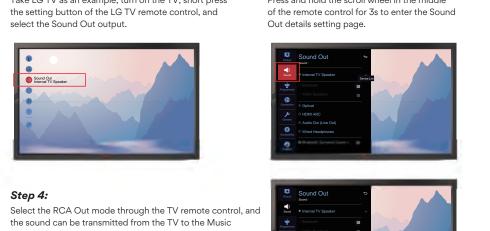

Step 5:
Select Coaxial mode, then the N sound.

Step 1: Plug one end of coaxial cable to the Coaxial interface of Music Capsule. Plug the other end of coaxial cable to Coaxial interface of TV.	Coaxial cable
Step 2: Hold the Music Capsule power button for 2s, and press Mothe white LED light is Coaxial status. IE IN COAXIAL USB FLASH TF CARD REC EQ	ode after the Music Capsule is turned on. Ensure
Step 3: Take LG TV as an example, turn on the TV, press the	Step 4: Press the remote control central wheel for enter Sound Out setting detail page.
setting button of LG TV remote. Select Sound Out.	Sound Out Sound Out Sound Sound

Capsule, and the audio files will be played automatically.					Capsule, and the audio files will be played automatically.
Notice: KM300 supports a USB flash recognized or cause other problems. The file system of the USB/SD ca	orts a USB flash disk vother problems.	Notice: KM300 supports a USB flash disk with a maximum 32GB capacity. If the USB flash disk v recognized or cause other problems. The file system of the USB/SD card storage device must be FAT16, FAT32, and exFAT	USB flash	disk with a capac xFAT	Notice: KM300 supports a USB flash disk with a maximum 32GB capacity. If the USB flash disk with a capacity exceeding 32GB capacity, it may not be recognized or cause other problems. The file system of the USB/SD card storage device must be FAT16, FAT32, and exFAT
Format	Extension	Sampling rate	Channel	Bit rate	Instructions
MP3	.mp3, .mp2	8/11.025/12/16/22.05/24/32/44.1/48KHz	1 or 2	32kbps~384kbps	MPEG1/2/2.5 Layer II & I, CBR & VBR
WMA (standard)	.wma, .asf, .wmv	8/11.025/16/22.05/32/44.1/48KHz	1 or 2	Okbps~320kbps	WMA standard 4/4.1/7/8/9/9.1, CBR & VBR
PCM (raw)	.wav, aif, .aiff	8/11.025/12/16/22.05/24/32/44.1/48KHz	1 or 2	64kbps~3072kbps	signed 8/12/16/24/32 bit integer (little endian)
PCM (u-law, A-law)	.wav, aif, .aifc	8/11.025/12/16/22.05/24/32/44.1/48KHz	1 or 2	64kbps~768kbps	compressed PCM.
IMA-ADPCM	.wav, aif, .aifc	8/11.025/12/16/22.05/24/32/44.1/48KHz	1 or 2	32kbps~384kbps	container format: Microsoft WAVE
AAC-LC	.m4a, .aac, .mp4, .mov	8/11.025/12/16/22.05/24/32/44.1/48KHz	1 or 2	all bitrates allowed	MPEG2/4 AAC LC profile
HE-AAC VI (eAAC or AAC+)	.m4a, .aac, .mp4, .mov	8/11.025/12/16/22.05/24/32/44.1/48KHz	1 or 2	all bitrates allowed	ISO/IEC 14496-3:2001/Amd 1:2003 available under certain conditions due to its high MIps and RAM usage.
HE-AAC v2 (eAAC+ or AAC++)	.m4a, .aac, .mp4, .mov	8/11.025/12/16/22.05/24/32/44.1/48KHz	1 or 2	all bitrates allowed	ISO/IEC 14496-3:2005/Amd 2:2006. available under certain conditions due to its high MIps and RAM usage. Bitstream is decoded as HE-AAC V1 only
Speex	xds:	8/16KHz	٦	all bitrates allowed	narrow band & wide band
AMR-NB	amr	8KHz	1	all bitrates allowed	high stack usage

song/Fast Backward

MODE Audio input modes button

● REC Recording button 3. After recording, short press

	switching mode. 2.Modes order: Bluetooth->HDMI	modes; 2.Print+white background LED:			Room, Party, Recording studio, Concert hall, Idol concert.	Concert hall, Idol concert.
n	ARC→Line IN→Coaxial. 3.Line IN mode can be selected manually or automatically. 4. U disk or TF card will be recognized once plugged into	Bluetooth→HDMI ARC→Line IN→ Coaxial; 3.In Bluetooth mode, when not connected, Bluetooth LED light will flash each 0.3s. After	- : :::::::::::::::::::::::::::::::::::	Light modes adjustment	Short press to adjust 9 light modes cyclically.	1.All light modes features memory function; 2.For adjusting light modes.
	speaker.	connected, the LED light will go off after 8s steady light; 4.In other modes,LED light will go off after 8s steady light.	- ∳-	Light brightness adjustment	Short click to adjust 3 level brightness cyclically.	For adjusting light brightness.
tton	1. Press for 2s to enter recording mode, press for 2s to end recording. 2. During recording, short press recording button is not available. 3. After recording, short press recording button to play recorded audio. When it ends, automatically play next recorded audio 4. During playing recorded audio, Previous song/Pause/Next song buttons is available.	For recording vocals captured by microphones.				
	Click to activate music only function, click twice to restore original acoustic voice.	For reducing the vocal frequency in accompaniment.				
ent	1.Audio fundamental key is by default; 2.Click to increase key, 5 levels.	1.For increasing audio source accompaniment key; 2.Print logo+LED background light display. Key: -5 -4 -3 -2 -1 0 1 2 3 4 5; 3.Fundamental key is 0, light is in the middle; 4. Background LED light will go off if there is no operation within 8s after you click the button.				
	- 5 -				- 6 -	

Troubleshooting

Q) Why no sound comes out after connecting to the TV using ARC/Optical (Common)? A) Please make sure your TV supports HDMI ARC/Optical output. Then go to "setting" in your TV (may vary due to different brand): 1) Setting → Sound → Select Speaker to: external speaker(HDMI ARC/Optical mode)/turn off TV Speaker;

2)Setting \rightarrow Sound(audio) \rightarrow Advanced Audio \rightarrow Digital Audio Output \rightarrow PCM Setting \rightarrow Sound(audio) \rightarrow audio output format → Turn off PCM/Dolby Output. Please select the correct input mode.

Q) Why watching Netflix, Disney+, Amazon prime has no sound or noise, some shows have sound on Smart TV?

A) If your TV is a smart TV. Apps like Netflix was set default audio output is Dolby and DTS for the movie, but this speaker does no support Dolby and DTS, so you will hear the crack sound or no sound, please kindly disable the Dolby and DTS on Netflix.

Q) Why my wireless device cannot connect to the speaker? A1) You have not enabled wireless on your device or the speaker.

A2) Maybe someone else has connected to your speaker already, at this time, you need to long press the Play/Pause button on the speaker for 3s to disconnect the wireless connection by force. A3) When connecting wireless, try not to place routers and other devices next to the speaker.

Q) Is this compatible with Fire TV/ Firestick?

A) Yes, plug the Fire TV to the TV. And connect the TV using any input mode. If using HDMI ARC, please make sure you have followed our manual setting.

- 16 -